
BATHROOM MEDICINE CABINET

INSTALLATION MANUAL

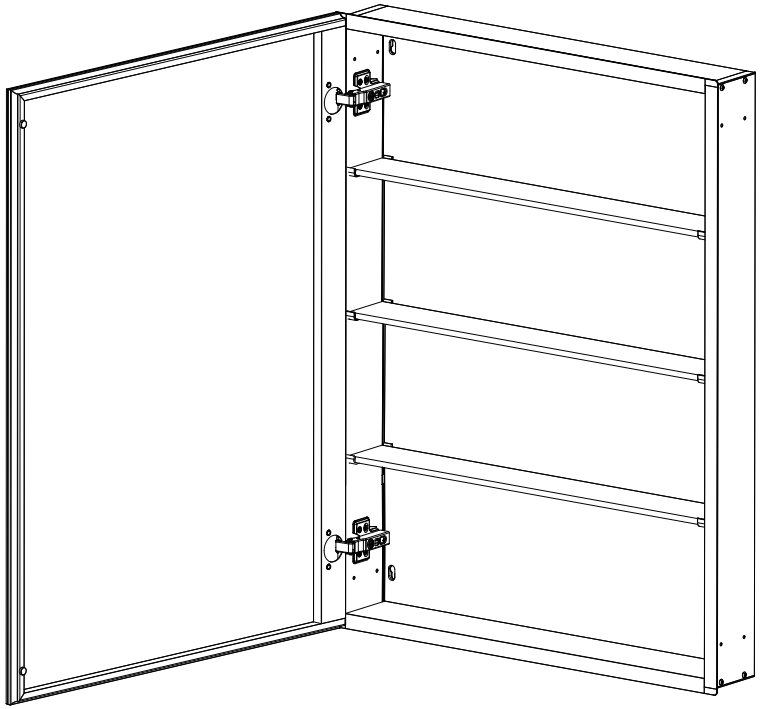







Scan the QR code to
watch the installation video











CONTACT US






Thank you for shopping with us! We hope that our products have added a touch of brightness to your life. If you need any assistance, please don't hesitate to reach out. Our dedicated team is available 24/7 to ensure your satisfaction.










MC@ZRSupport.com 1-888-204-3326 ZRSupport

PACKING LIST

Please ensure that you have received all parts and accessories in the correct specifications and quantities as listed below:						
Item	Illustration	Qty.	Qty.	Qty.	Qty.	Qty.
①		×8	×16	×16	×24	×32
②		×8	×16	×16	×24	×32
③		×0	×8	×8	×16	×24
④		×4	×8	×8	×12	×16


Please ensure that you have received all parts and accessories in the correct specifications and quantities as listed below:						
Item	Illustration	Qty.	Qty.	Qty.	Qty.	Qty.
⑤		×4	×8	×8	×12	×16
⑥		×4	×8	×8	×12	×16
⑦		×0	×4	×4	×8	×12
⑧		×4	×8	×8	×12	×16
⑨		×4	×8	×8	×12	×16
⑩		×1	×1	×1	×1	×1
⑪		×1	×1	×1	×1	×1

Please ensure that you have received all parts and accessories in the correct specifications and quantities as listed below:						
Item	Illustration	Qty.	Qty.	Qty.	Qty.	Qty.
⑫		×4	×8	×8	×12	×16
⑬		×1	×1	×1	×1	×1
A1		×1	×2	×2	×3	×4
A2		×1	×2	×2	×3	×4
B		×2	2+2 (Long+Short)	×4	×6	×8
C		×1	1+1 (Long+Short)	×2	×3	×4

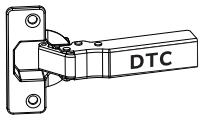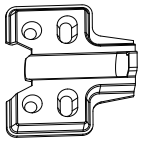
Please ensure that you have received all parts and accessories in the correct specifications and quantities as listed below:						
Item	Illustration	Qty.	Qty.	Qty.	Qty.	Qty.
D1		×2	×4	×4	×6	×8
D2		×2	×4	×4	×6	×8
G		×2	2+2 (Long+Short)	×4	×6	×8
H		×1	1+1 (Long+Short)	×2	×3	×4
		×2	×4	×4	×6	×8
		×2	×4	×4	×6	×8

Note: For medicine cabinets taller than 32 inches, an additional piece of D1 D2 G will be provided for assembly.

INSTALLATION TOOLS

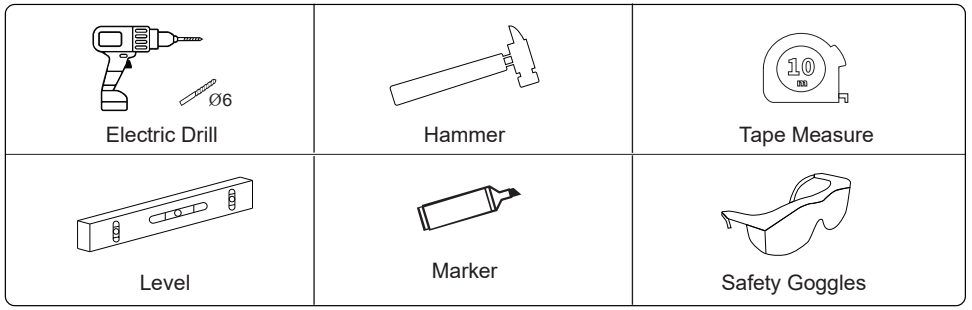


EXPLODED DIAGRAM

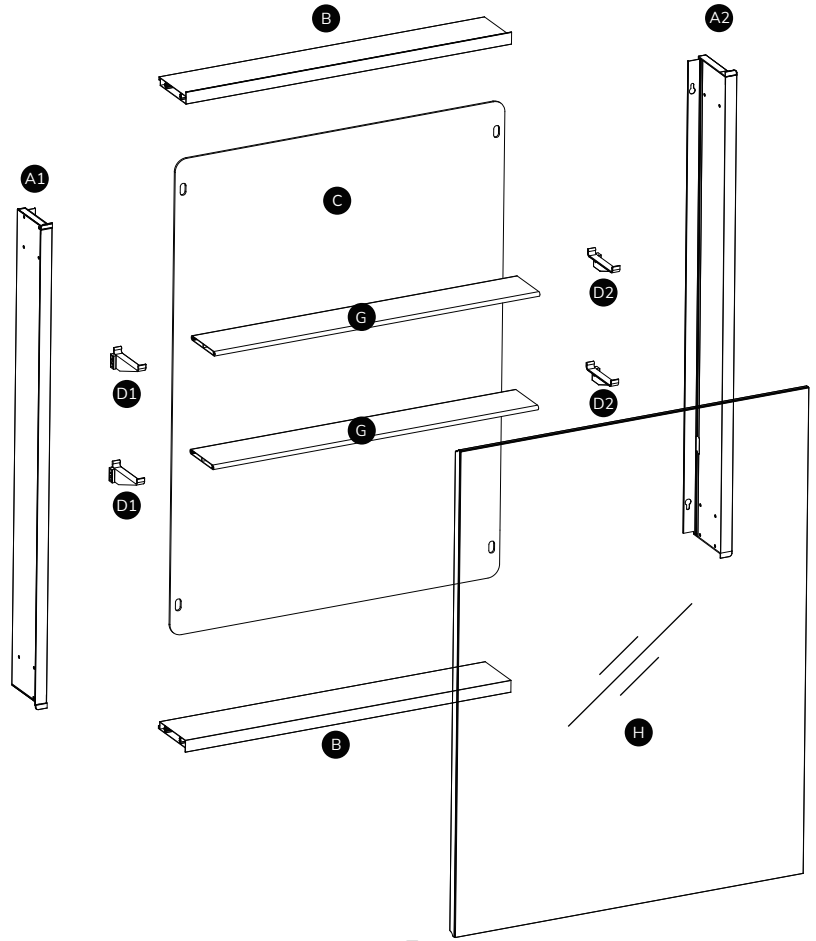


Assembly Instructions


1 Installation preparation

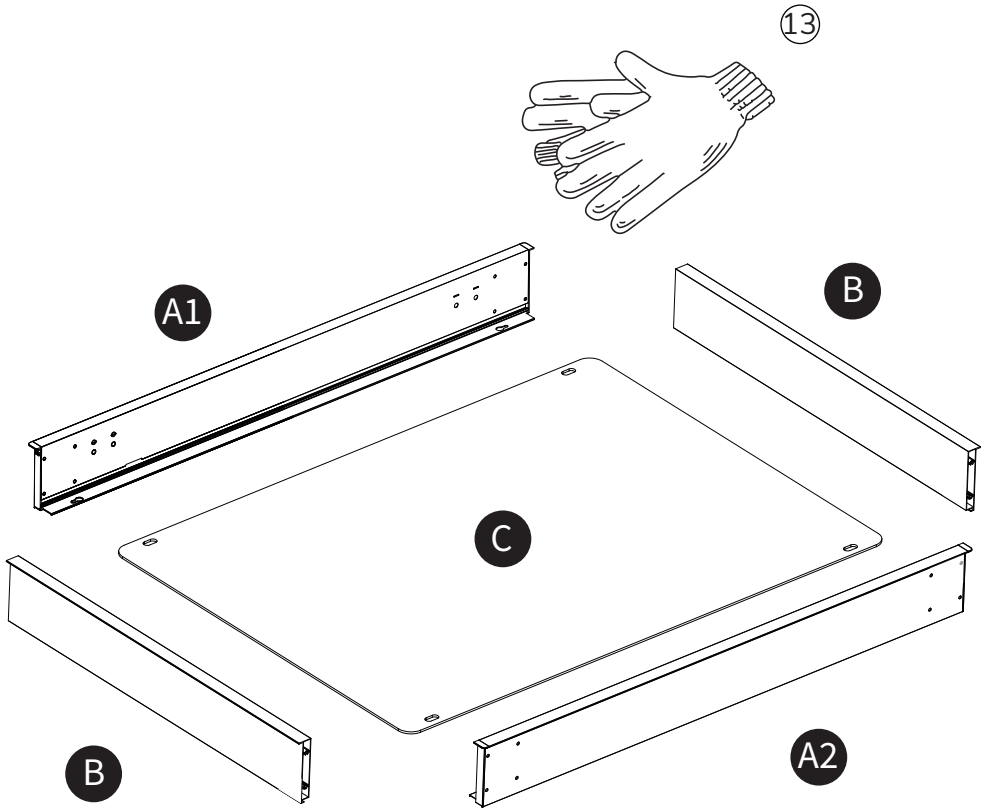


2 Install hinge base

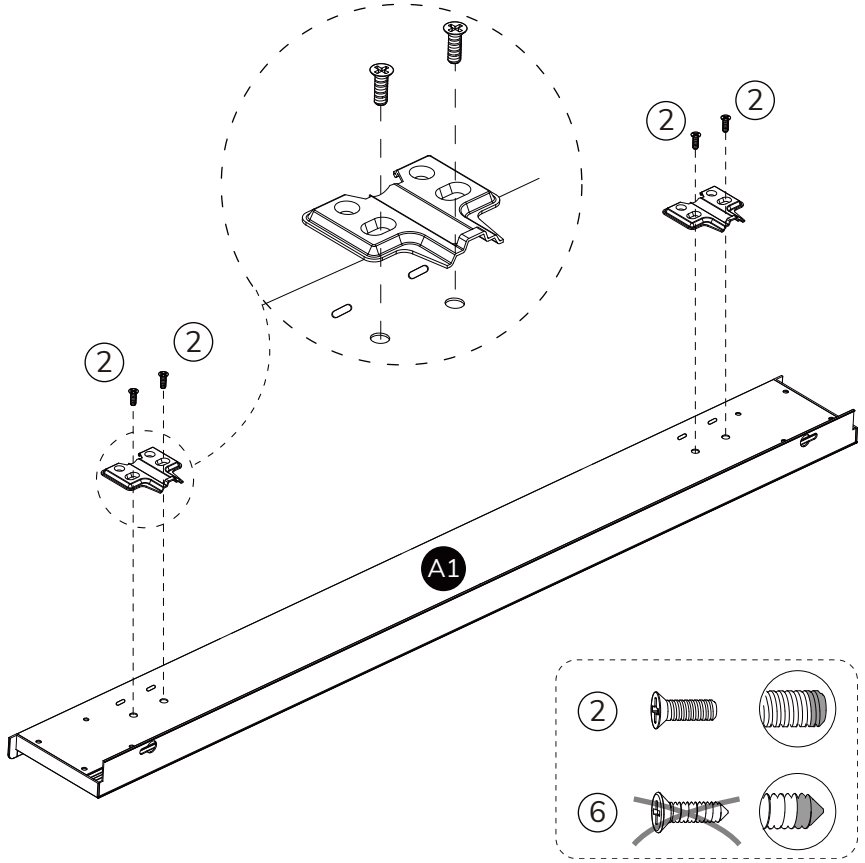


3 Install the top and bottom plate

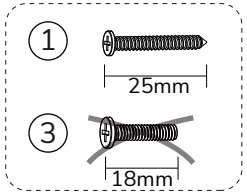


Step 1

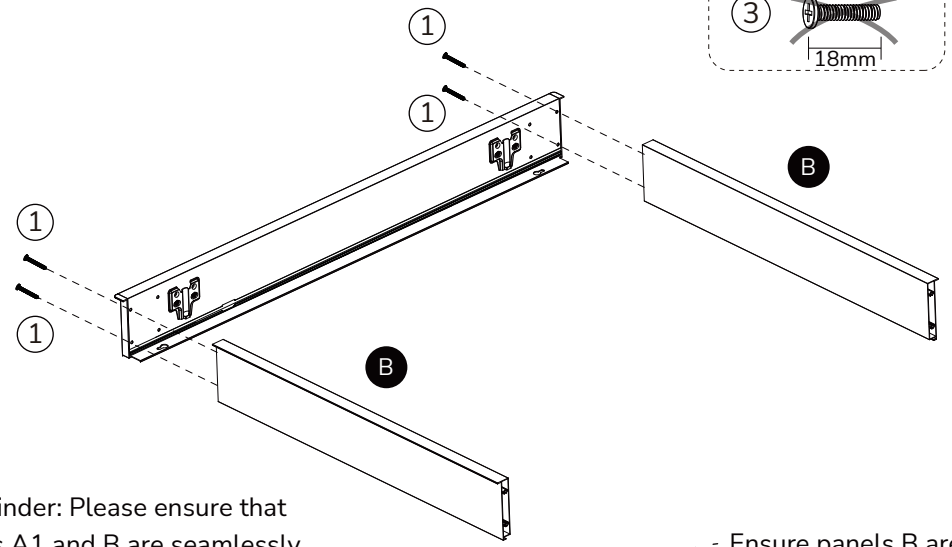



Reminder: Please ensure that parts A1 and B are seamlessly joined and aligned top, with the lip of part B facing outward.

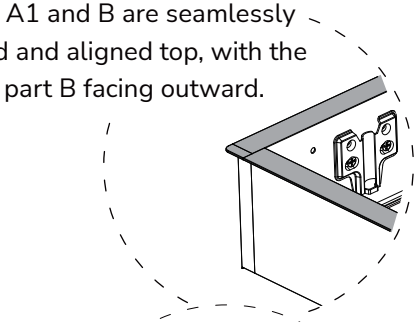

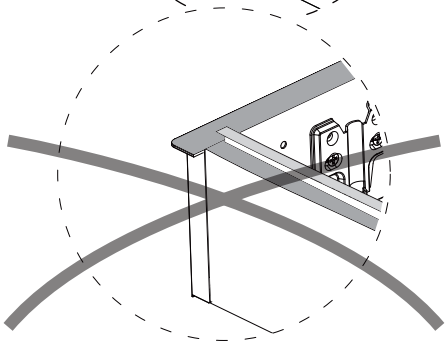


Ensure panels B are same in length

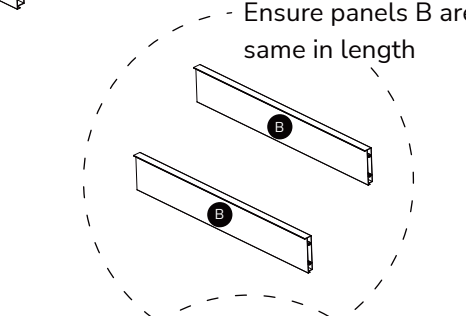


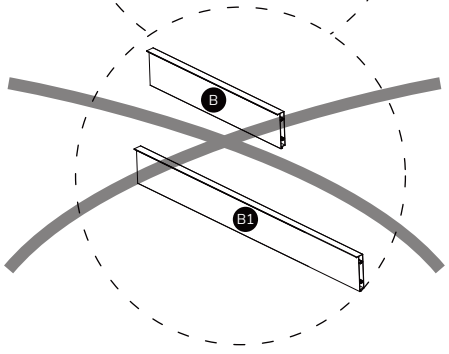


Step 2

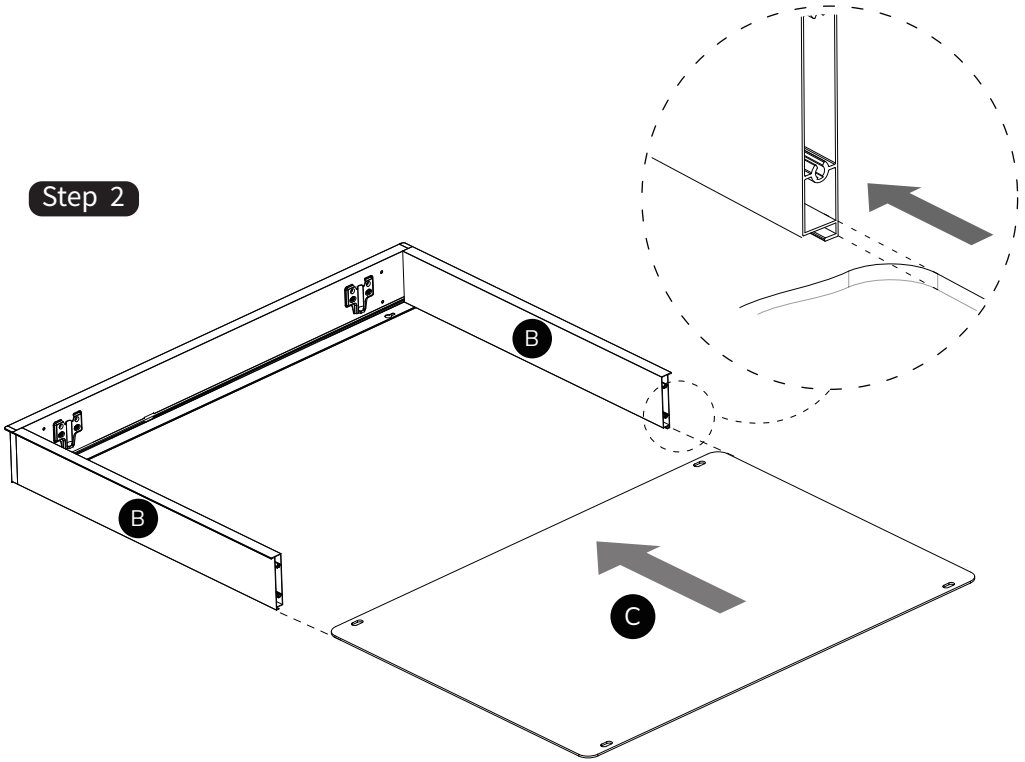

Step 3

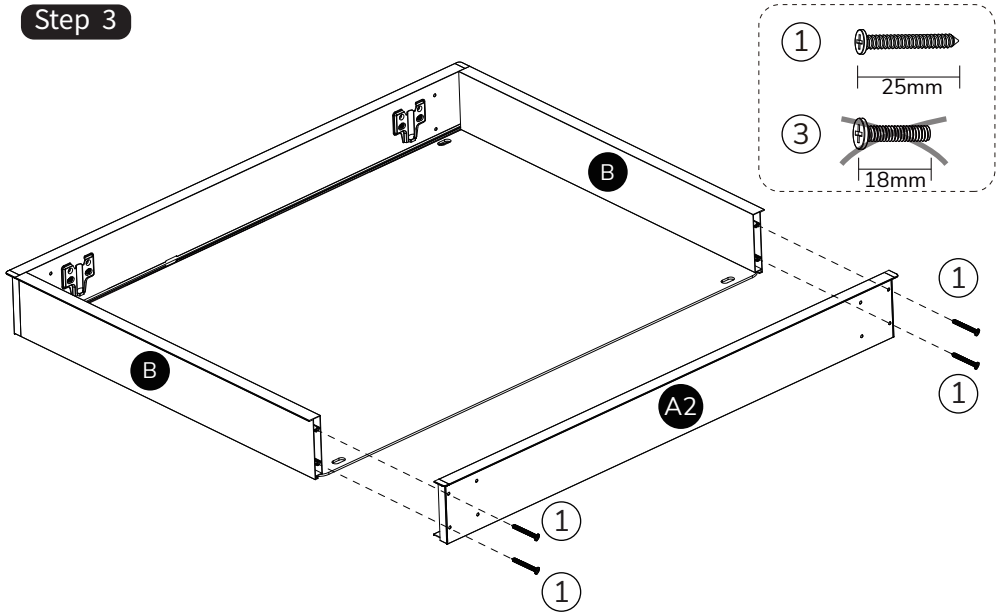

4 Install cabinet door hinges

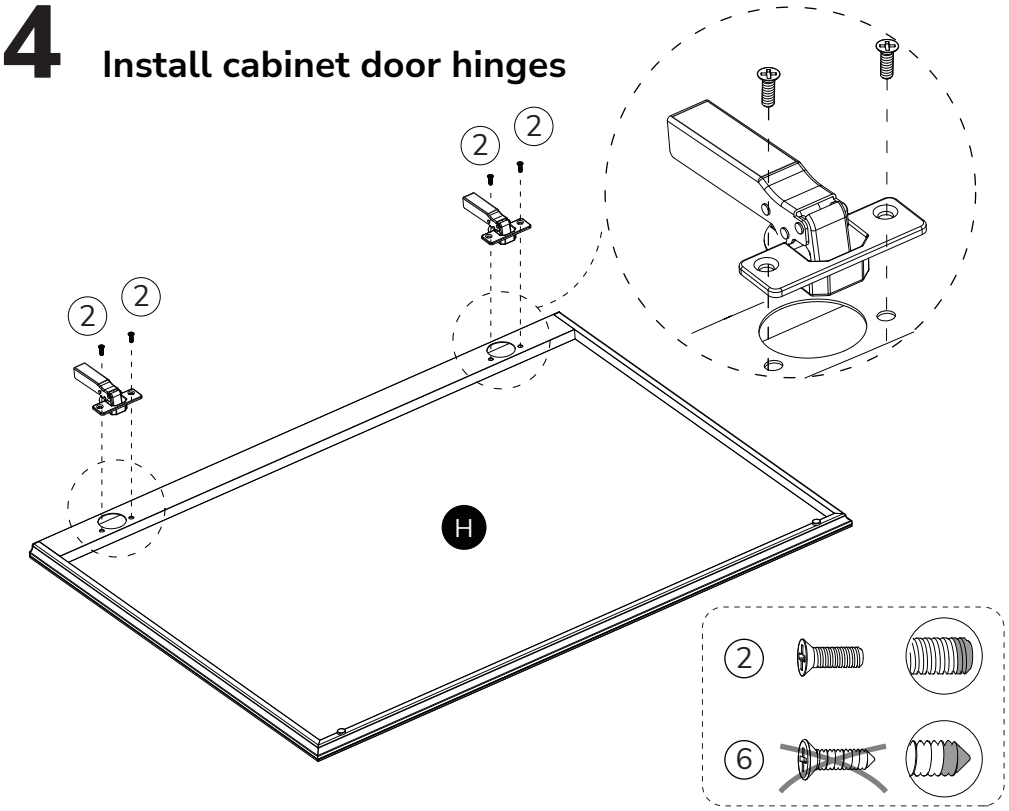

ATTENTION


Now that the cabinet and door are assembled, please proceed to the next step based on the model you purchased:

Single-door:
Proceed to step 8.

Double-door / Triple-door:
Repeat the previous steps to assemble all cabinet units and doors, then proceed to step 5.


5 Connection of multi-door cabinets

Double-door




Taking this as an example

Step 1

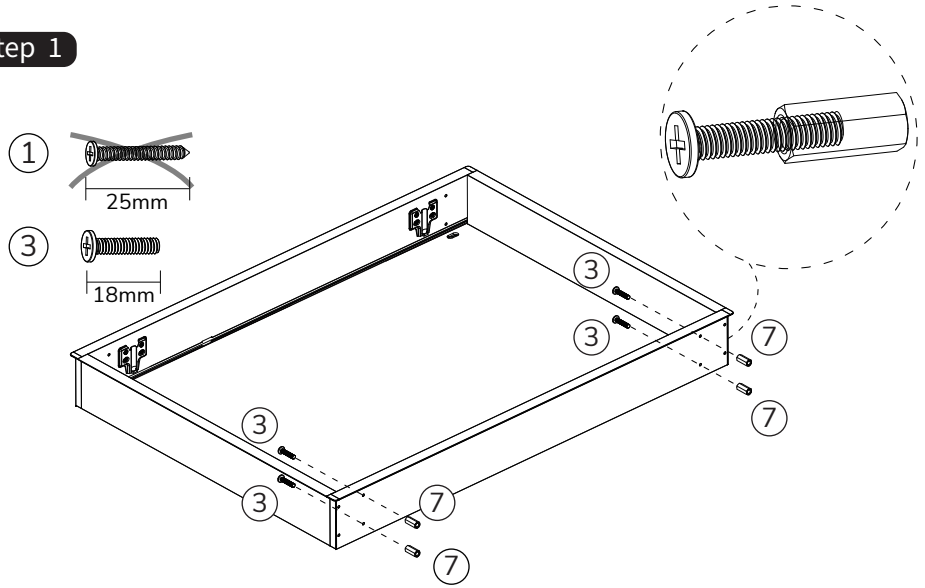


Step 2

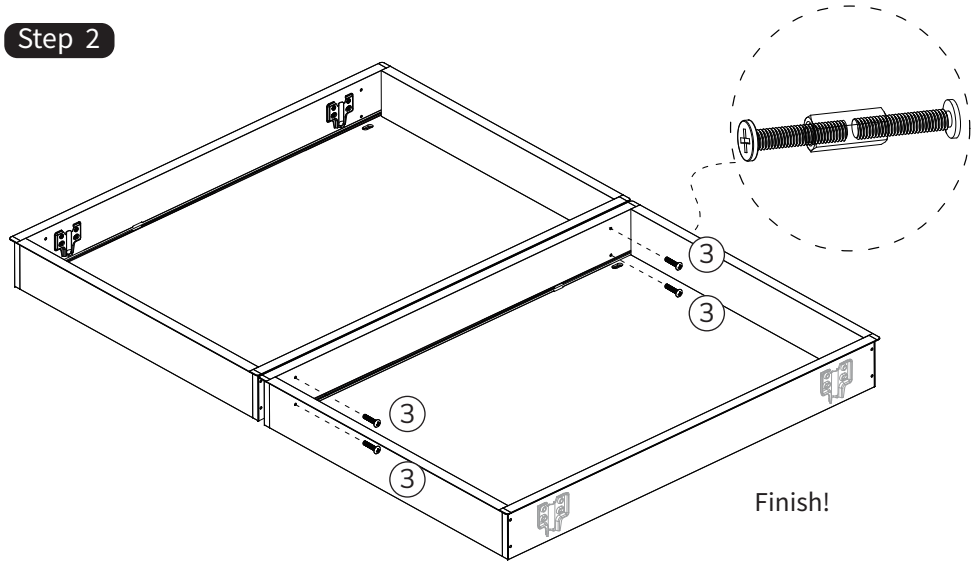


Finish!

Triple-door




Taking this as an example


Step 1

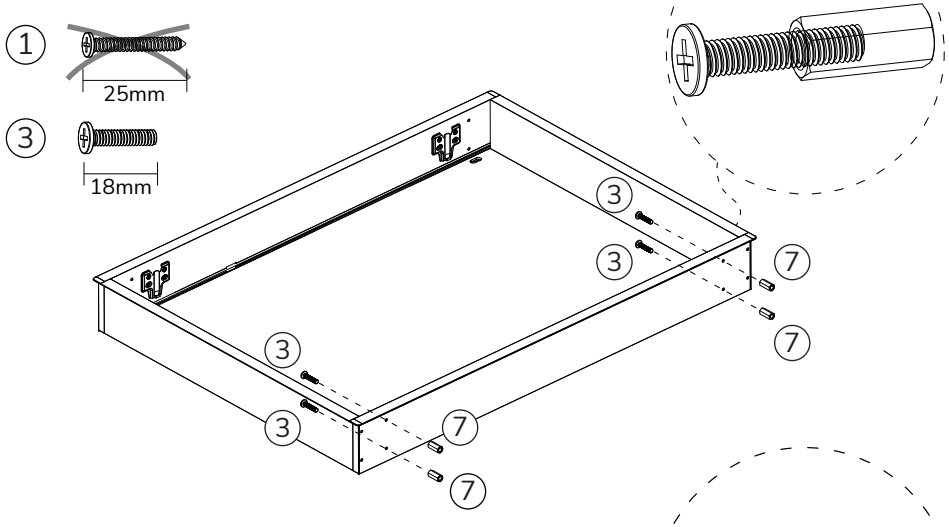


Step 2

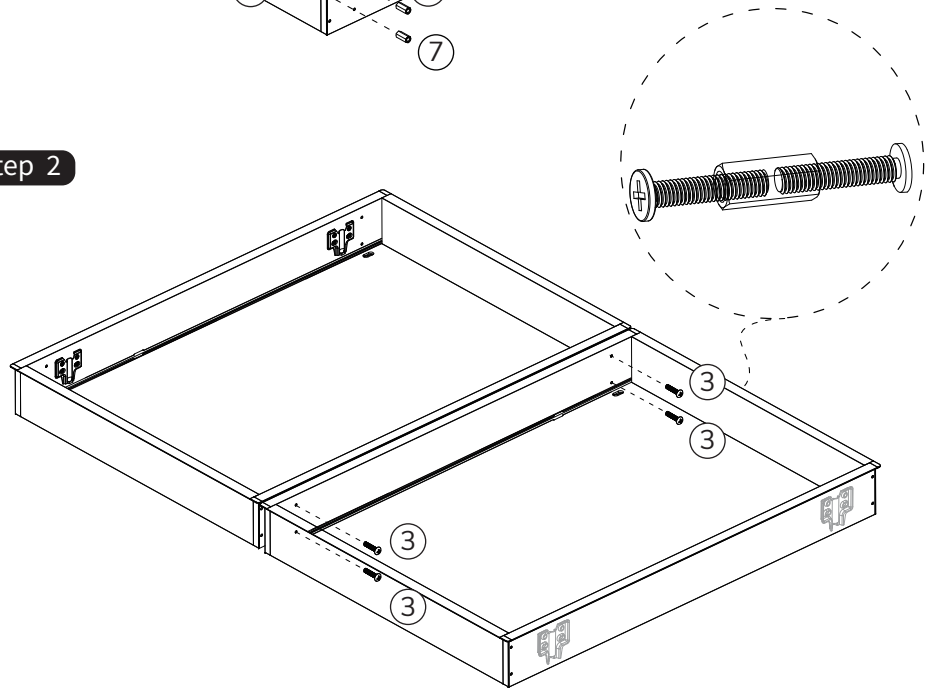

Step 3

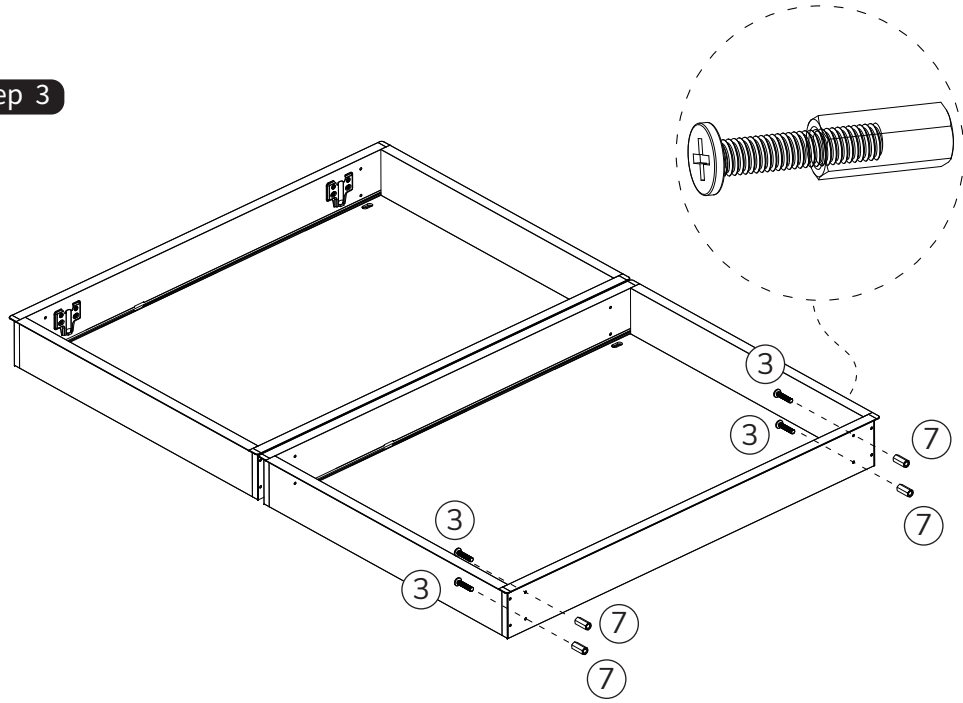


Step 4

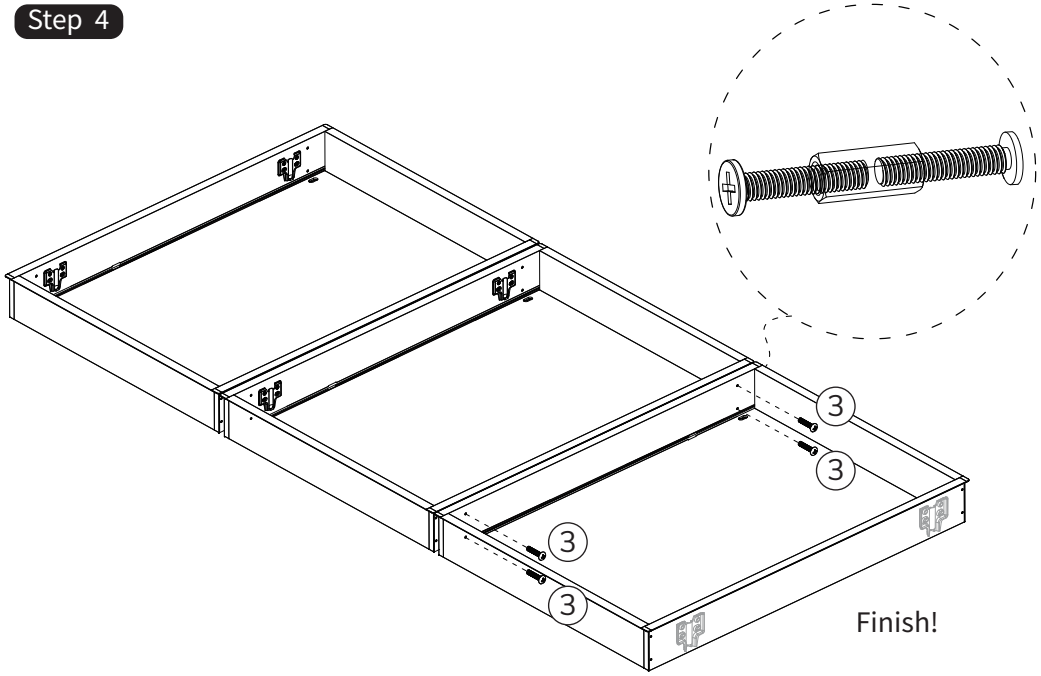


Finish!

Four-door




Taking this as an example


Step 1

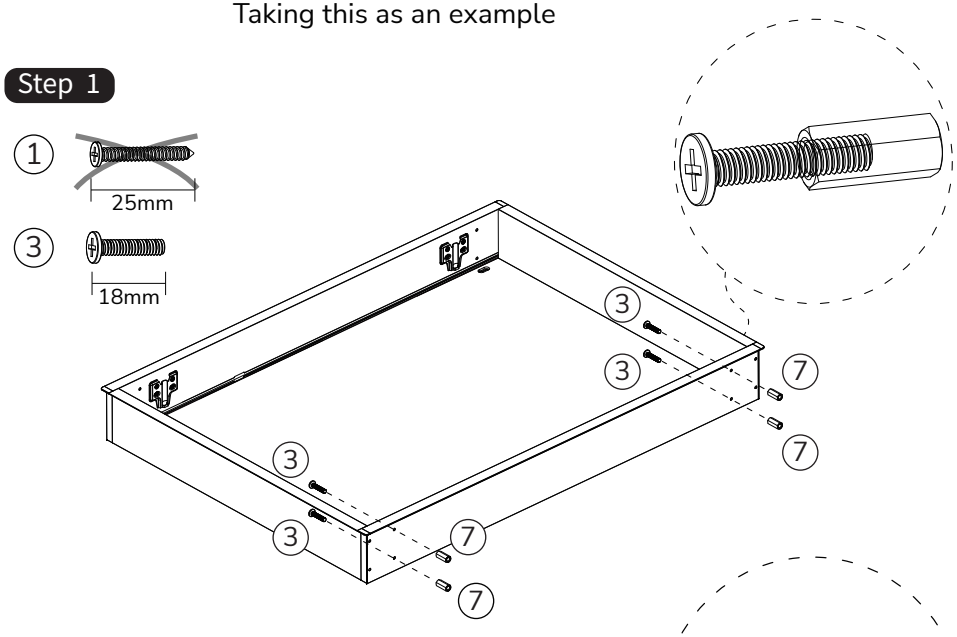


Step 2

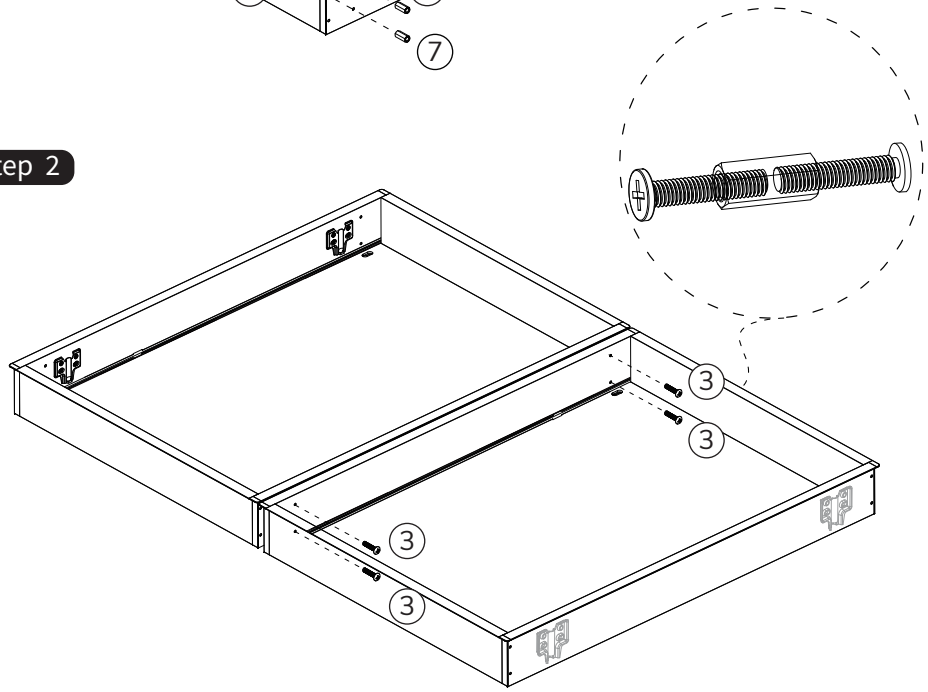


Step 3

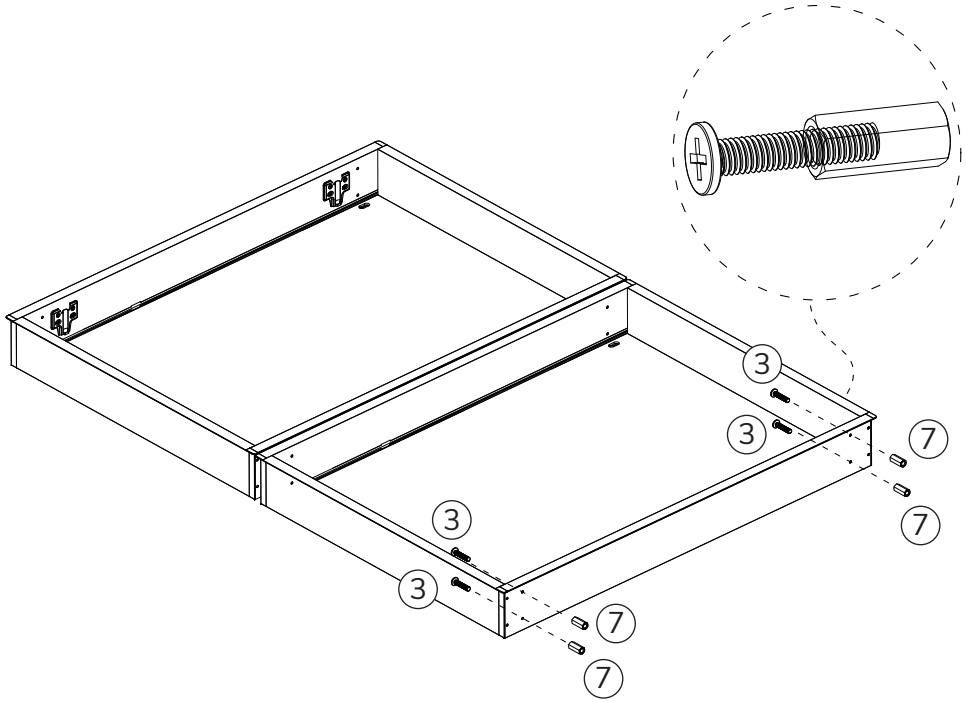

Step 4

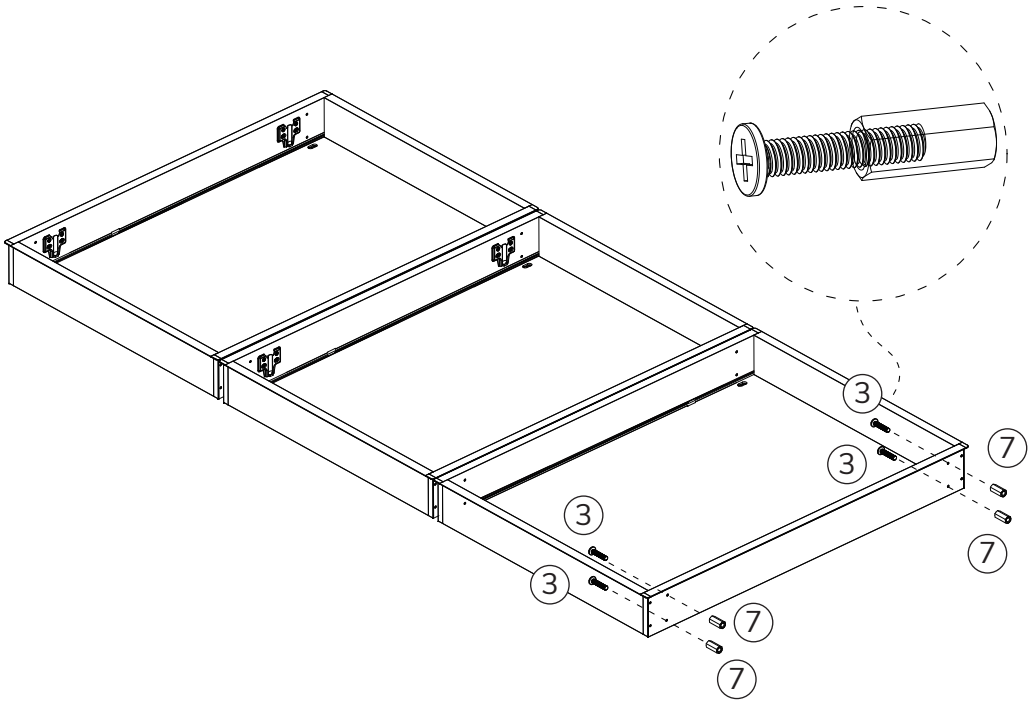

Step 5

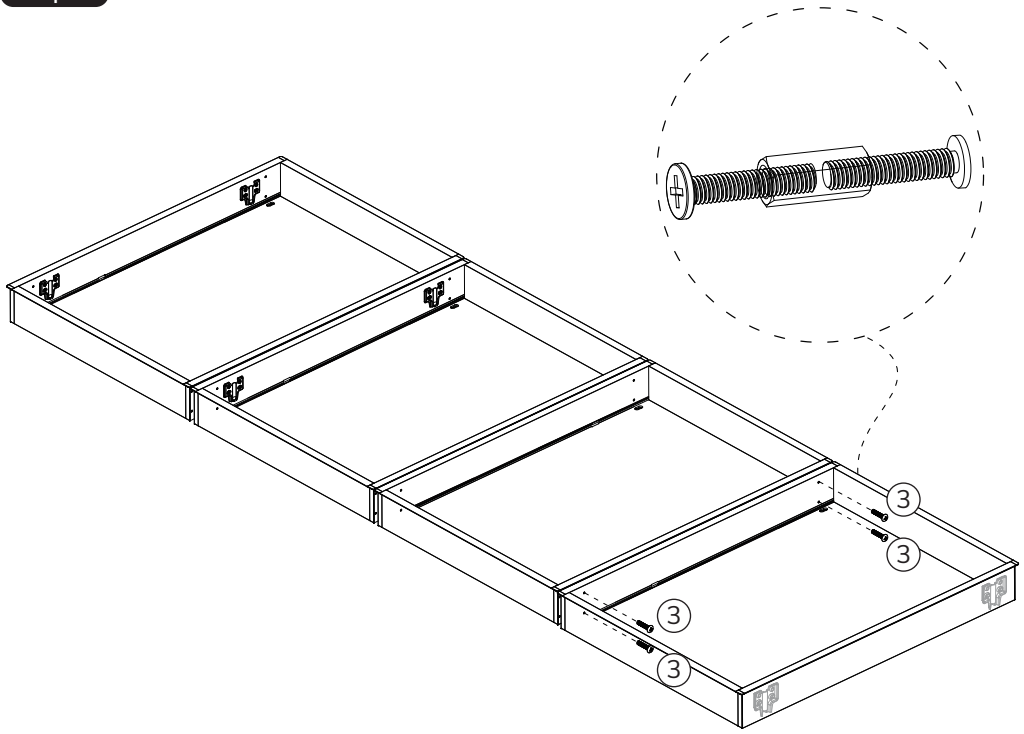


Finish!


6 Installation of shelves

Step 1

Loosen the screws on parts D1 and D2.

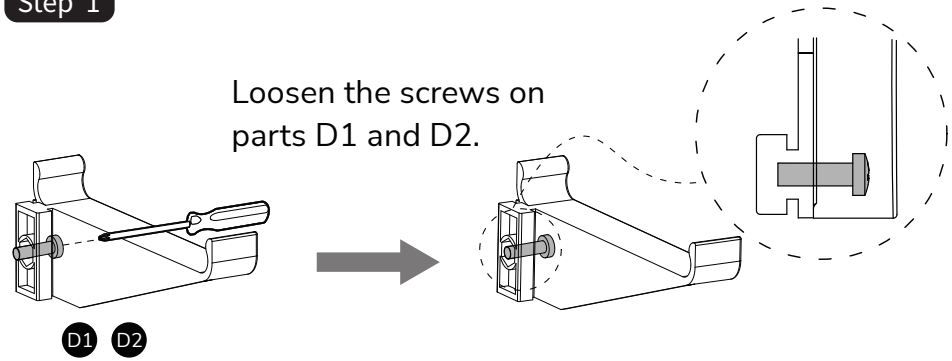


Step 2

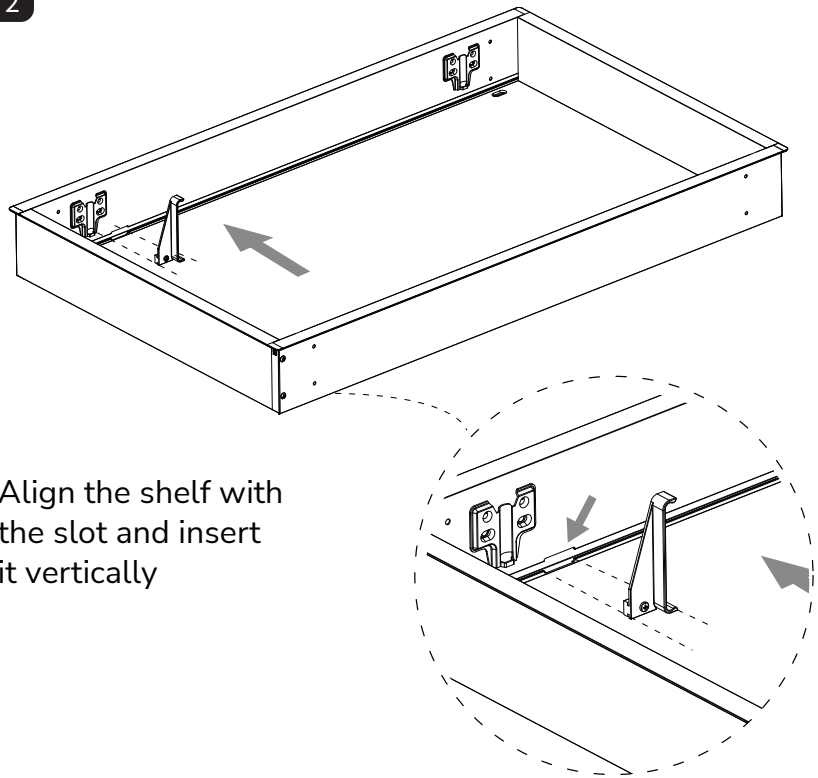


Align the shelf with the slot and insert it vertically

Step 3

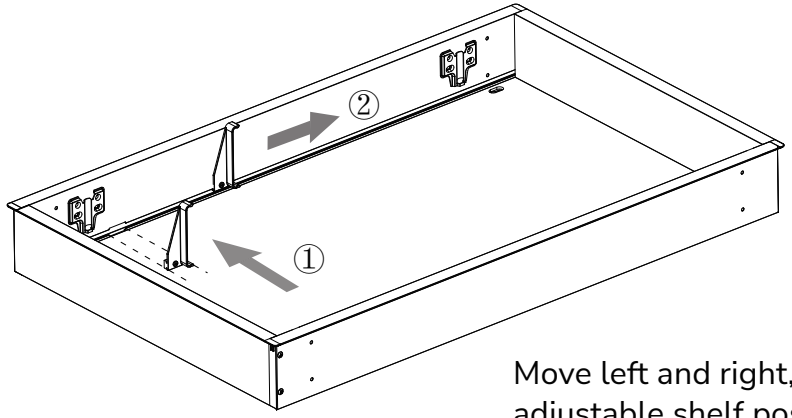

Move left and right, adjustable shelf position

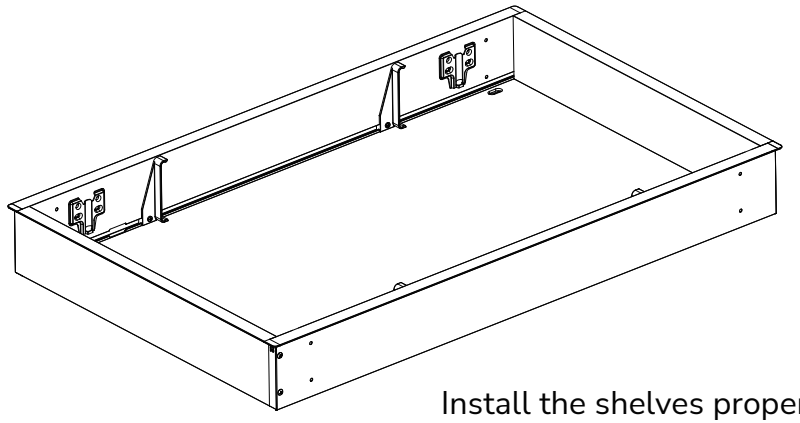

Install the shelves properly


ATTENTION:

Left door opening: D1 needs to be installed on the side with hinges

Right door opening: D2 needs to be installed on the side with hinges


7 Install the shelves

Step 1

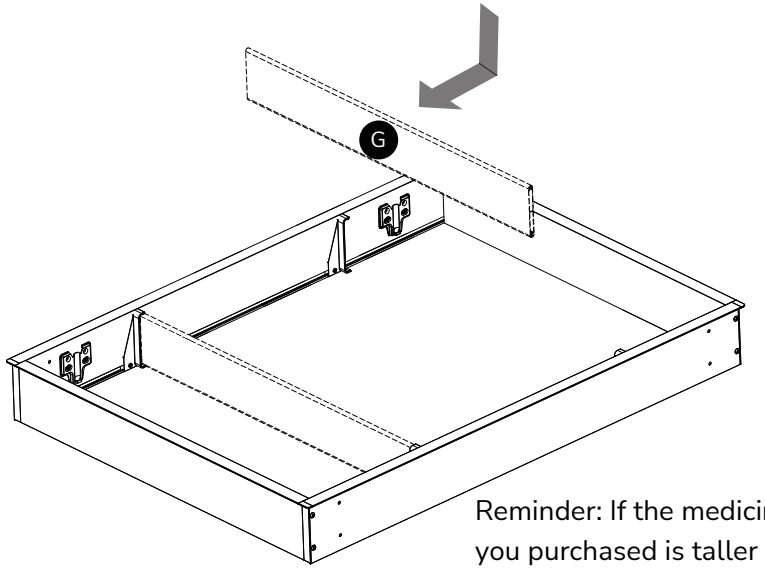


Reminder: If the medicine cabinet you purchased is taller than 32 inches, please assemble all the included G parts.

Step 2

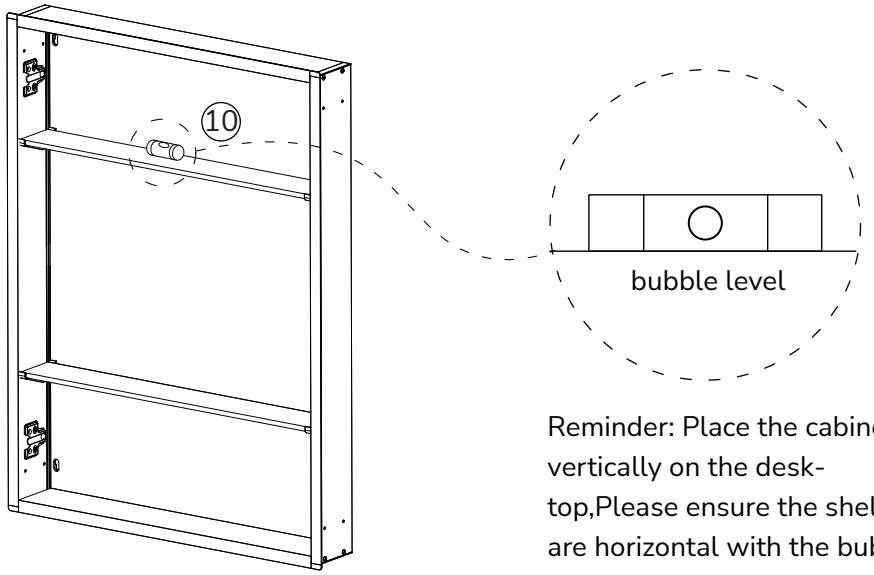

Reminder: Place the cabinet vertically on the desk-top,Please ensure the shelves are horizontal with the bubble level.

Step 3

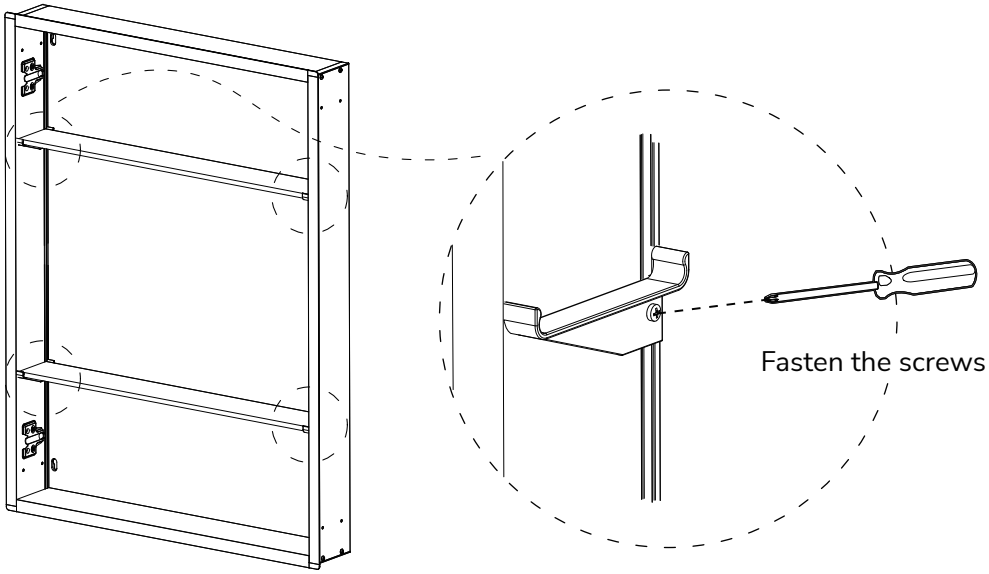


8 Decide on the Installation

Choose whether to wall-mount (Step 8-1 to Step 8-8) or recess-mount(Step 9-1 to Step 9-7) the medicine cabinet according to your preference.


For various product models, the mounting holes are positioned differently. Before drilling, confirm and mark all hole locations, ensuring each spot is drilled and fitted with wall anchors and screws.

The mounting holes are located as indicated below:


Single-door

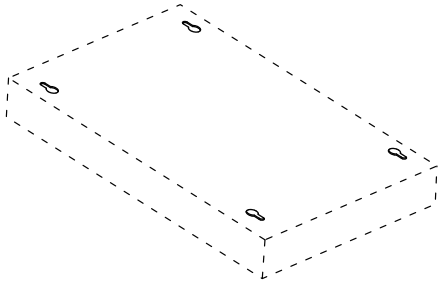

Double-door

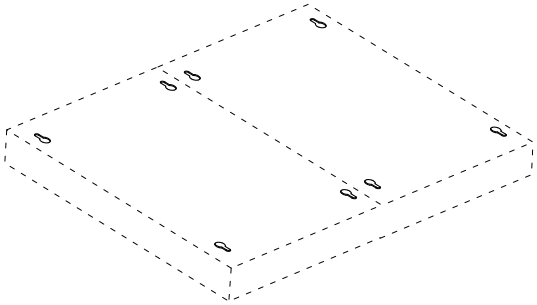

Triple-door

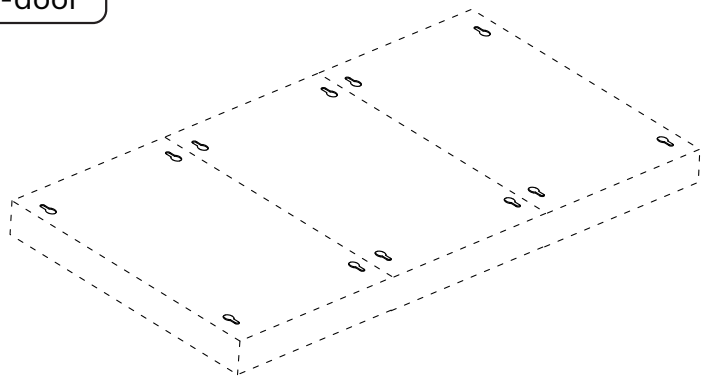


WALL MOUNTING

8-1

Step 1

Measure the distance between the upper mounting hole to the bottom of cabinet box

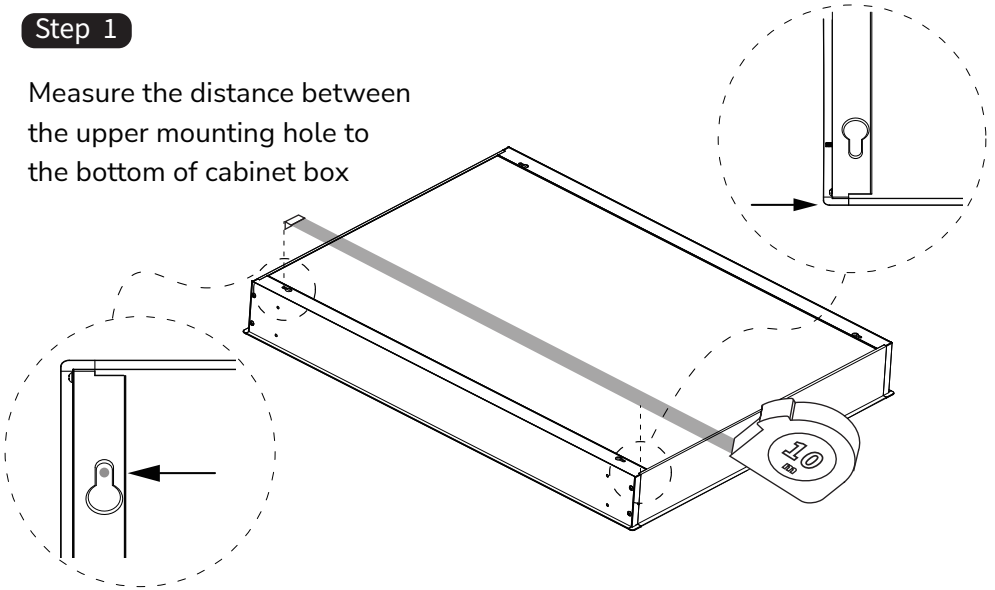


Step 2


1. Based on the measured distance, mark spots for the mounting holes on the wall.

2. From the two designated spots, draw straight lines using a bubble level to ensure they are perfectly horizontal.

3. Draw a vertical line at the middle of vanity sink as a reference.

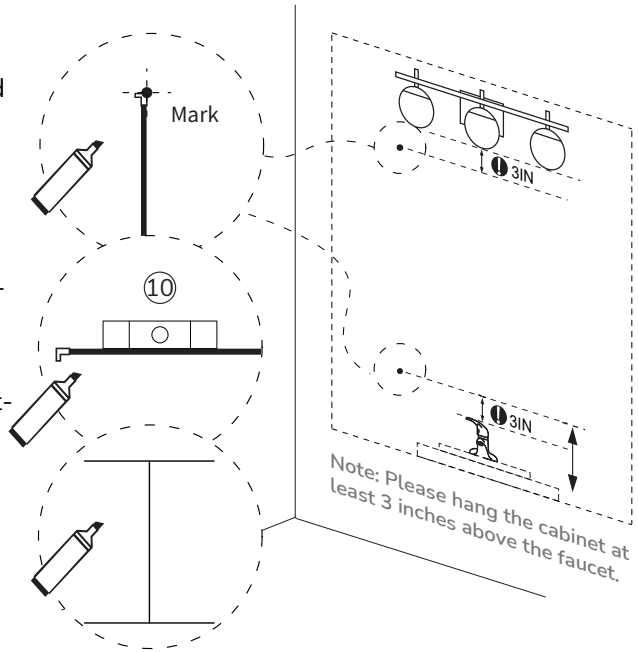


Step 3

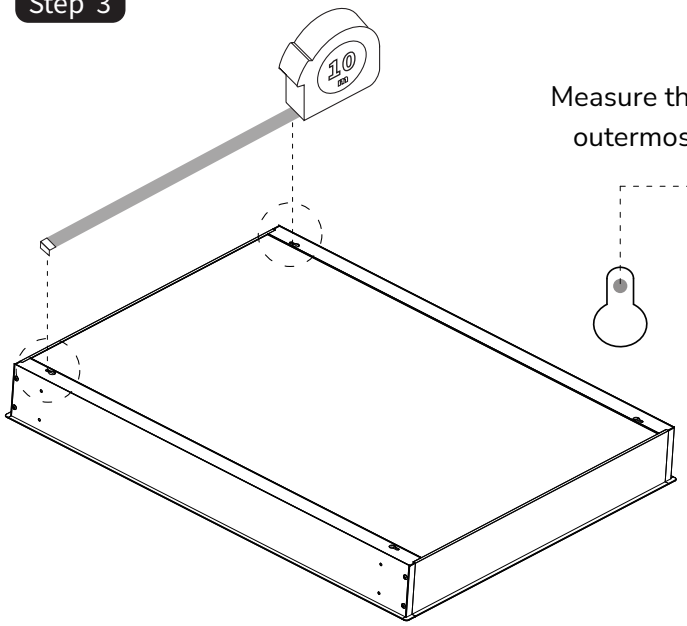

Measure the distance between the outermost two mounting holes

Step 4


Based on the measured distance, mark the other two spots on the wall.

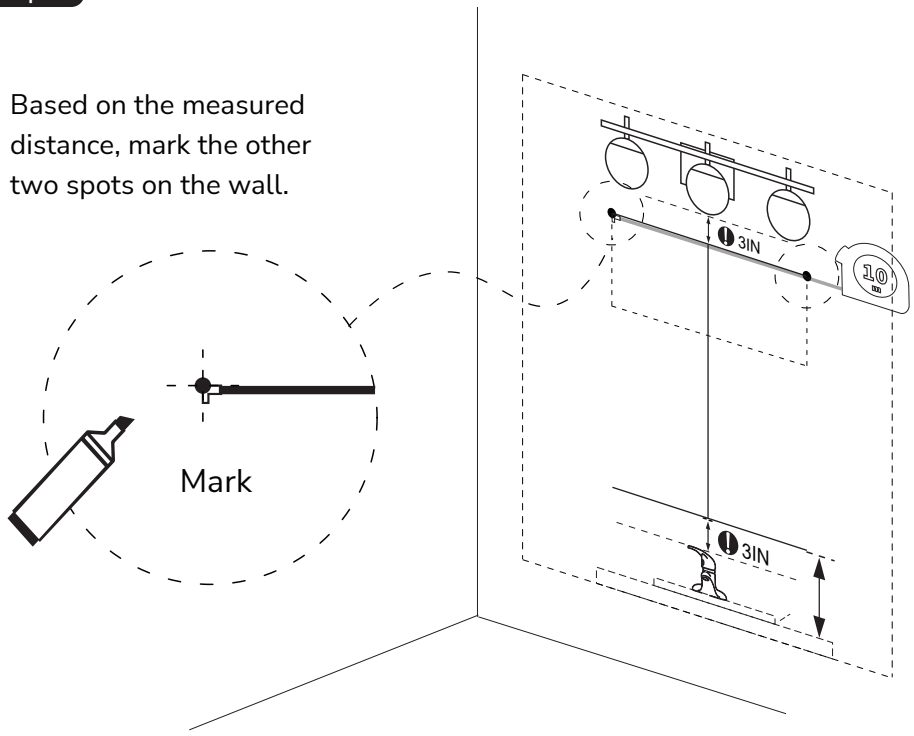

8-2



Step 1

Drill holes at the marked spots.

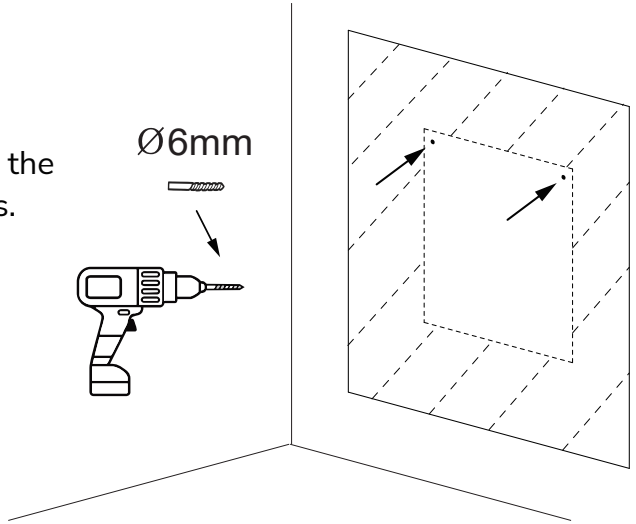


Step 2

Choose appropriate drill bits that match the thickness and material of the wall to ensure secure mounting.


Thickness of Wall :	Recommended Drill Bit :
＞5/8" (16mm)	1/4" (6mm) drill bit, drilling depth in 1 31/32" (50mm)  ⑧ ④
5/16" (8)-5/8" (16mm)	25/64" (10mm) drill bit  ⑨ ⑤
＜5/16" (8mm)	Unapplicable

Fit the screws but leave a 0.27-0.55in (7-14mm) gap between the screw-head and the wall

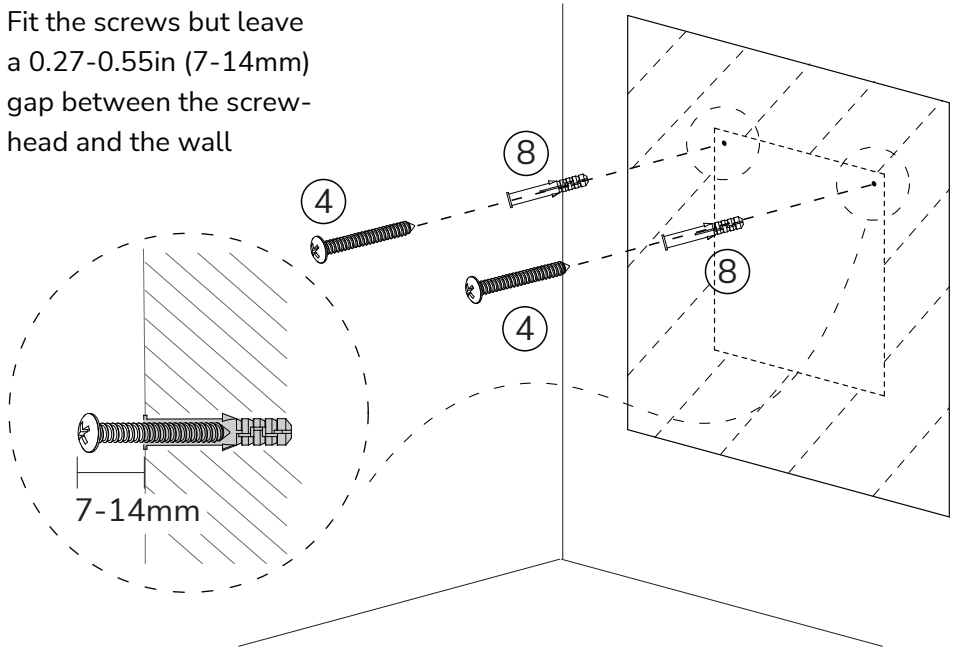


8-3

Step 1

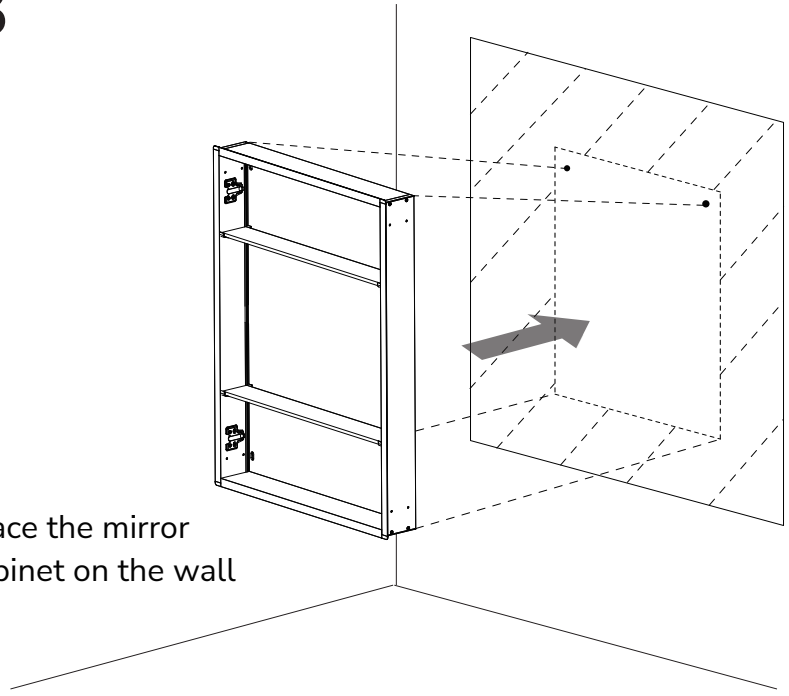

Place the mirror cabinet on the wall


Step 2

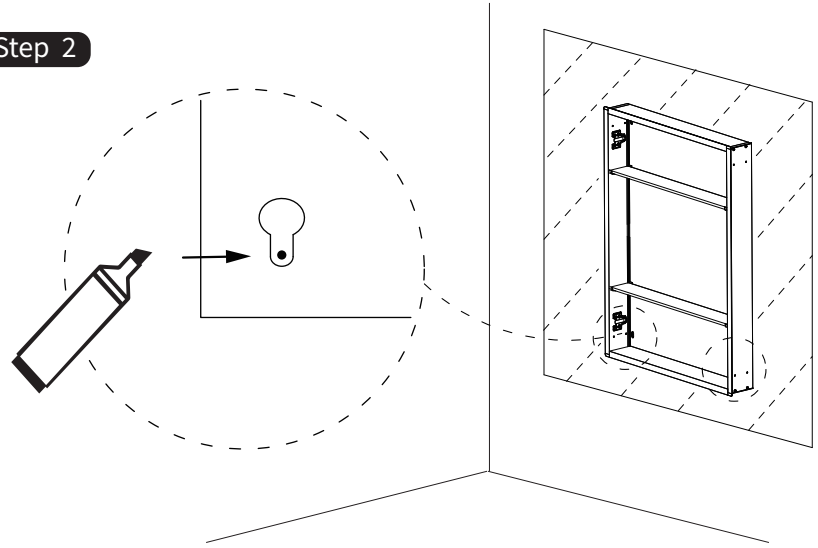

Mark the two bottom spots on the wall.


8-4

Step 1

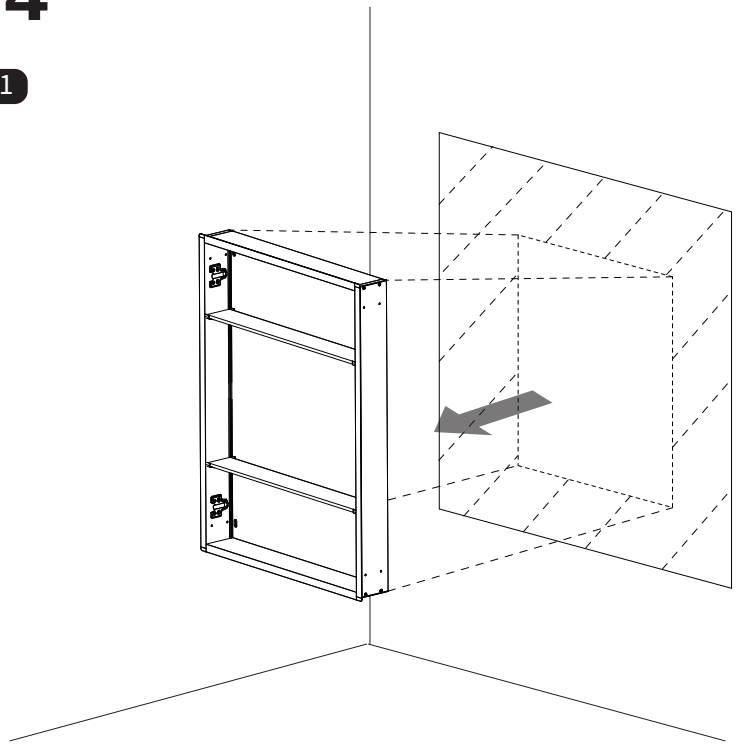


Step 2

Drill holes at the marked spots.

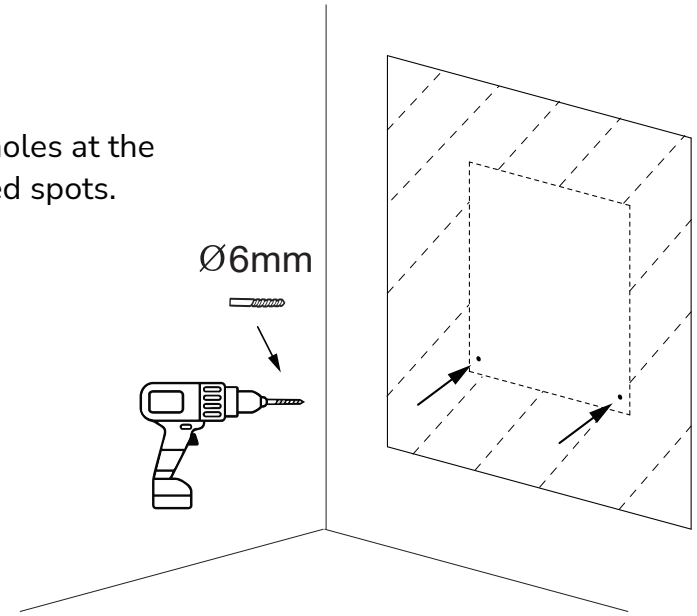

Step 3


Install wall anchors.

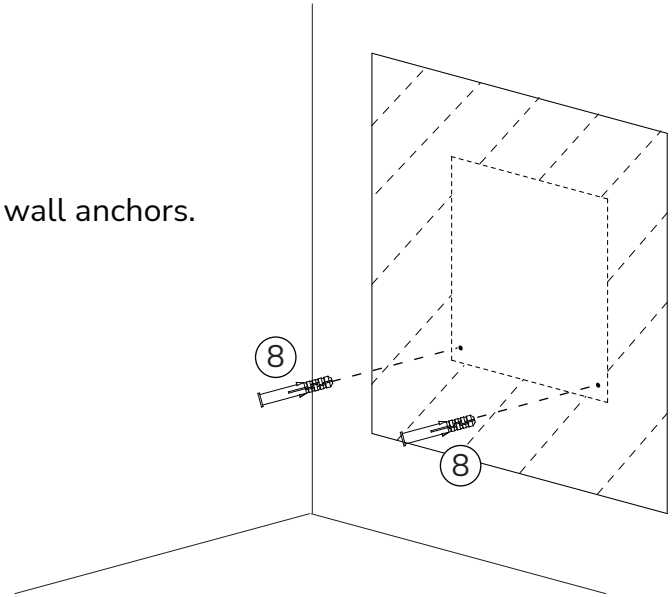

8-5


Step 1

Set screws

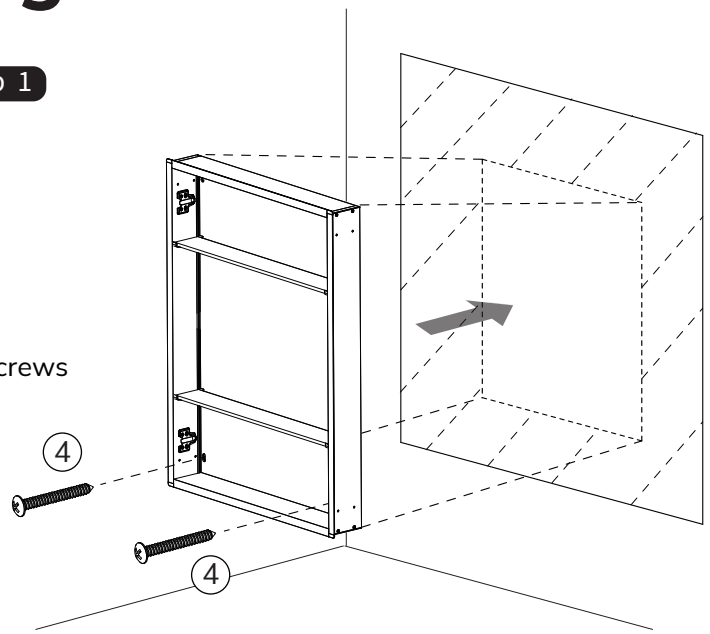


Step 2

Fasten the screws

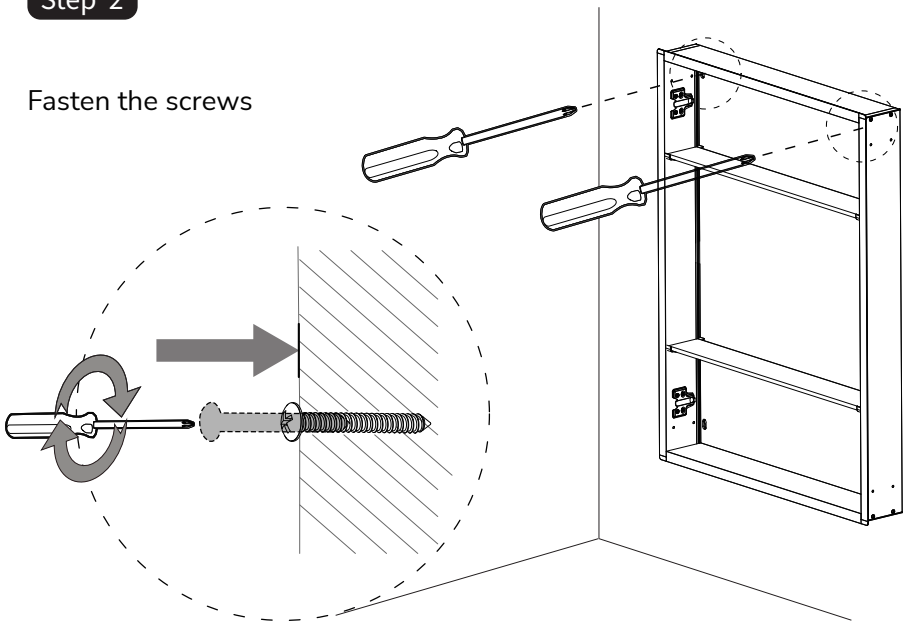

8-6


Apply stickers to cover the screwheads

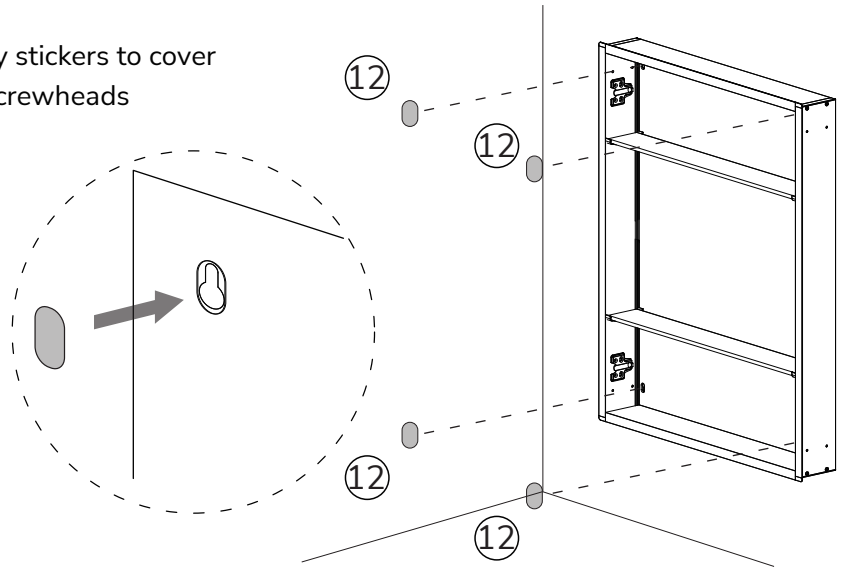


8-7

Step 1


Link the cabinet door to the cabinet body

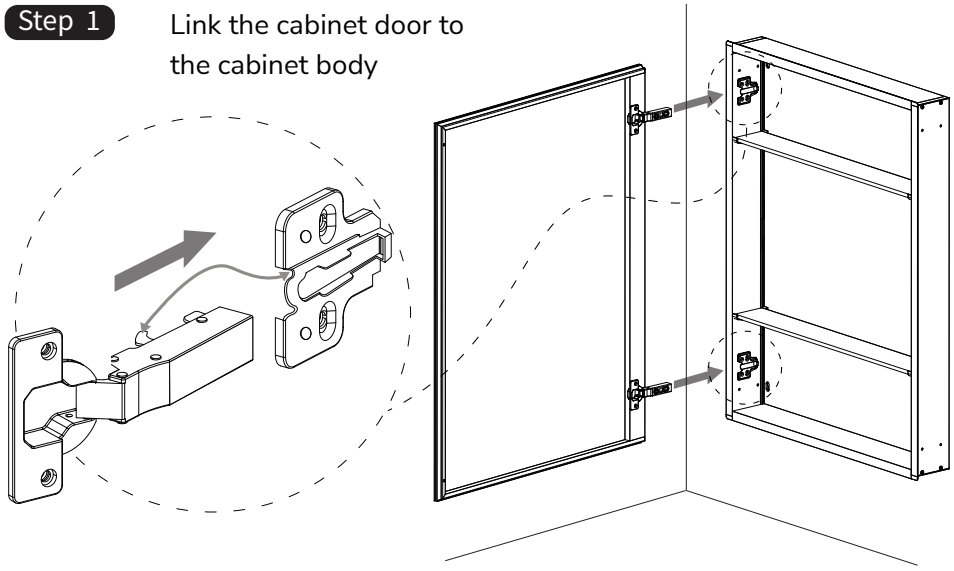

Step 2

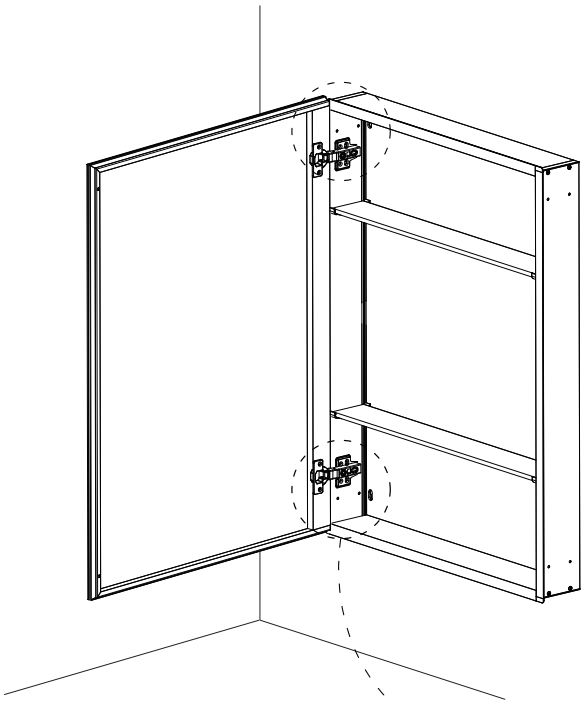


Press the hydraulic hinge into place. Once you hear a click, it indicates that the installation is complete.

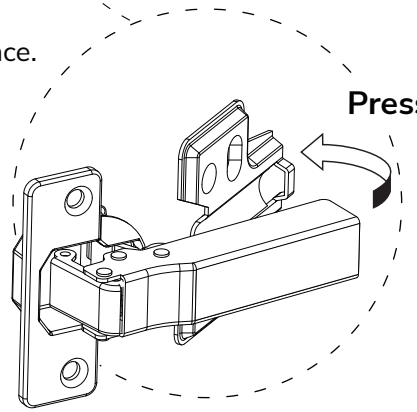


HOW TO ADJUST HYDRAULIC HINGES


Open the hydraulic hinge cover and adjust the cabinet door by fastening or loosening the screws accordingly.

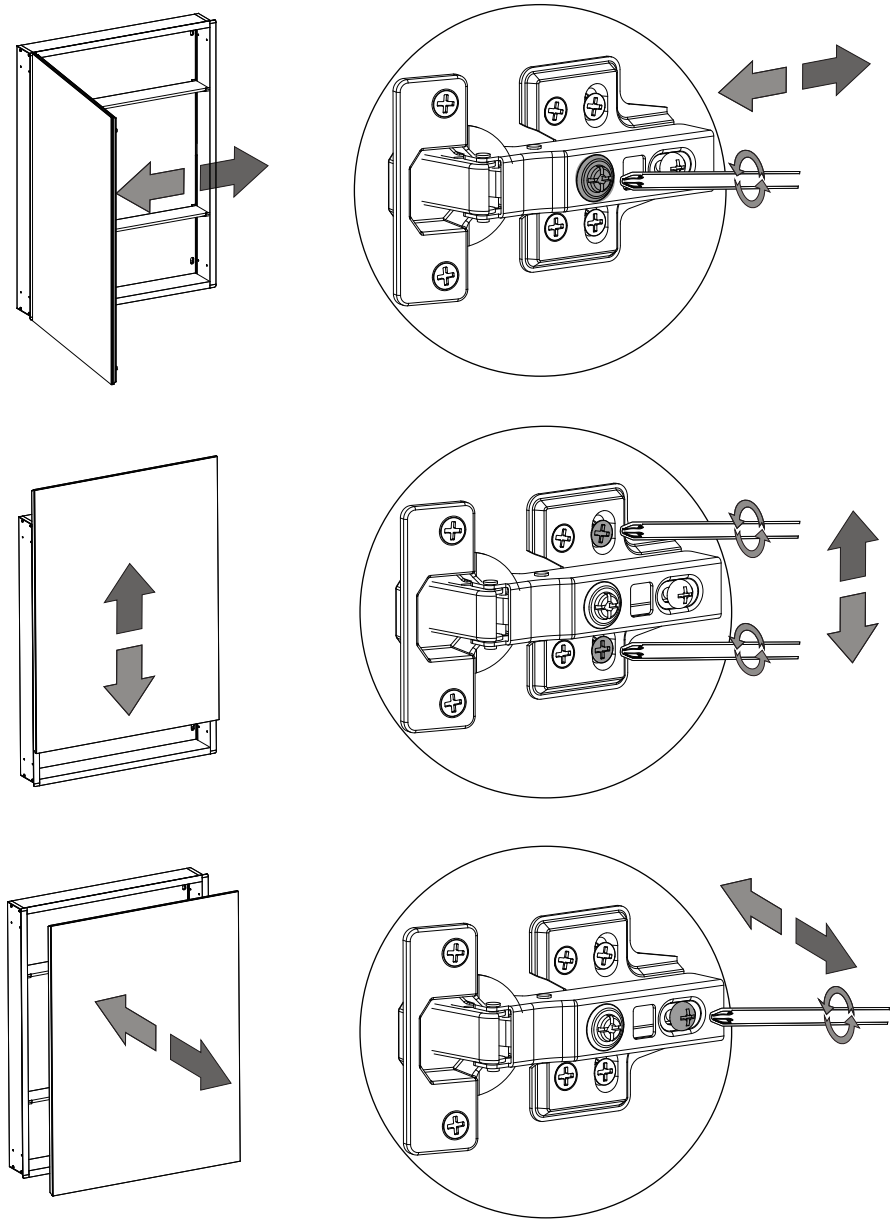

8-8


Adjust hinge

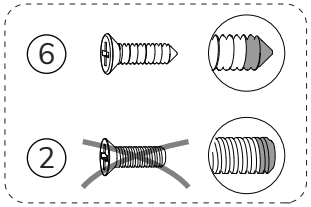

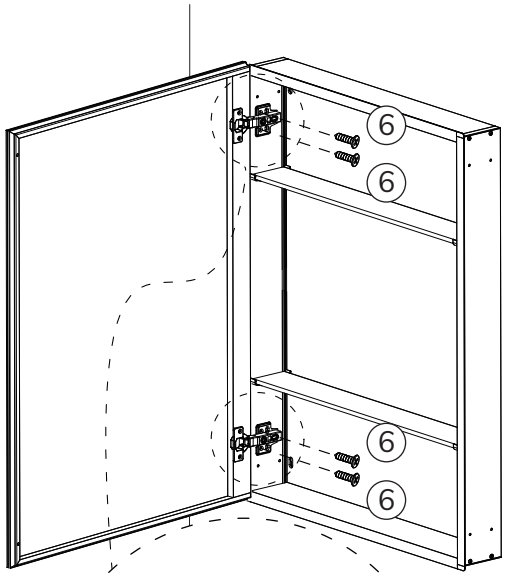


Step 1

1. Adjust the screws on hydraulic hinge, ensuring the cabinet door locates perfectly.

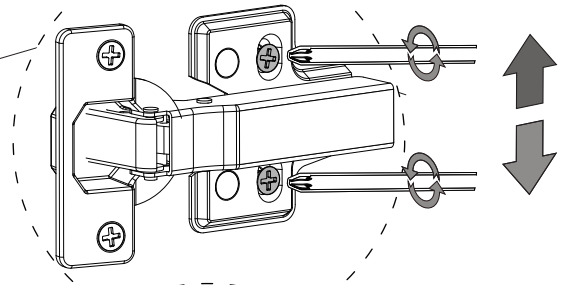

Step 2

2. Fasten the screws

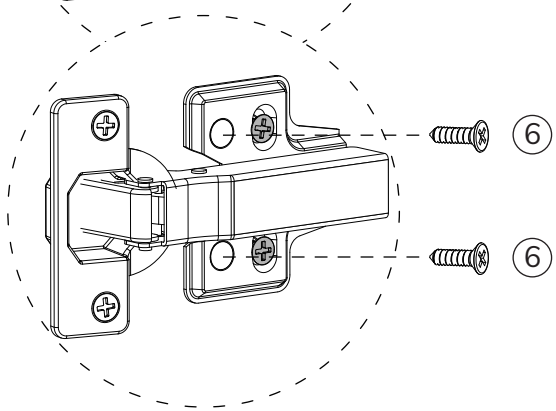


Installation Completed

RECESSED MOUNTING

9-1


Step 1

Ensure the cabinet is level

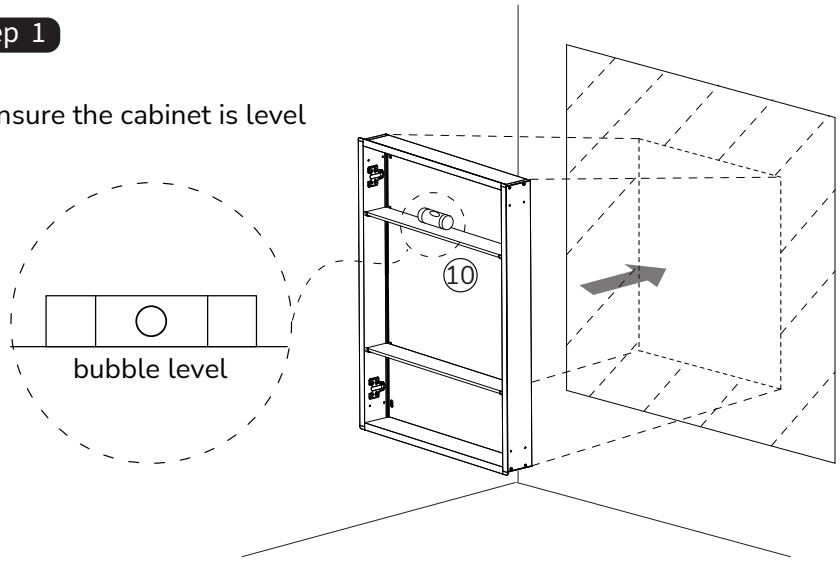


Step 2


Mark the placement of the cabinet

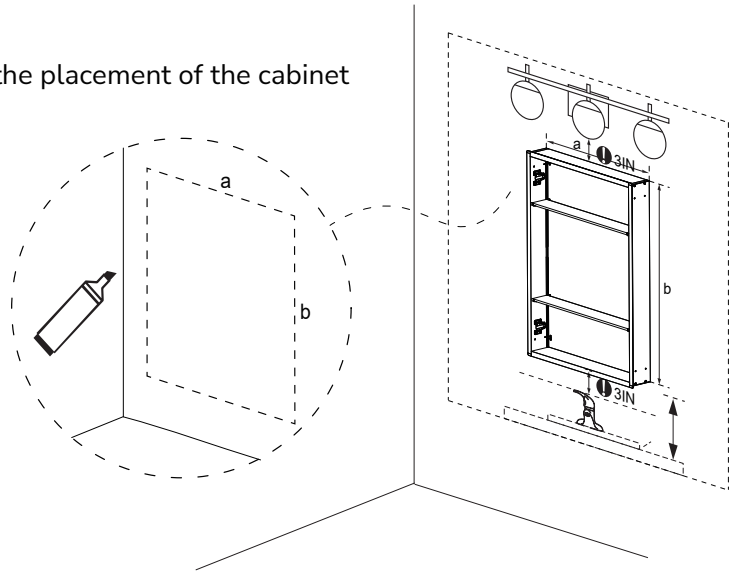


Note: Please hang the cabinet at least 3 inches above the faucet.

9-2

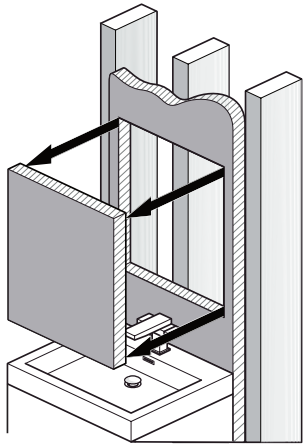

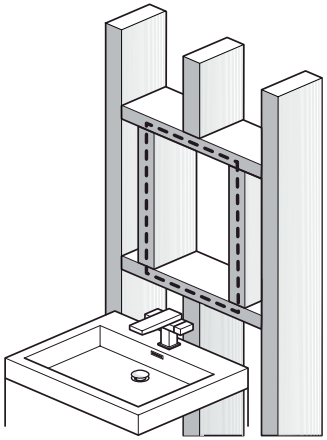

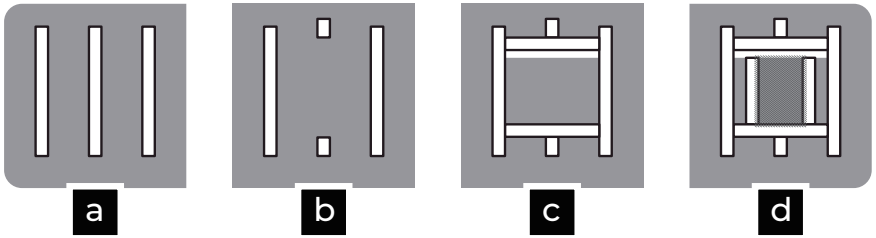

a. Mark the center stud;


b. Saw it for cabinet to rest on;

c. Add additional 2 studs on the top and at the bottom of the opening to support the cabinet;

d. Two more studs on both sides for the cabinet to be secured on.

9-3


Step 1

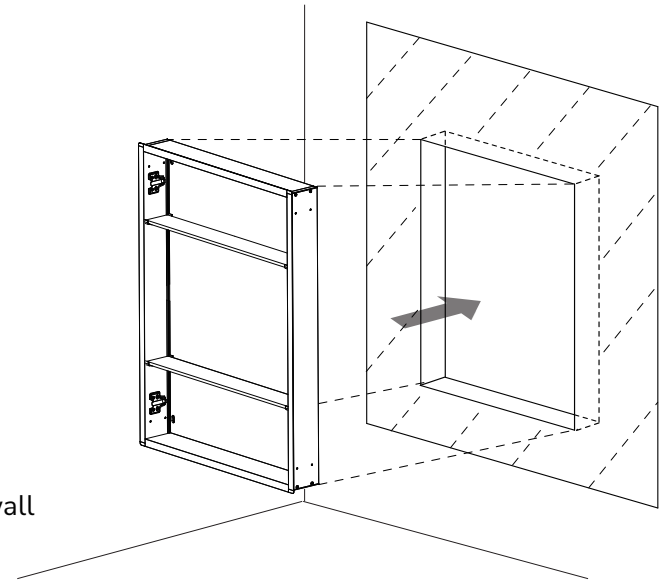

Place the mirror cabinet into the wall

Step 2



Mark spots for mounting hydraulic hinge

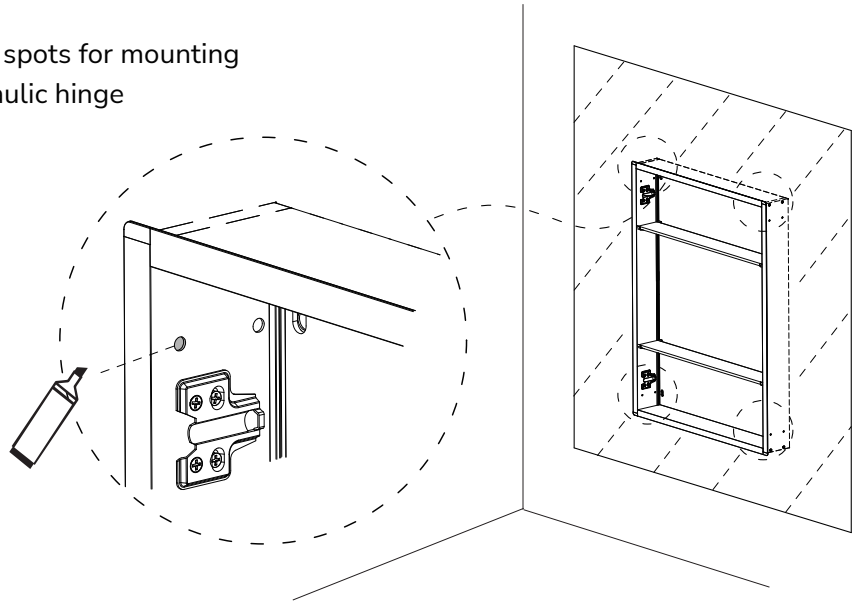


9-4

Step 1

Choose appropriate drill bits that match the thickness and material of the wall to ensure secure mounting.


Thickness of Wall :	Recommended Drill Bit :
＞5/8" (16mm)	1/4" (6mm) drill bit, drilling depth in 1 31/32" (50mm)  ⑧ ④
5/16" (8)-5/8" (16mm)	25/64" (10mm) drill bit  ⑨ ⑤
＜5/16" (8mm)	Unapplicable

Take out the cabinet box and drill holes at the marked spots.

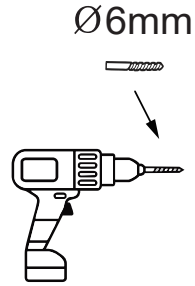


Step 2

Install wall anchors

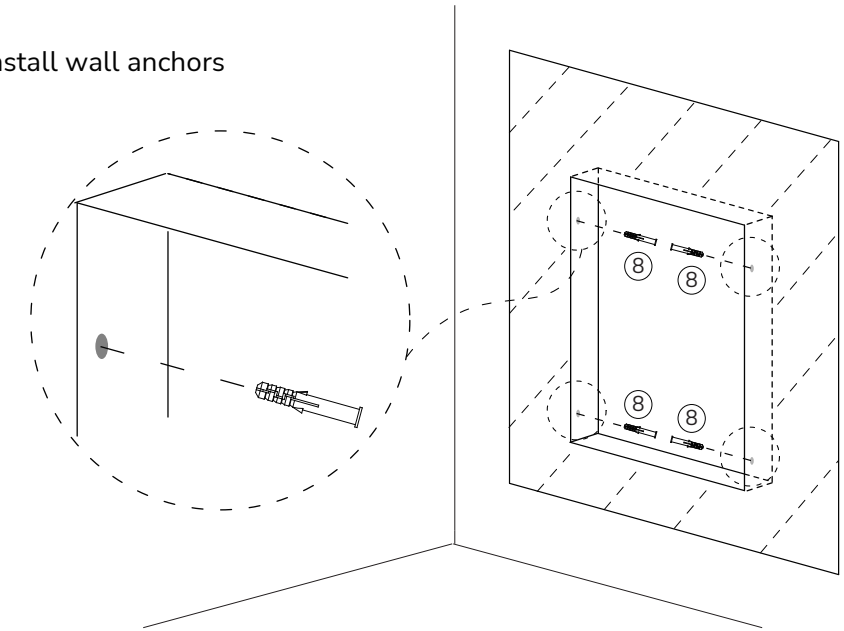


Step 3

Place the mirror cabinet into the wall

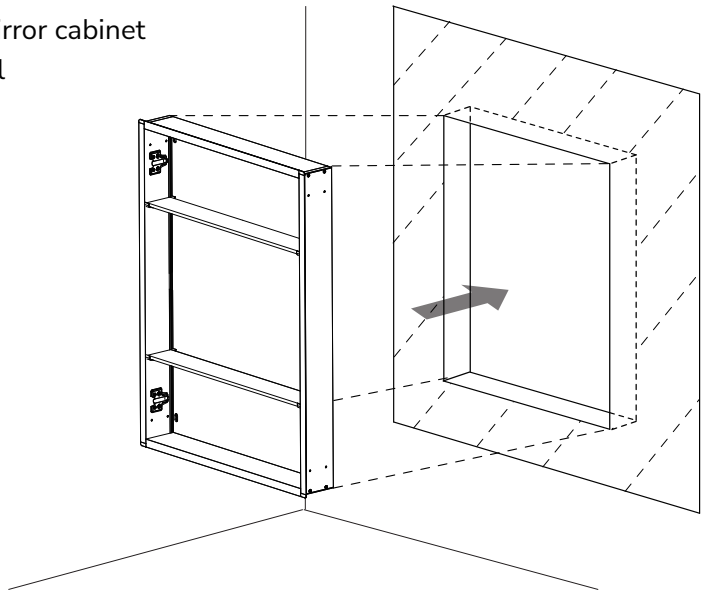


Step 4

Set screws

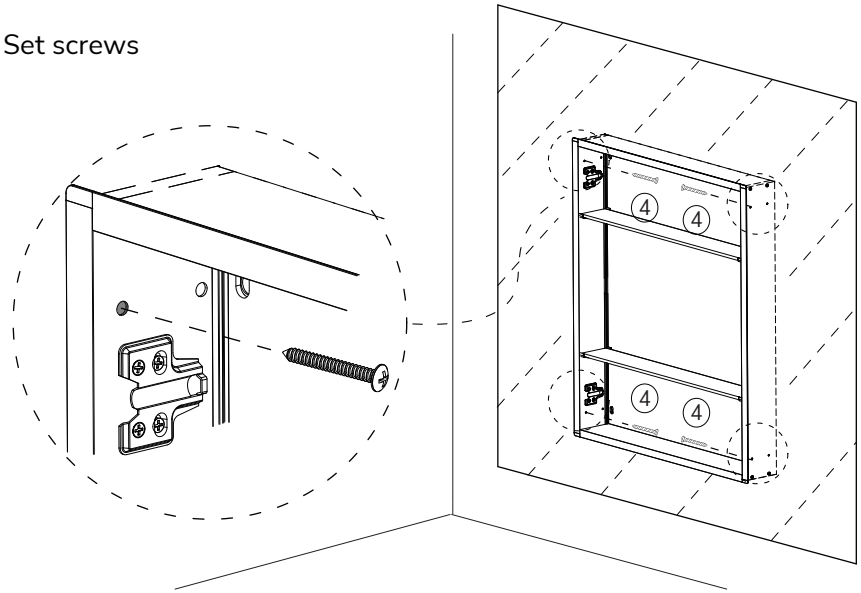

9-5


Apply stickers to cover the screwheads

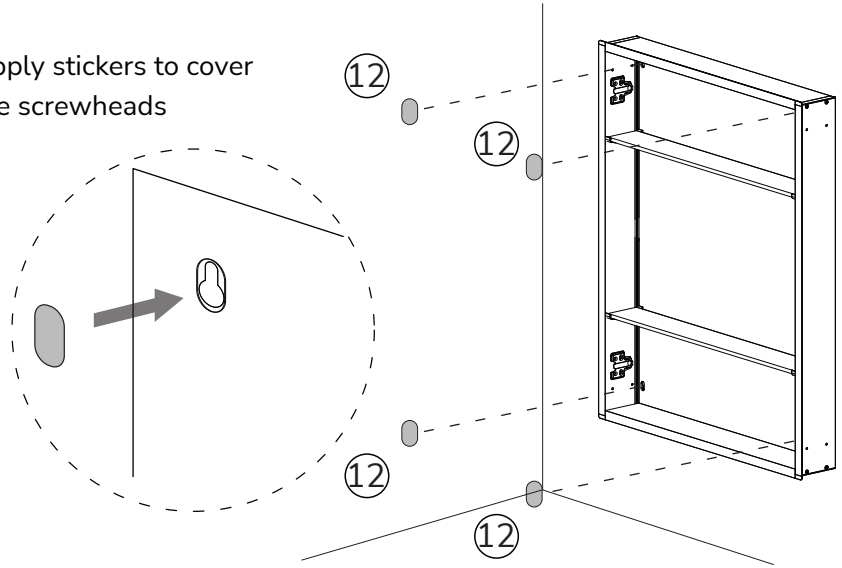

9-6


Step 1

Link the cabinet door to the cabinet body

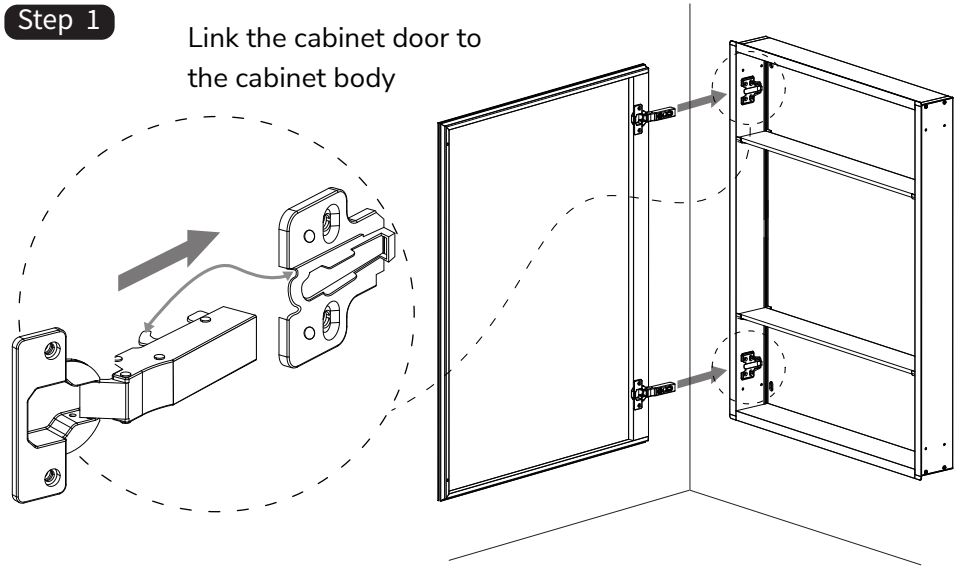


Step 2

Press the hydraulic hinge into place. Once you hear a click, it indicates that the installation is complete.

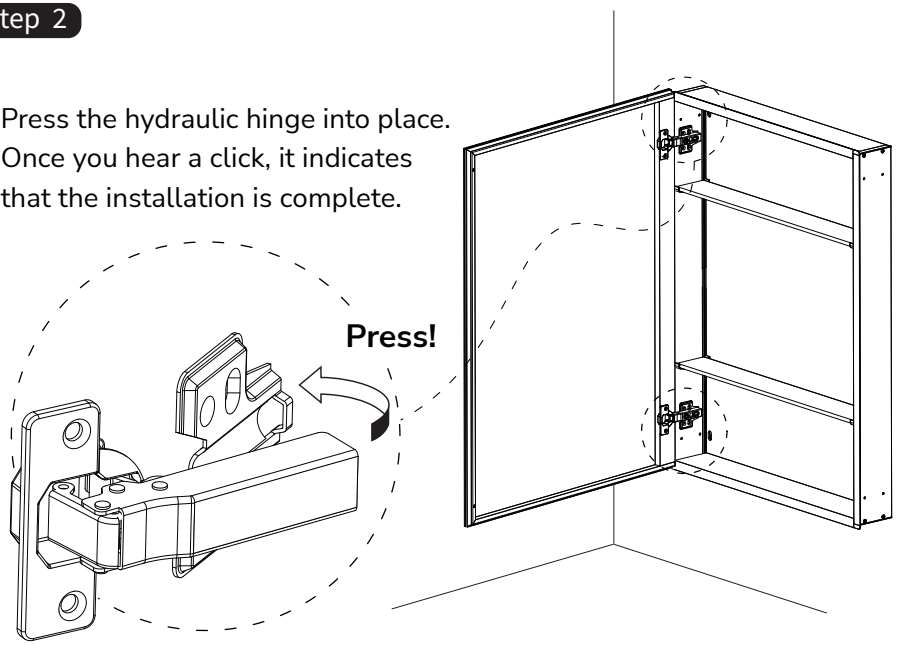


HOW TO ADJUST HYDRAULIC HINGES


Open the hydraulic hinge cover and adjust the cabinet door by fastening or loosening the screws accordingly.

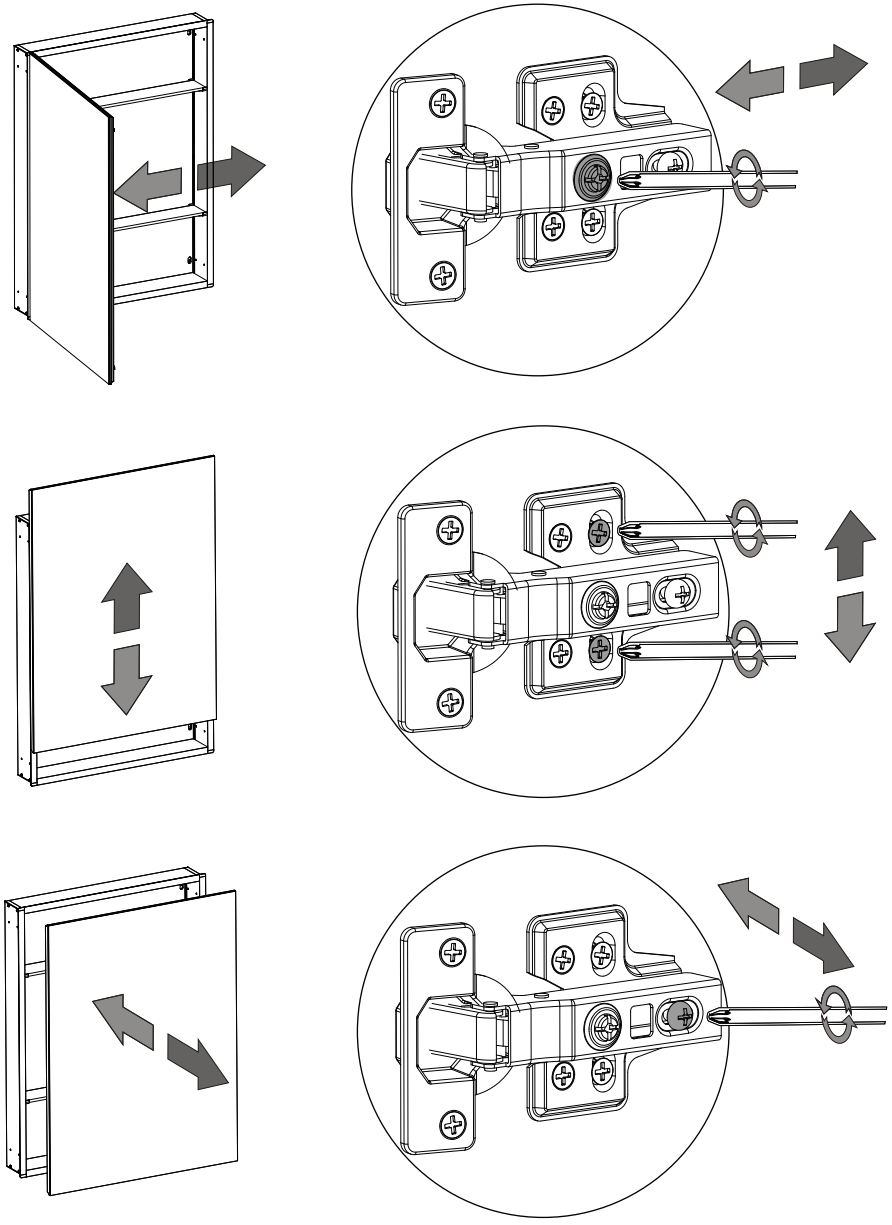

9-7


Adjust hinge

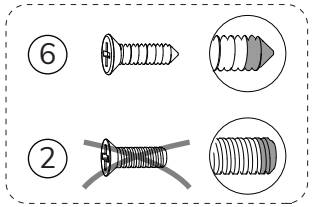

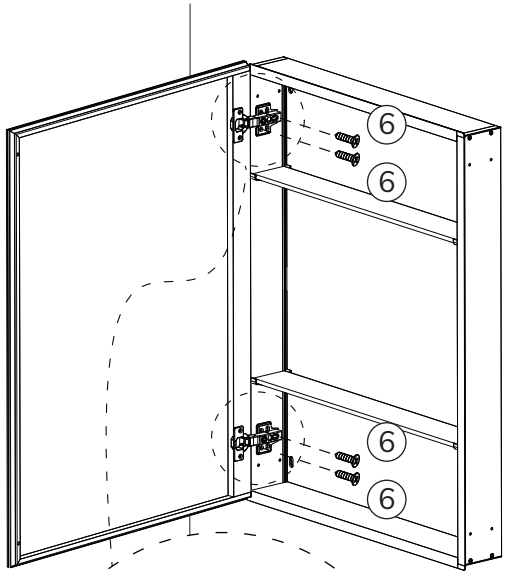


Step 1

1. Adjust the screws on hydraulic hinge, ensuring the cabinet door locates perfectly.

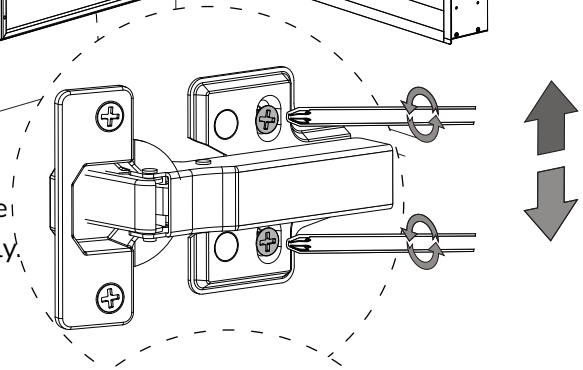

Step 2

2. Fasten the screws

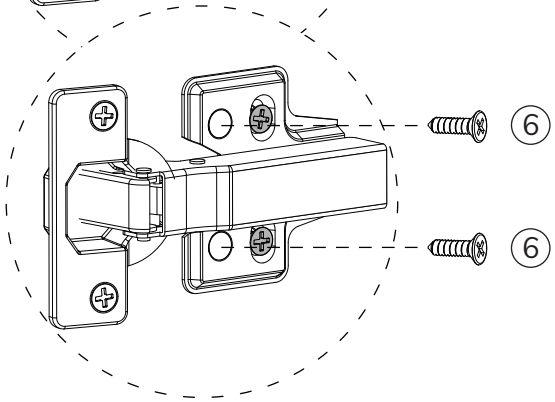

Installation Completed

HOW TO CLEAN

When cleaning the mirror, please follow these instructions:

1. Use a soft, non-abrasive cloth to clean the mirror. Avoid using rough or abrasive materials that may damage the surface.

2. Do not use any cleaning agents that may cause irritation or damage to the mirror's finish. Instead, use any of the recommended cleansers to remove dirt and grime:

☑ Gentle liquid detergents ☑ Colorless cleansers

3. If any adhesive residue left, please wipe it off with a cloth dipped in water (instead of detergents).

★ Warranty

A two-year warranty from the date of your purchase.

★ Contact Email

If you have any questions, please feel free to contact us via MC@ZRsupport.com

Scan the QR code to watch the installation video