



1

Align hinges' position,  
drill pilot holes,  
mortise door jamb  
to receive hinges.

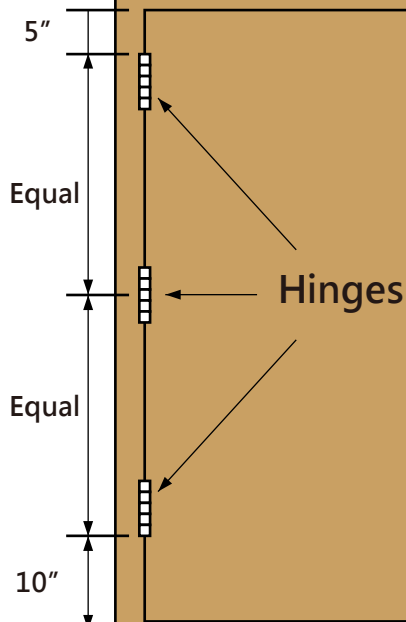

2

Attach hinges to door, then secure with 3 screws  
included for each hinge.

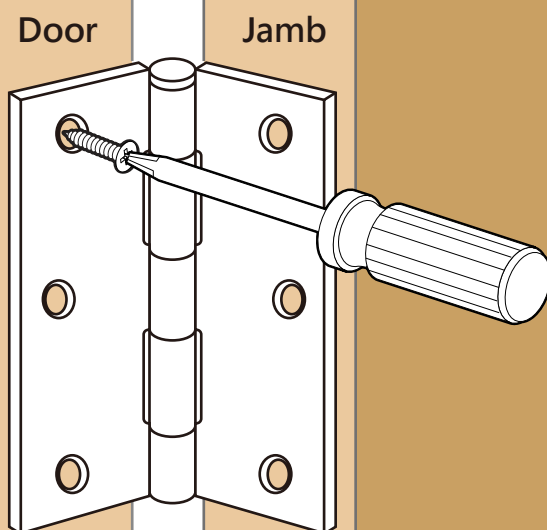

3

Position door hinges on jamb, then secure  
with 3 screws included for each hinge

