




ASSEMBLY INSTRUCTIONS

# RESIN GARDEN SHED

SKU: T-PS23-0404-86BG

BE  
YOUR  
LIFE BUILDER

[www.patiowell.com](http://www.patiowell.com)

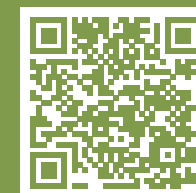

**Patiowell**  
Resin Garden House  
Installation Tutorial  
[https://www.patiowell.com/  
pages/video-t-ps23-0404-868g](https://www.patiowell.com/pages/video-t-ps23-0404-868g)


✉ [saleservice@patiowell.com](mailto:saleservice@patiowell.com)

# SITE PREPARATION


Level the ground surface.



Recommendation: Construct a wooden or concrete base as a foundation.

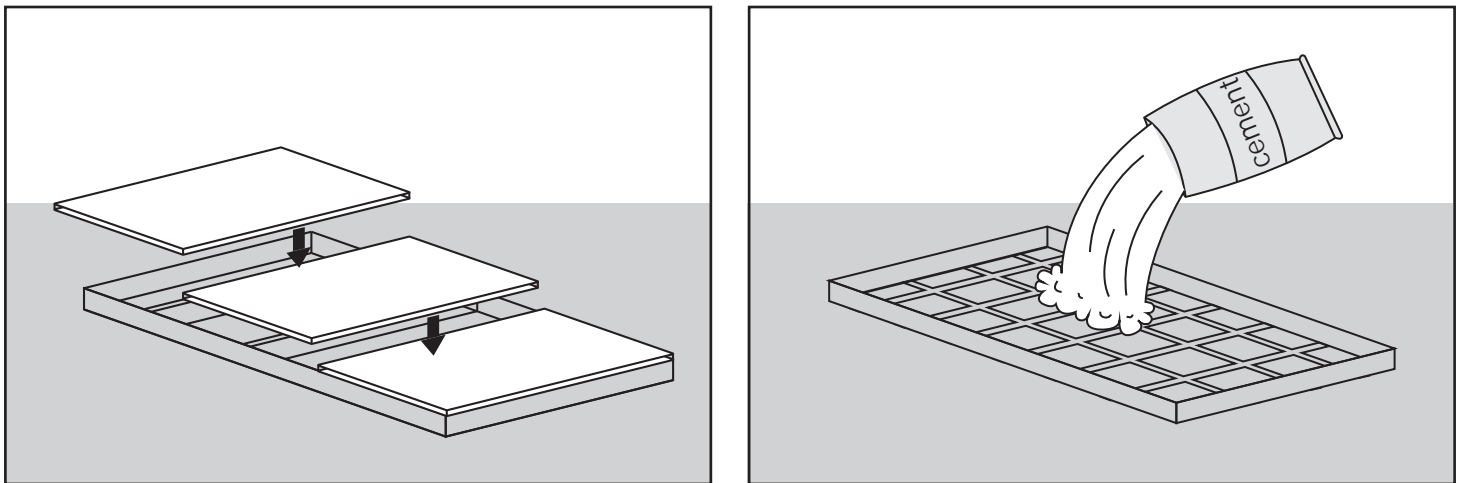

The external dimensions of the product :

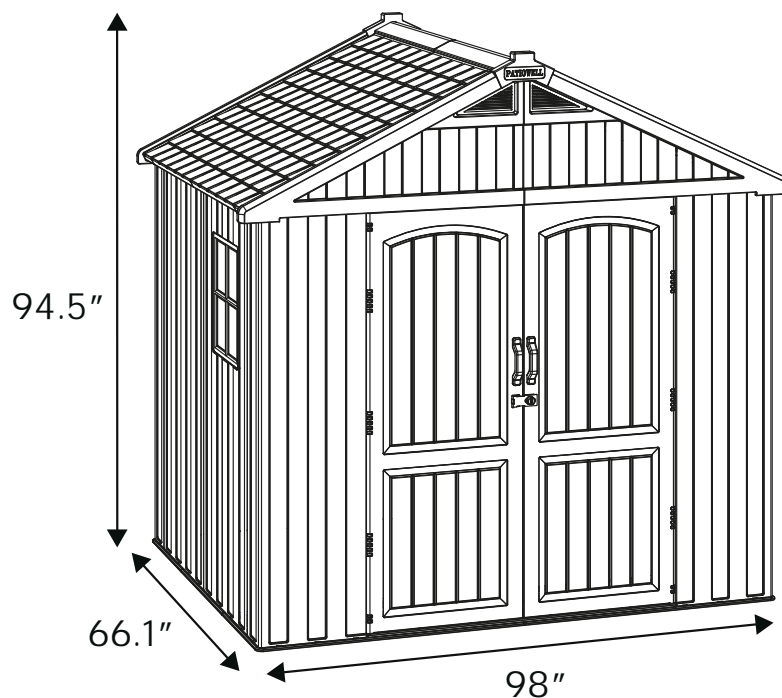

Before installation, please measure the ground with a tool and make sure the ground is level before installation.



## BEFORE STARTING ASSEMBLY


Remove all of the pieces from the 5 packages and spread them out on the ground. Before installation, please check the type and quantity of parts first.

It is recommended to use a clean work surface to spread the parts out and for pre-assembly steps. Review all instructions before you begin, continue to refer to instructions during assembly.

Be sure to follow all steps thoroughly.

Please prepare these components in advance at the beginning of each stage.

## REQUIRED TOOLS

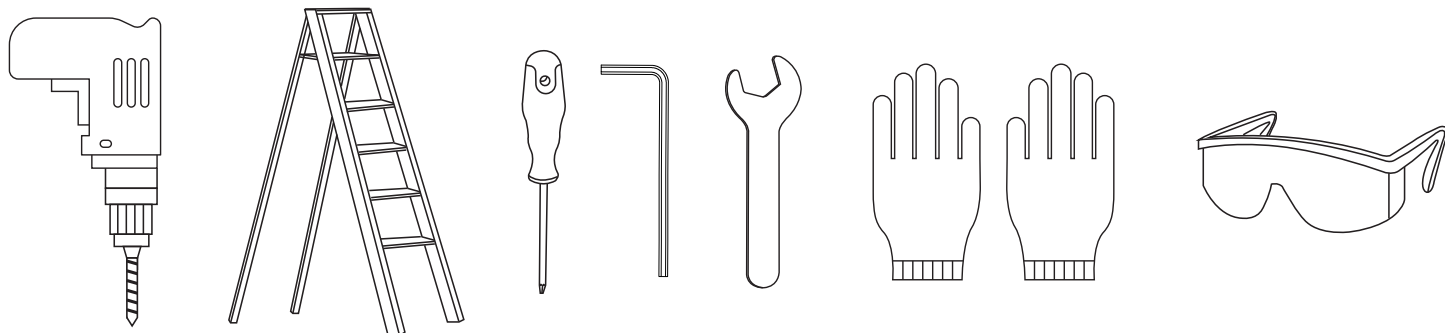

## CAUTION


Some parts have steel edges. Please be careful when handling components. Always wear work gloves, eye protection and long sleeves when assembling or performing any maintenance on your shed. Do not attempt assembly on days with strong winds or low temperatures.




Requires two people and takes 2-3 hours for Installation.  
Recommended to wear gloves to avoid scratches.  
Please read the manual carefully before installation.

DO NOT RETURN YOUR UNIT  
TO THE STORE  
**Contact us first**  
[saleservice@patiowell.com](mailto:saleservice@patiowell.com)


## FLOOR PARTS

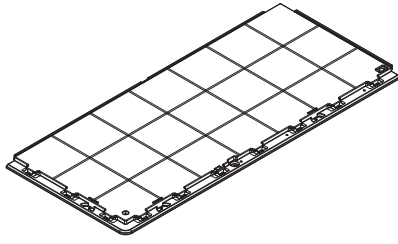


A1 X2

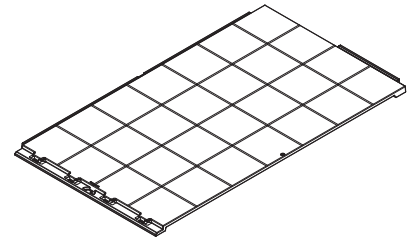

A2 X2

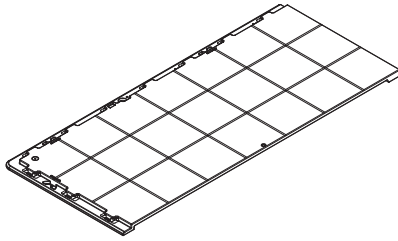


A3 X2

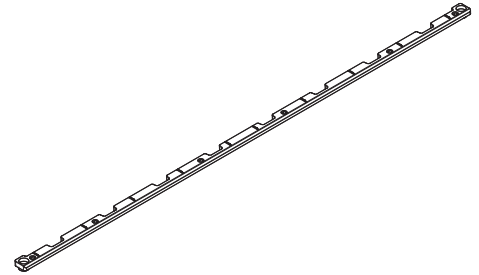


A4 X1


## WALL PARTS

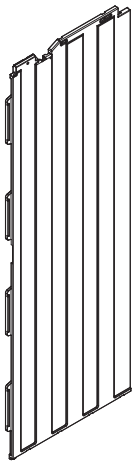

B1 X1

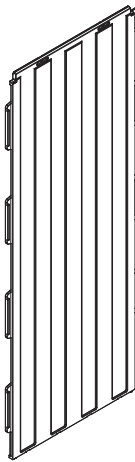

B2 X6

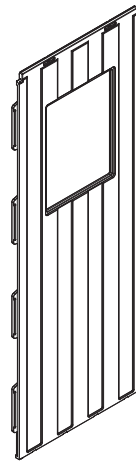

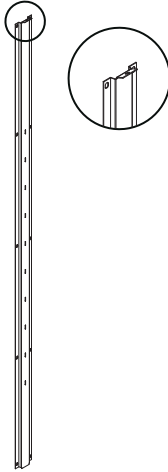
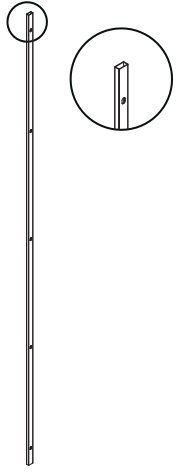
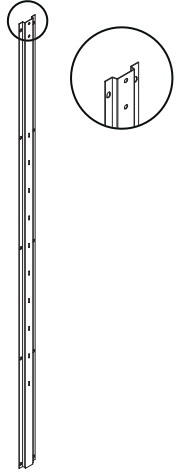
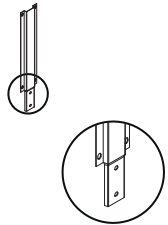


B3 X1






B4 X1







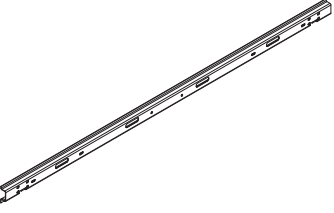

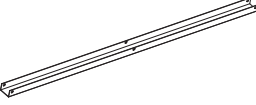
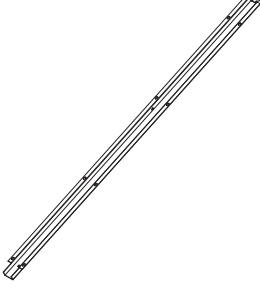
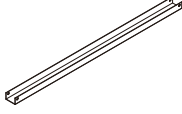
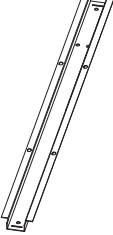
# WALL PARTS

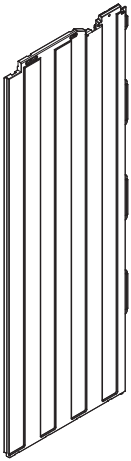 <p>B5 X1</p>	 <p>B6 X1</p>	 <p>B2-1 X6</p>	 <p>B2-2 X2</p>
 <p>B2-3 X4</p>	 <p>B2-4 X2</p>		


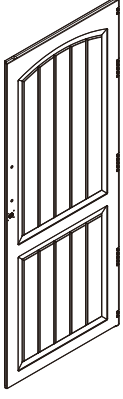

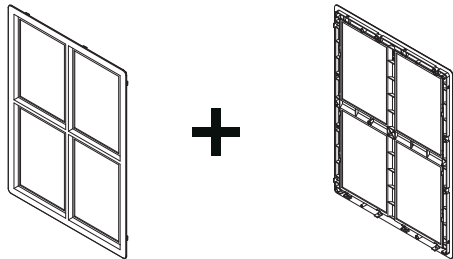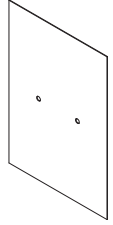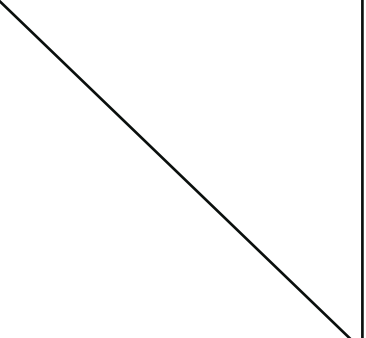
# WINDOW PARTS

 <p>W1 X2</p>	 <p>W2 X1</p>	
--	---	---

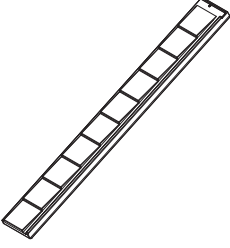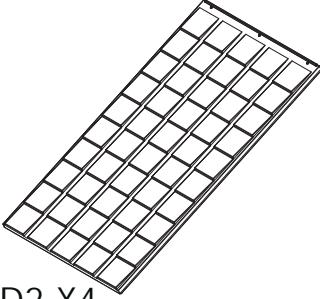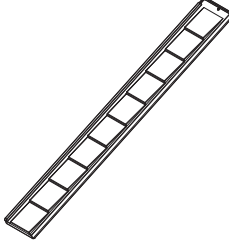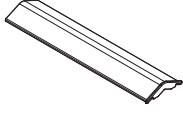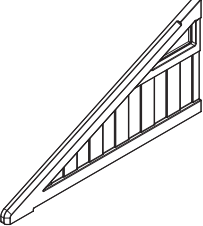









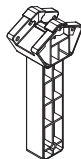
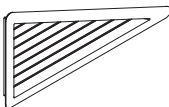
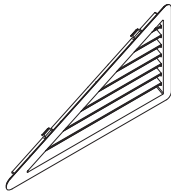




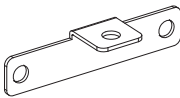



# ROOF PARTS

			
D1 X2	D2 X4	D3 X2	E1 X2
			
CL X2	CR X2	DD X1	D2-1 X2
			
D2-2 X1	D2-3 X4	D2-4 X2	E1-1 X2





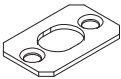

























# DOOR PARTS


			
DL X1	DR X1	DF X2	DZ X2
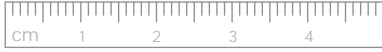
# ACCESSORIES

 <p>DH1 X2</p>	 <p>DH2 X2</p>	 <p>DG X2</p>	 <p>+</p>  (3pcs) M4*10  <p>+</p>  (4pcs) M4*16
 <p>DC X1</p>	 <p>DDZ X2</p>	 <p>E3 X2</p>	 <p>E4 X1</p>
 <p>CRI X2</p>	 <p>CLI X2</p>	 <p>D4 X16</p>	 <p>A5 X2</p>
 <p>A1-1 X1</p>	 <p>B1-1 X2</p>	 <p>D2-5 X2</p>	 <p>D2-6 X2</p>
 <p>M6 X31</p>	 <p>Z6 X6</p>		


# SCREW

 124 pcs   SP6-15      M6*15	 133 pcs   SP6-20      M6*20
 14 pcs   SP6-25      M6*25	 4 pcs   M6-10      M6*10
 16 pcs   M6-15      M6*15	 10 pcs   M6-55      M6*55
 11 pcs   SPF6-20      M6*20	 2 pcs   SF4-15      M4*15
 11 pcs   M5-8      M5*8	 8 pcs   M5-12      M5*12

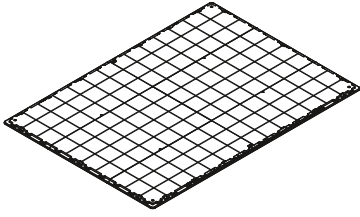


## Floor Part Instruction

10-14  
(page)

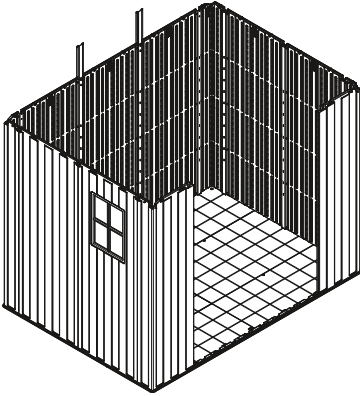


## Wall Part Instruction

14-25  
(page)

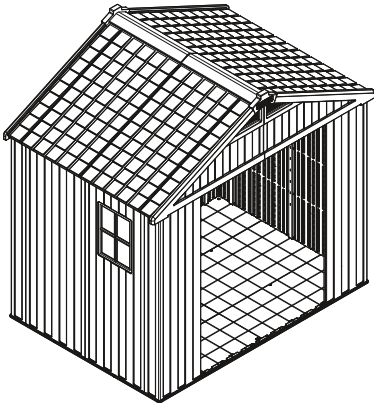

## Roof Part Instruction


26-35  
(page)

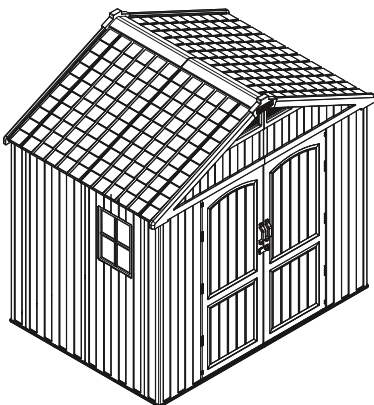


## Door Part Instruction

36-40  
(page)

## STEP 1




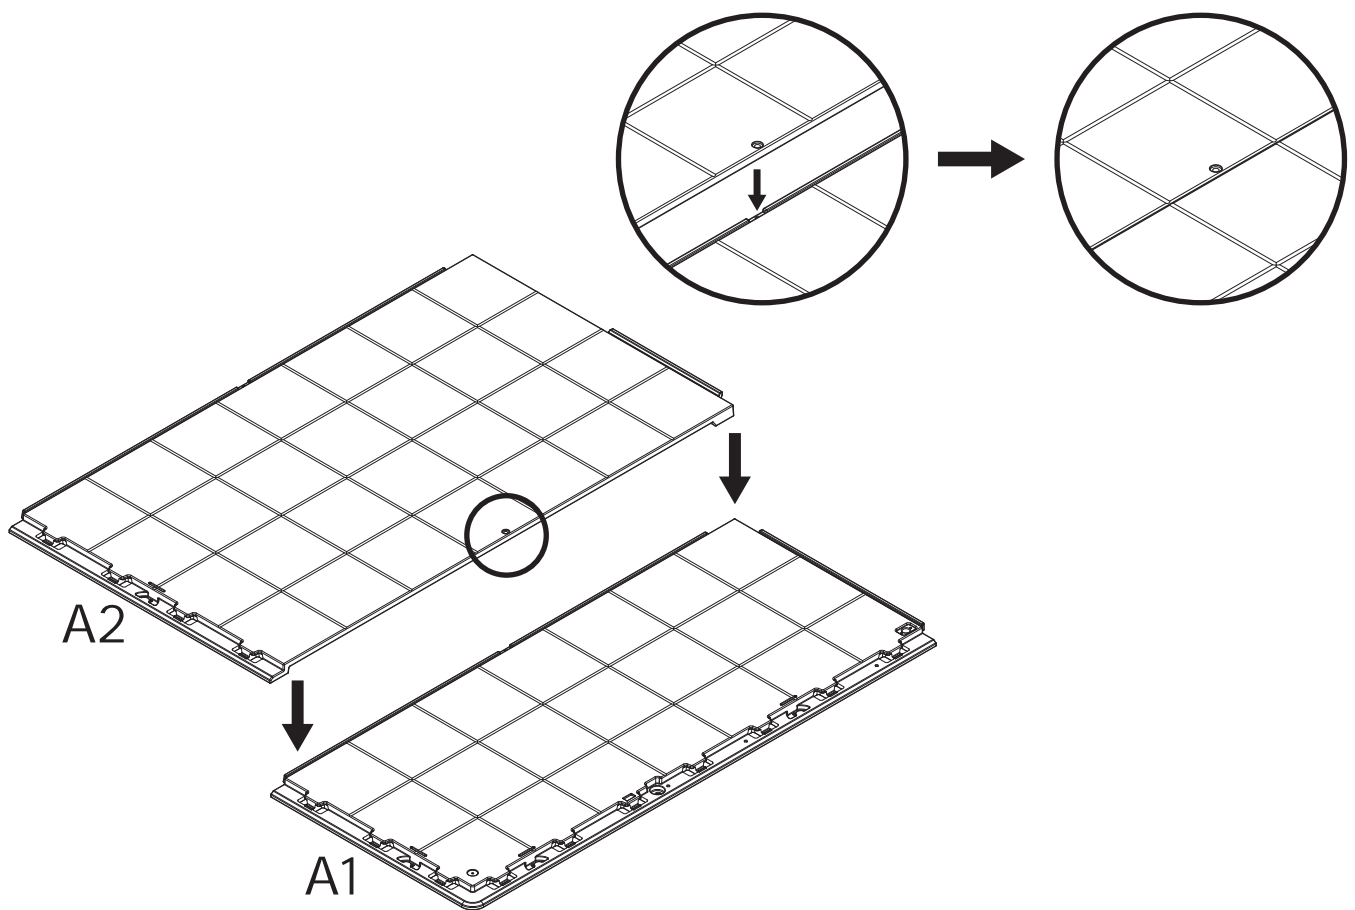


## STEP 2




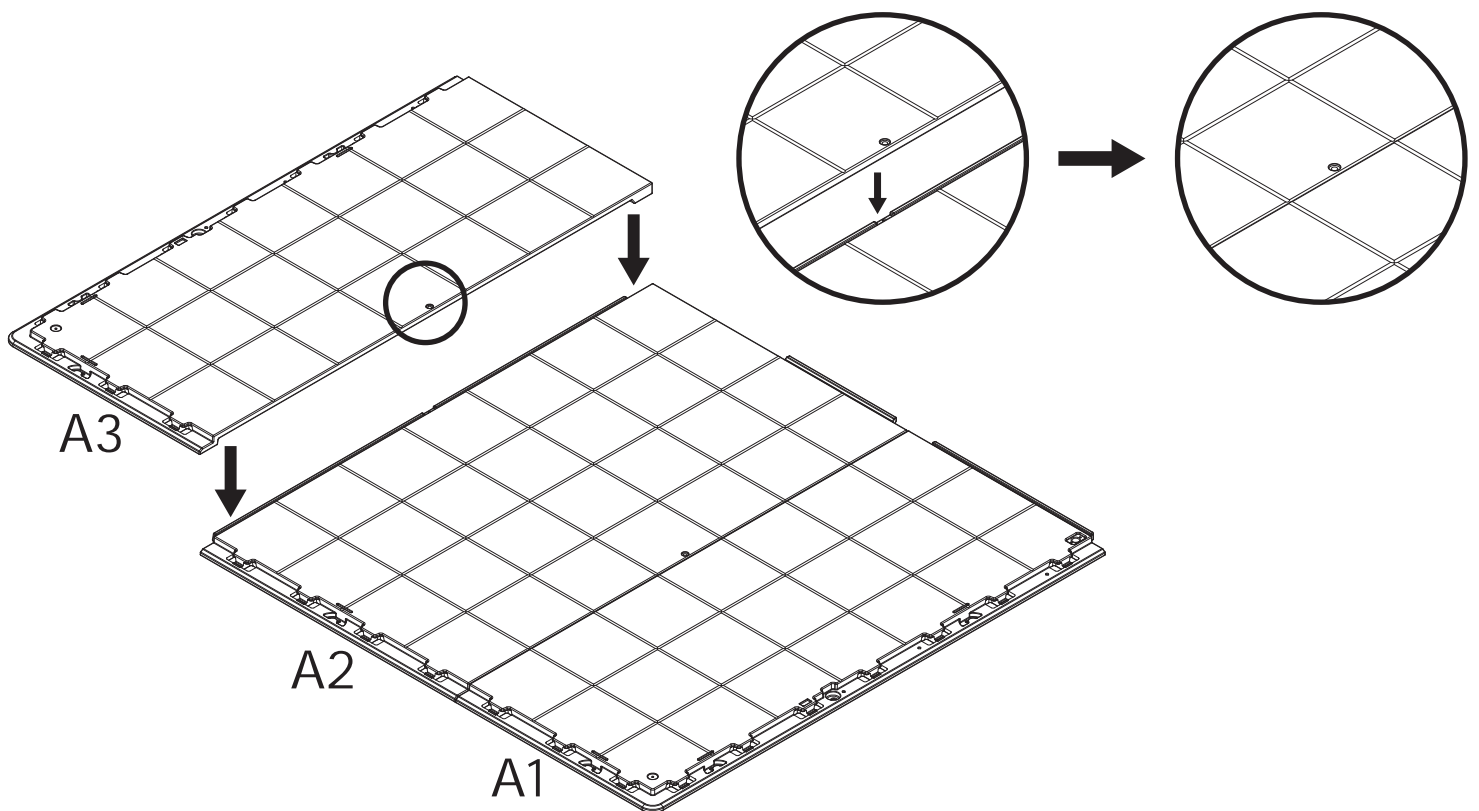





## STEP 3

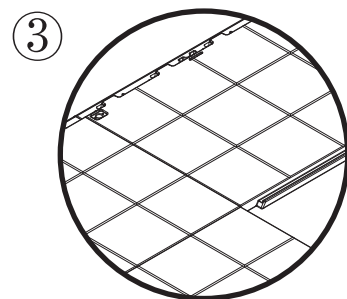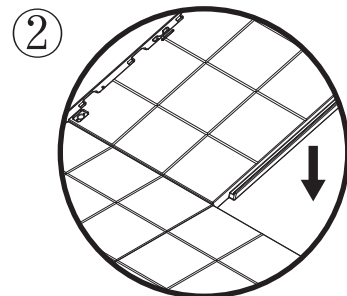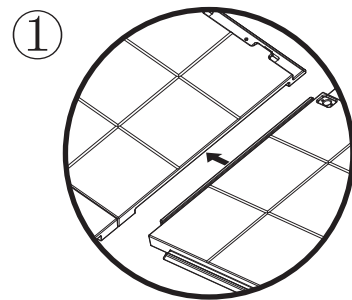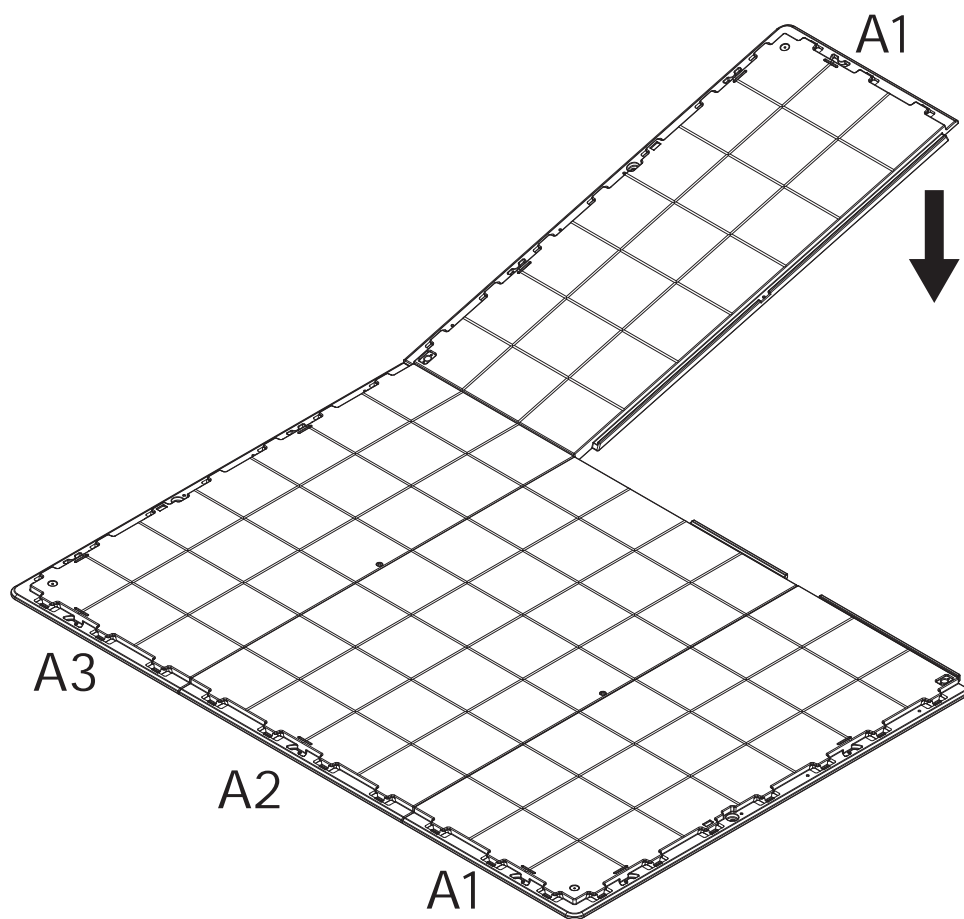


## STEP 4

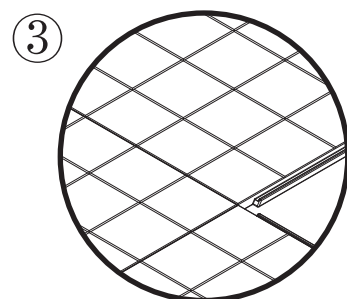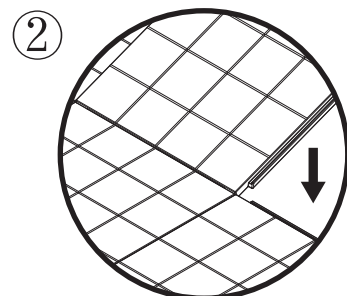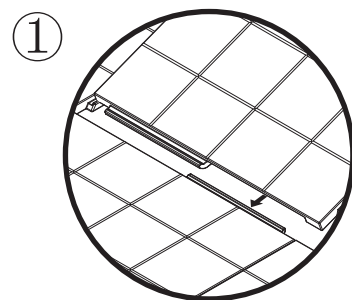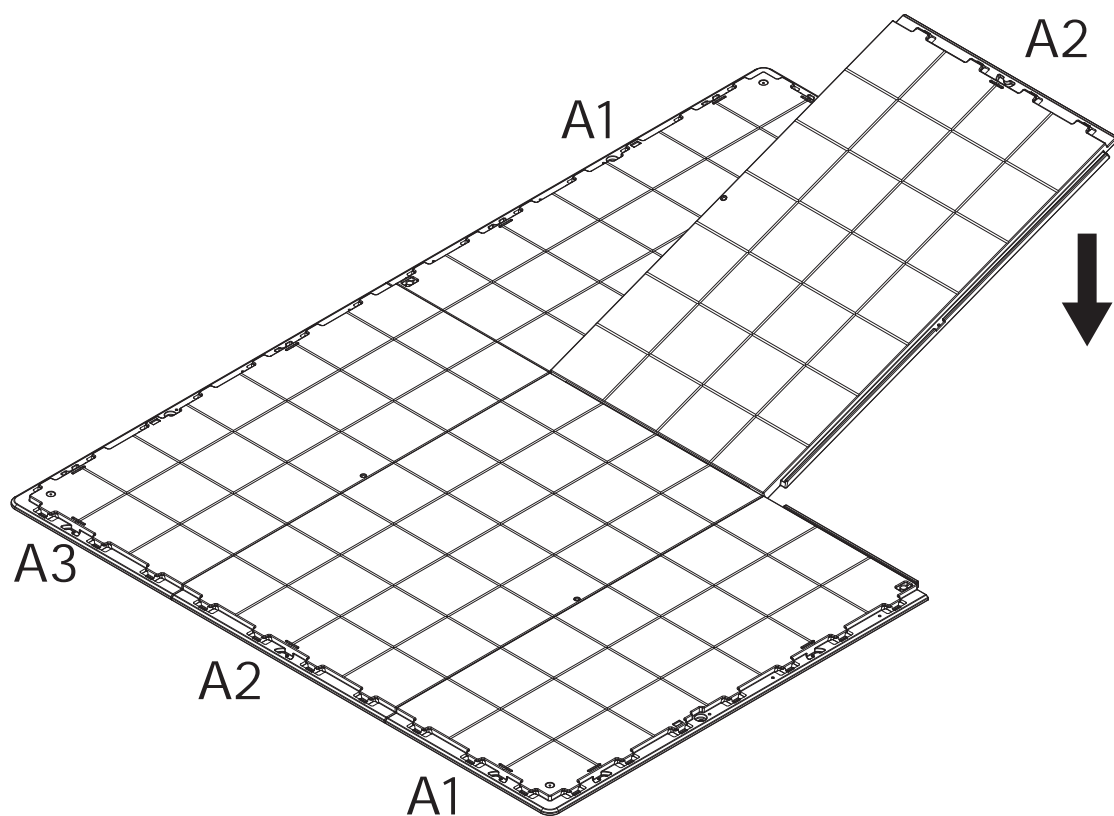


## STEP 5

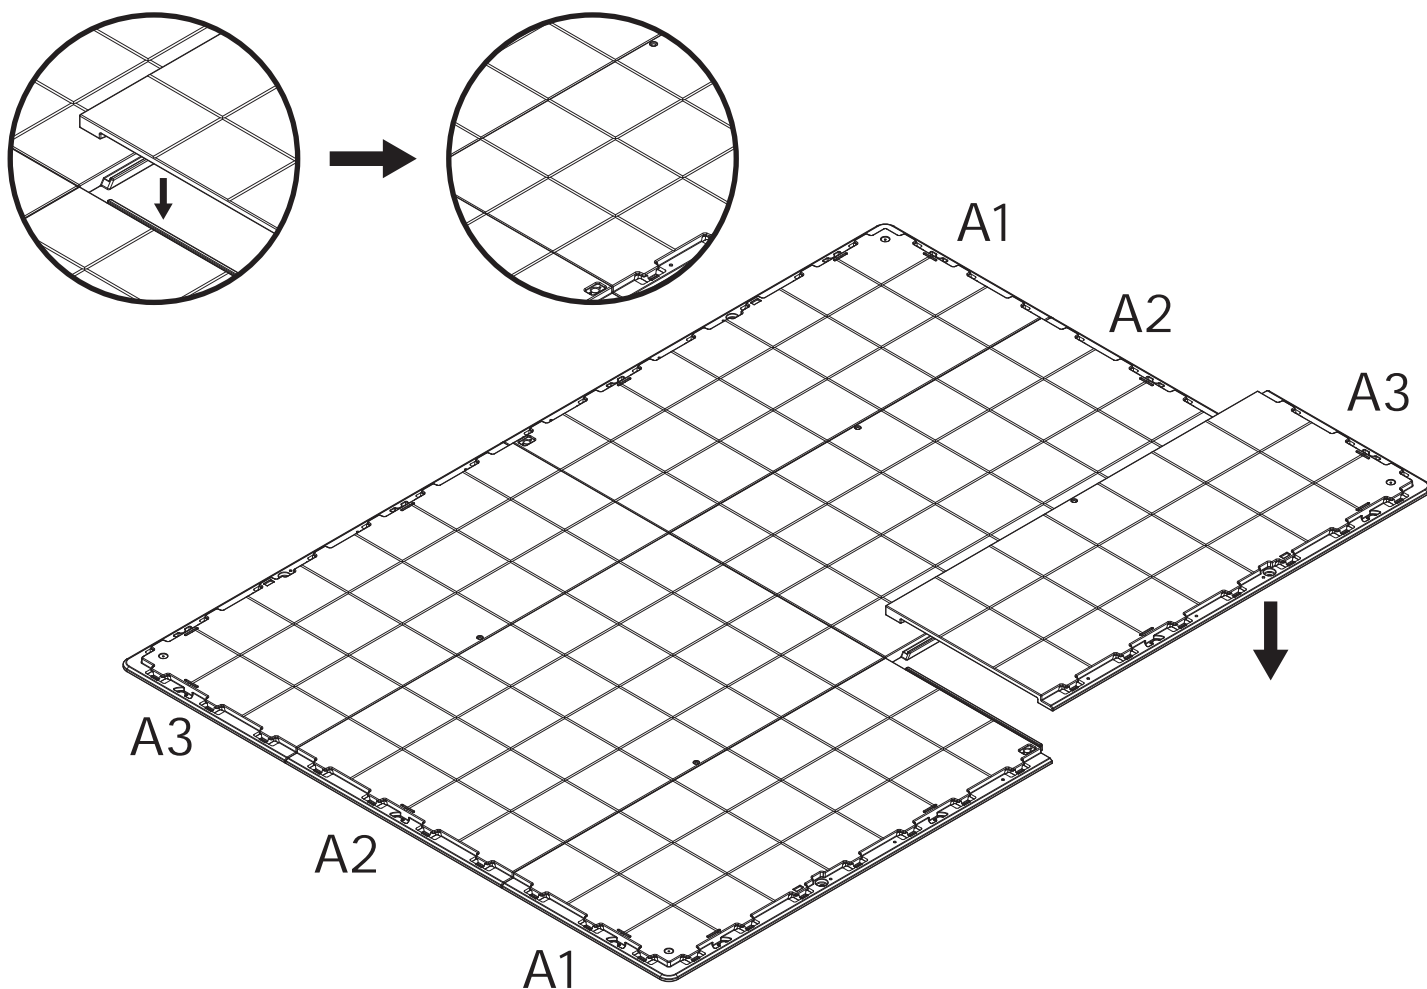


## STEP 6

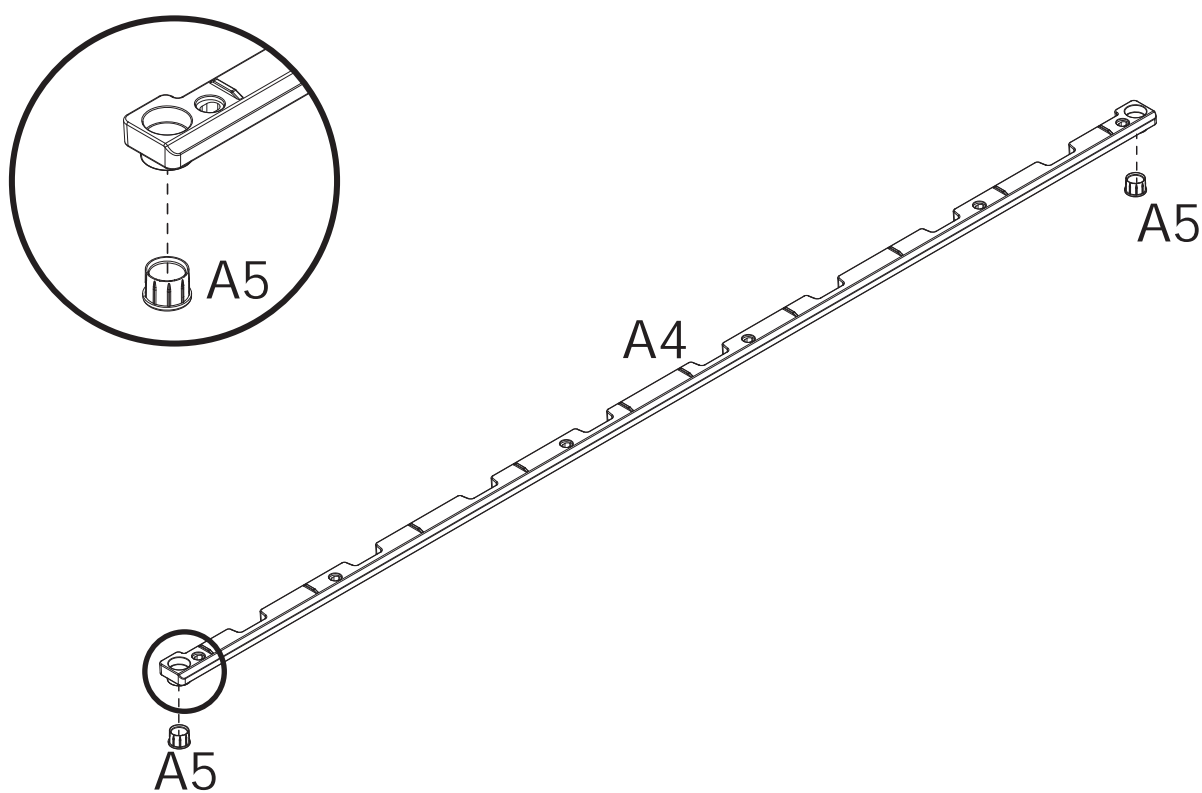


## STEP 7

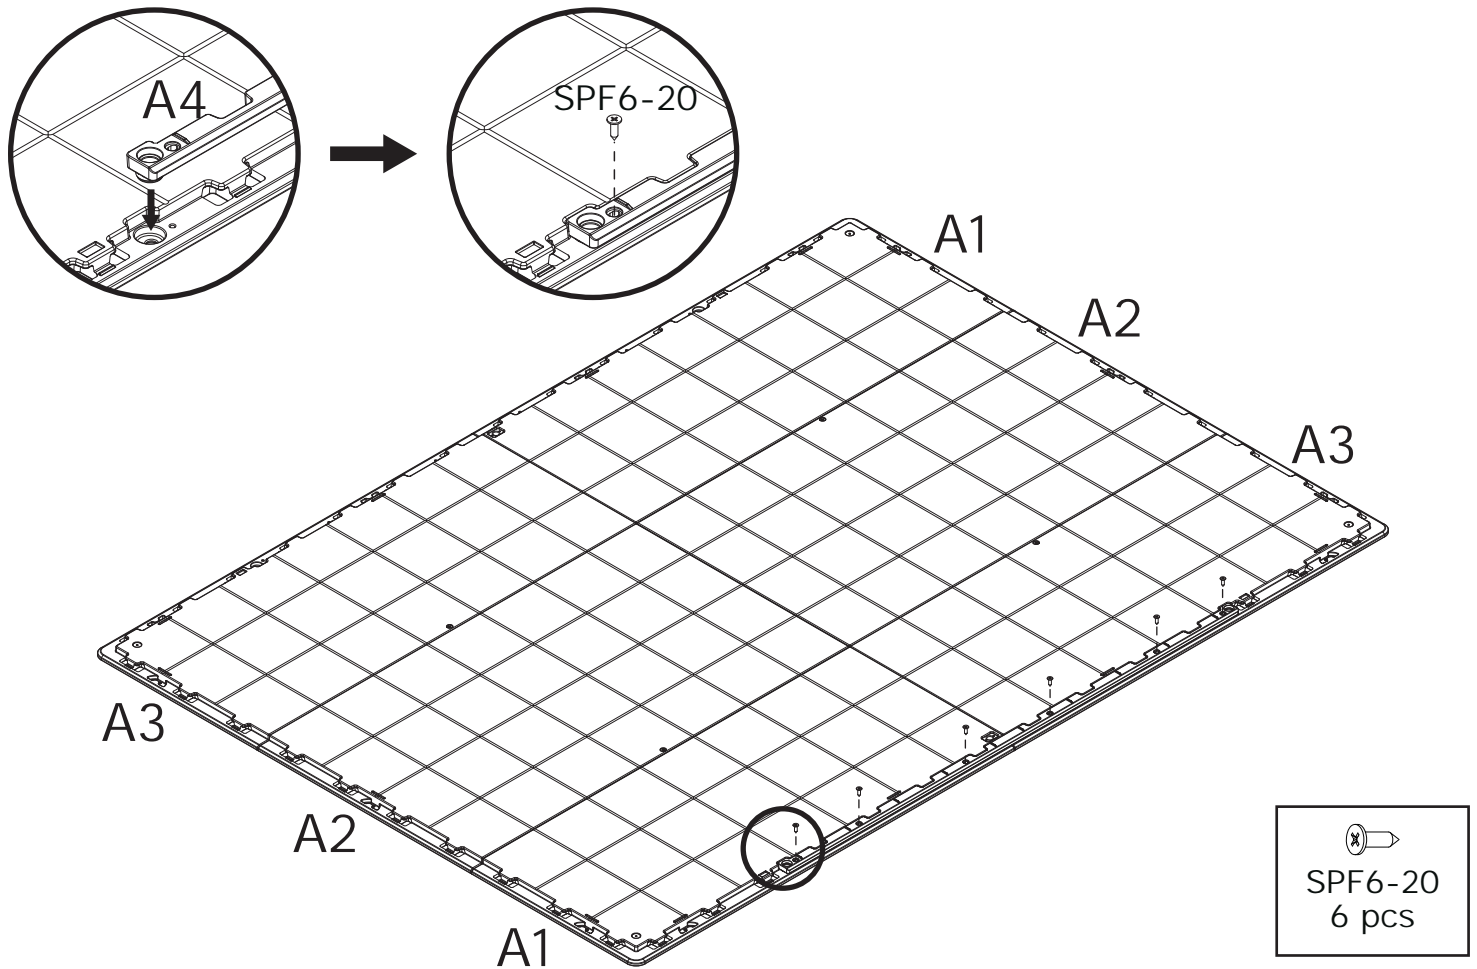


## STEP 8

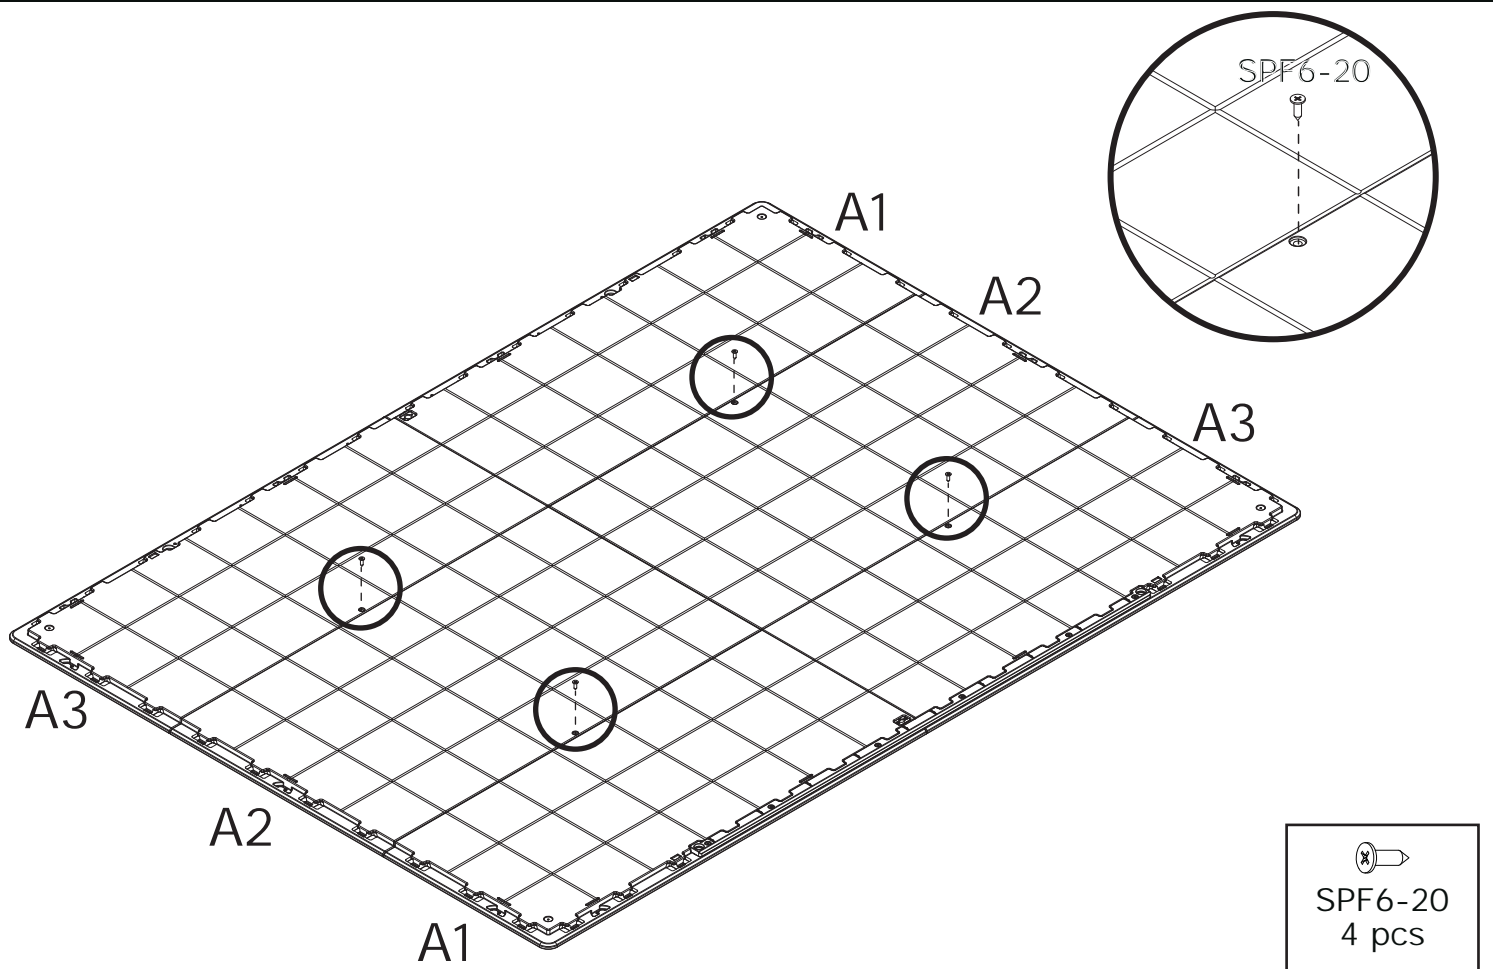

## STEP 9

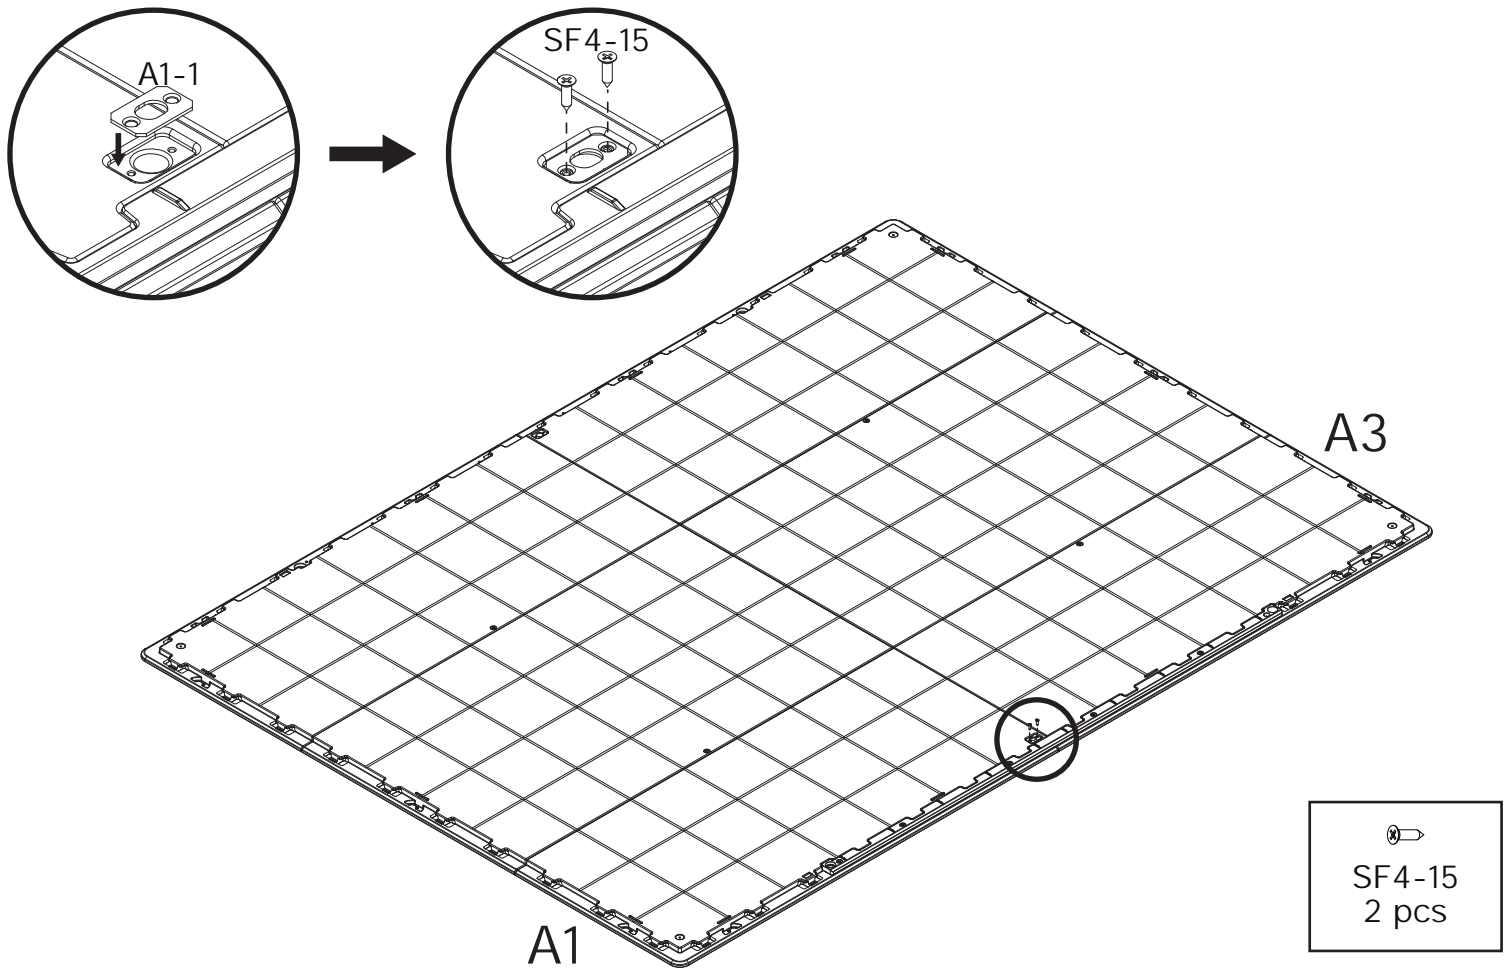


## STEP 10

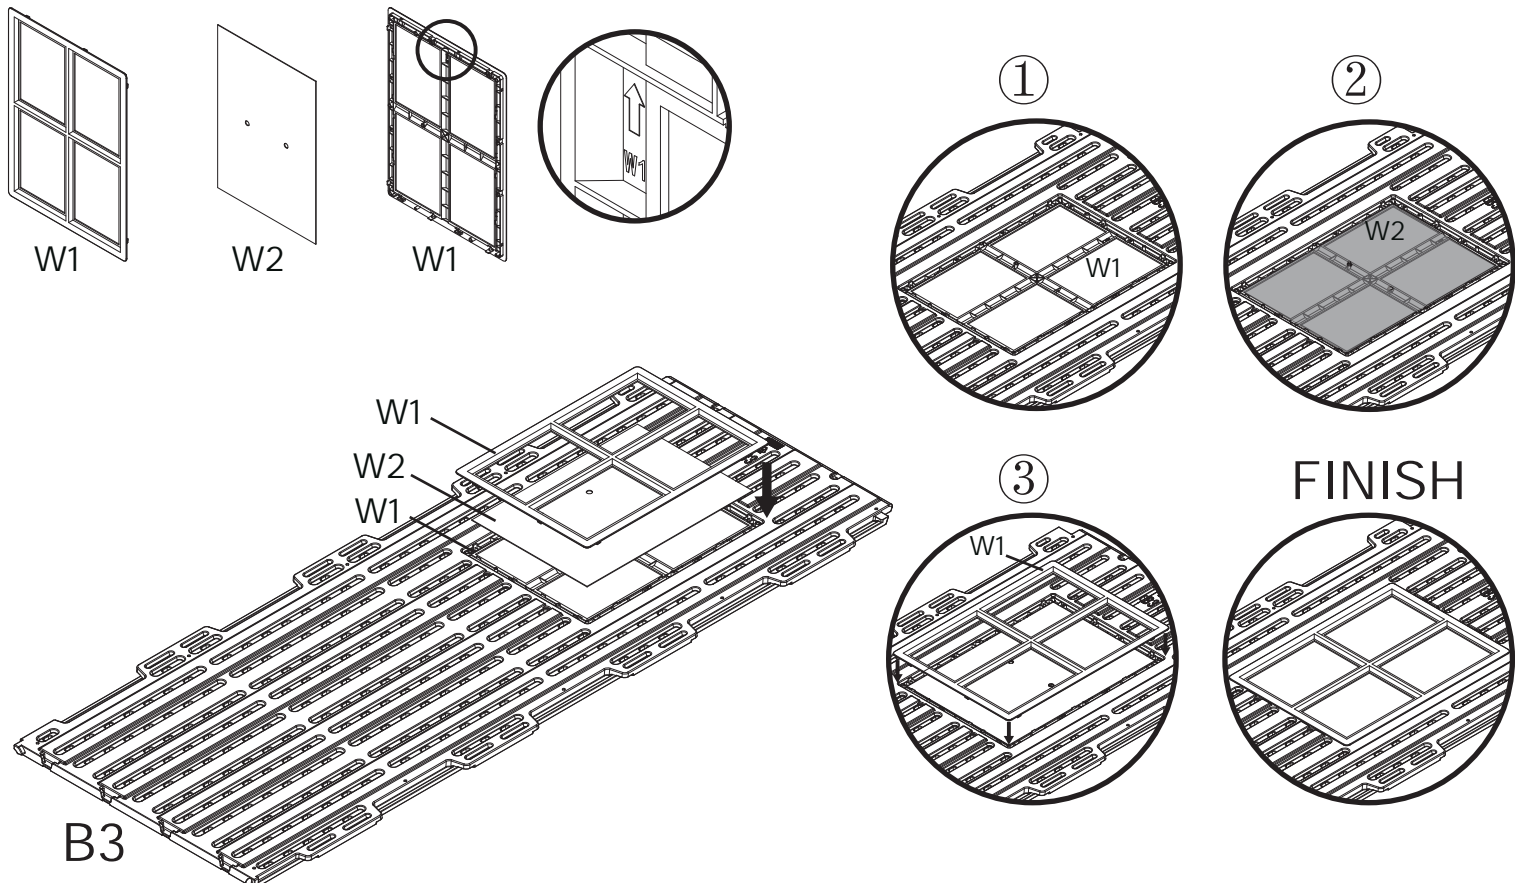




# STEP 11

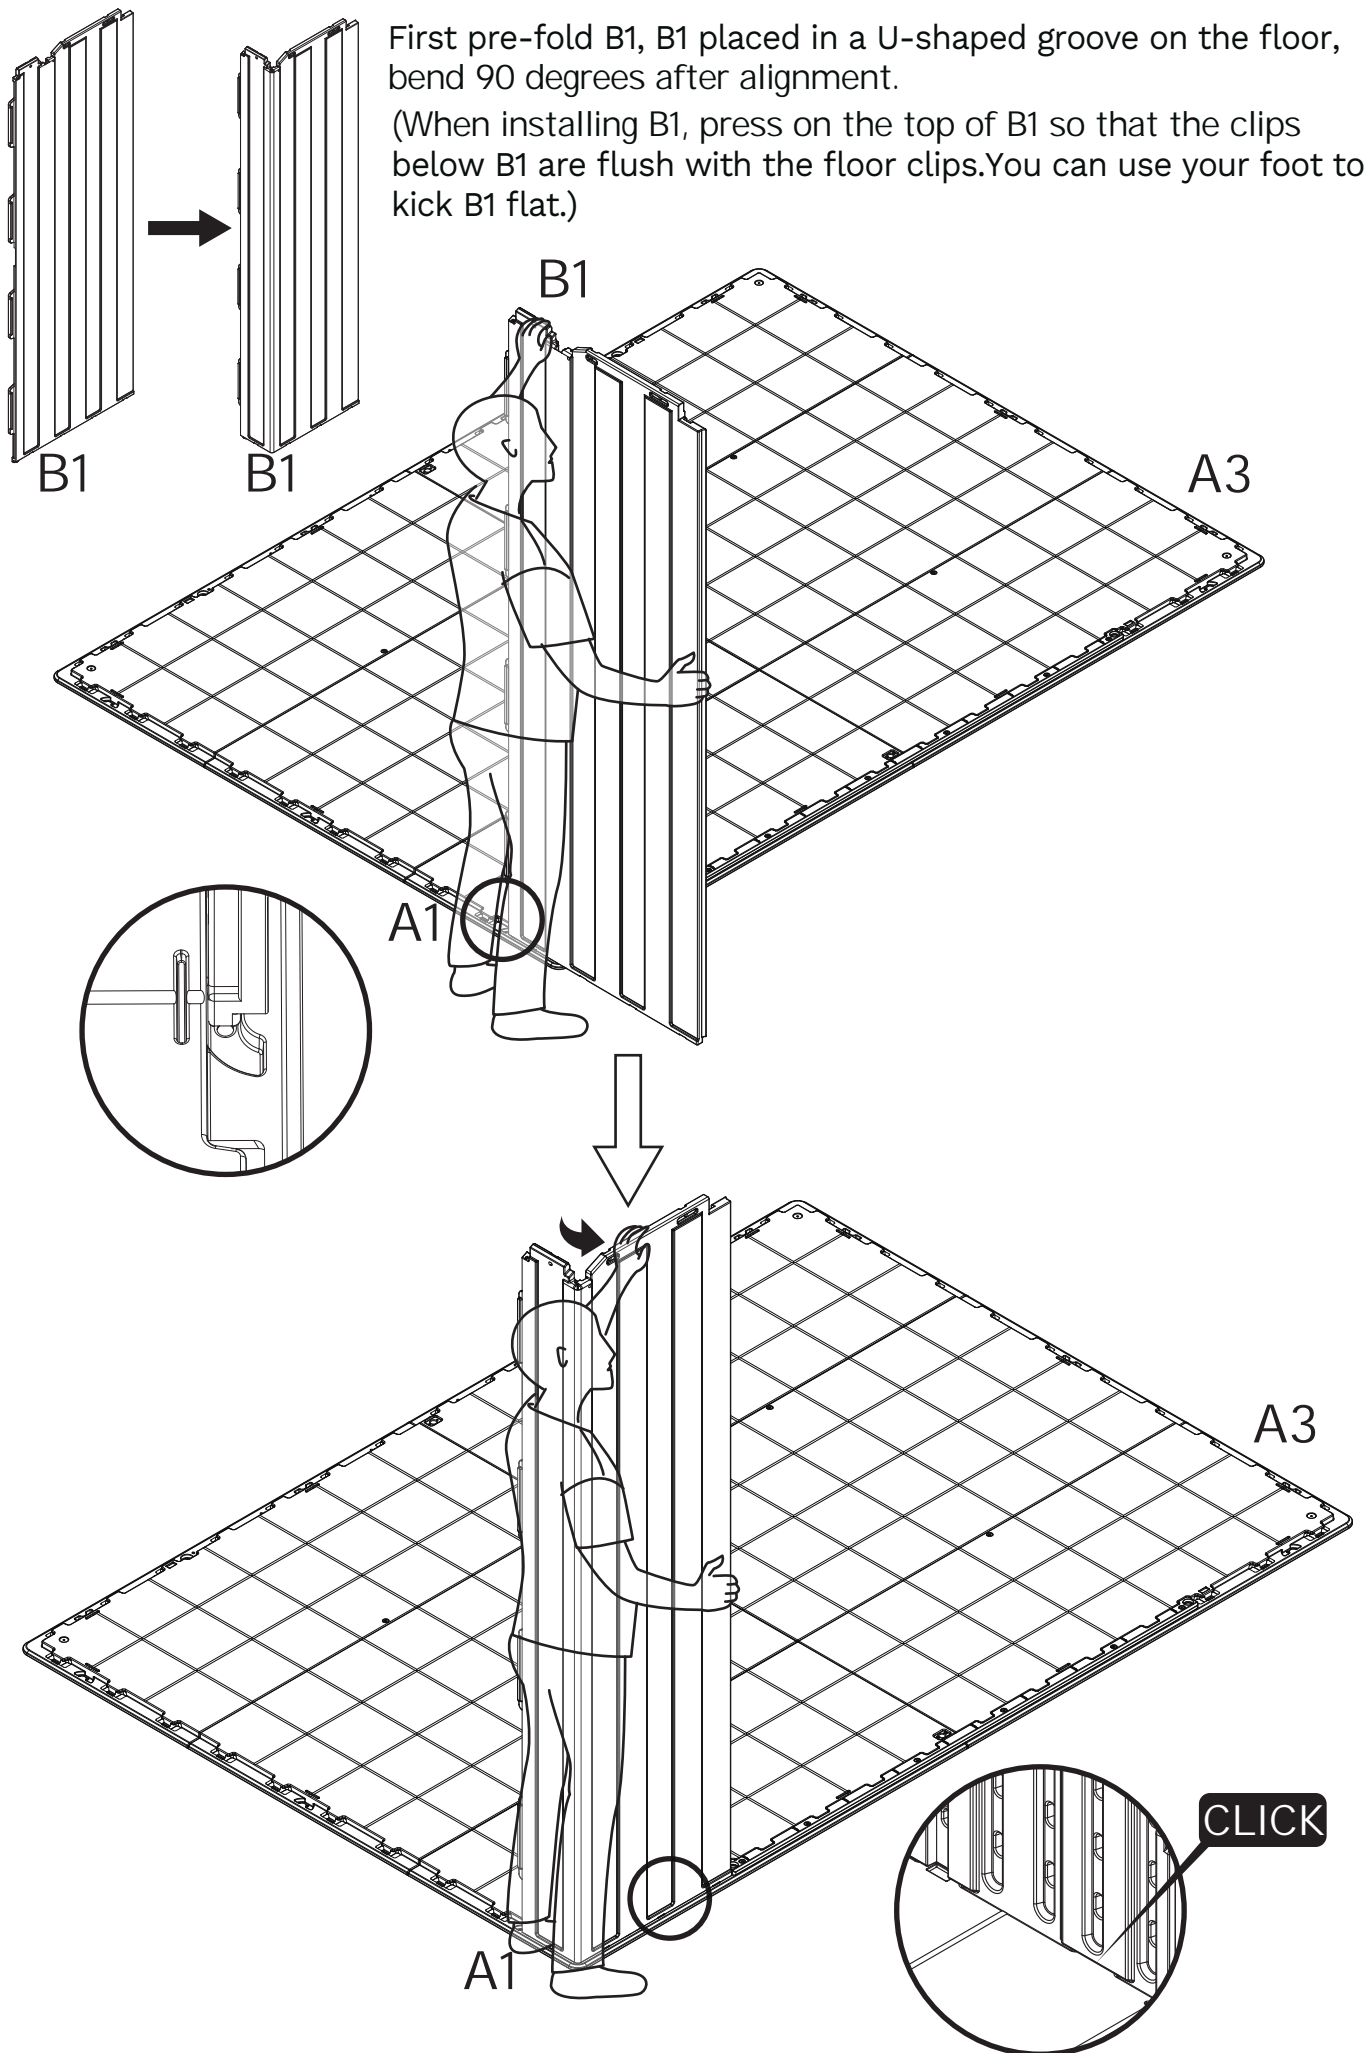


## STEP 12

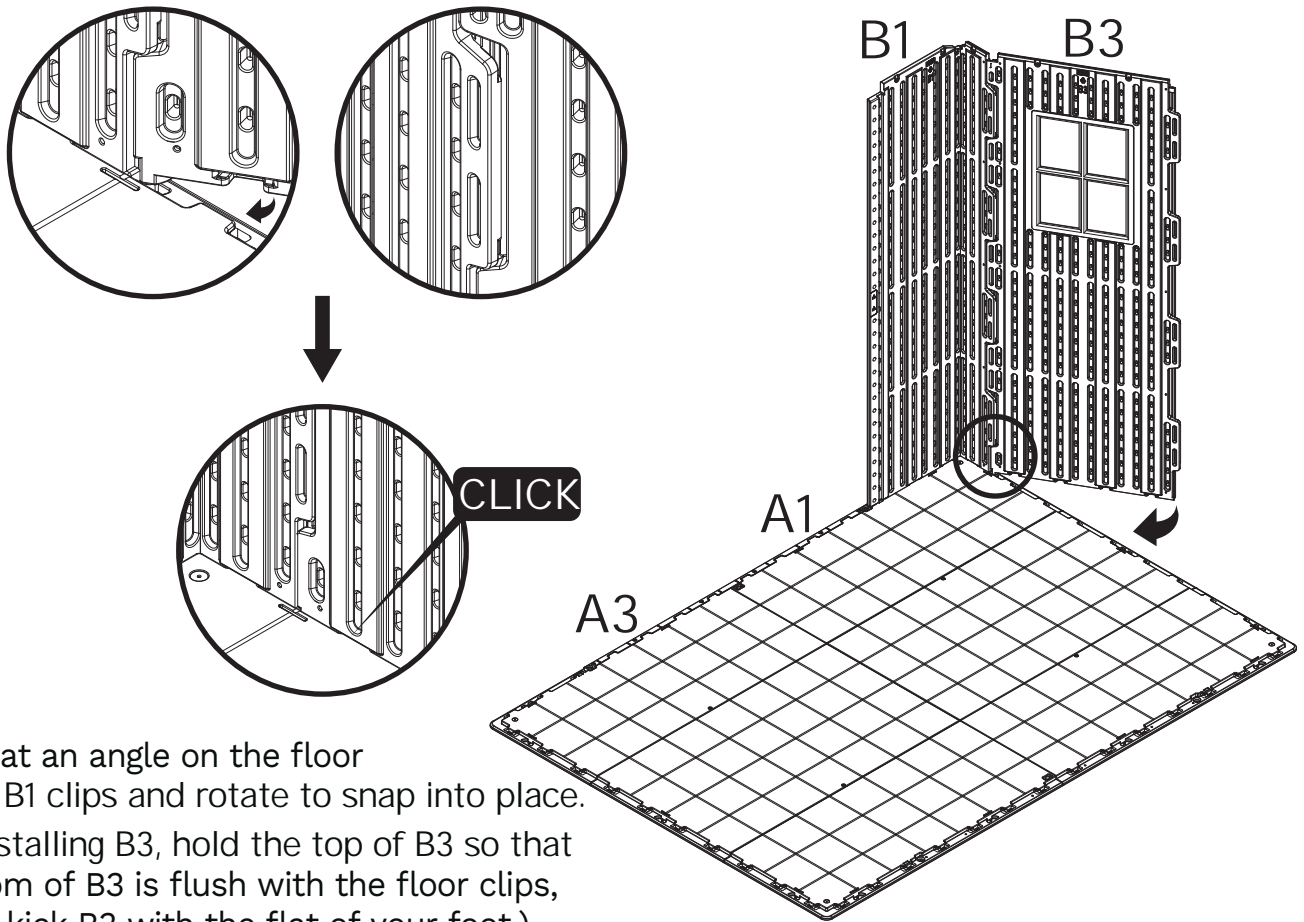

Place B3 at an angle on the floor  
Align the B1 clips and rotate to snap into place.  
(When installing B3, hold the top of B3 so that  
the bottom of B3 is flush with the floor clips,  
and then kick B3 with the flat of your foot.)


## STEP 13

Refer to the STEP 12 installation procedure.

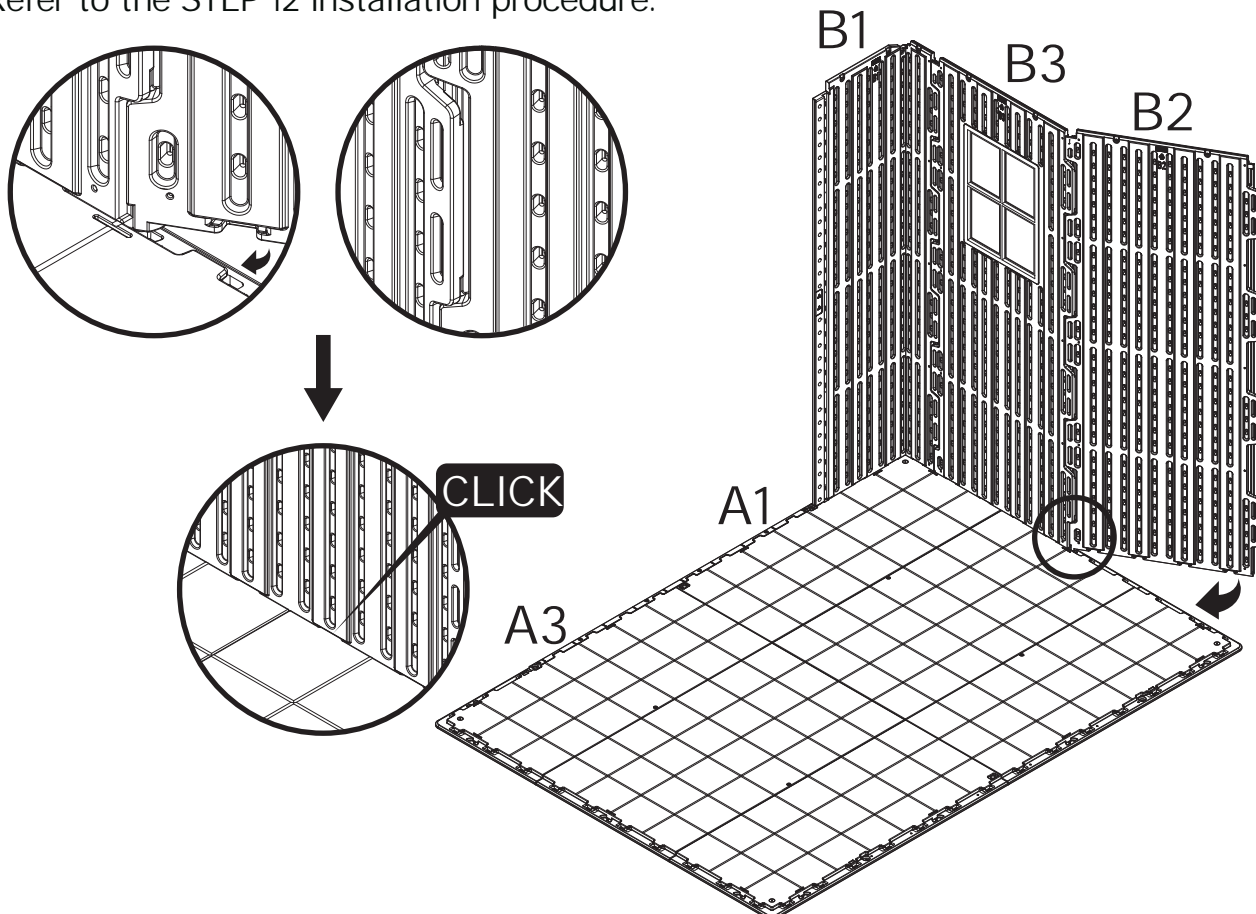


# STEP 14

Pre-fold B4.

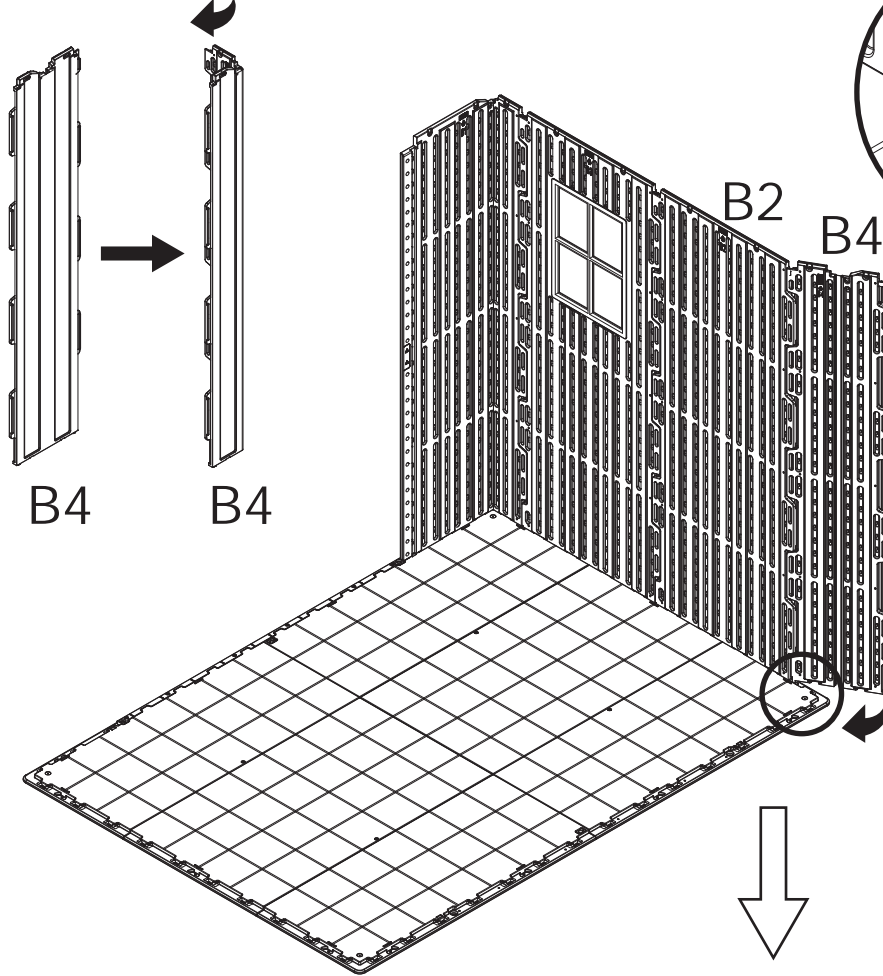


CLICK

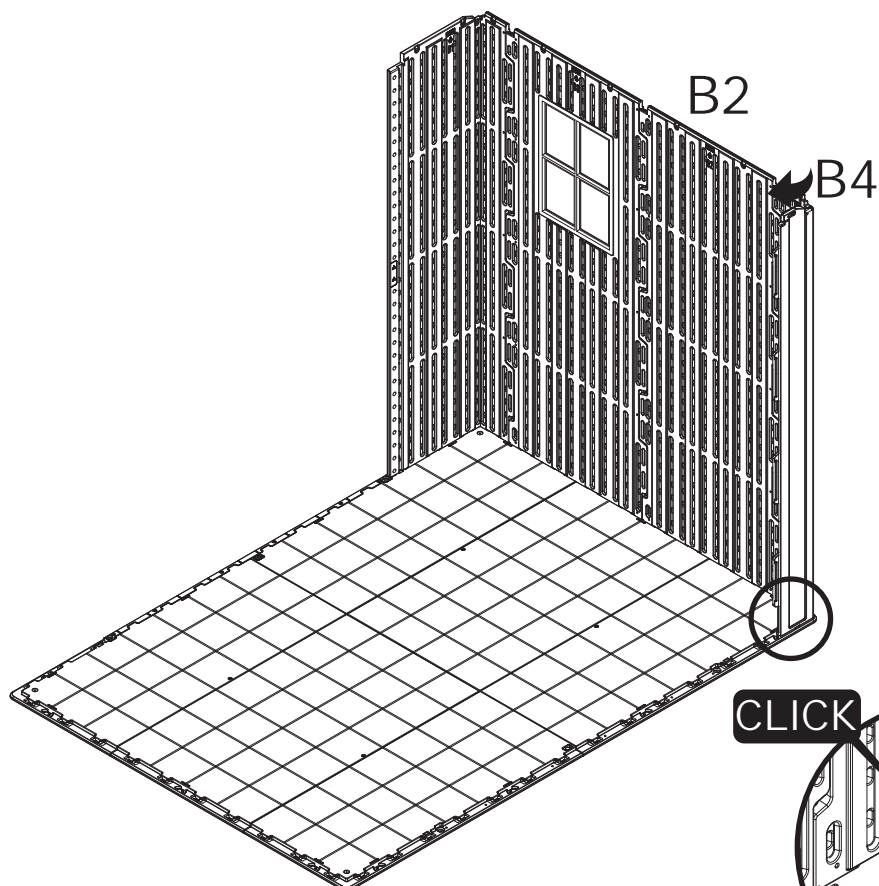


CLICK

## STEP 15


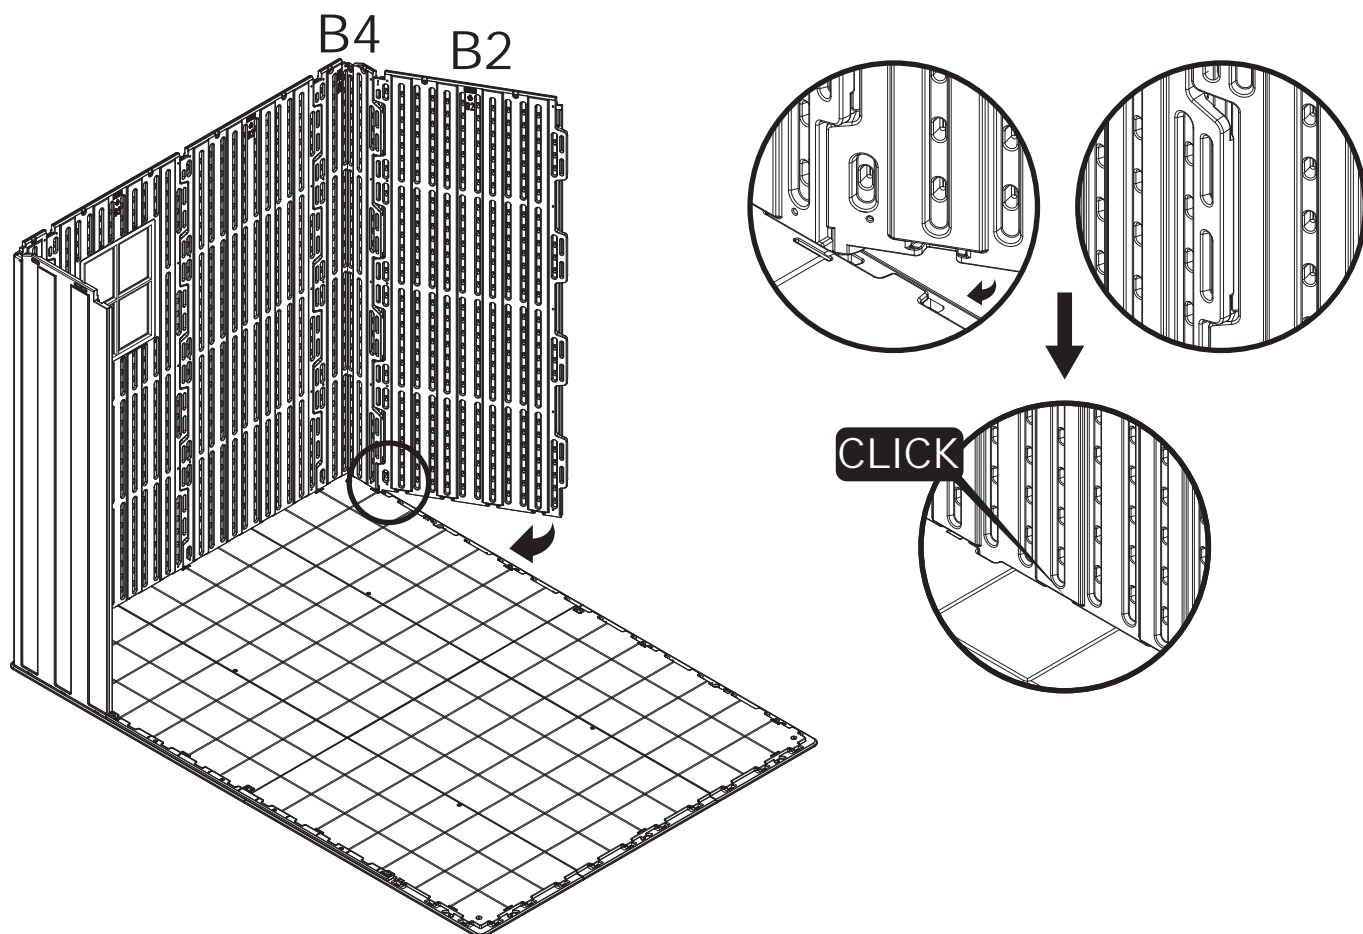


## STEP 16

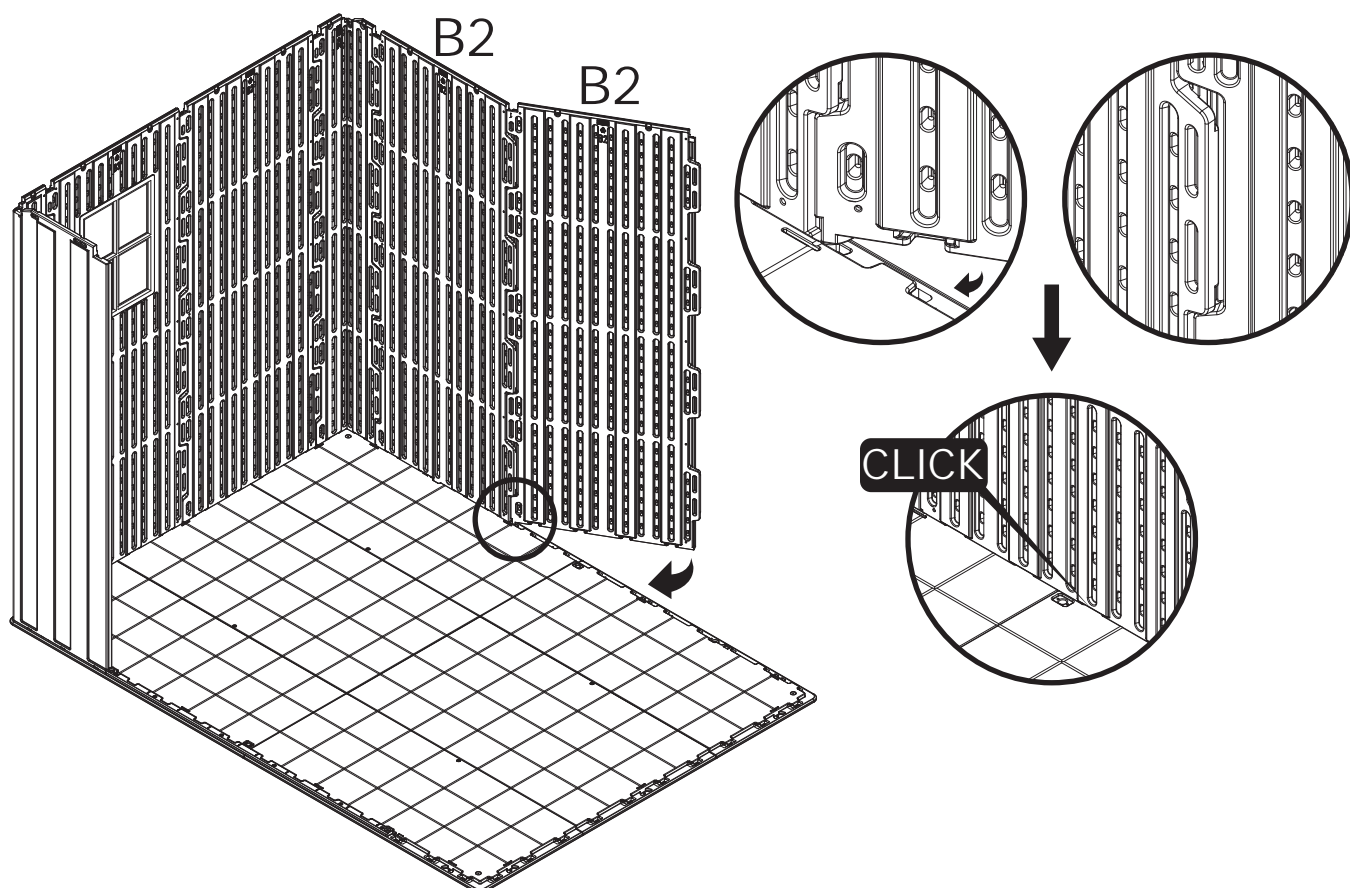





# STEP 17

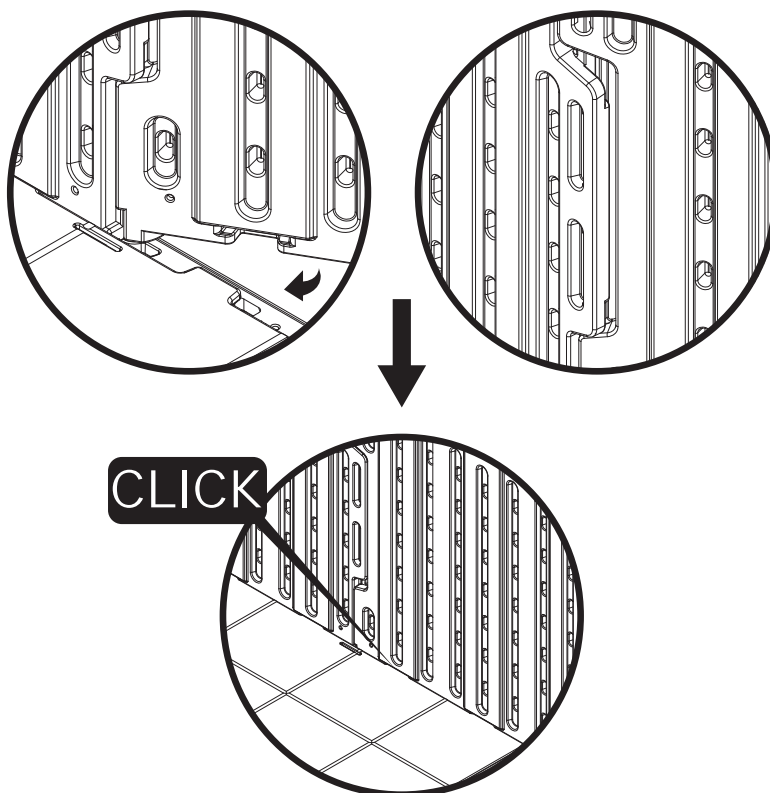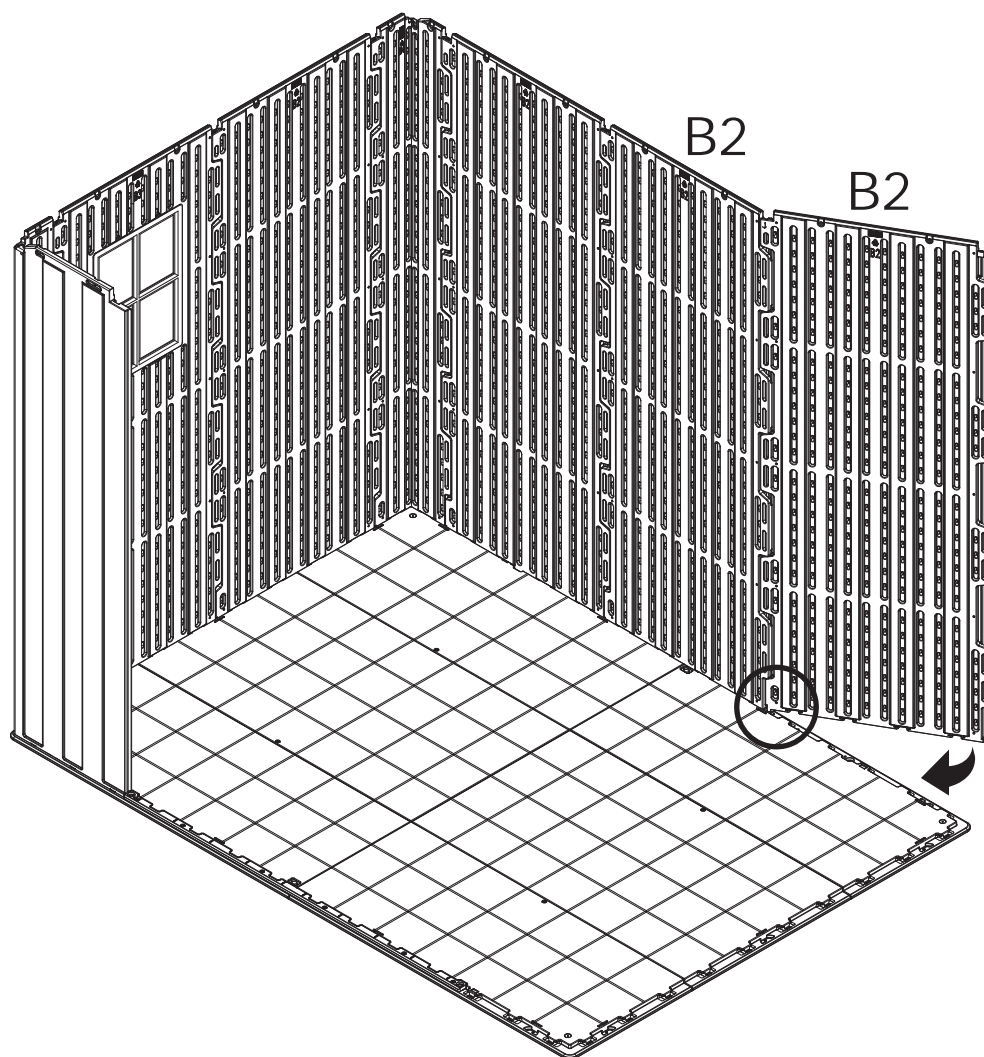


# STEP 18

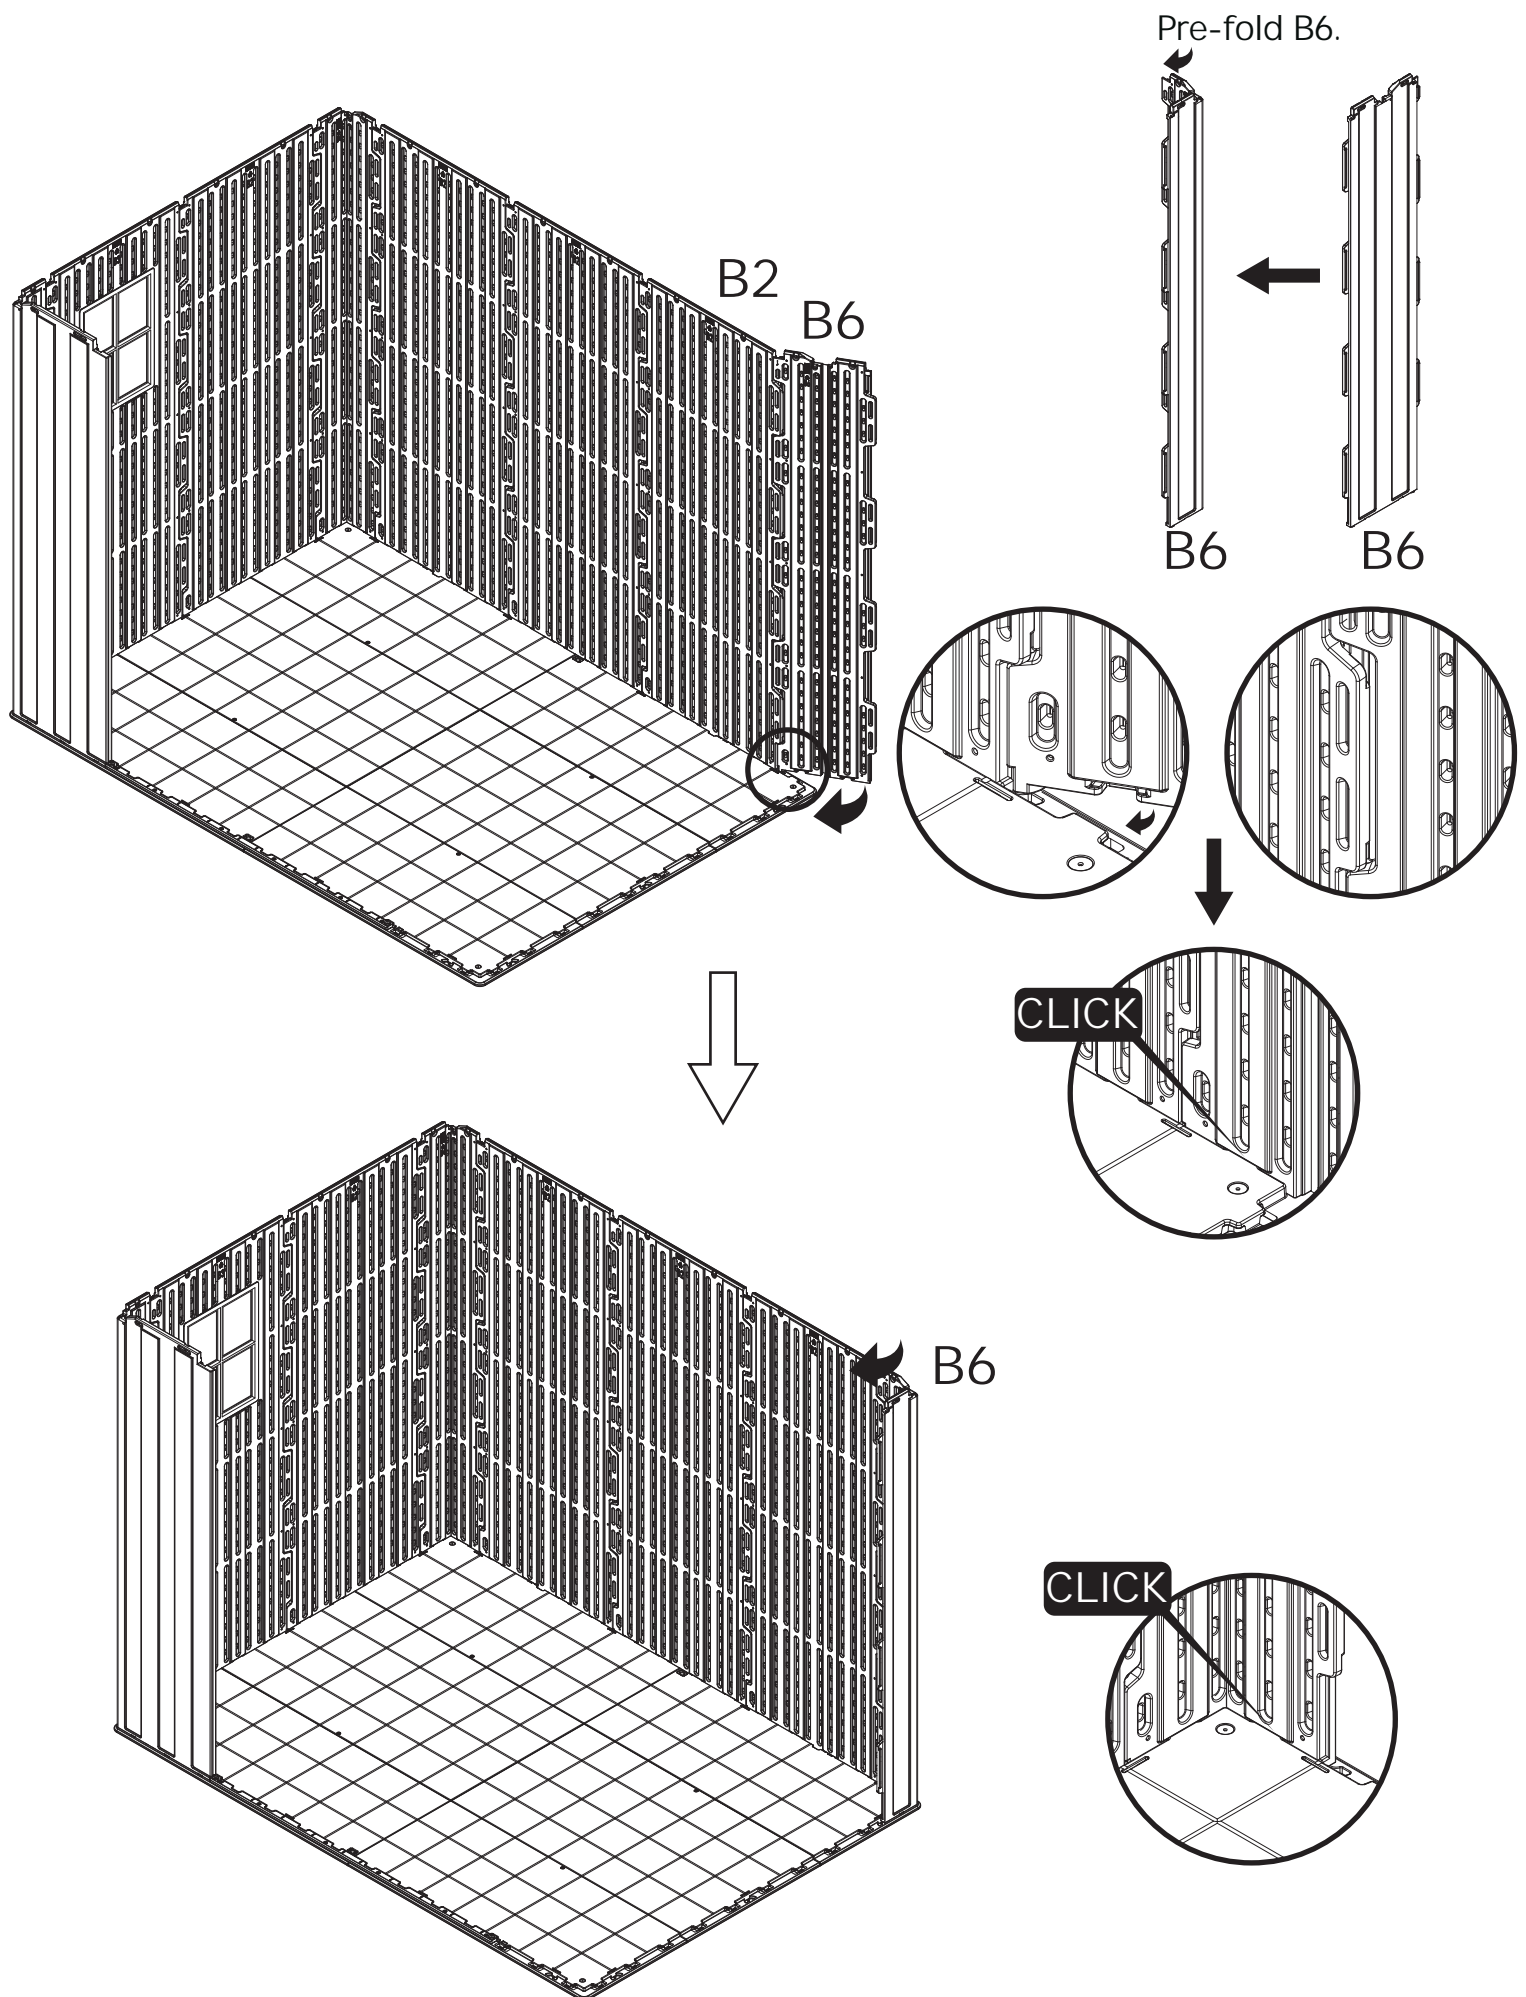


## STEP 19

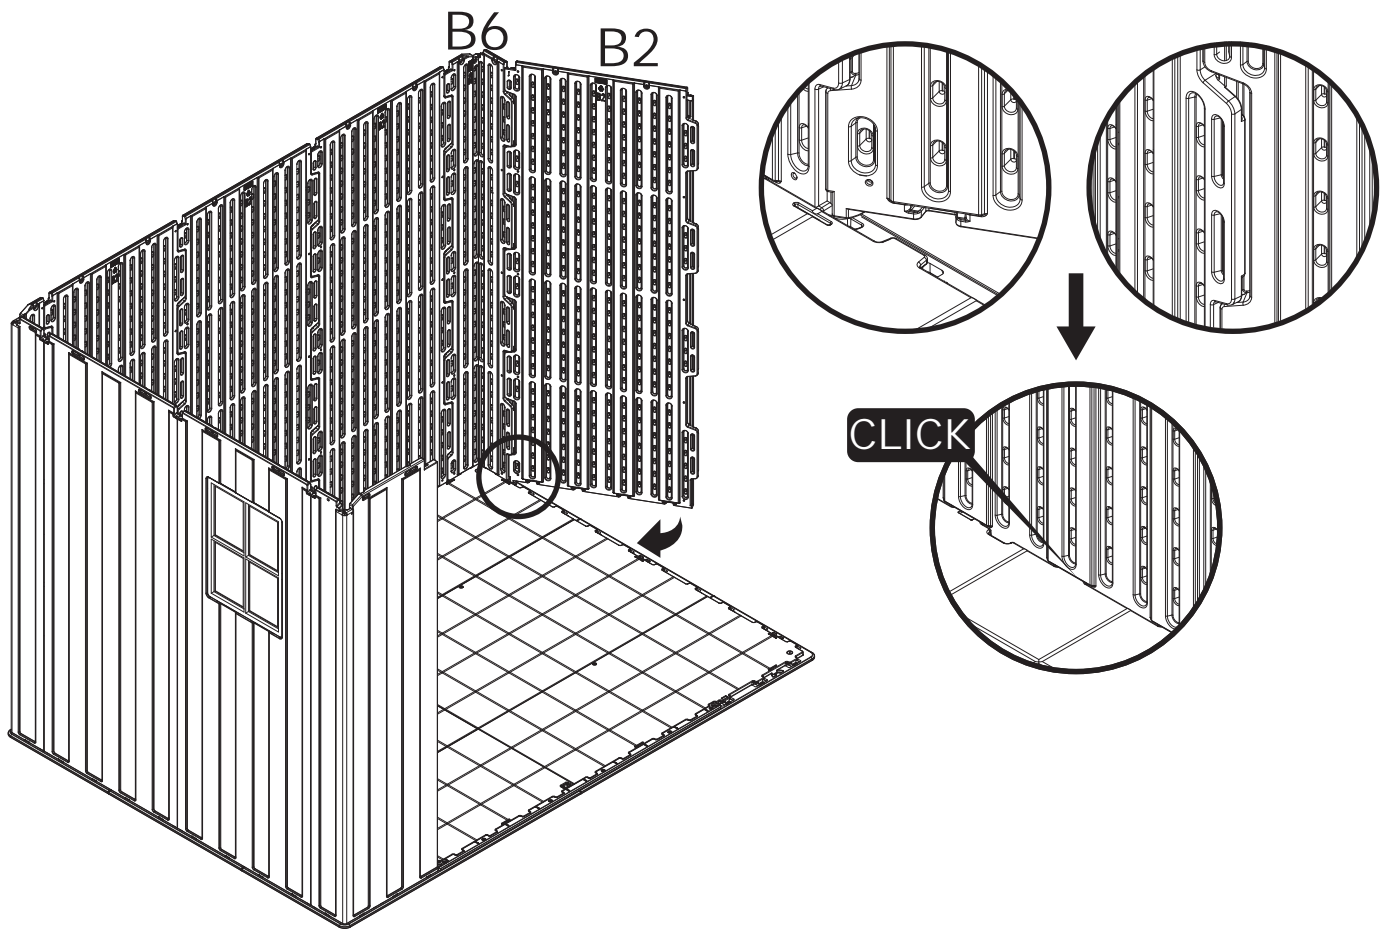

## STEP 20

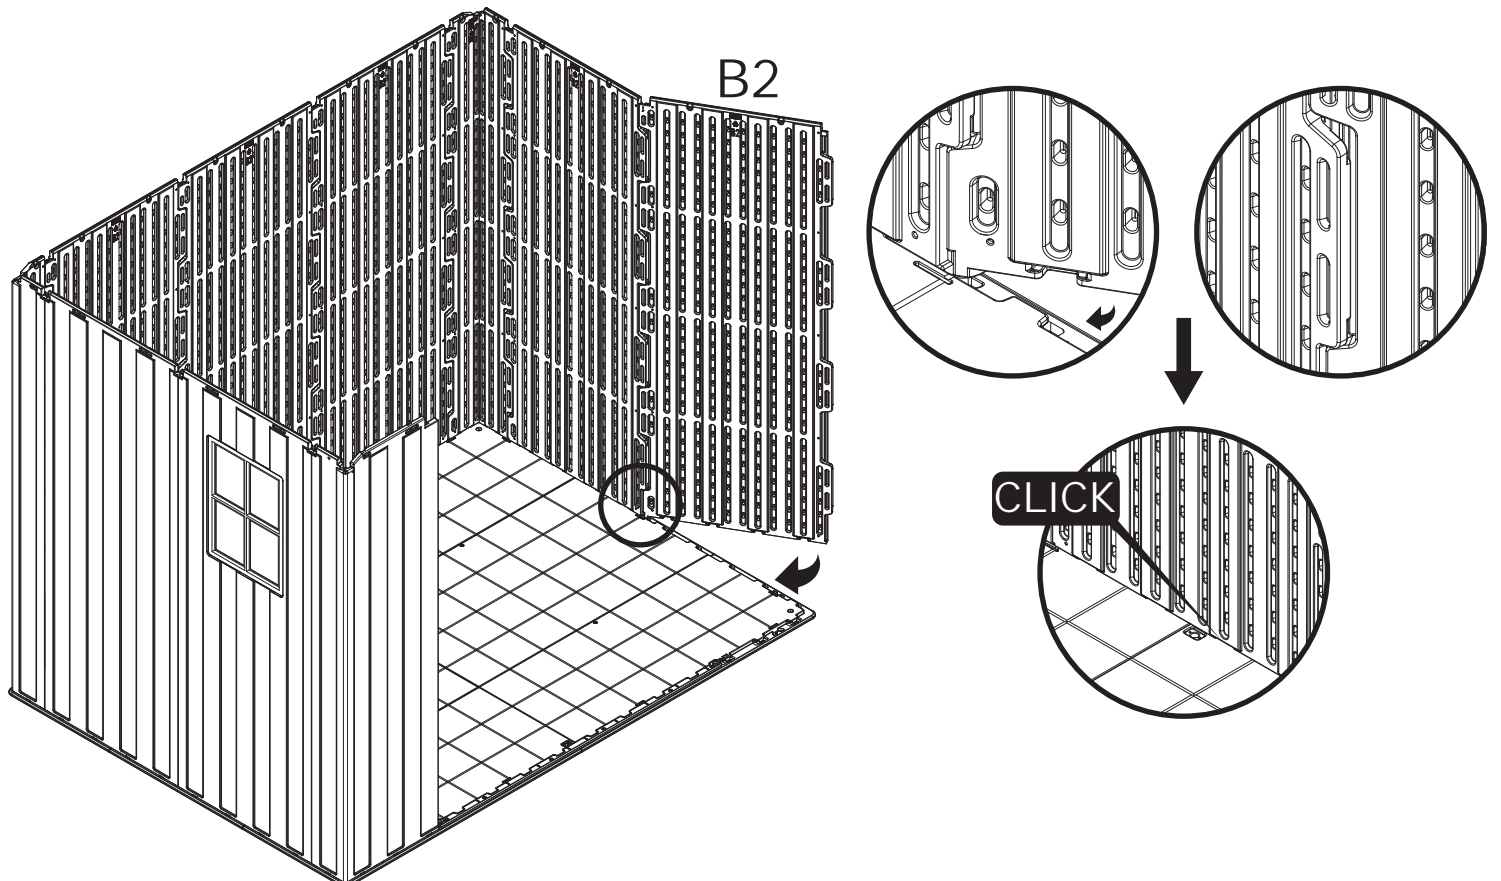


# STEP 21

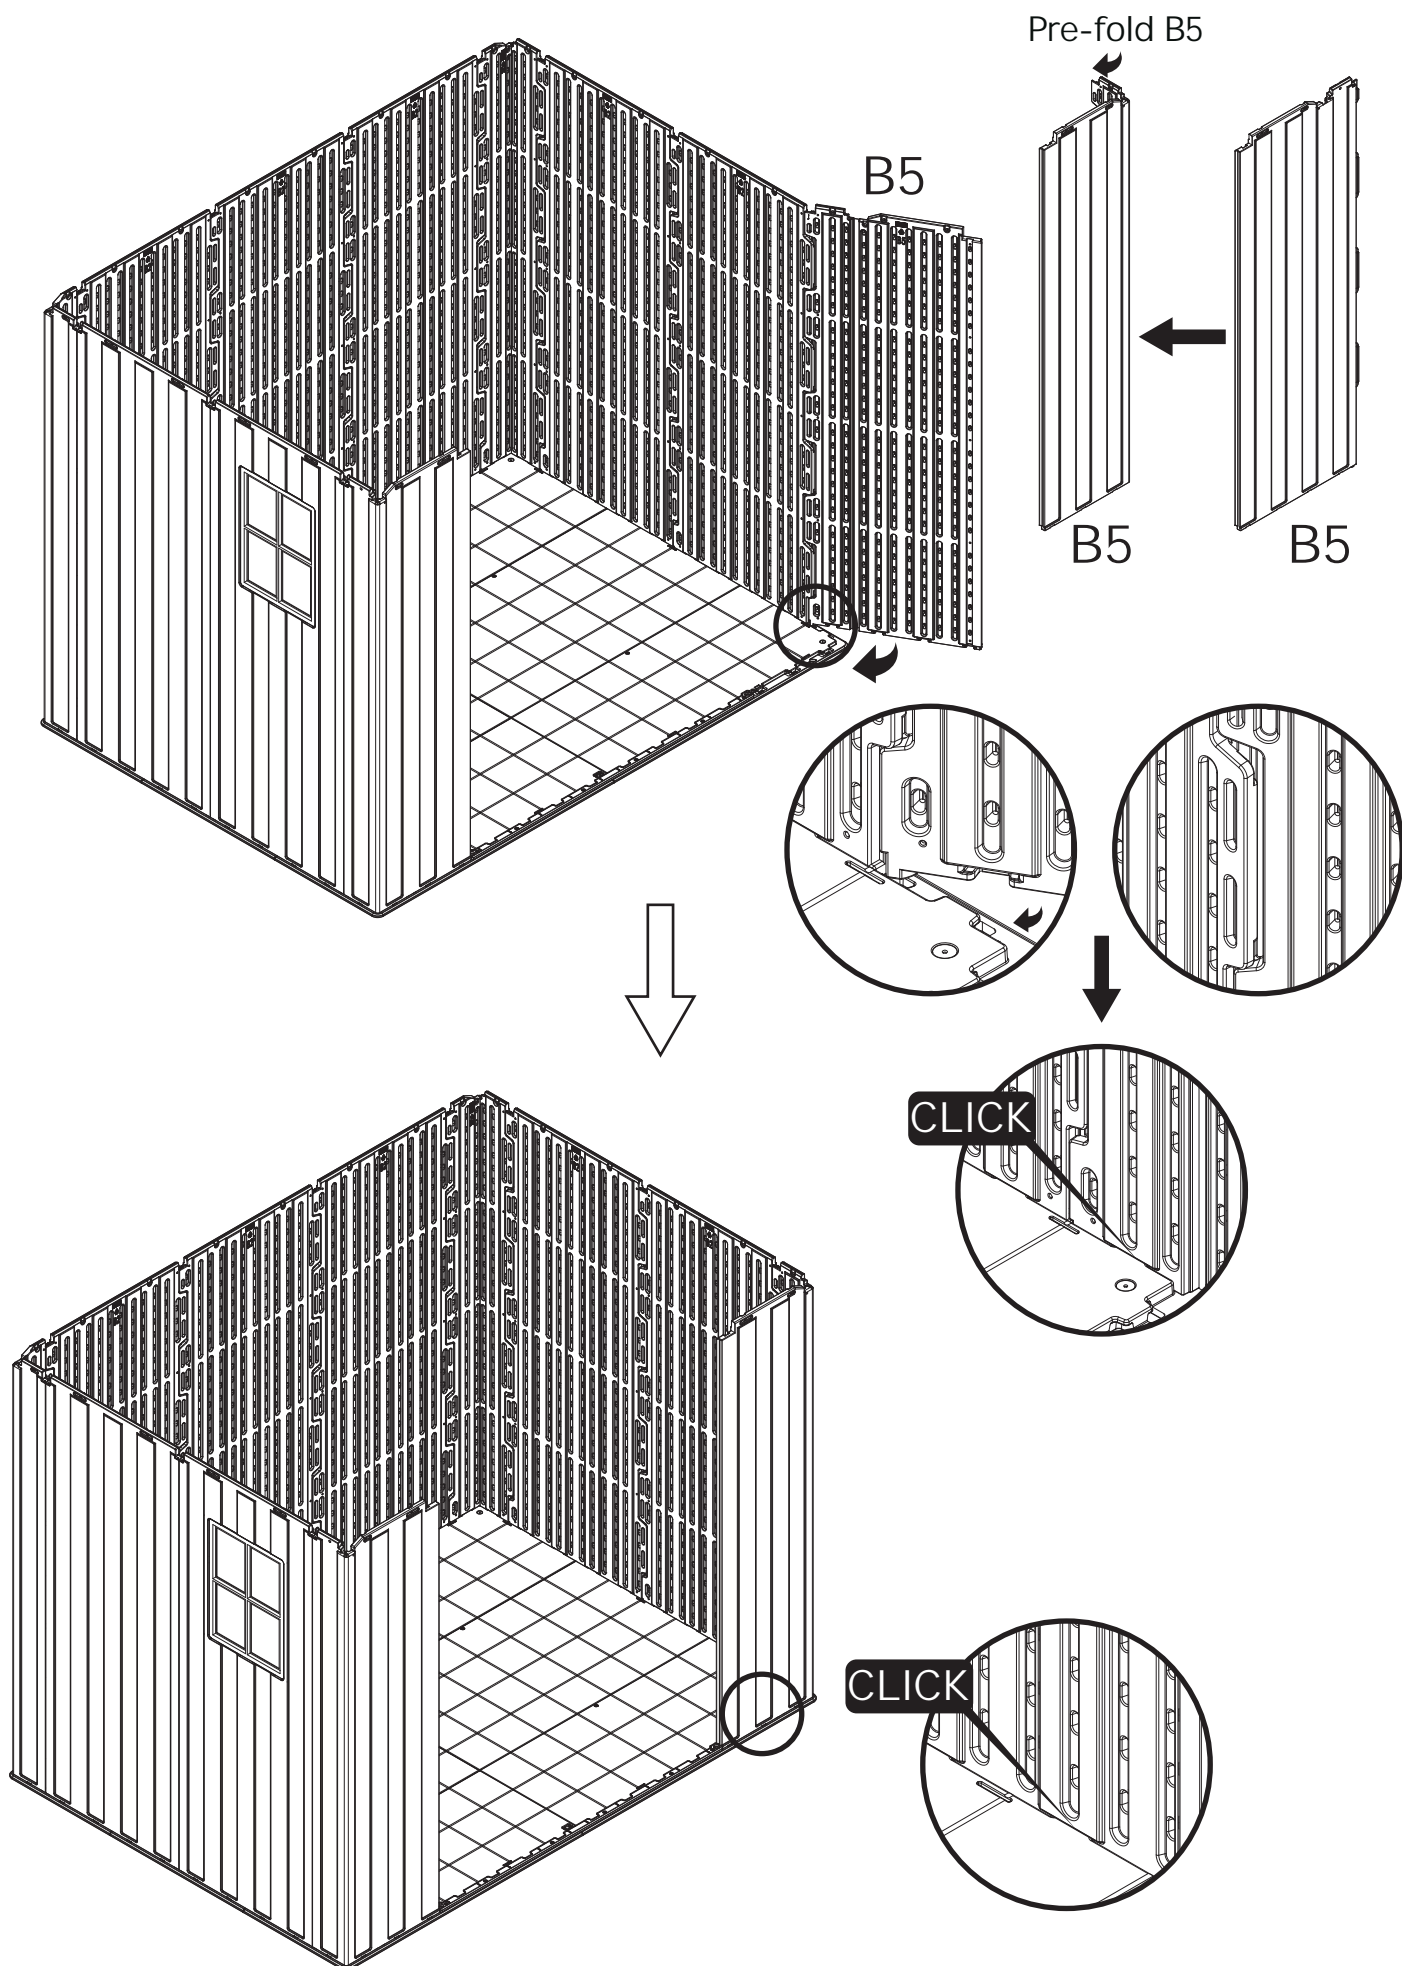





## STEP 22

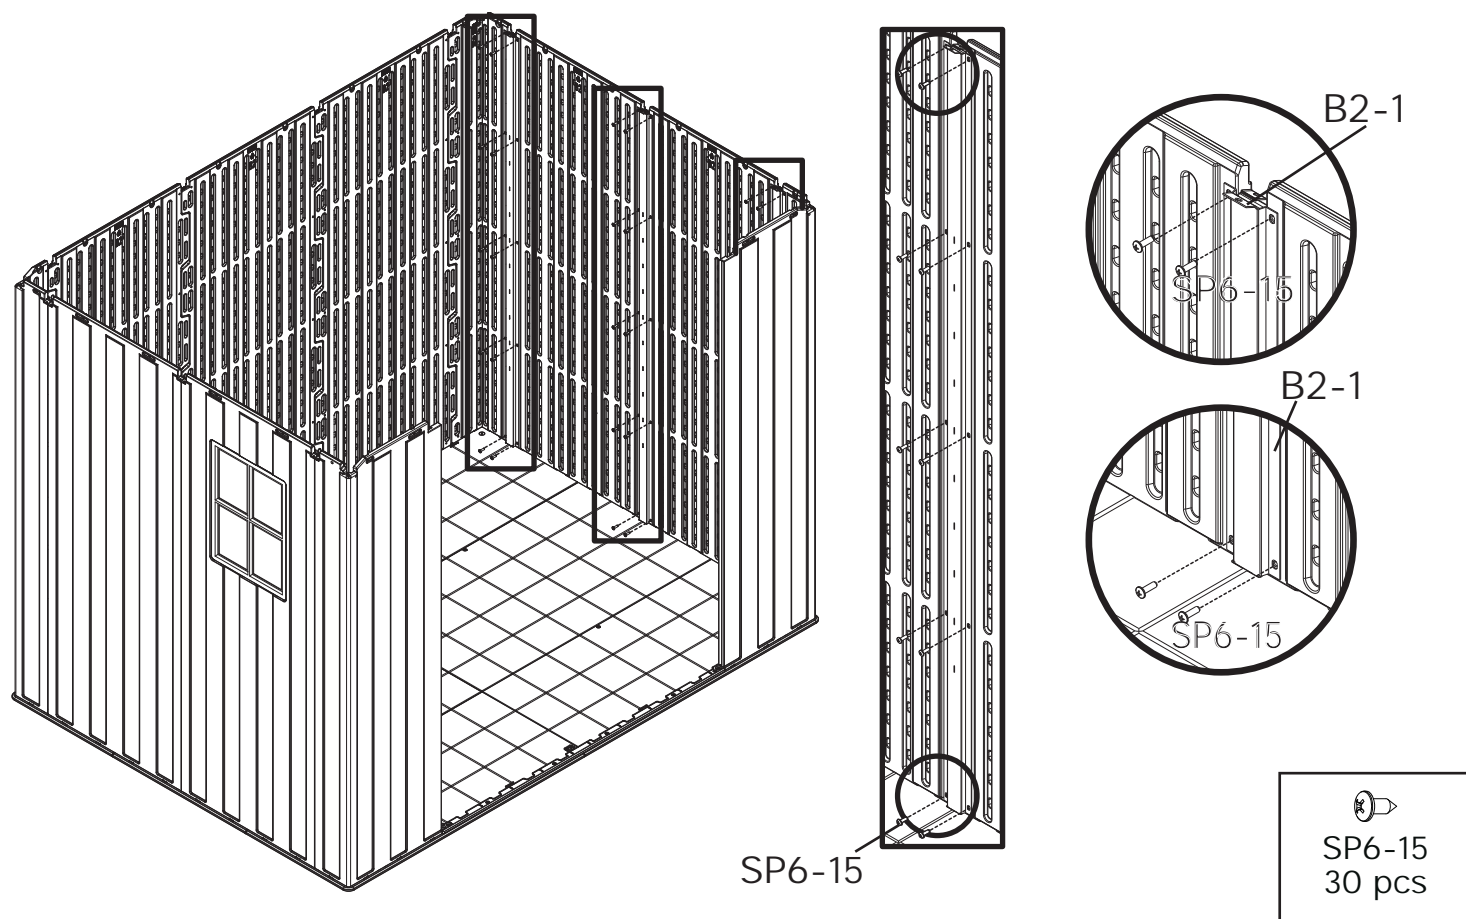



## STEP 23

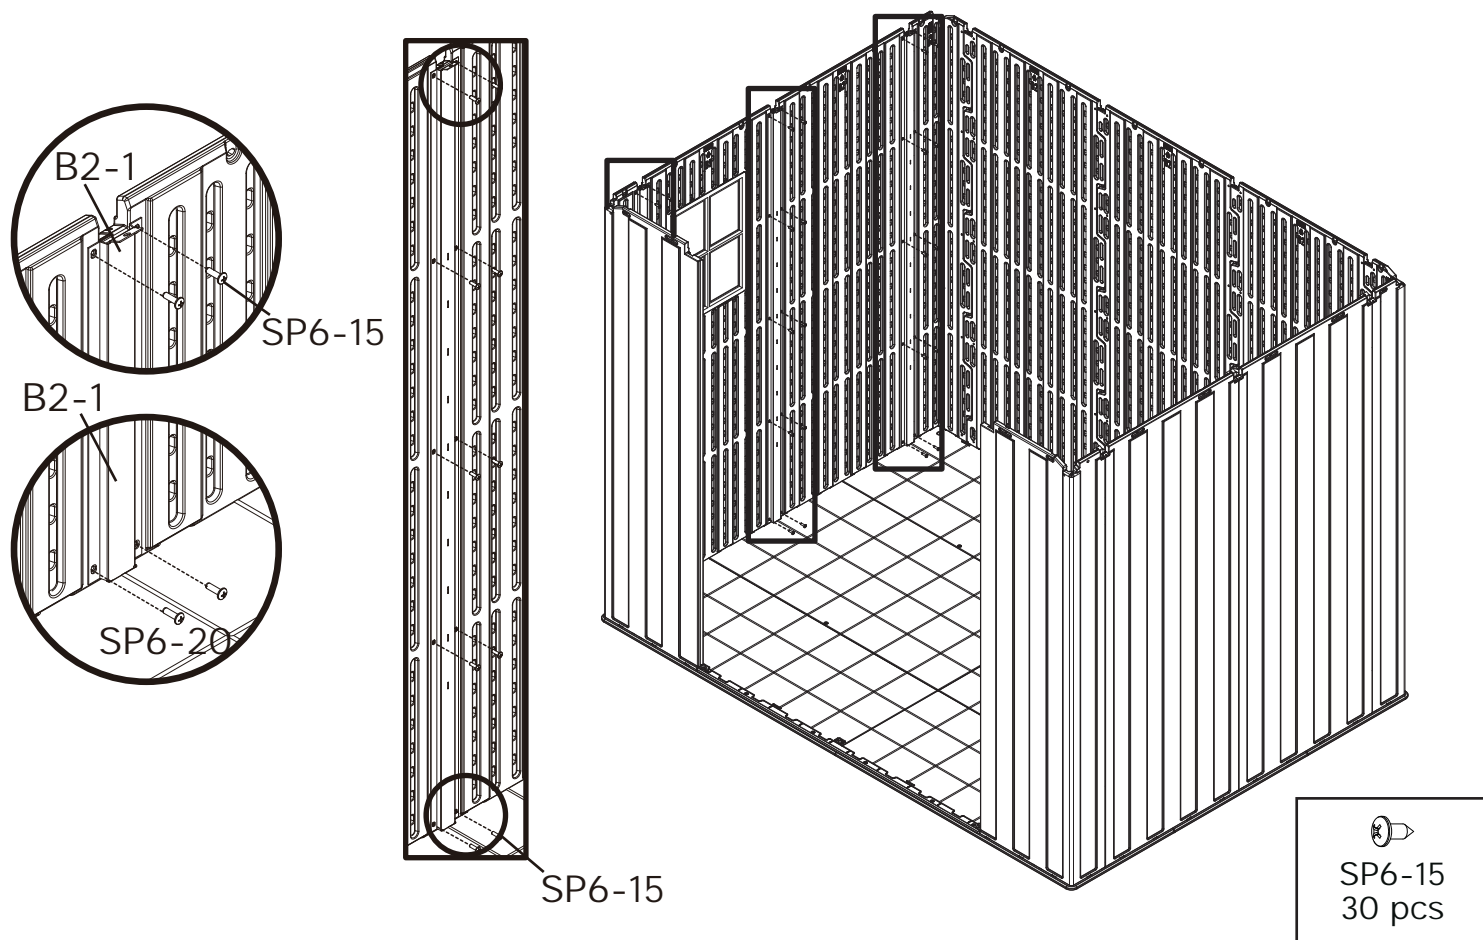



## STEP 24

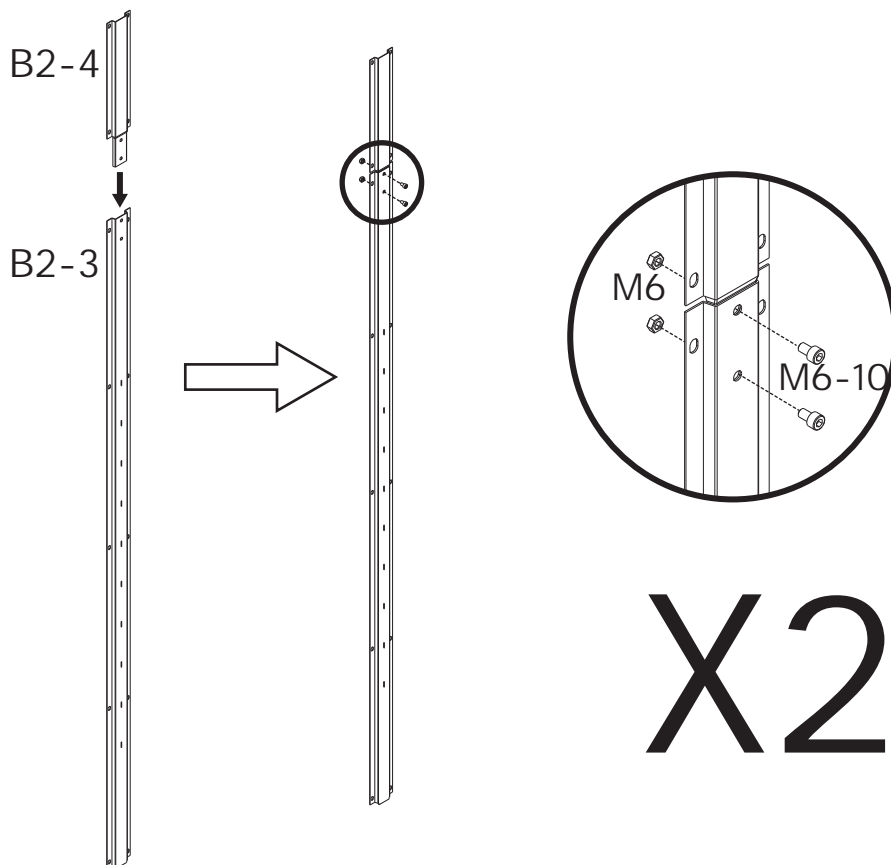



	
M6-10 4 pcs	M6 4 pcs

## STEP 25

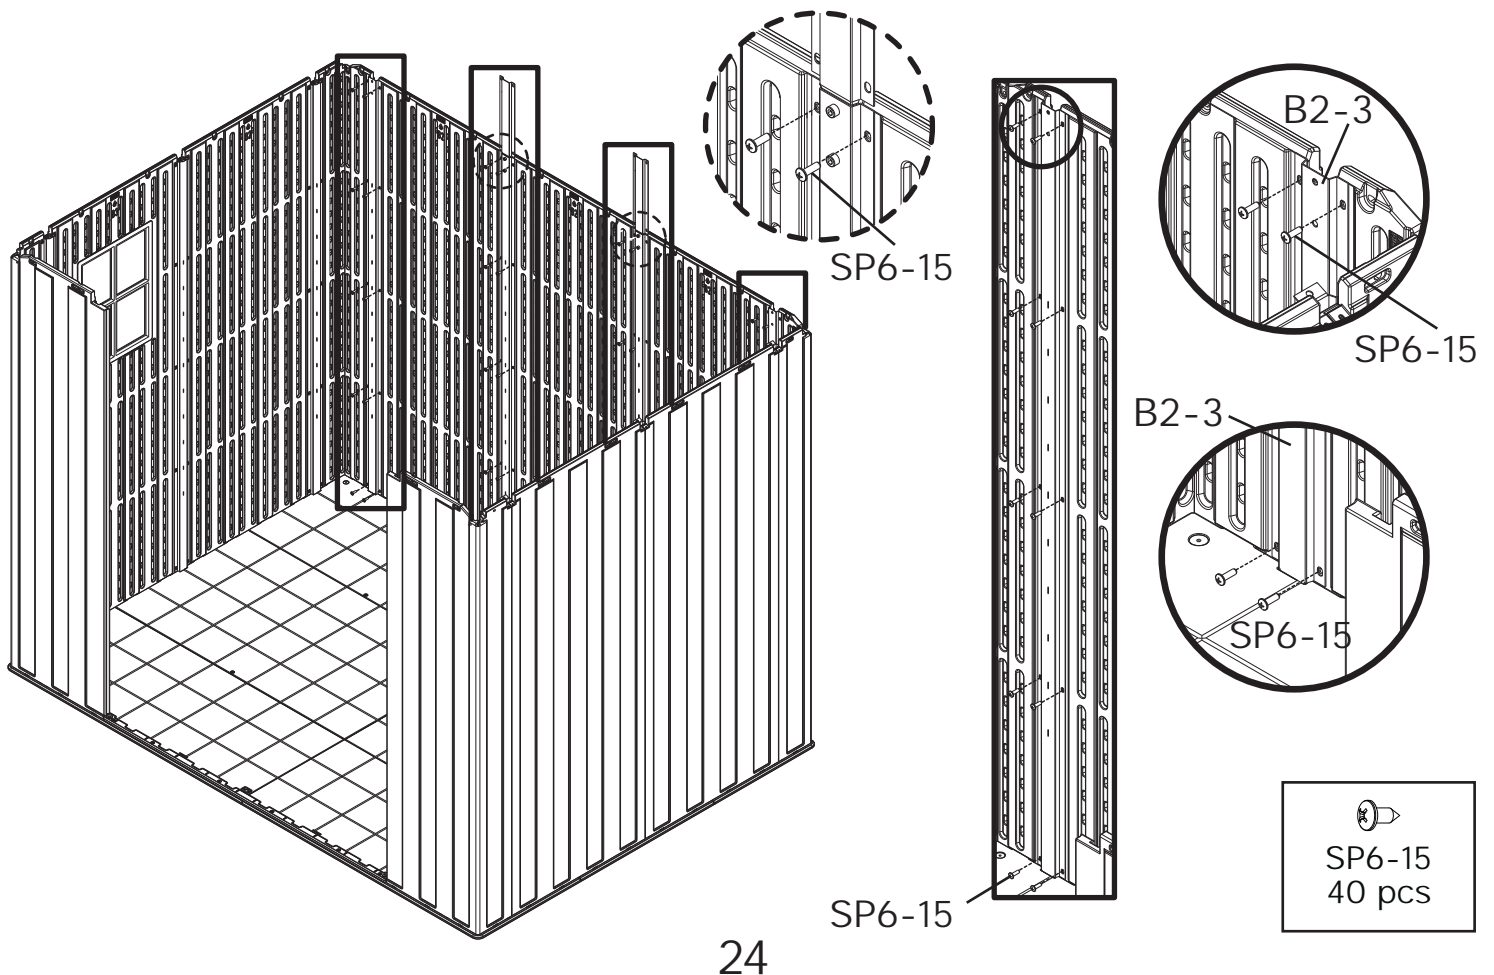



SP6-15 40 pcs

# STEP 26

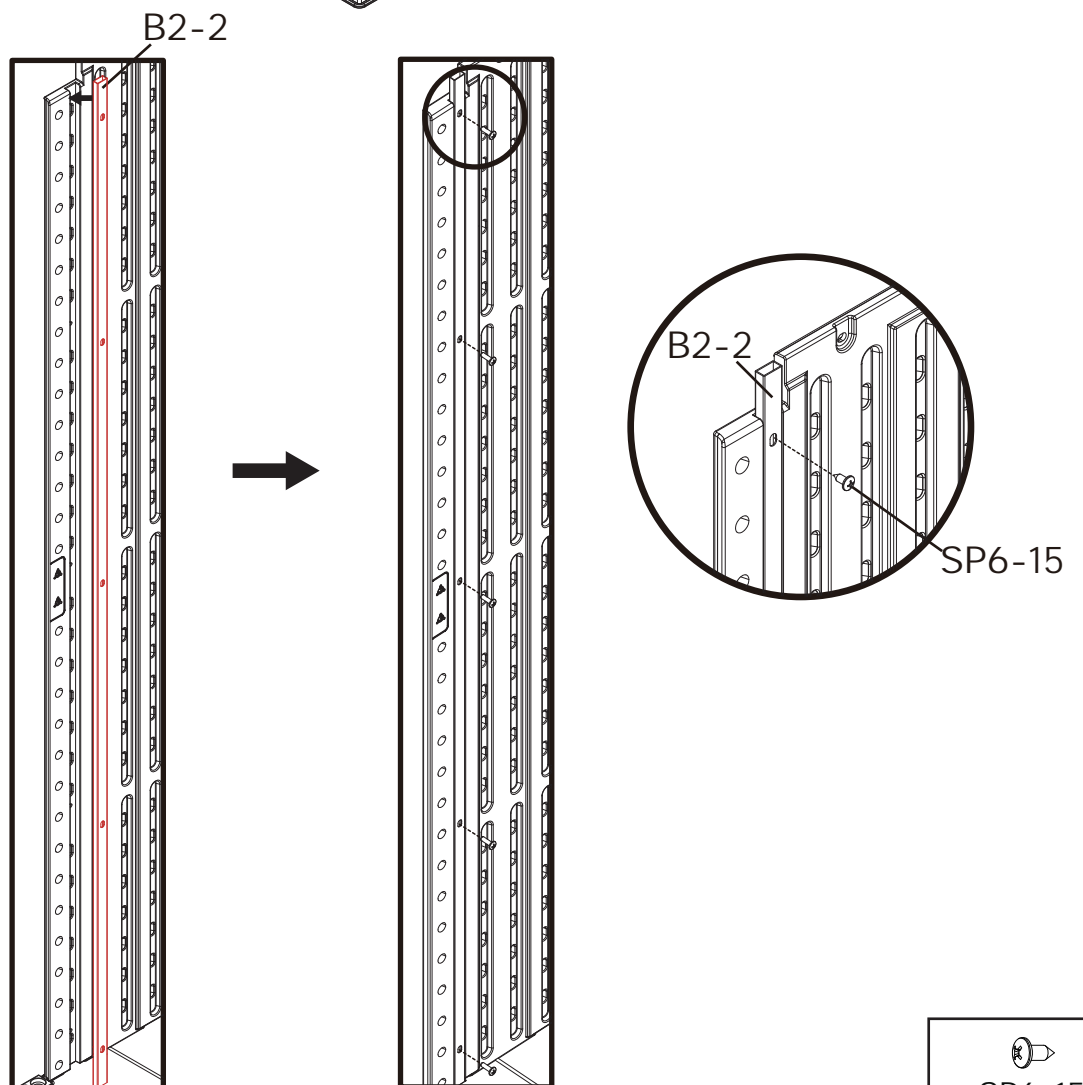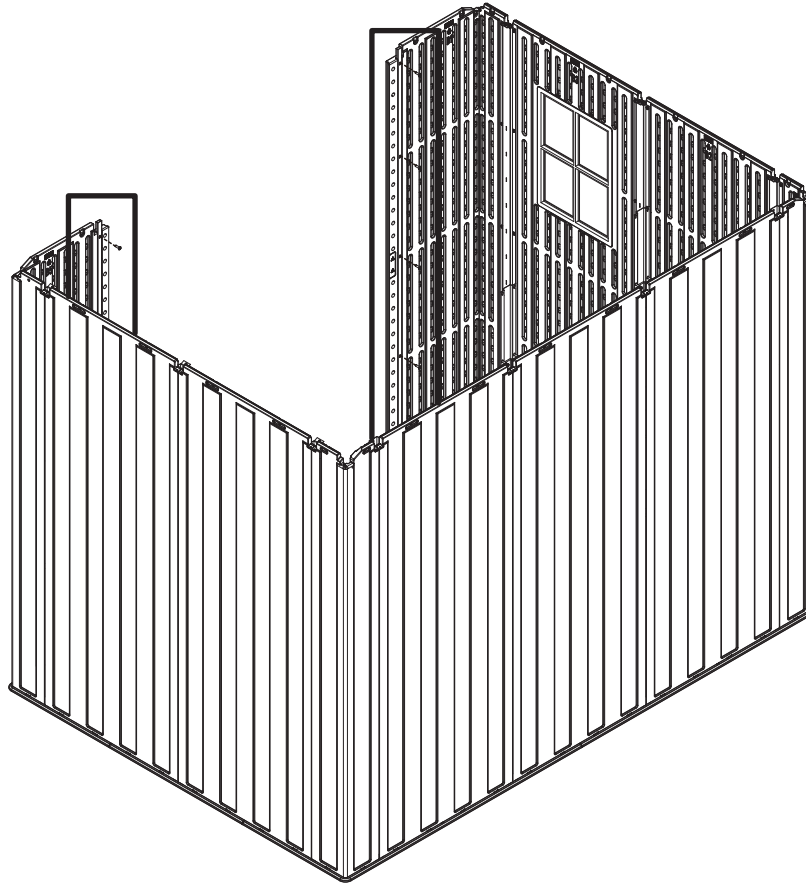


SP6-15  
10 pcs

## STEP 27

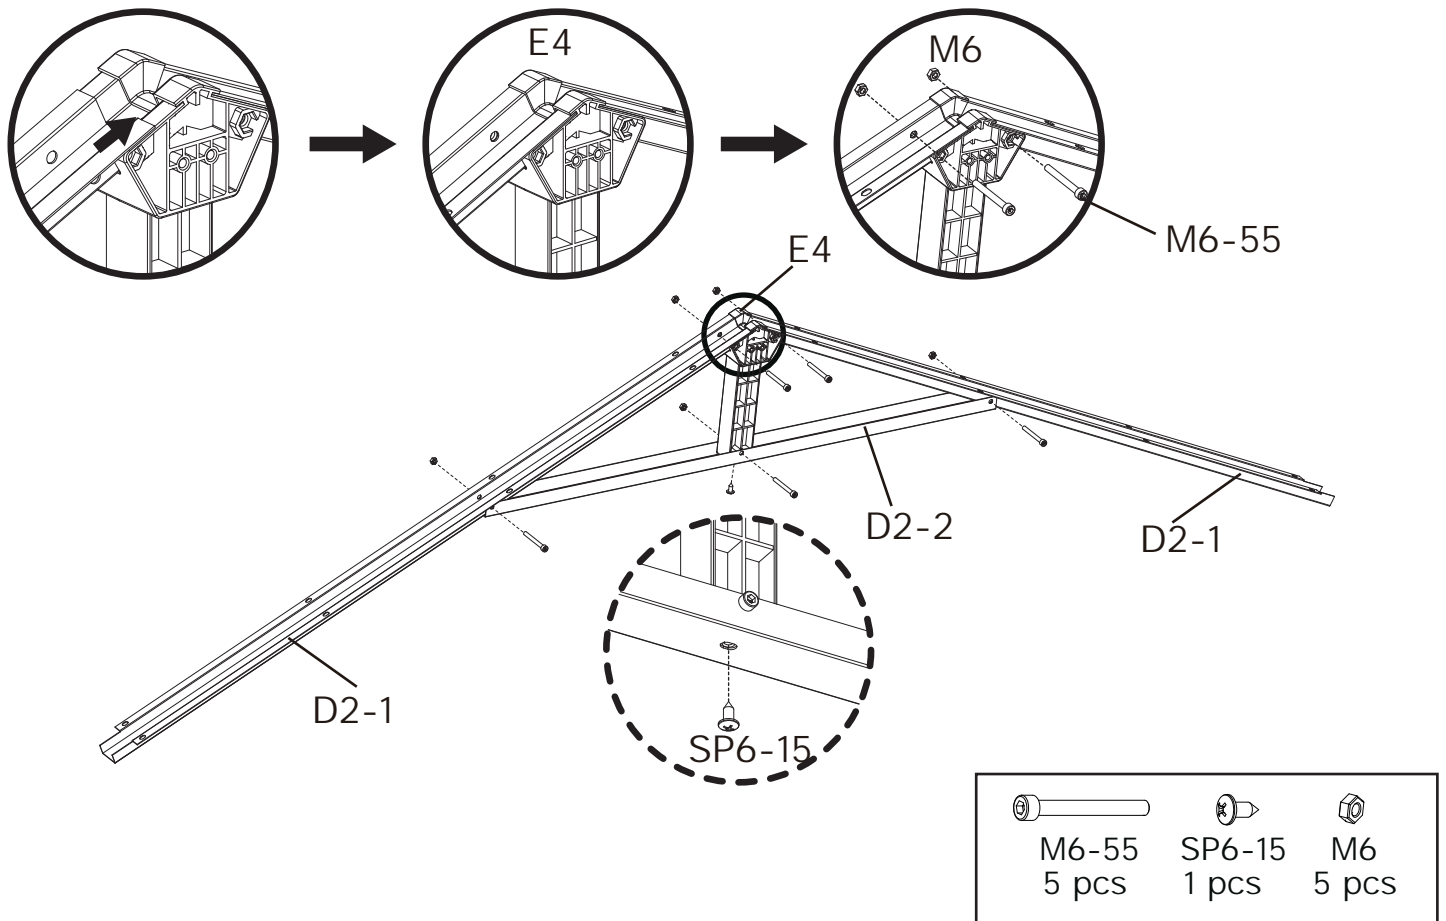


## STEP 28

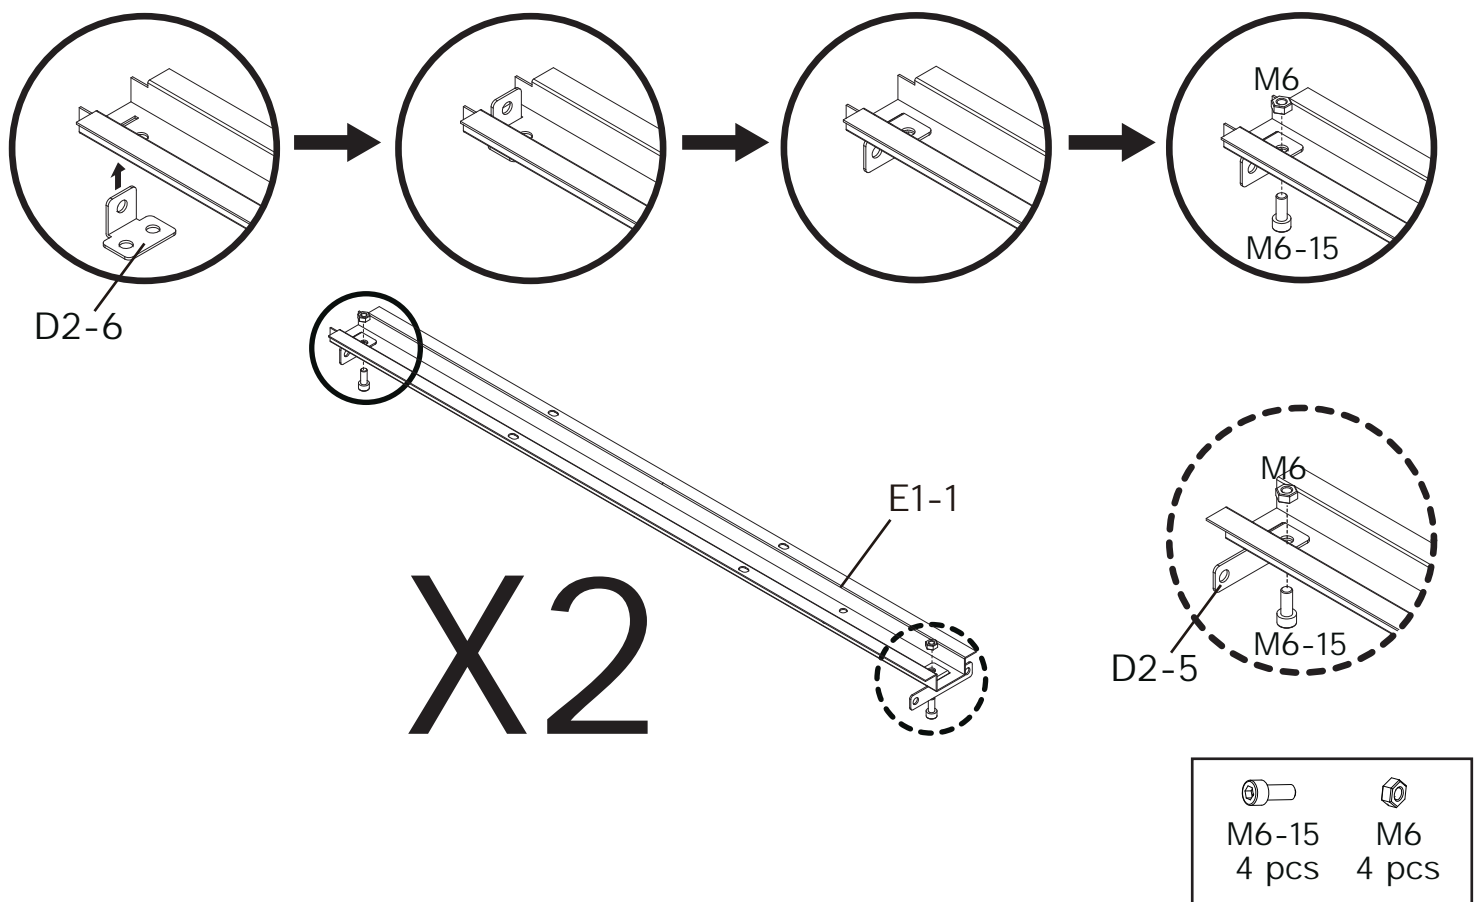






## STEP 29

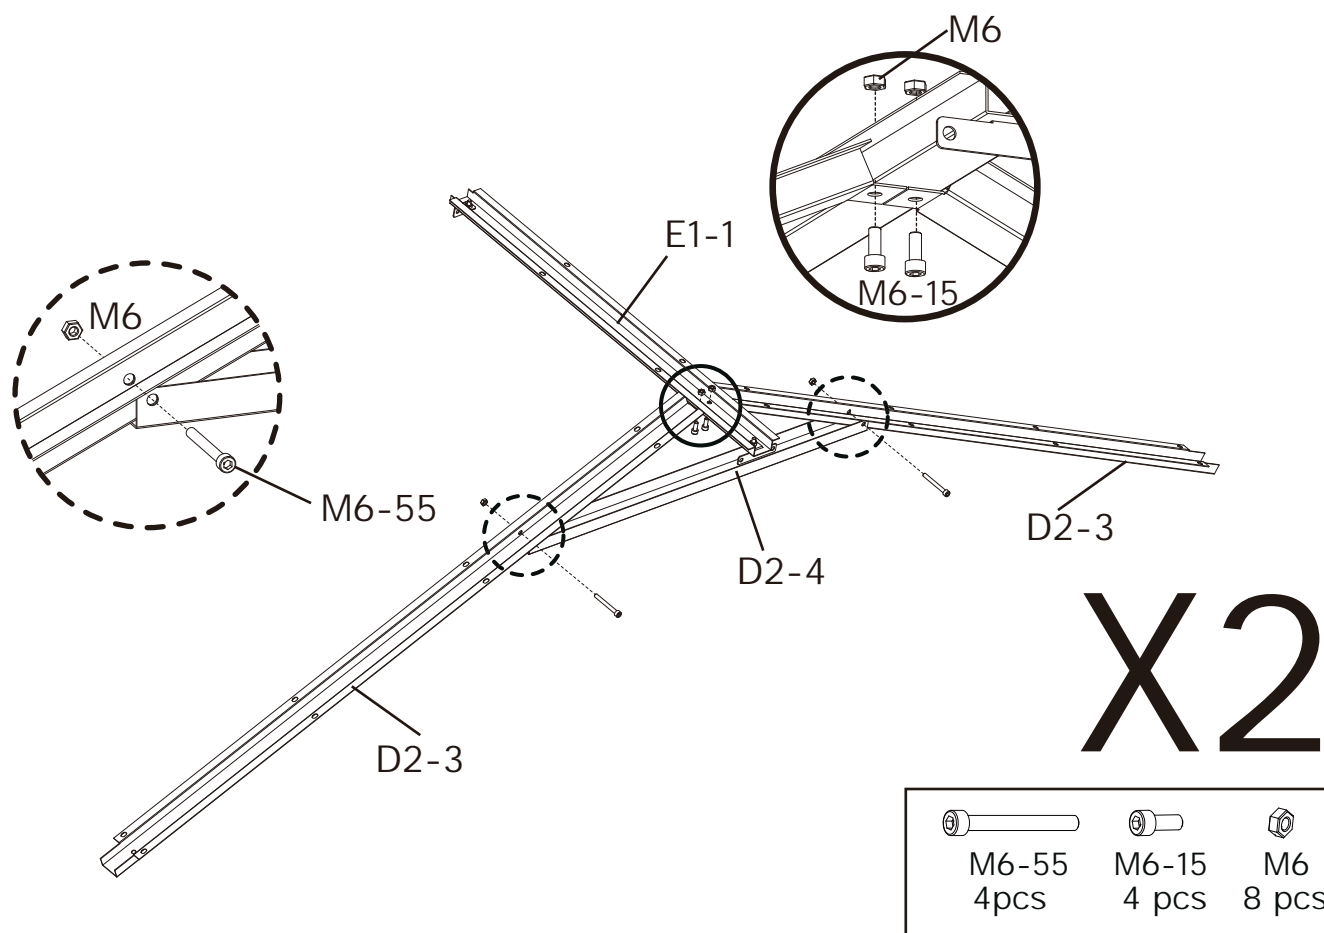


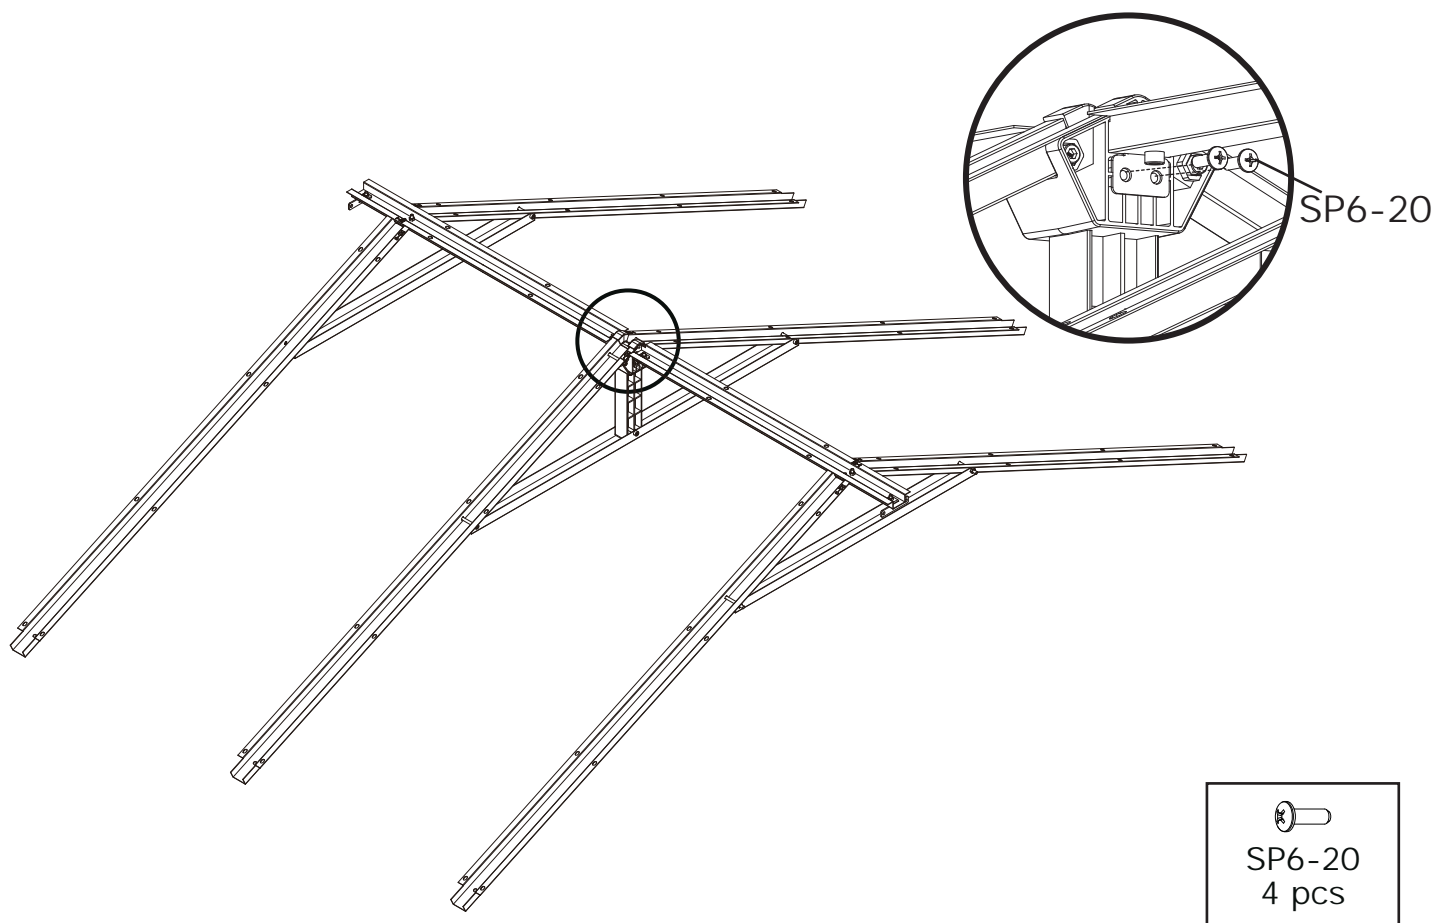

## STEP 30


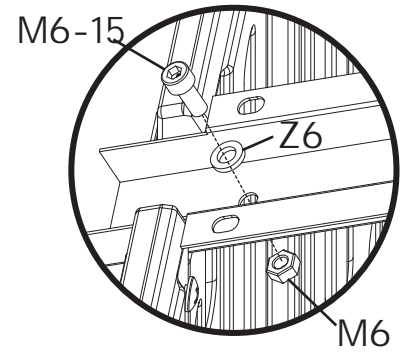
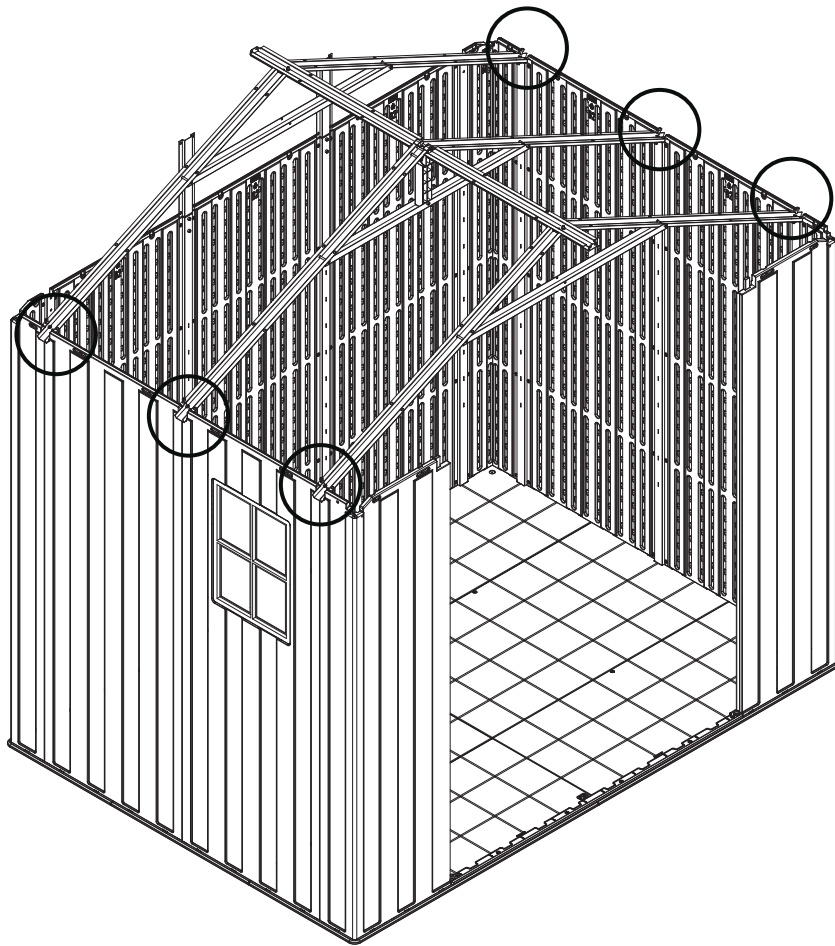


## STEP 31




		
M6-15	M6	Z6
6 pcs	6 pcs	6 pcs


## STEP 32

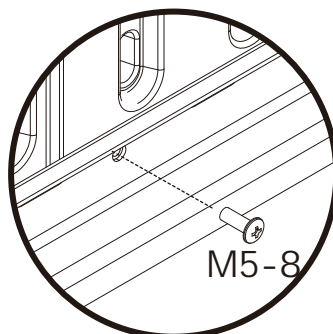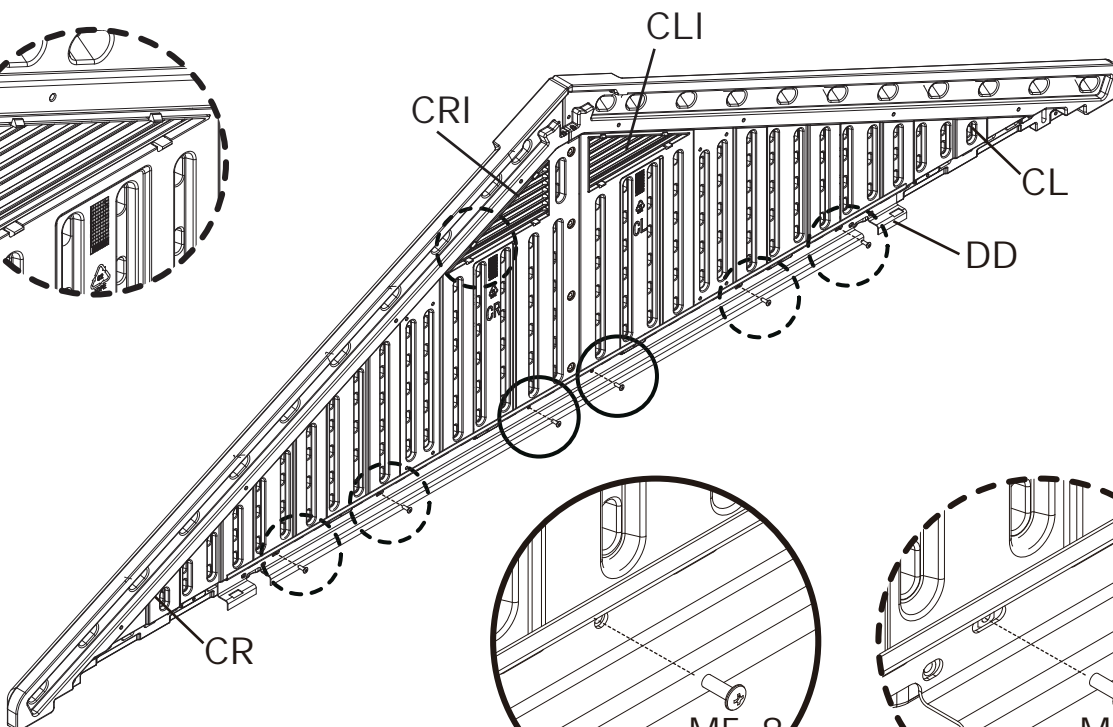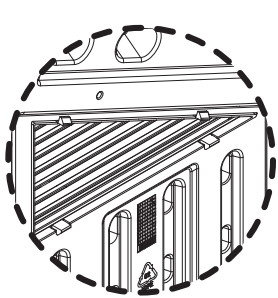


①

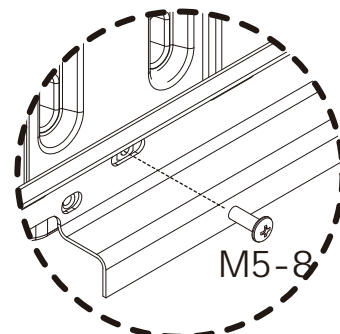

②



M5-8
6 pcs


## STEP 33

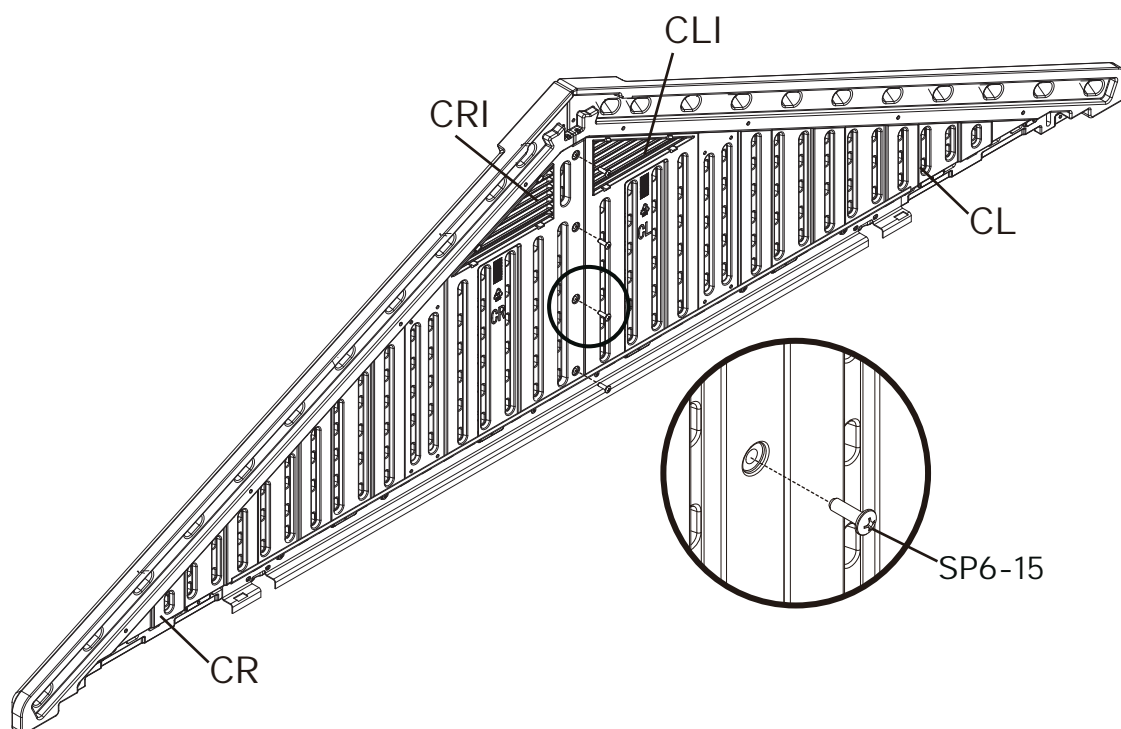




  
SP6-15  
4pcs

## STEP 34



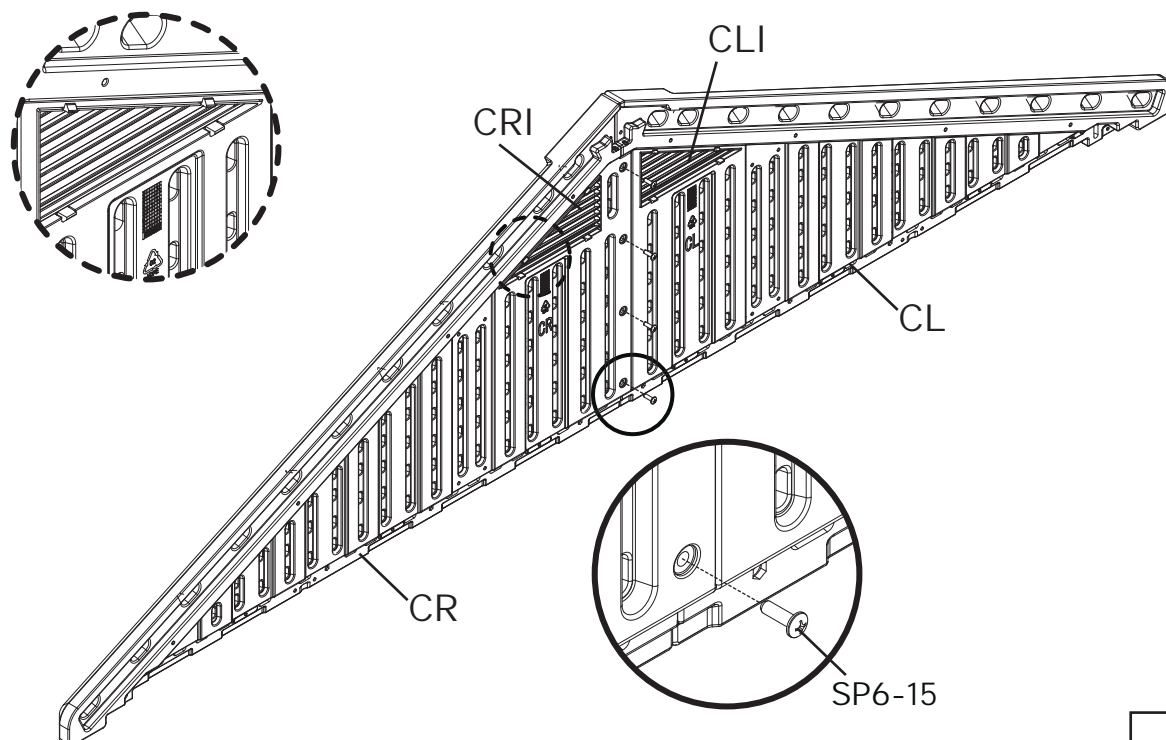




  
SP6-15  
4pcs
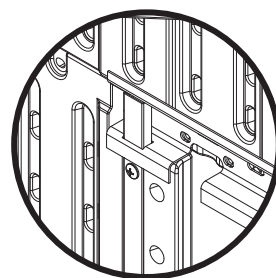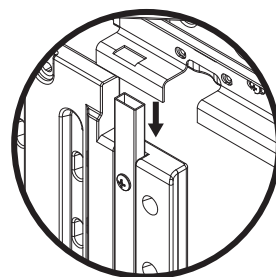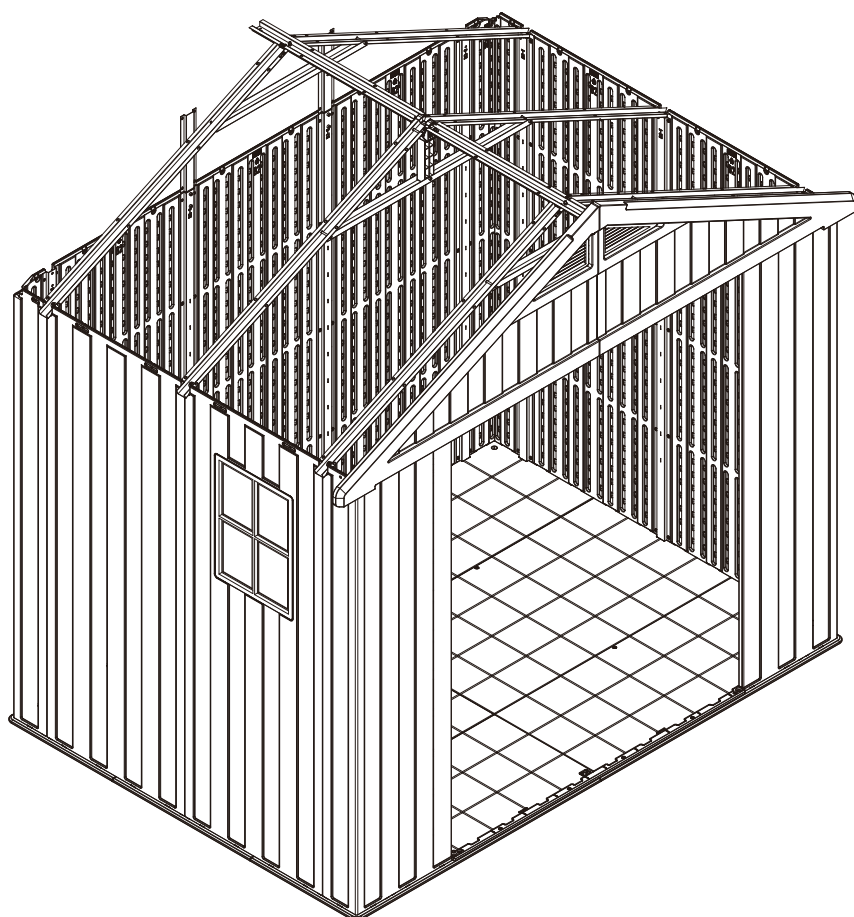
## STEP 35

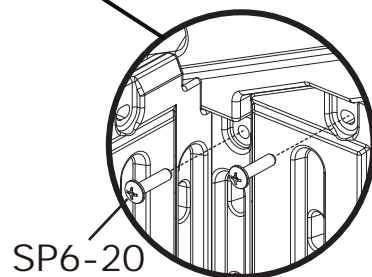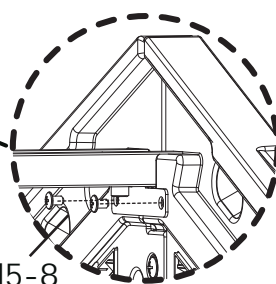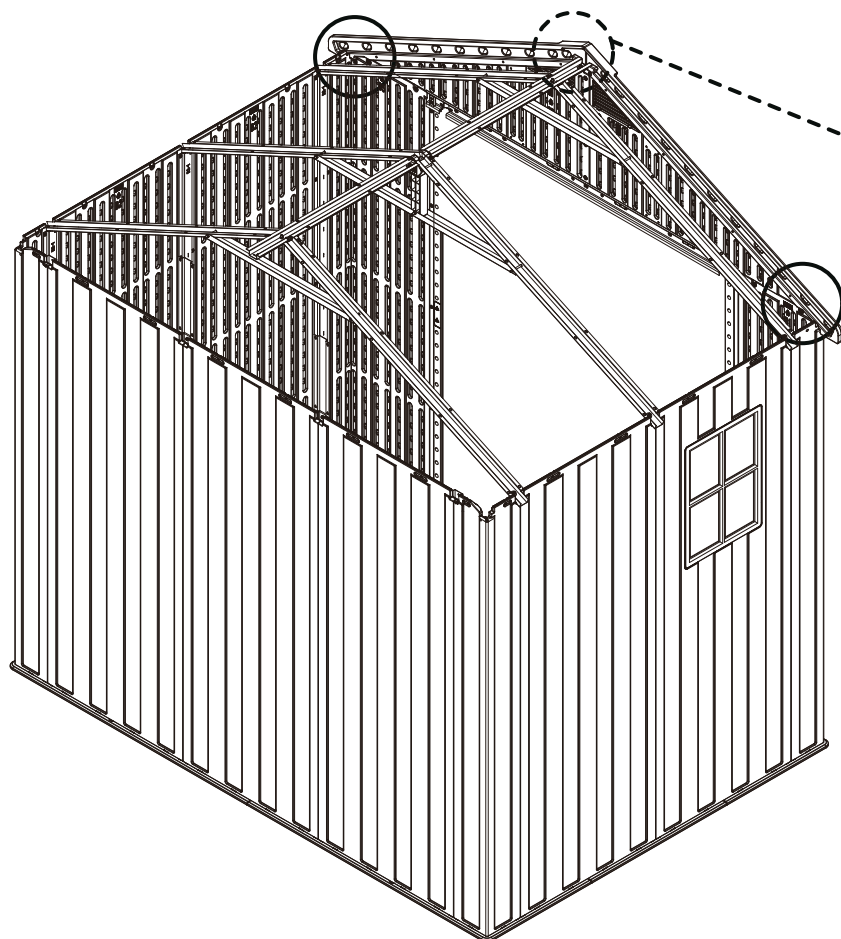


## STEP 36




	
SP6-20	M5-8
6 pcs	2 pcs

## STEP 37


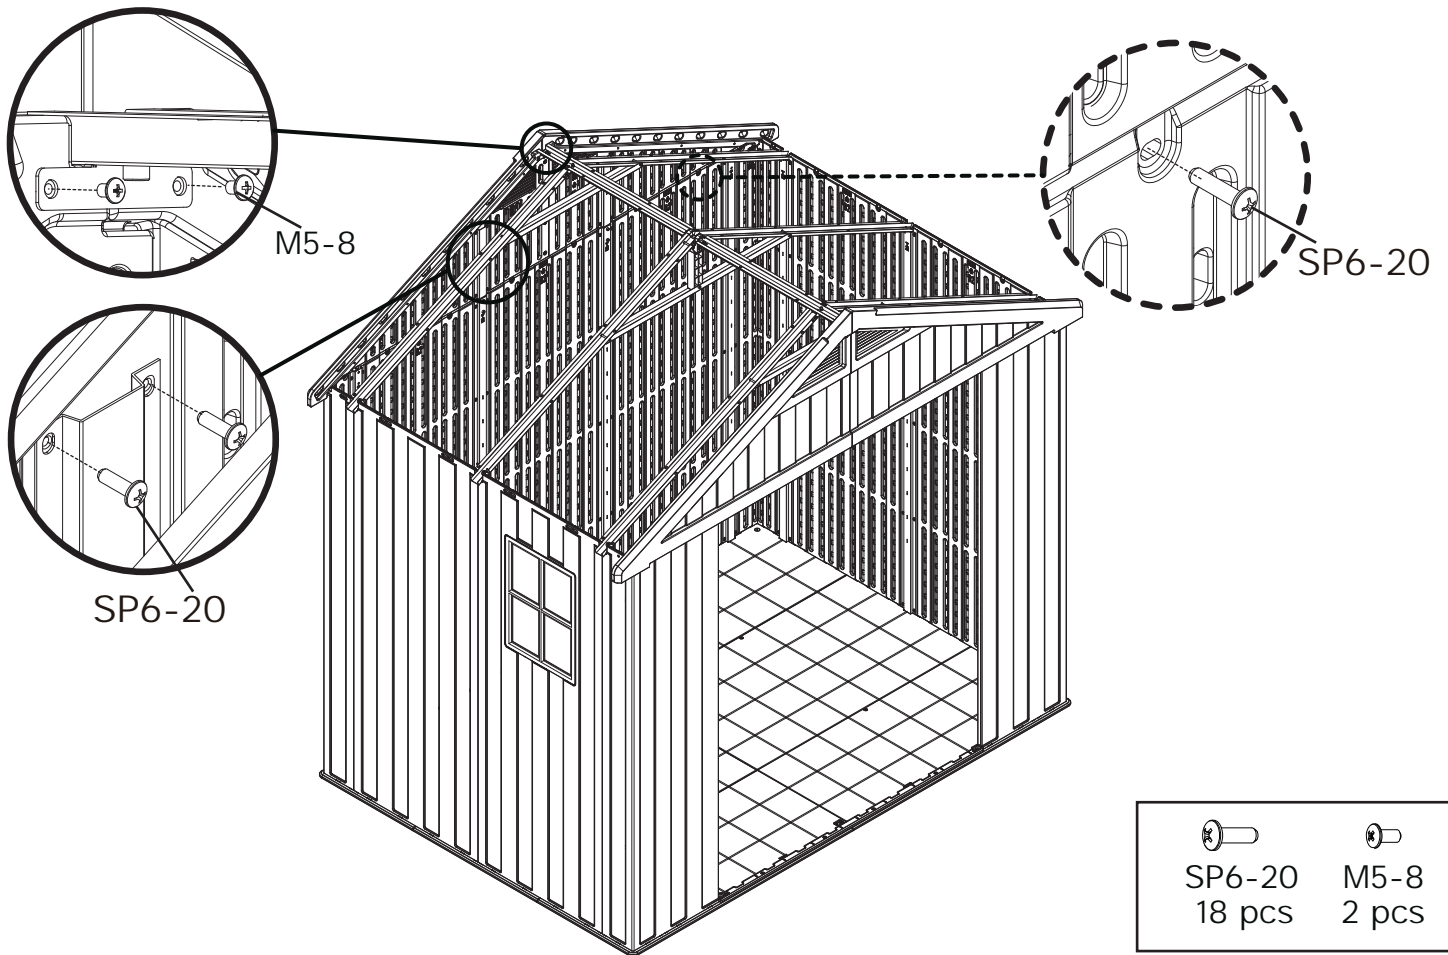


## STEP 38



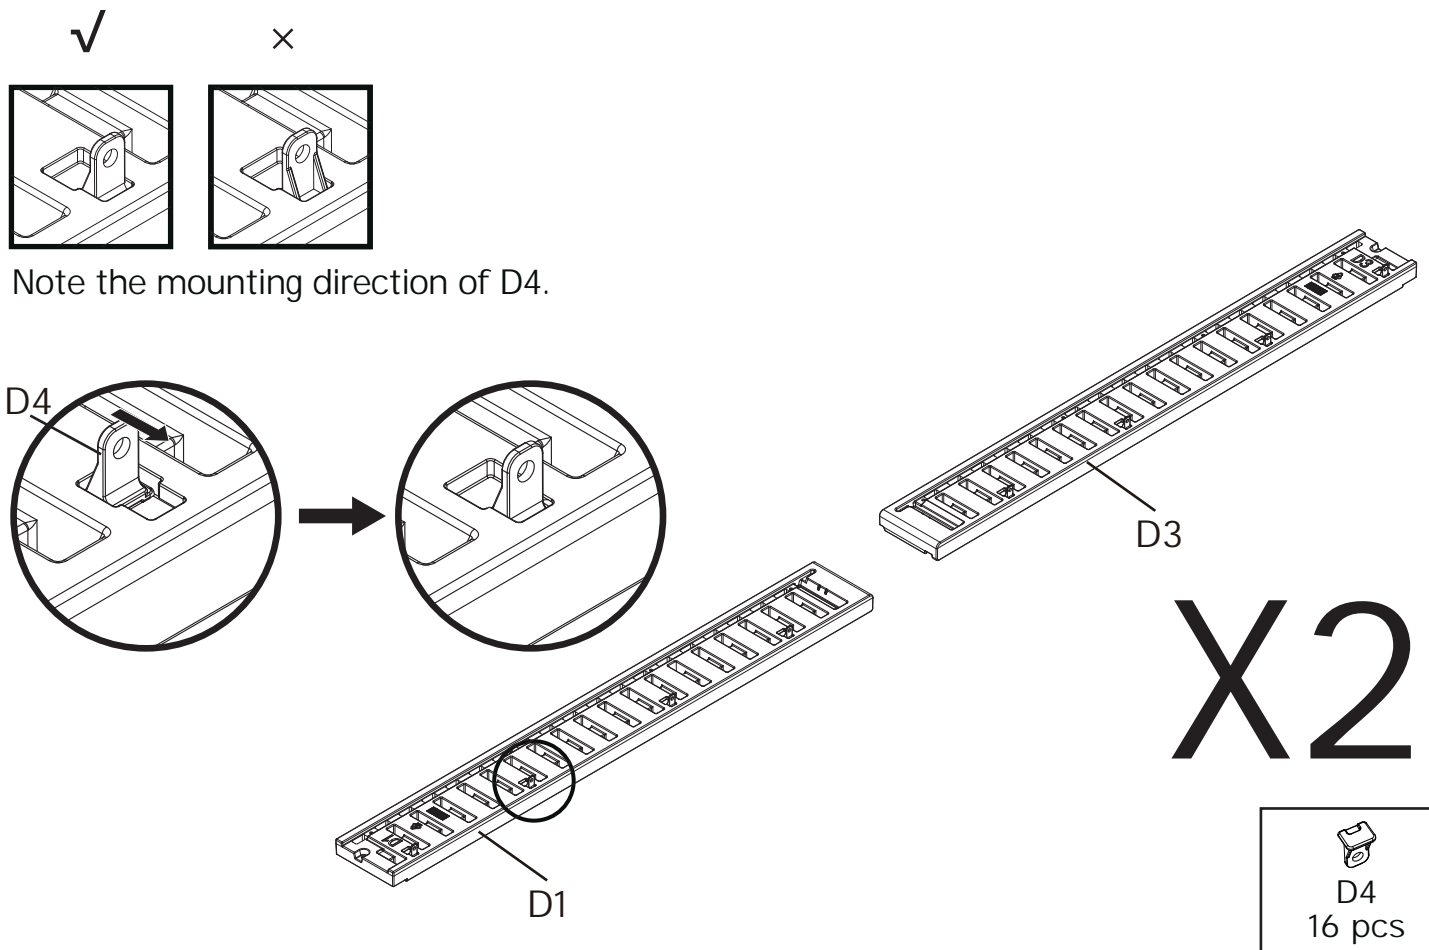






# STEP 39

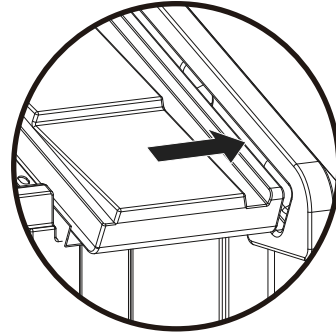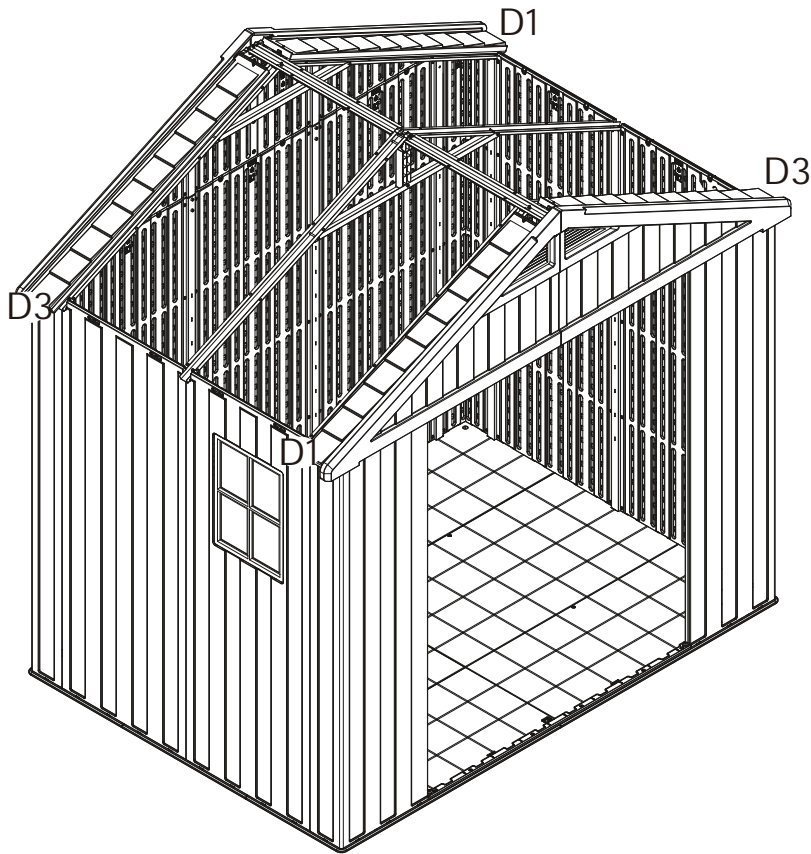





D1 and D3 are placed in the grooves of the iron frame, aligned with the grooves of the CL CR respectively and pushed forward.

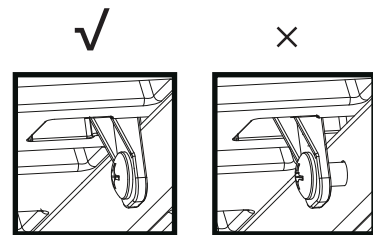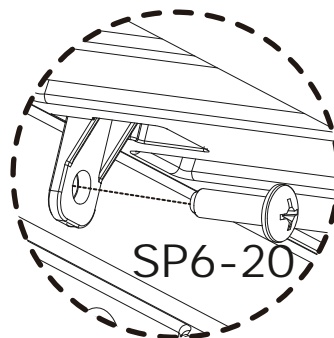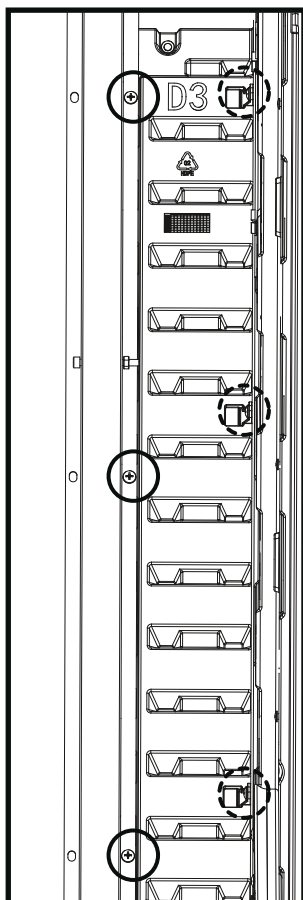


D4 should fit perfectly on the tripod.

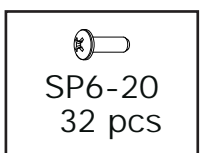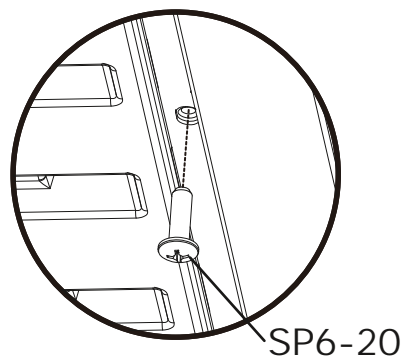



# STEP 40

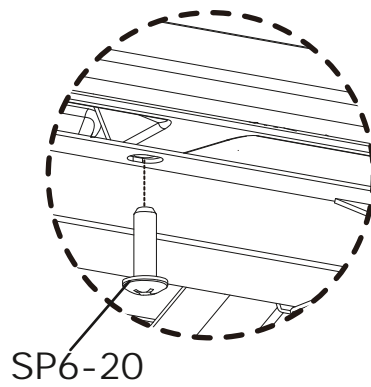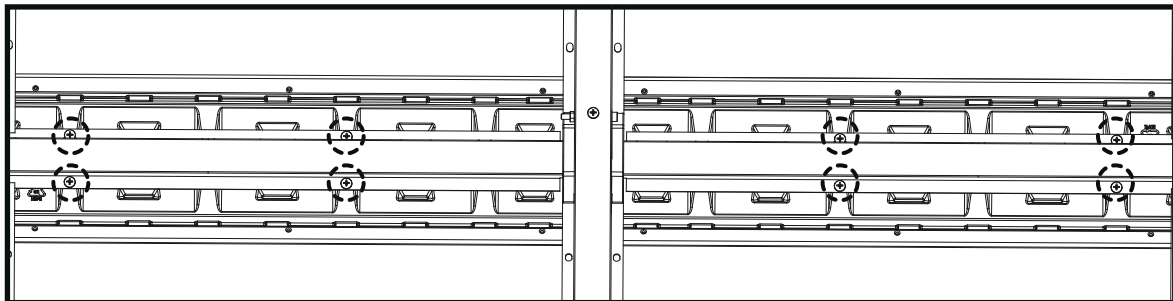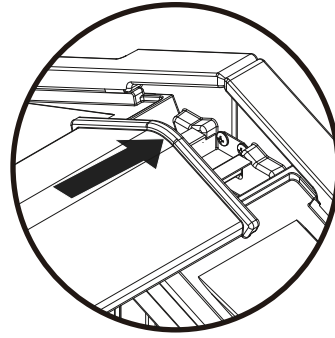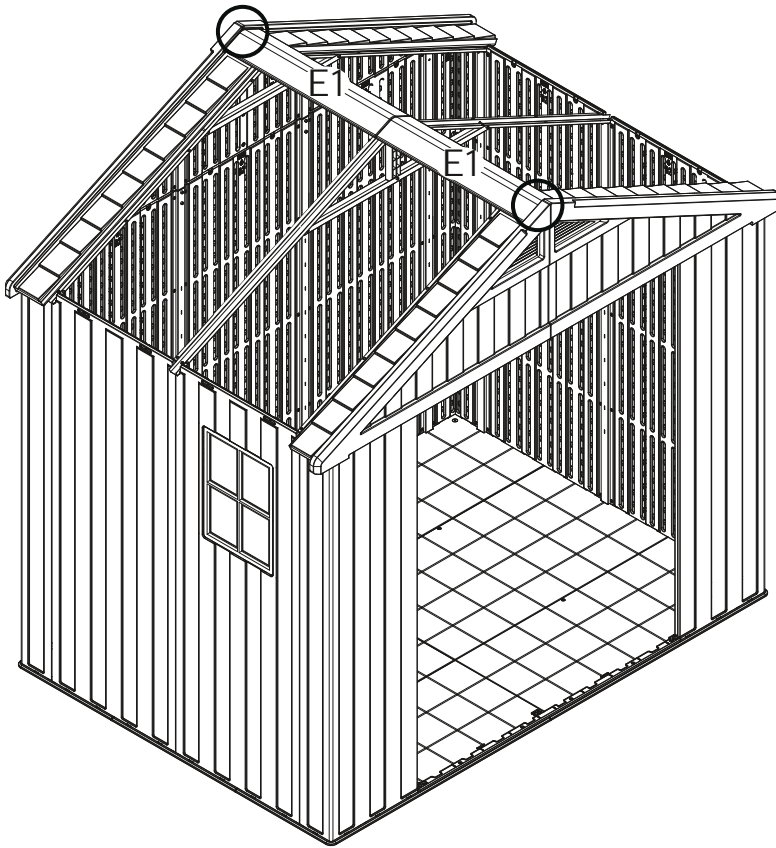



SP6-20

  
SP6-20  
8 pcs


# STEP 41

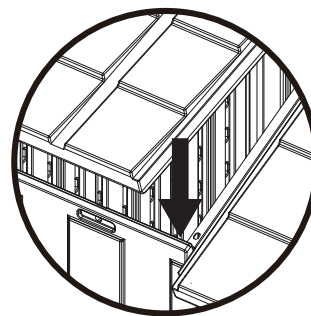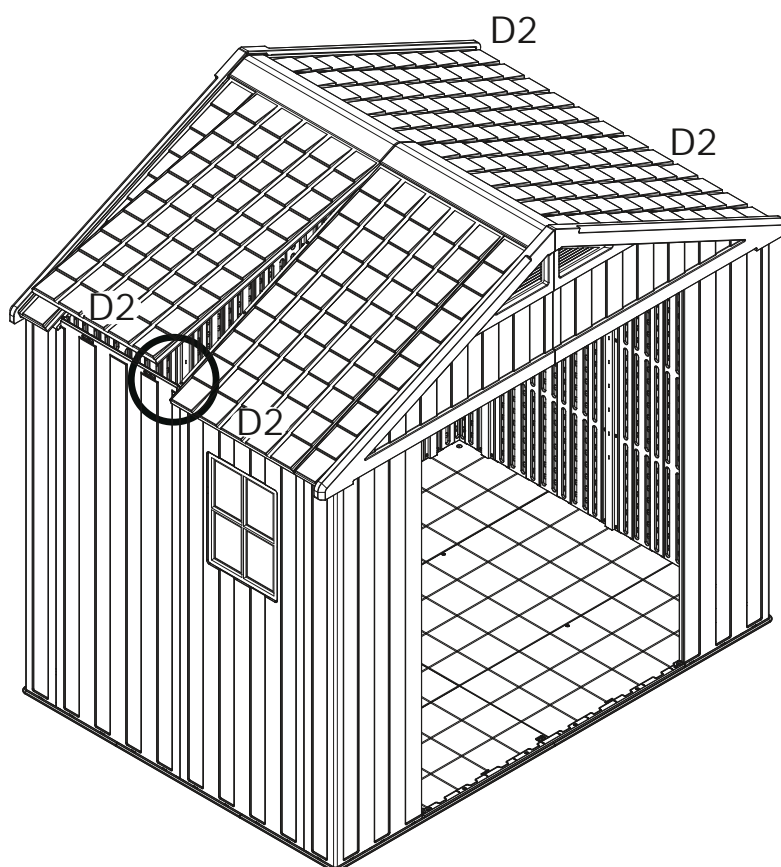

Tilt D2 into place, find the corresponding position and put it down.

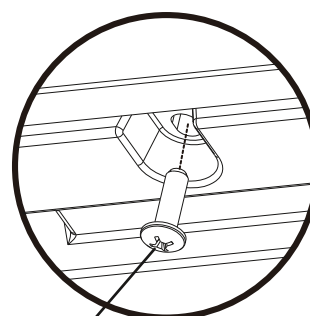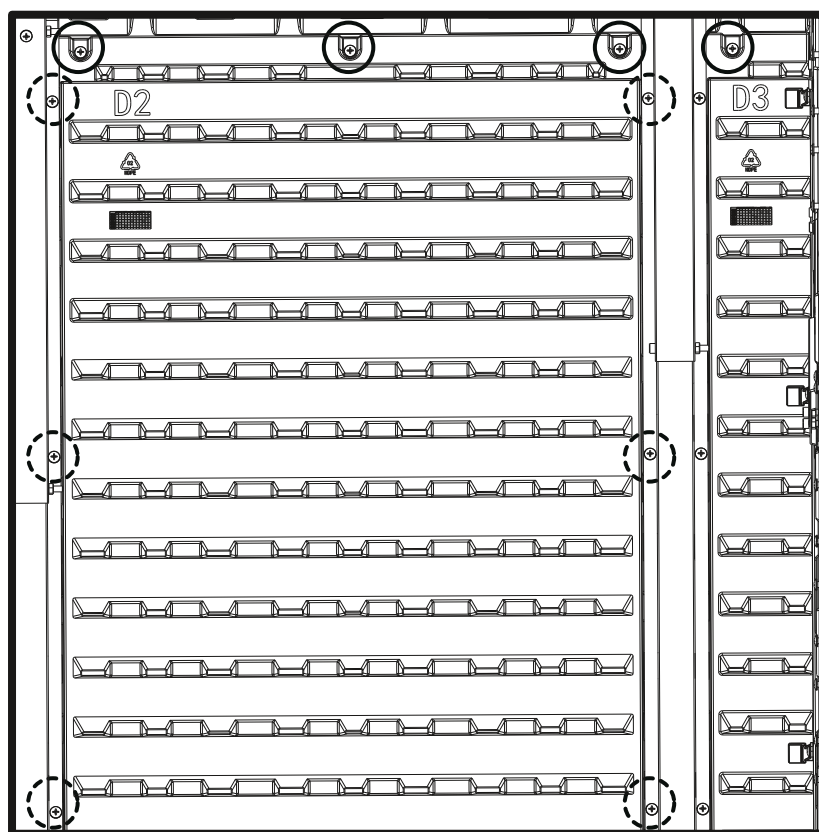

SP6-20

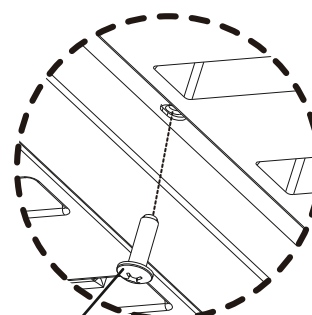



SP6-20



SP6-20  
48 pcs



## STEP 42

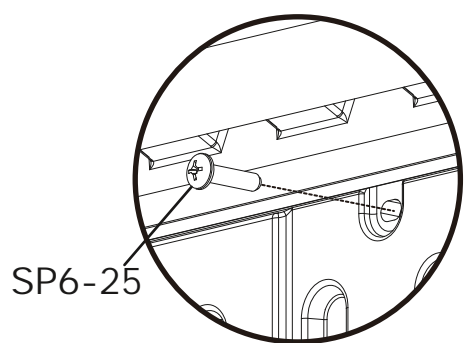
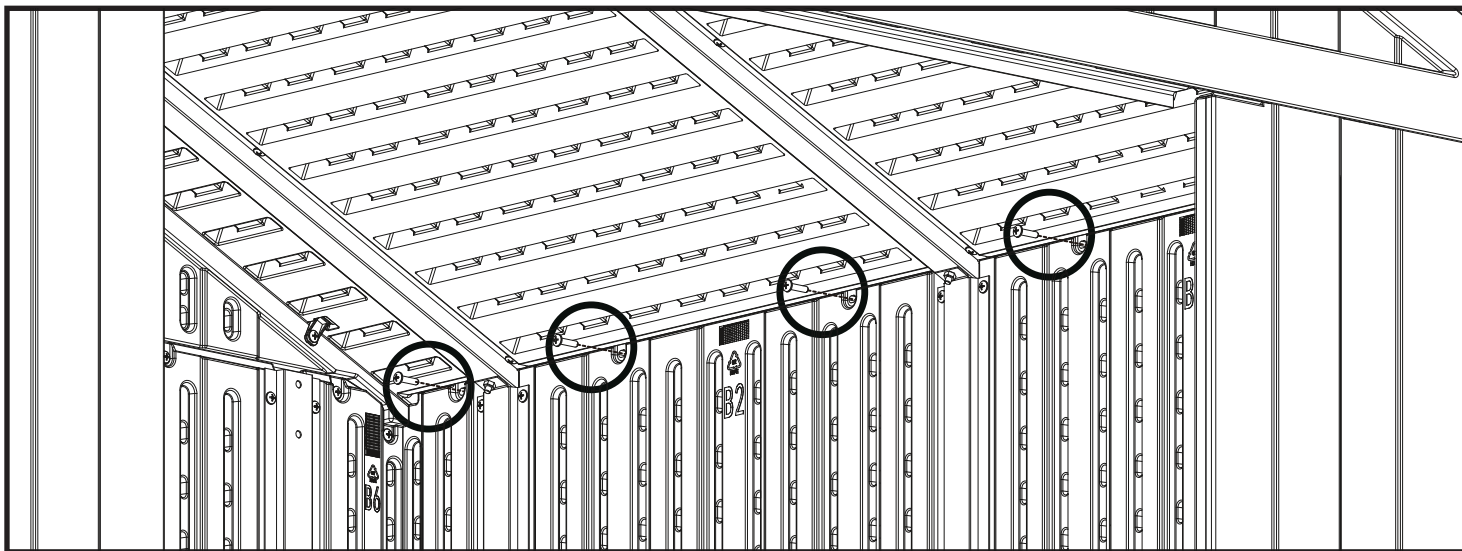


SP6-25




SP6-25  
12 pcs


## STEP 43

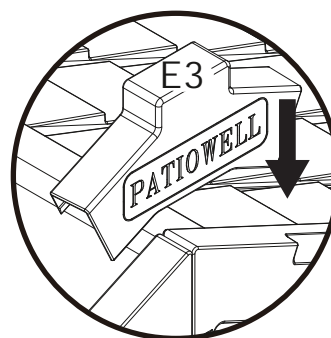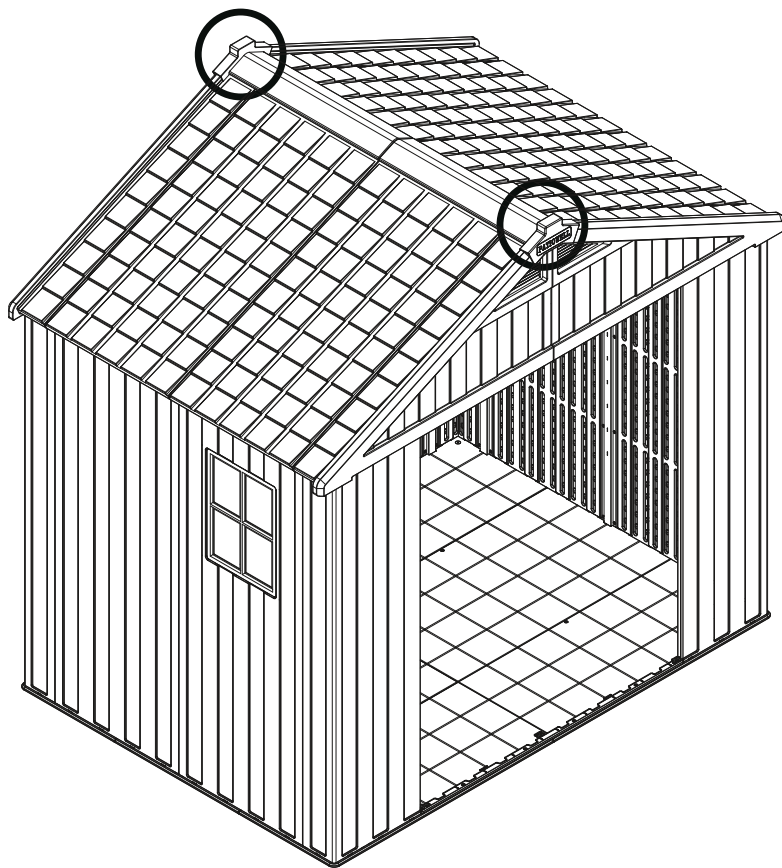



## STEP 44

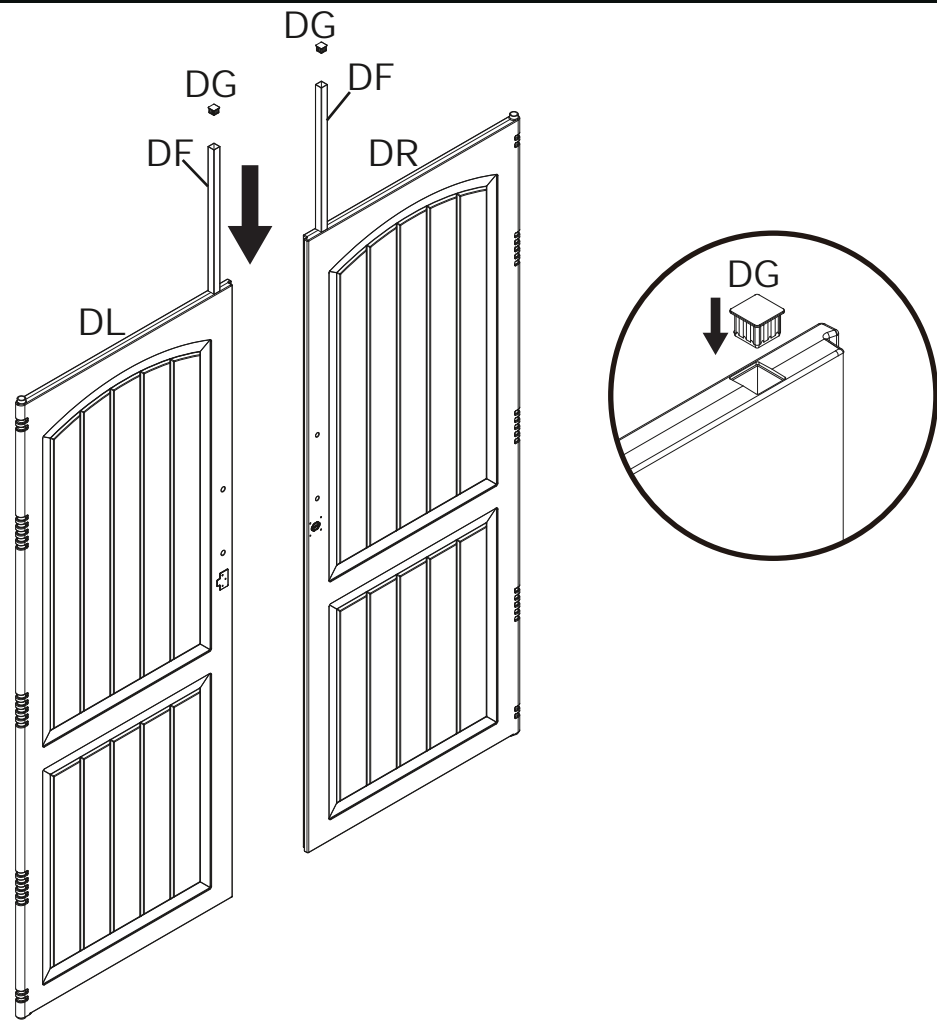


## STEP 45

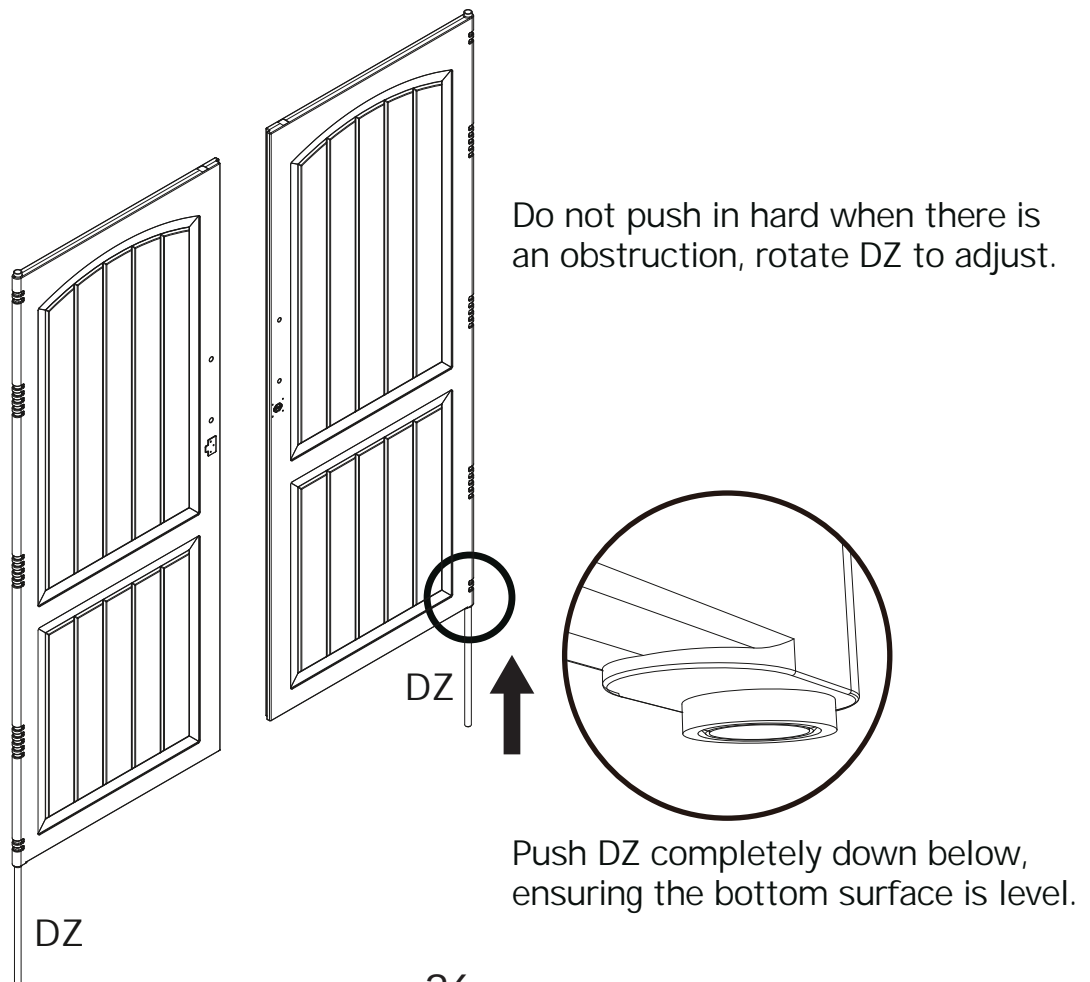



## STEP 46

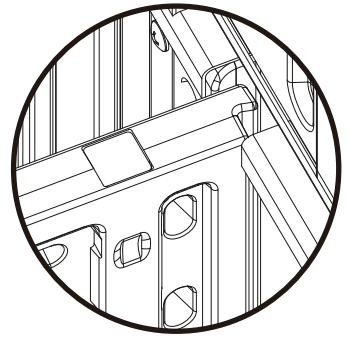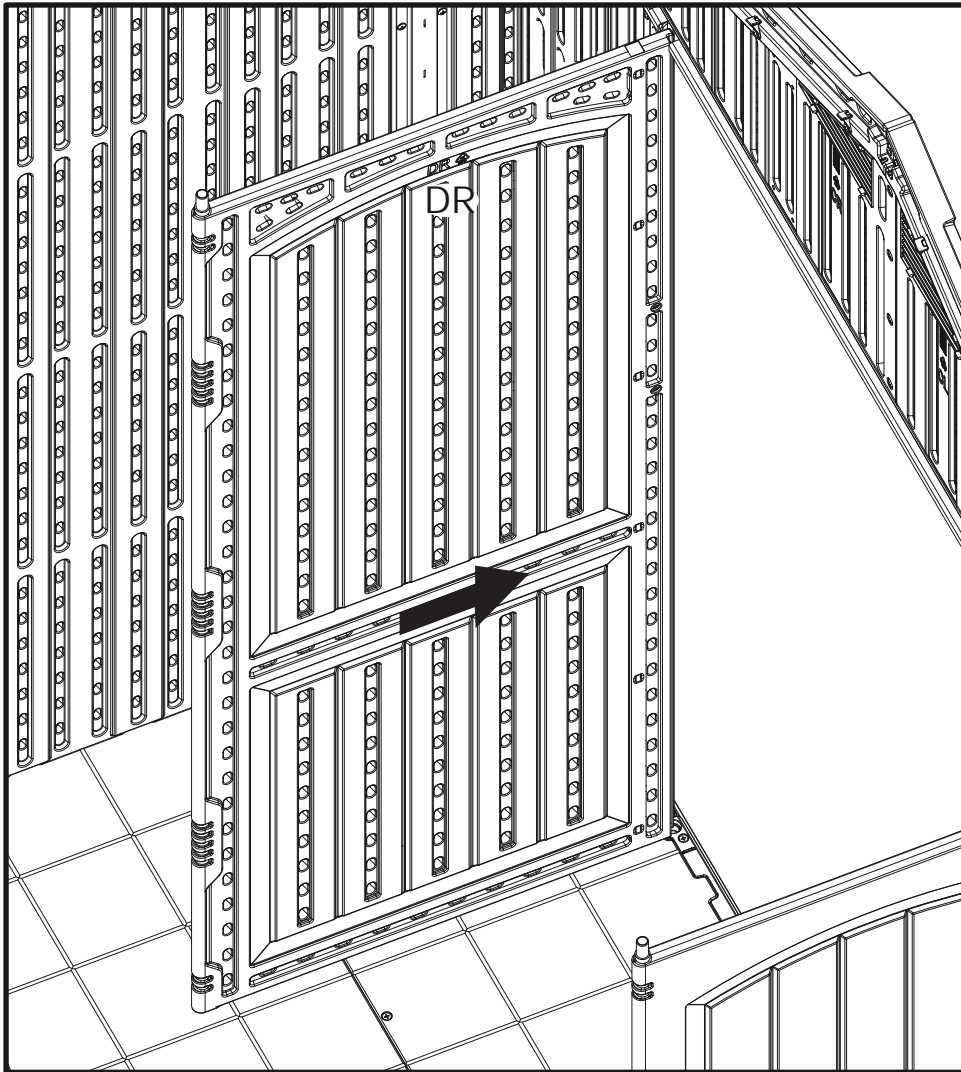


Take the DR and DL inside.  
Push it forward into position.

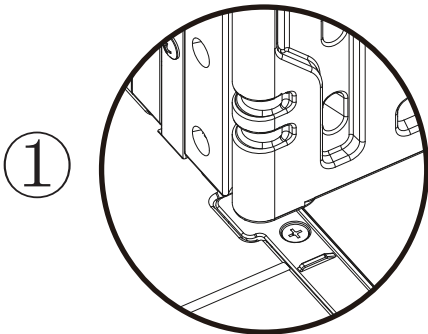

Push it into the groove of the floor. Press the DZ downwards.




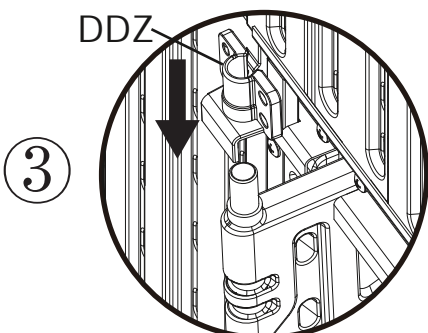
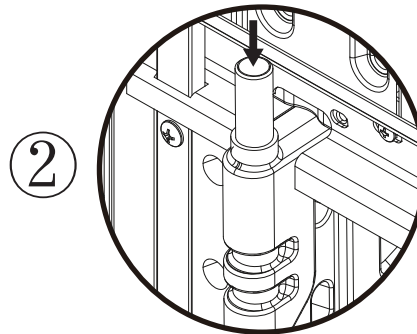


Tilting the DR and DL and  
snapping it into the DDZ.

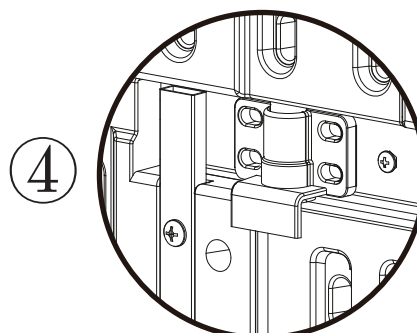




After inserting the DDZ, push the  
DR and DL to the fitting position.

# STEP 47

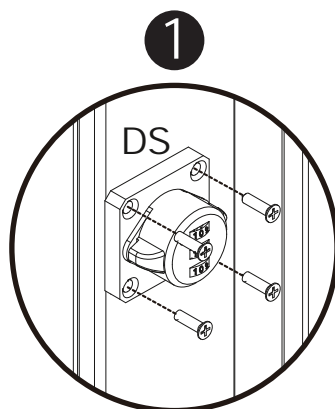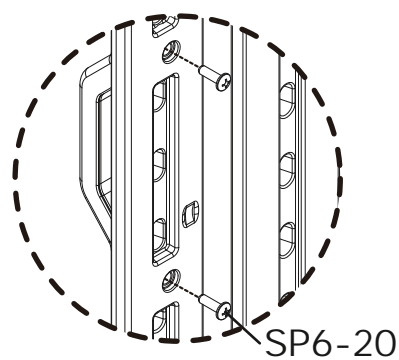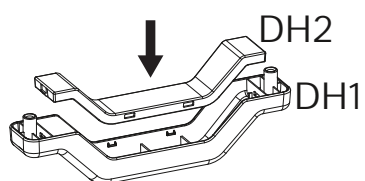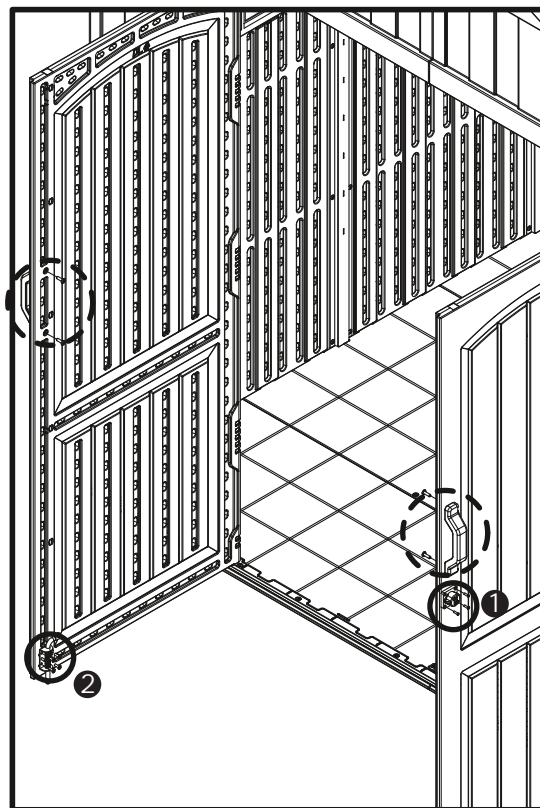
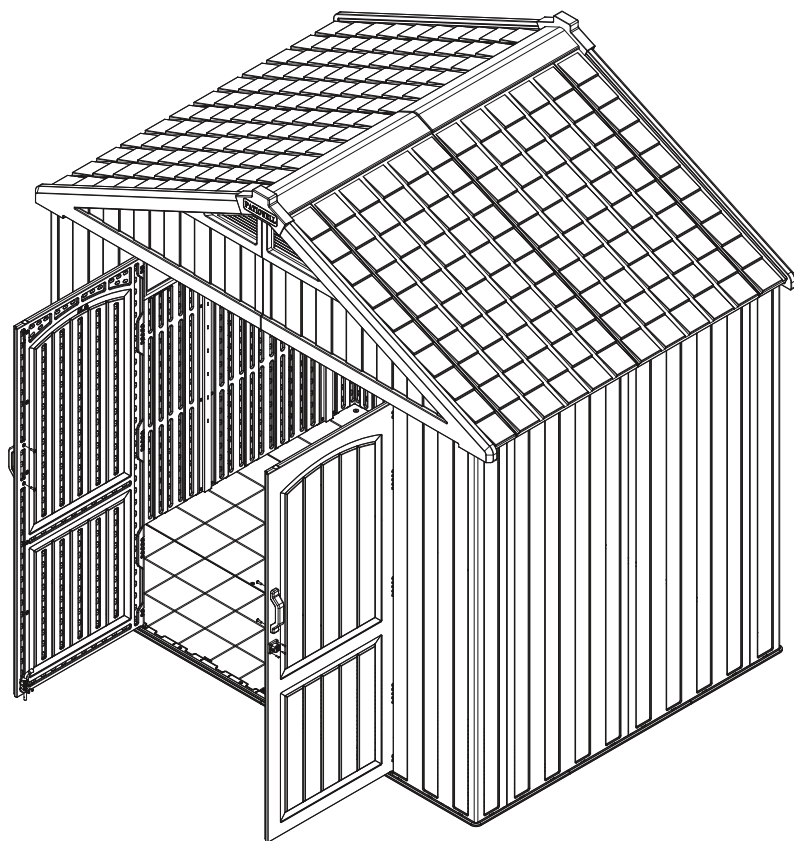


4 long screws for mounting  
part DS (lock part)

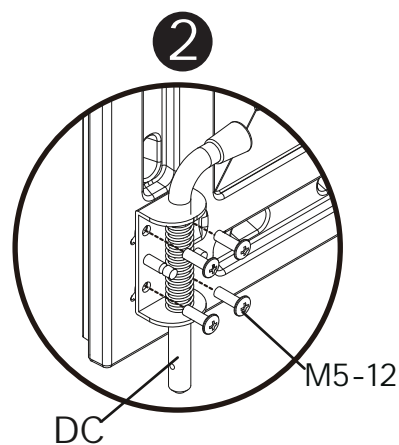


	
SP6-20	M5-12
4 pcs	4 pcs

## STEP 48

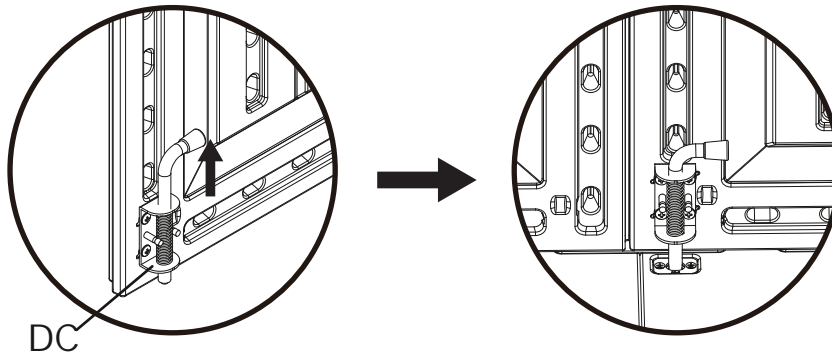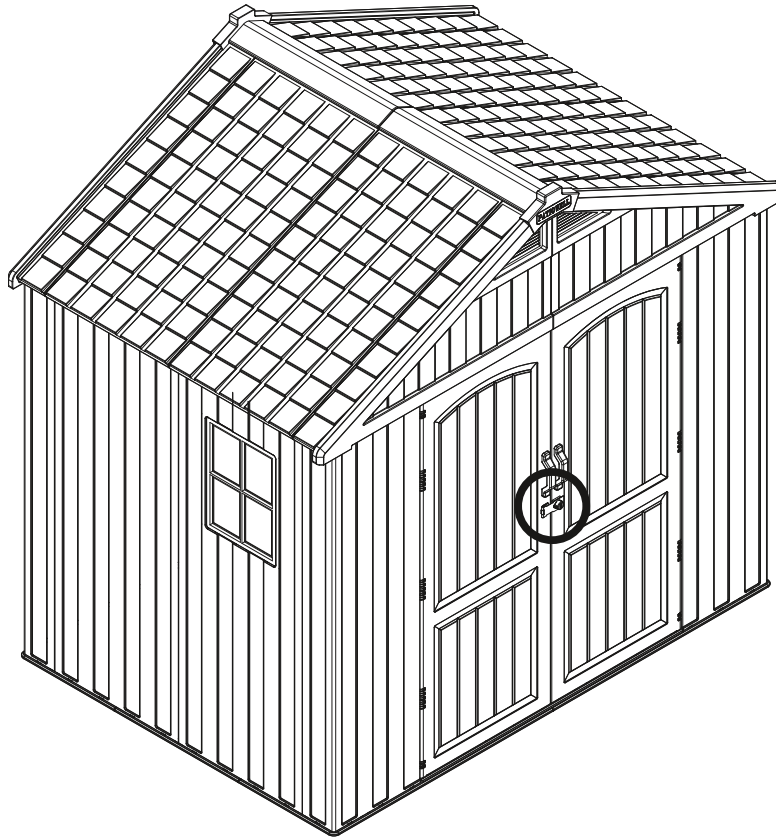

DC


Remember to unplug the DC when closing the door and put it down when the door is closed.

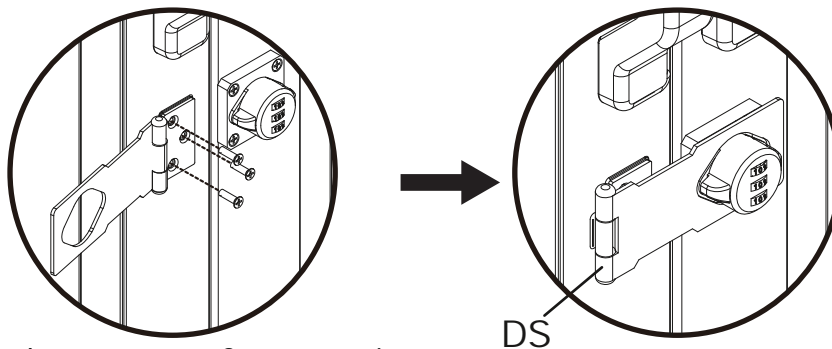



3 short screws for mounting  
part DS (hinge section)



DS

# STEP 49

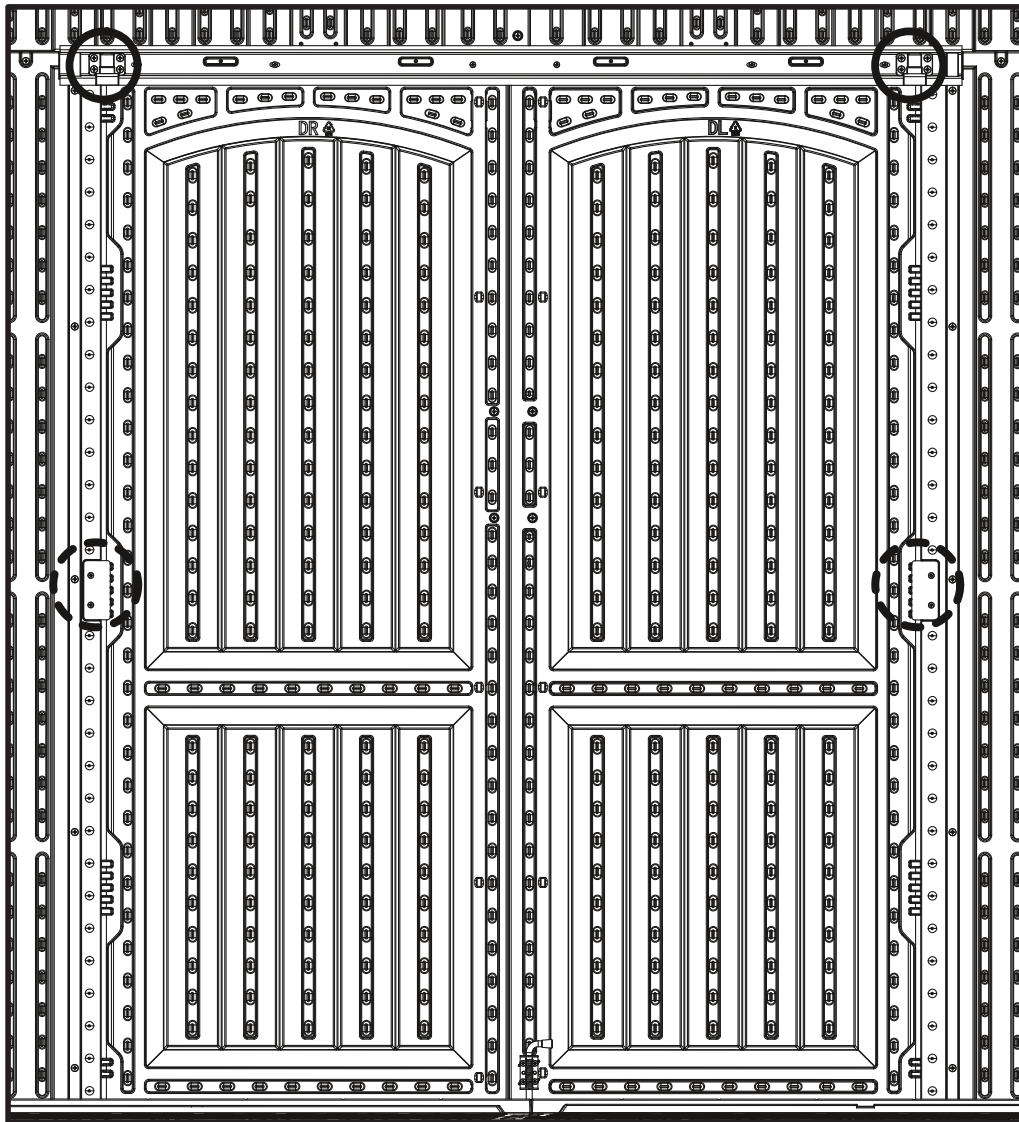

Two people are needed. One person closes the door and inserts the pin, while the other person adjusts the gap outside the door. After making sure the gap is even, the person inside installs DDZ screws SP6-20.

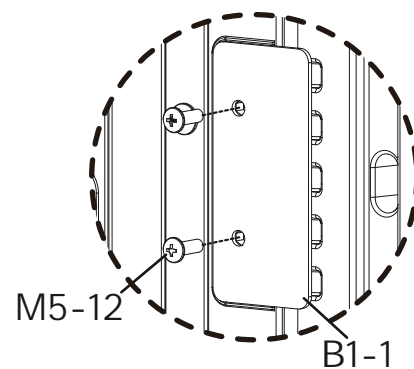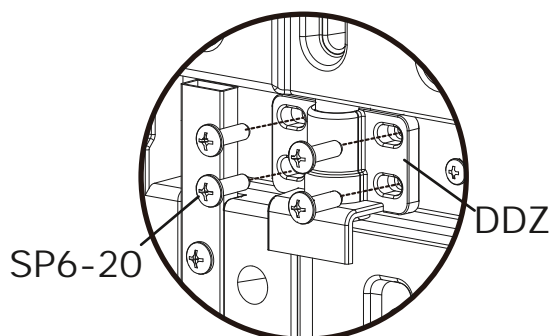

	
SP6-20	M5-12
8 pcs	4 pcs



## CARE & SAFETY

- In case of fire, do not attempt to extinguish any burning polypropylene with water. Unsuitable for storage of flammable or corrosive substances.
- It is of utmost importance to assemble all of the parts according to the directions. Do not skip any step.
- Please consult your local authorities if any permits are required to erect shed.
- Periodically check shed to assure that it remains stable and that the site remains level.
- It is highly recommended to secure the shed to an immovable object or to the ground by drilling holes in the floor at the pre-marked locations and inserting proper screws into the ground (size: 1.9"-3" ,screws are not included).
- Wear safety-goggles and always follow the manufacturer's instructions when using power tools.
- Wash shed with garden hose or a mild detergent solution. Using a stiff brush or abrasive cleaner could damage shed.
- Hot items such as recently used grills, blowtorches, etc. must not be stored in the shed.
- Heavy articles should not be leaned against the walls, as this may cause distortion.
- Keep roof clean of snow and leaves. Heavy amounts of snow on roof can damage the shed making it unsafe to enter.
- Although wind direction varies, it is an important factor when taking into account where to place your shed. Therefore, it is recommended to reduce wind exposure of the shed in general, and the door side in particular.
- Keep doors closed and locked to prevent wind damage.
- Do not stand on the roof.