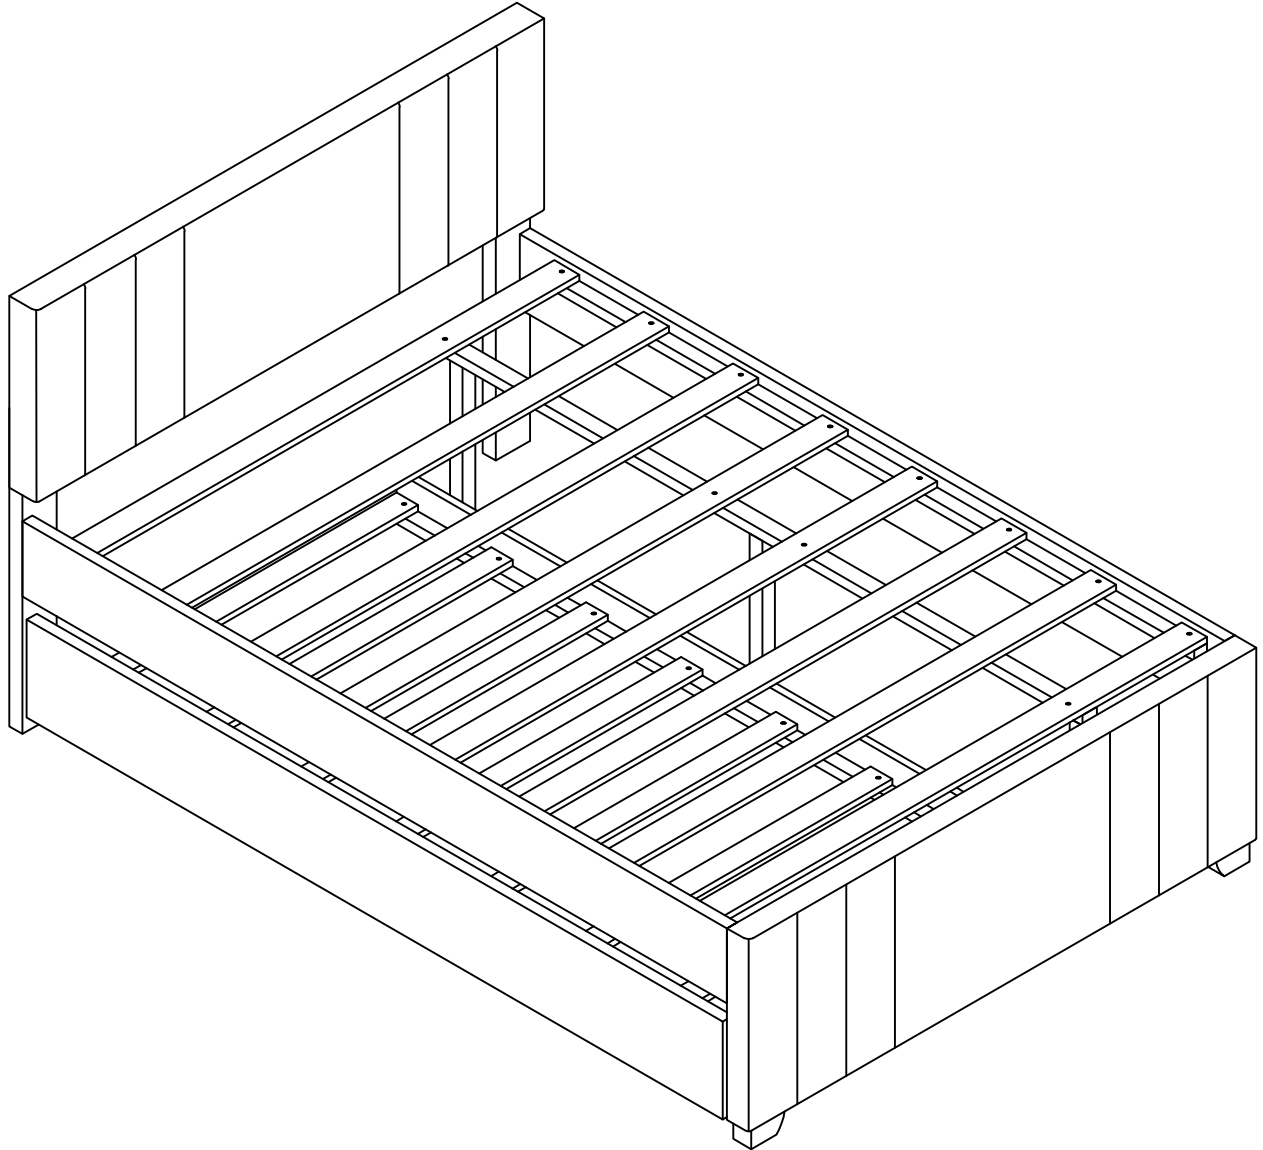


ASSEMBLY INSTRUCTIONS

WF 294633/ WF 294634

If you have any questions, please feel free to contact us.
Email: lowes.team@qualfurn.net



IMPORTANT NOTE

****PLACE ALL PARTS ON A CLEAN AND SMOOTH SURFACE SUCH AS A RUG OR CARPET TO**

AVOID THE PARTS FROM BEING SCRATCHED

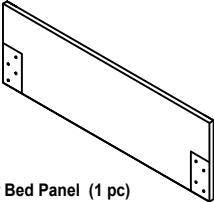
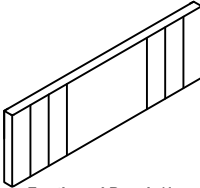





**** BEFORE YOU BEGIN , KINDY FOLLOW THE ASSEMBLY INSTRUCTIONS STEP BY STEP**

****DO NOT TIGHTEN ALL SCREWS AND BOLTS UNTIL THE BED IS FULLY SET-UP**

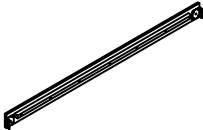
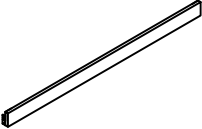
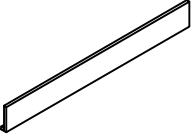




ASSEMBLY INSTRUCTIONS

WF 294633/ WF 294634

PART LIST BOX 1: WF 294633

<div>1</div> <div></div> <div>Lower Bed Panel (1 pc)</div>	<div>2</div> <div></div> <div>Footboard Panel (1 pcs)</div>	
<div>3</div> <div></div> <div>Left Metal Plate (1 pc)</div>	<div>4</div> <div></div> <div>Right Metal Plate (1 pc)</div>	<div>5</div> <div></div> <div>Leg (2 pcs)</div>
<div>6</div> <div></div> <div>Roll Slat (8 pcs) 1365*60*15</div>	<div>7</div> <div></div> <div>(m59x42mmx66mm) Wheels (4 pcs)</div>	










PART LIST BOX 2: WF 294634

<p>8</p>  <p>Left Lower Rail (1 pc)</p>	<p>9</p>  <p>Right Lower Rail (1pc)</p>	<p>10</p>  <p>Front Panel Trundle (1 pc)</p>
<p>11</p>  <p>Back Panel Trundle (1 pc)</p>	<p>12</p>  <p>Roll Slat (8 pcs) 985*60*15</p>	<p>13</p>  <p>Center Rail (1 pc)</p>
<p>14</p>  <p>Bed Slat-Support With Leveler (3 pcs)</p>		

ASSEMBLY INSTRUCTIONS

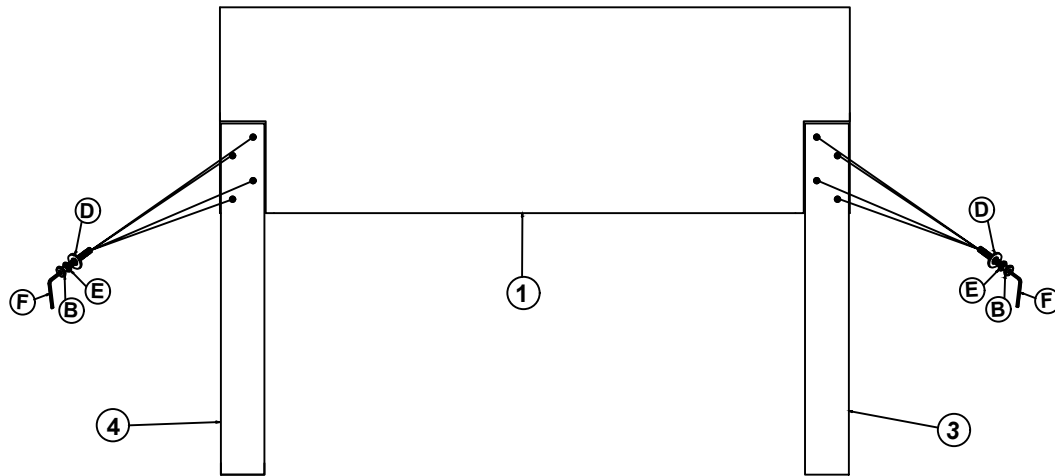
WF 294633/ WF 294634





HARDWARE LIST IN WF 294633

A  (Ø 5/16 "X25mm) Short Bolt (8pcs)	B  (Ø 5/16 "X38mm) Long Bolt (8 pcs)	C  (Ø 5/16 "X45mm) Long Bolt (2 pcs)
D  (Ø 5/16 "-RBW) Flat Washer (18 pcs)	E  (Ø 5/16 "-RBW) Spring Washer (18 pcs)	F  (M4x75mm x32mm) Allen Wrench (1 pc)
G  (m4x20mm-RBW) Flat Head Screw (40 pcs)	H  (38mmx38mmx25mmx2mm) Square Patch (4 pcs)	I  (m4x30mm-RBW) Flat Head Screw (36 pcs)

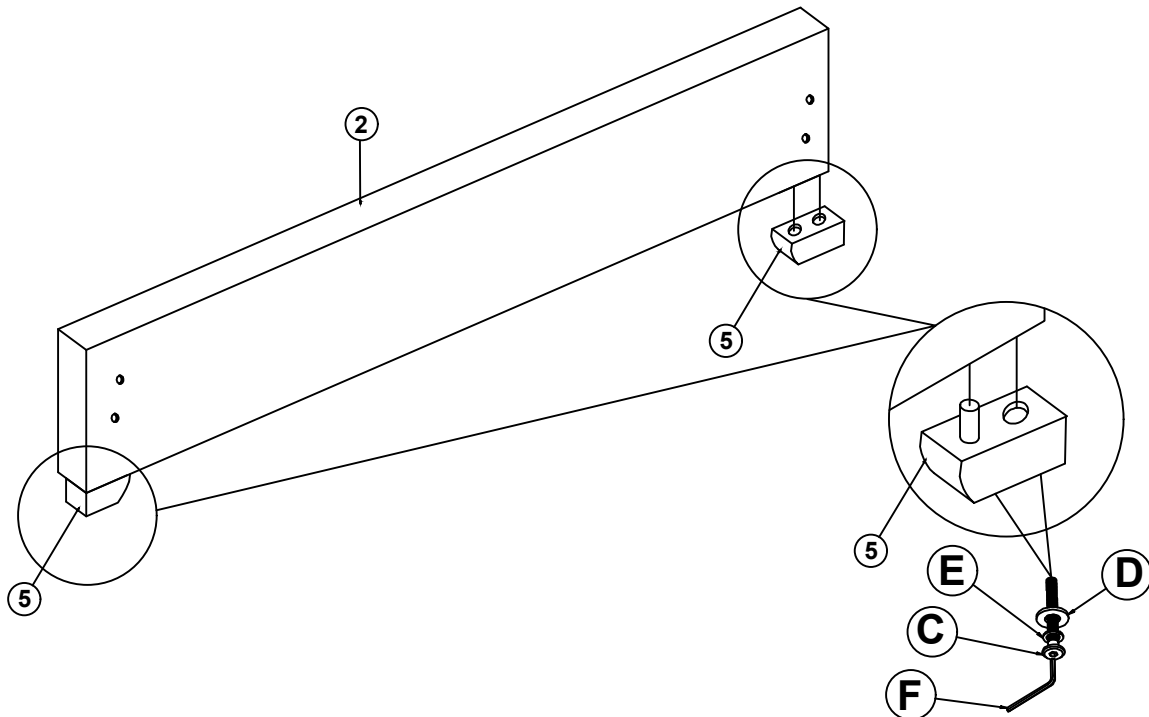
ASSEMBLY INSTRUCTIONS





STEP 1



B	Bolt (Ø 5/16 "X38mm)		8pcs	D	Flat Washer (Ø 5/16 "-RBW)		8pcs
E	Spring Washer (Ø 5/16 "-RBW)		8pcs	F	Allen Wrench (M5x75mm x32mm)		1pc

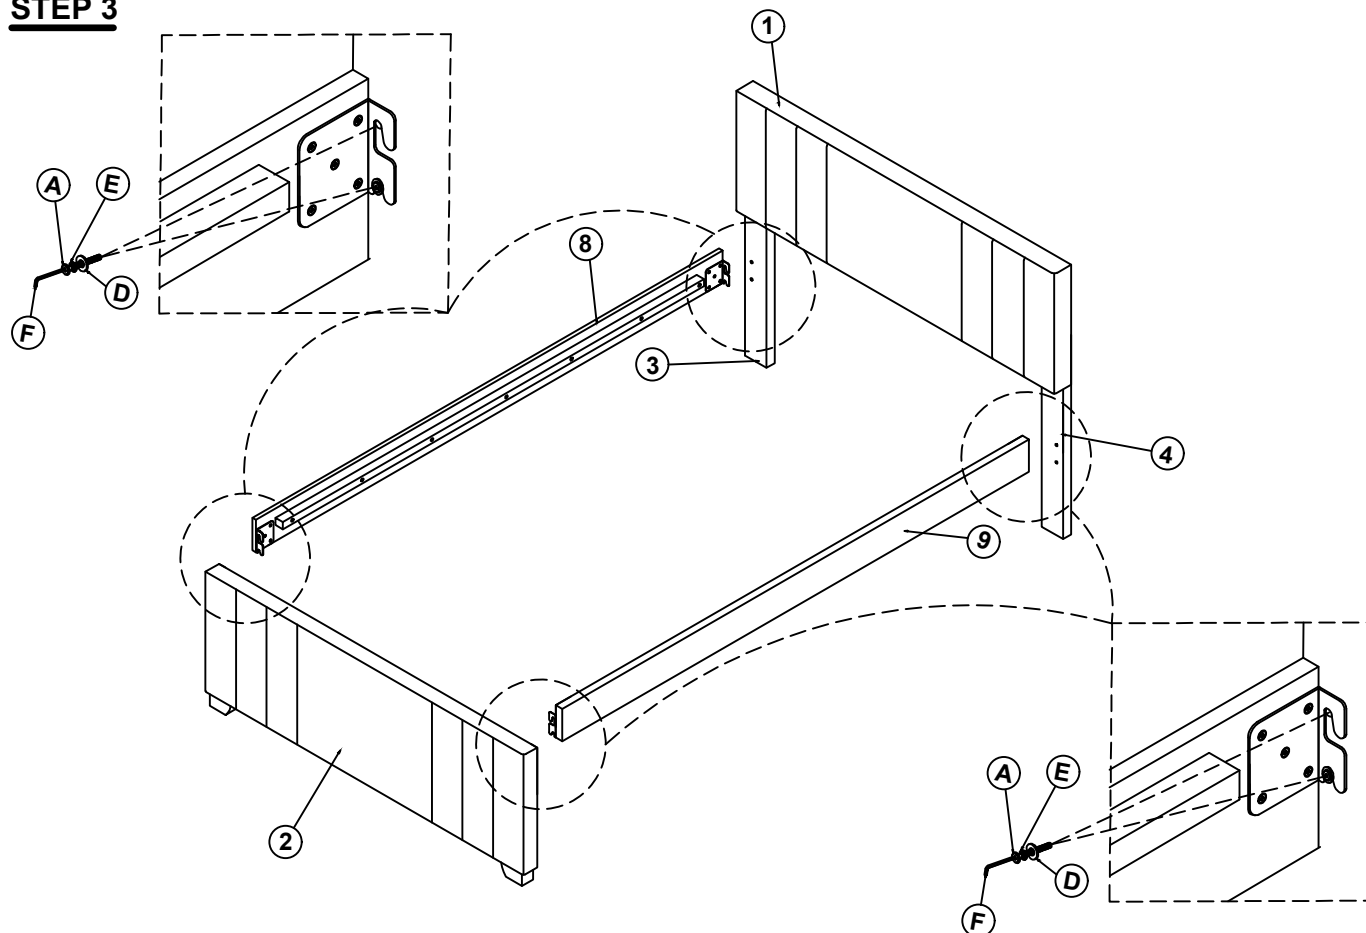
STEP 2







C	Bolt (Ø 5/16 "X55mm)		2pcs	D	Flat Washer (Ø 5/16 "-RBW)		2pcs
E	Spring Washer (Ø 5/16 "-RBW)		2pcs	F	Allen Wrench (M5x75mm x32mm)		1pc

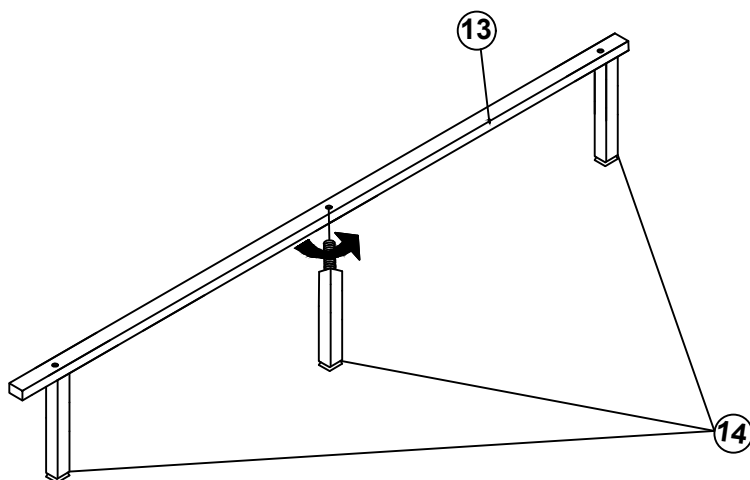
ASSEMBLY INSTRUCTIONS

STEP 3




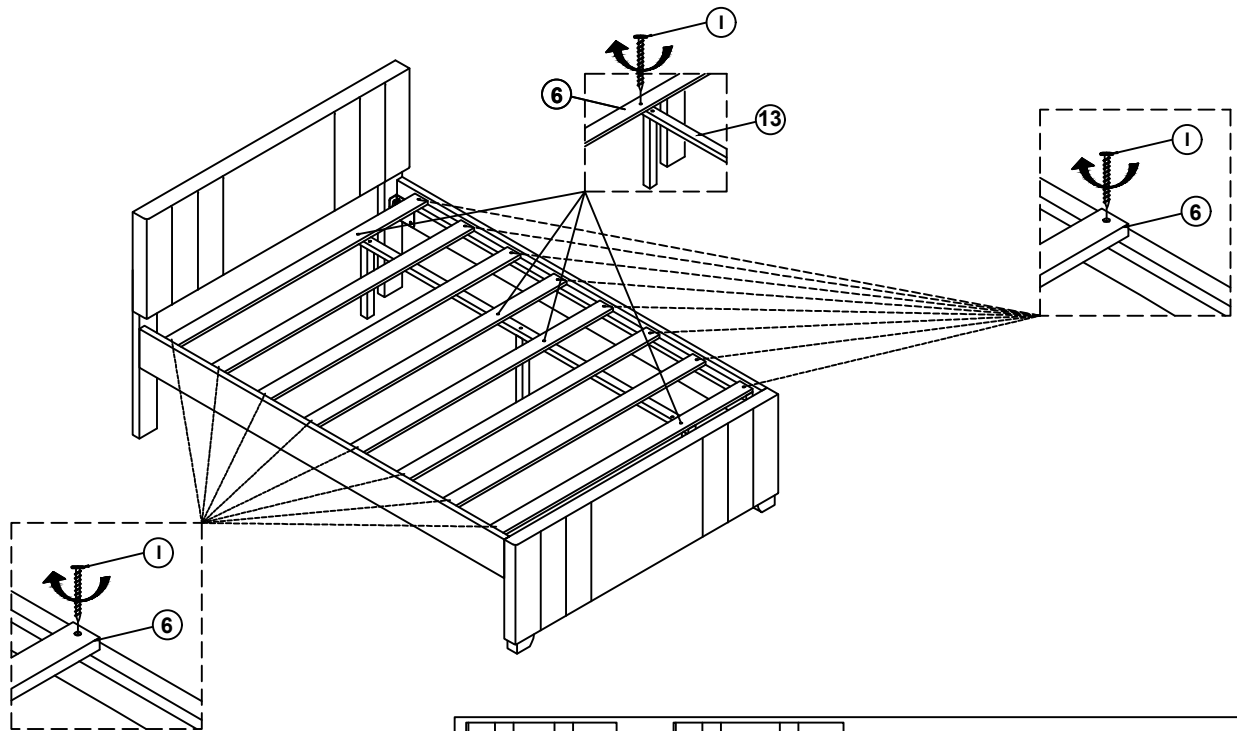
A	Bolt (Ø 5/16 "X25mm)		8pcs	D	Flat Washer (Ø 5/16 "-RBW)		8pcs
E	Spring Washer (Ø 5/16 "-RBW)		8pcs	F	Allen Wrench (M5x75mm x32mm)		1pc

STEP 4




ASSEMBLY INSTRUCTIONS

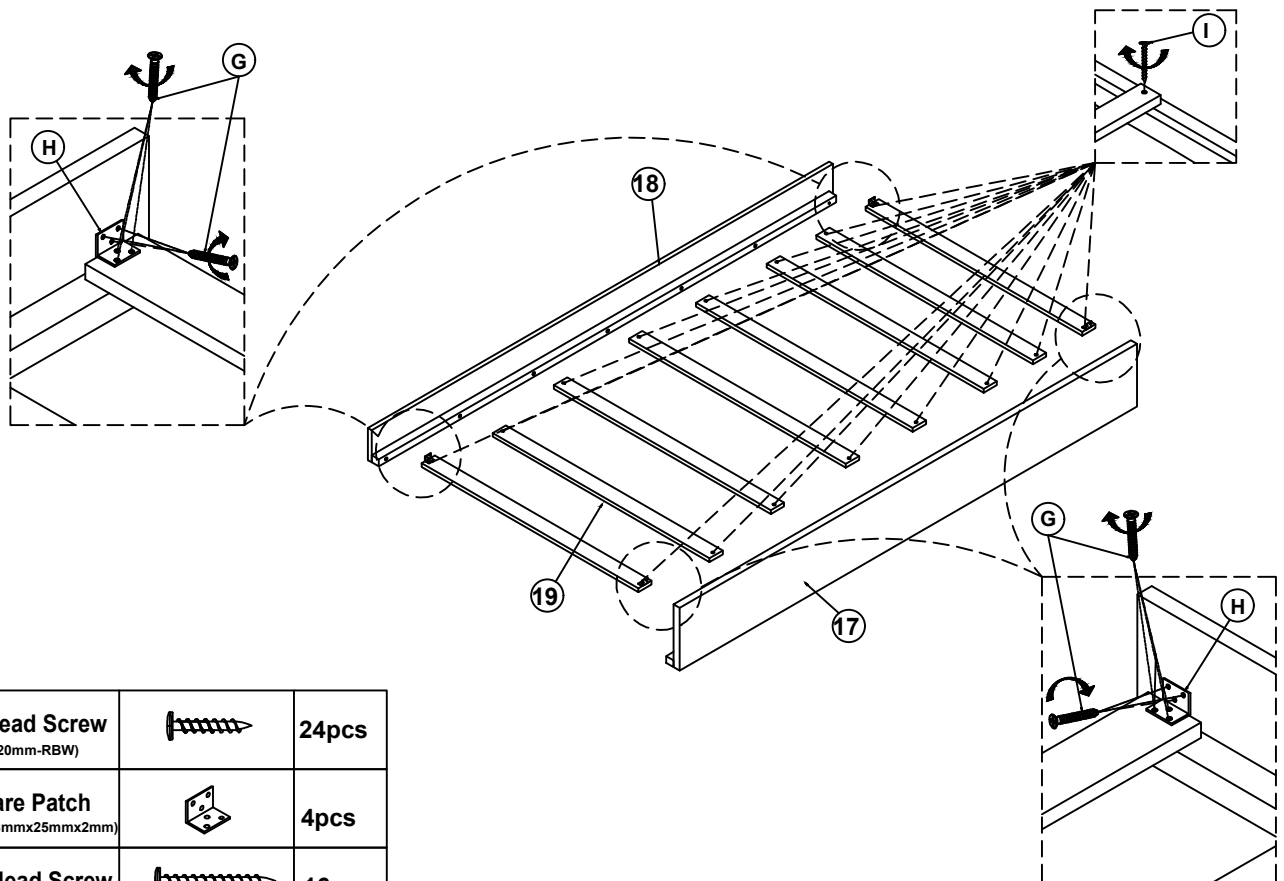
STEP 5






NOTE: Do not lock the screws of the trundle slats to the utermost edge the trundle slats, you need to leave a certain space at the edges, otherwise it will cause the board to break.

I	Flat Head Screw (m4x30mm-RBW)		20pcs
---	----------------------------------	---	-------

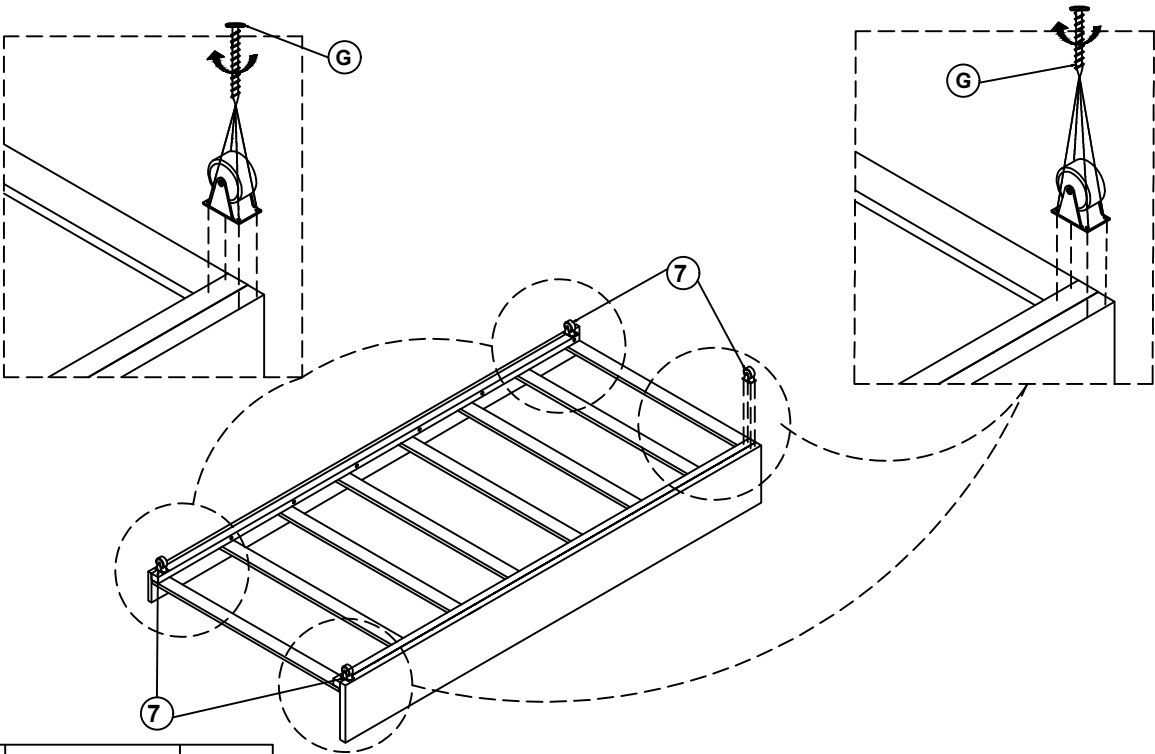
STEP 6





G	Flat Head Screw (m4x20mm-RBW)		24pcs
H	Square Patch (38mmx38mmx25mmx2mm)		4pcs
I	Flat Head Screw (m4x30mm-RBW)		16pcs

ASSEMBLY INSTRUCTIONS

STEP 7



G	Flat Head Screw (m4x20mm-RBW)		16pcs
7	Wheels (m59x42mmx66mm)		4pcs

STEP 8 COMPLETE

