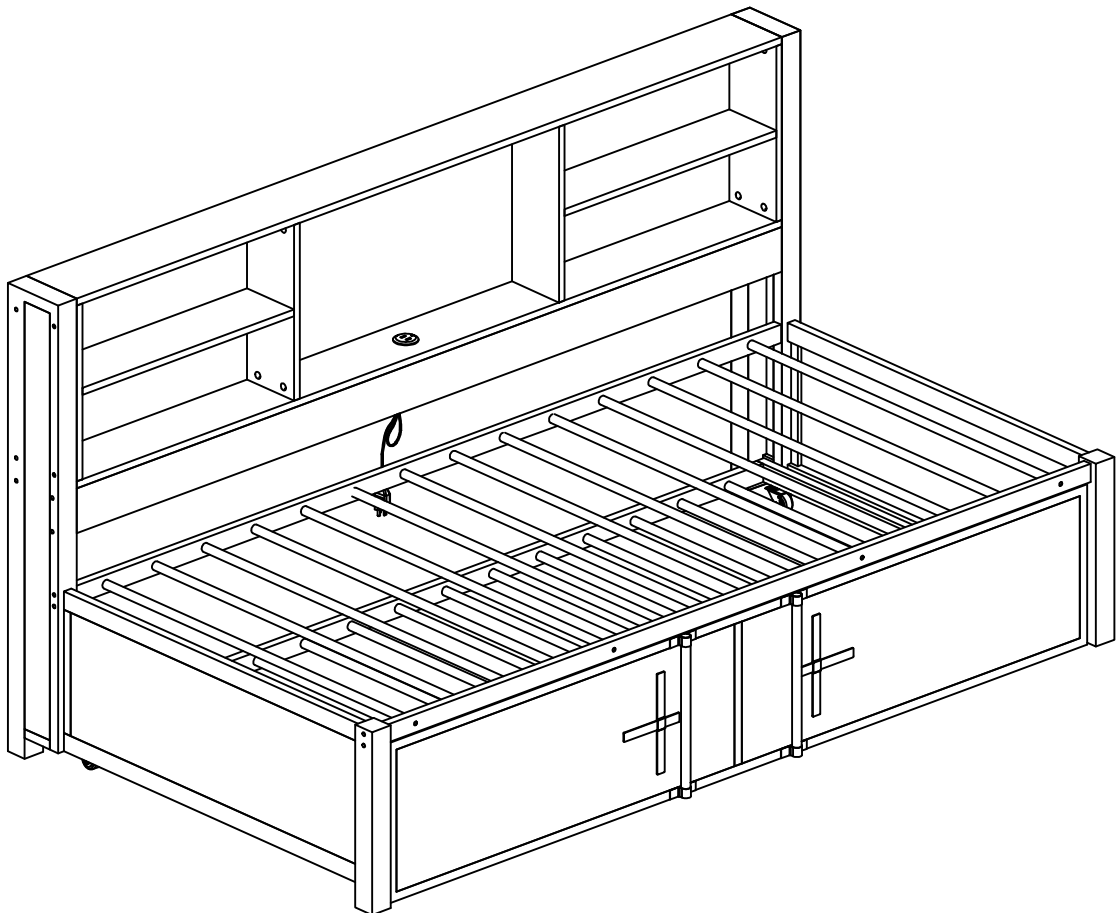




ASSEMBLY INSTRUCTIONS

Twin Daybed With Storage









If you have any questions, please feel
free to contact us.
Email: lowesteam@aminalife.com












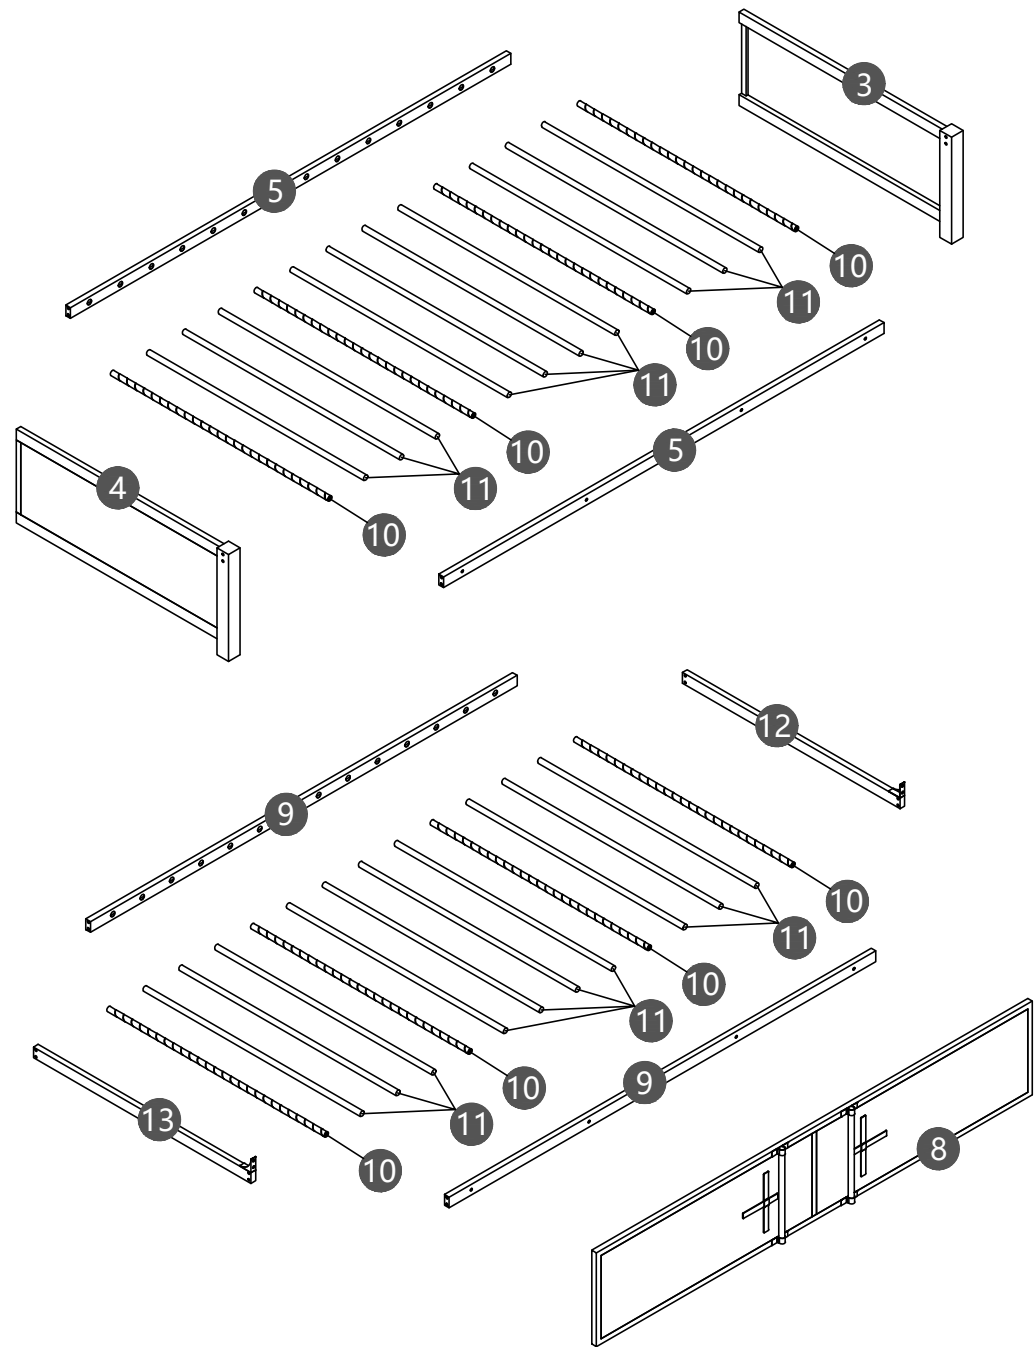
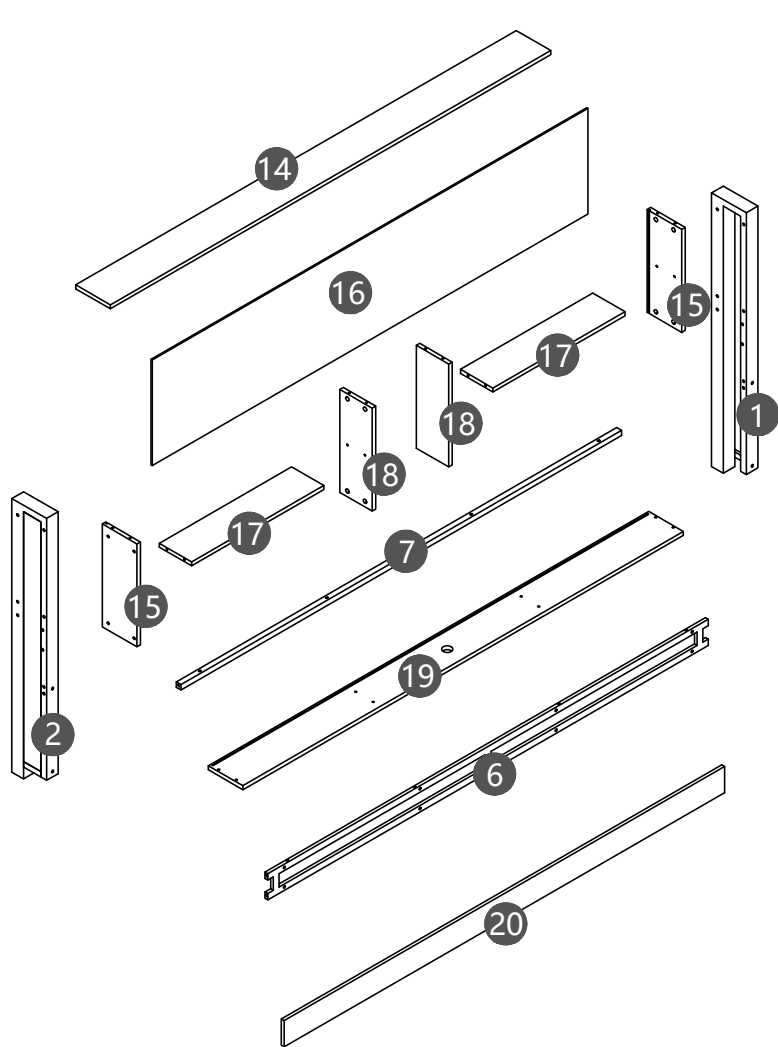
WF305543/WF305544











Parts List for WF305543

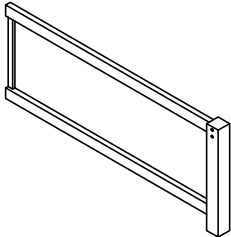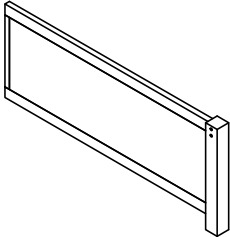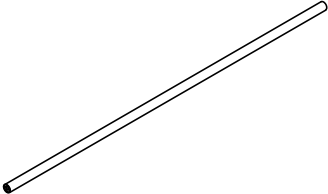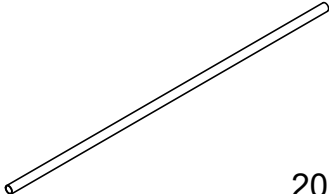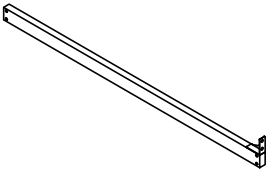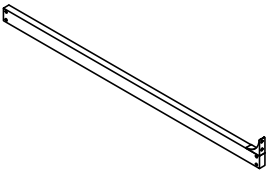1		1pc
2		1pc
3		1pc
4		1pc
10		8pcs
11		20pcs
12		1pc
13		1pc

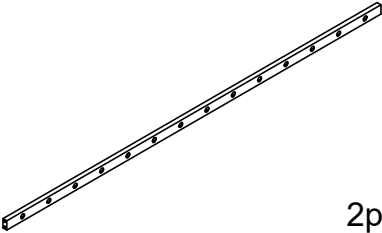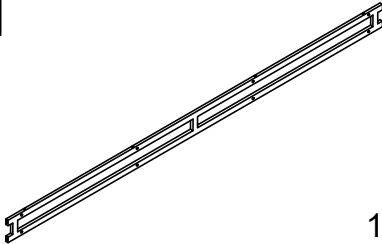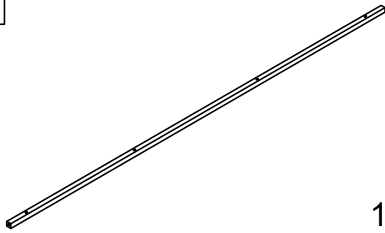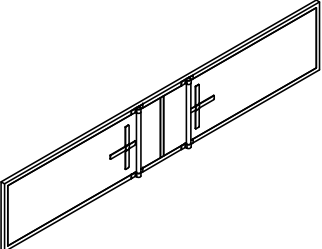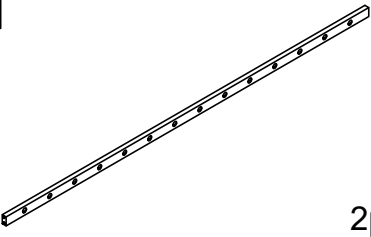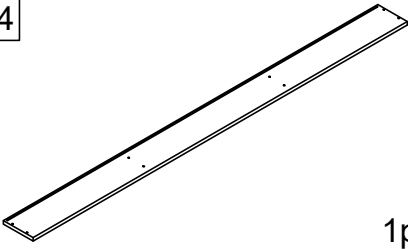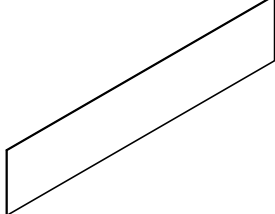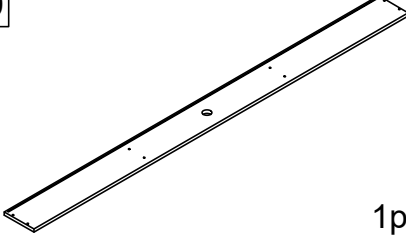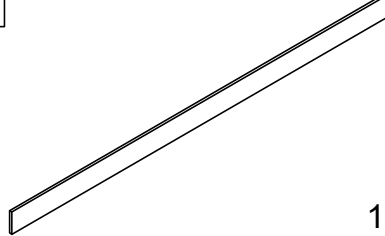
Parts List for WF305544







5		2pcs
6		1pc
7		1pc
8		1pc
9		2pcs
14		1pc
15		2pcs
16		1pc
17		2pcs
18		2pcs
19		1pc
20		1pc

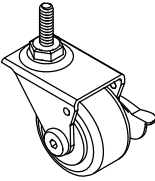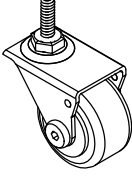Hardware List for WF305544

A  M6*70mm14pcs	B  M6*60mm8pcs	C  M6*45mm4pcs
D  M6*40mm8pcs	E  M6*30mm8pcs	F  M6*20mm8pcs
G  M6*16mm16pcs	H  M6*12mm4pcs	I  24pcs
J  24pcs	K  2pcs	L  1pc
M  2pcs	N  1pc	O  1pc

STEP 1:




J

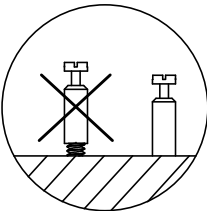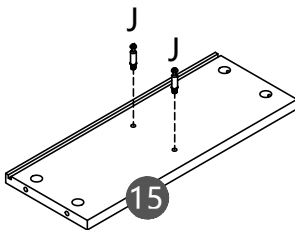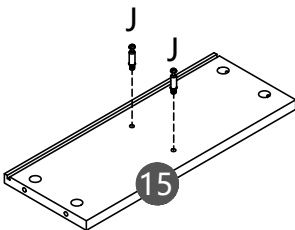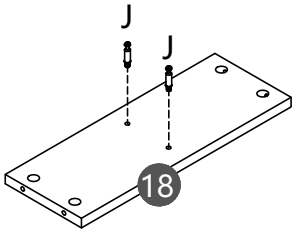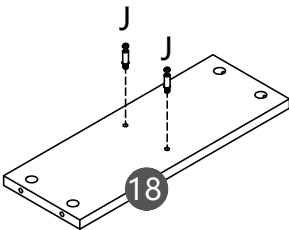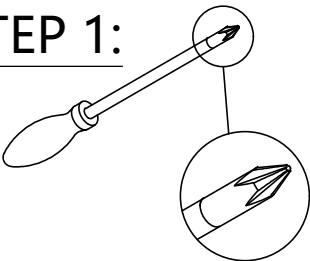8PCS






STEP 2:

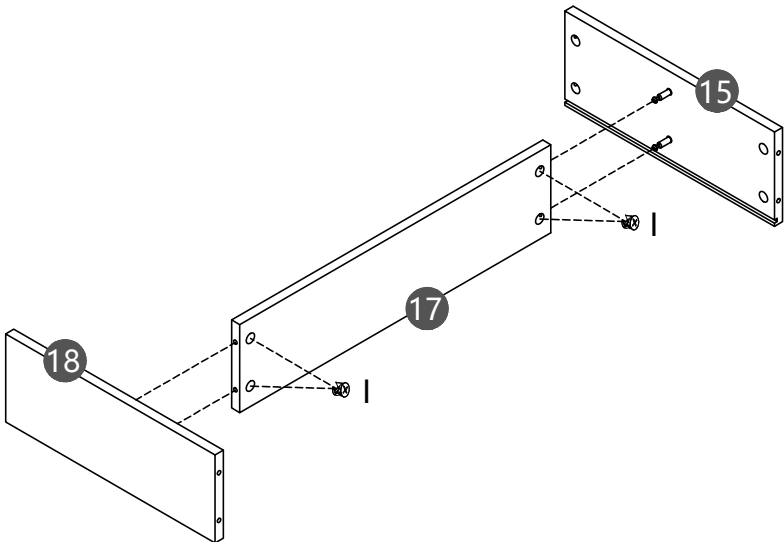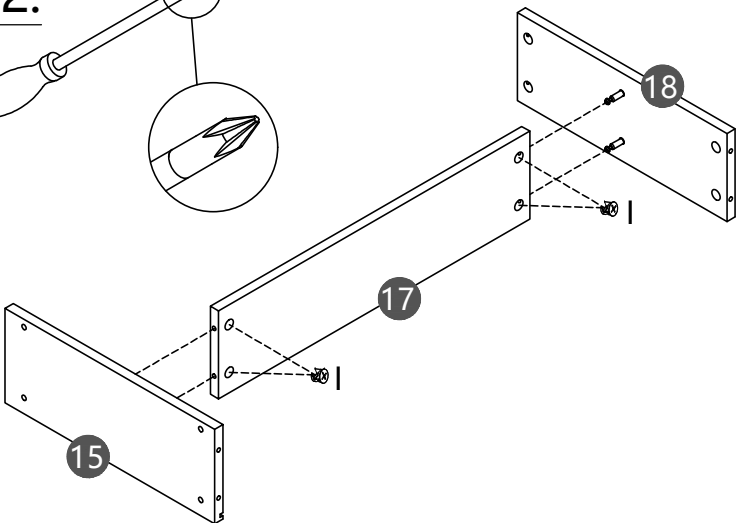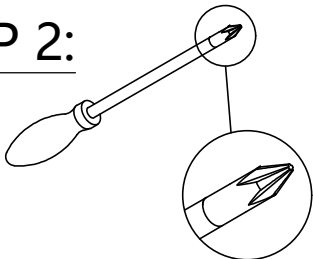
I

8PCS





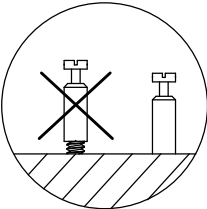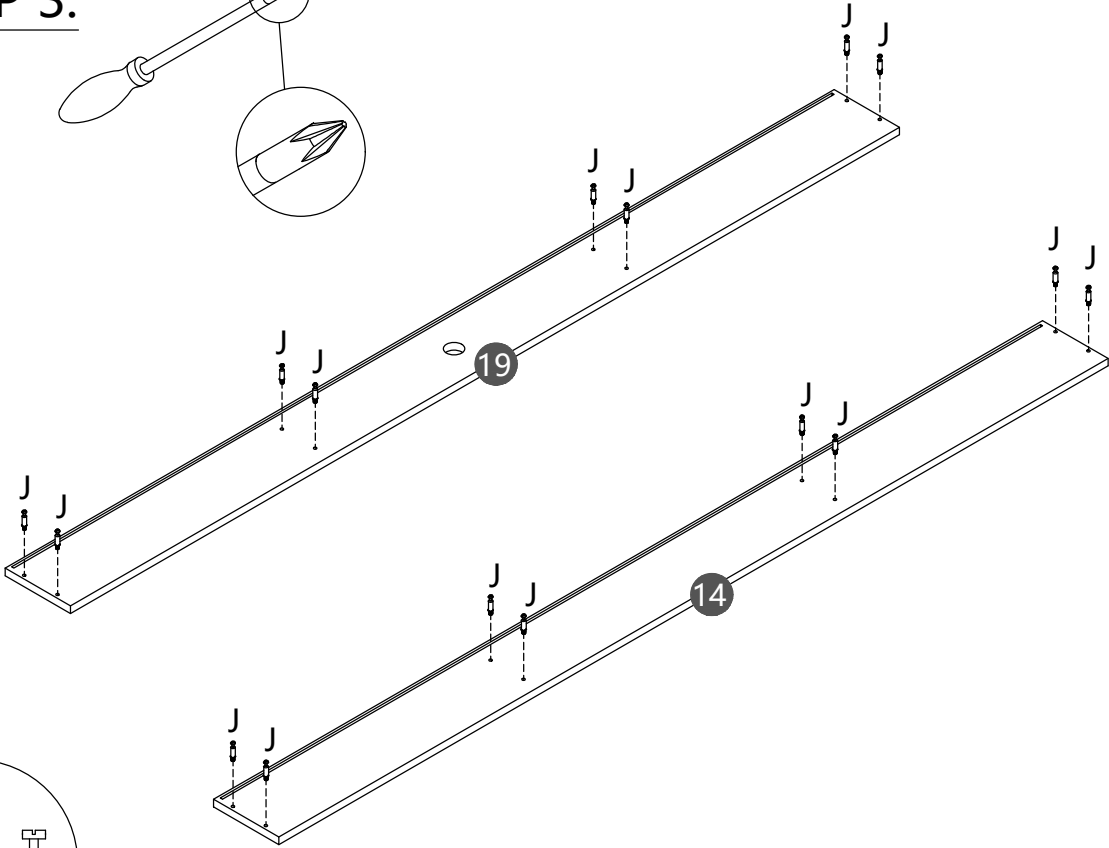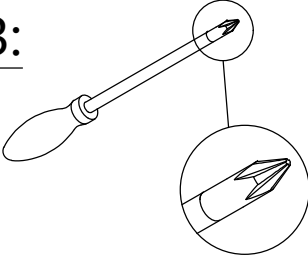STEP 3:



J

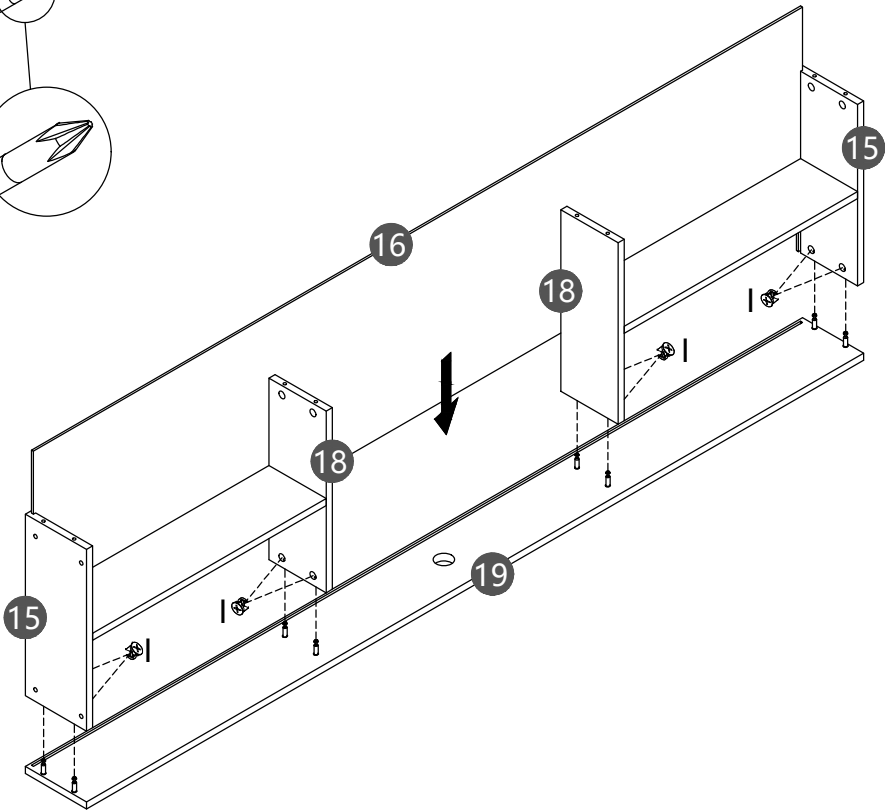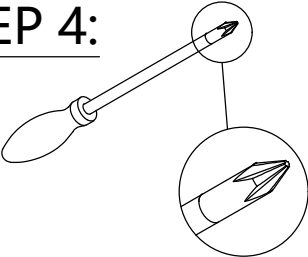16PCS


STEP 4:




I

8PCS

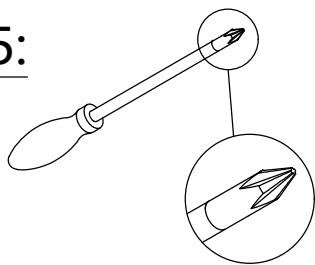STEP 5:





I
8PCS

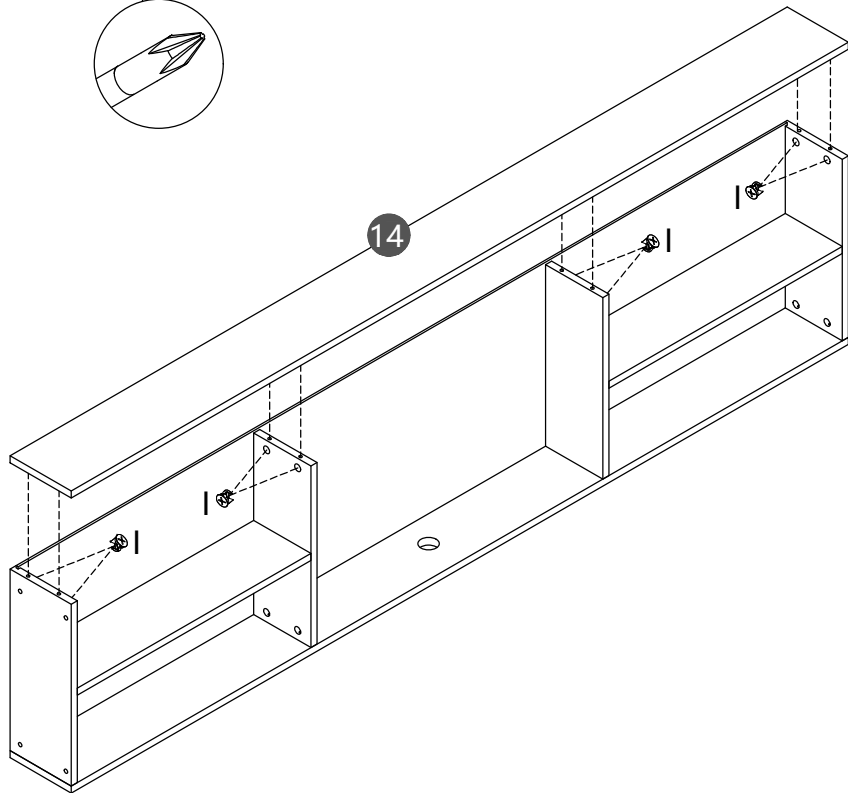


STEP 6:

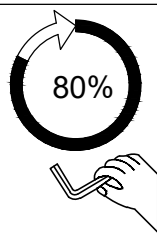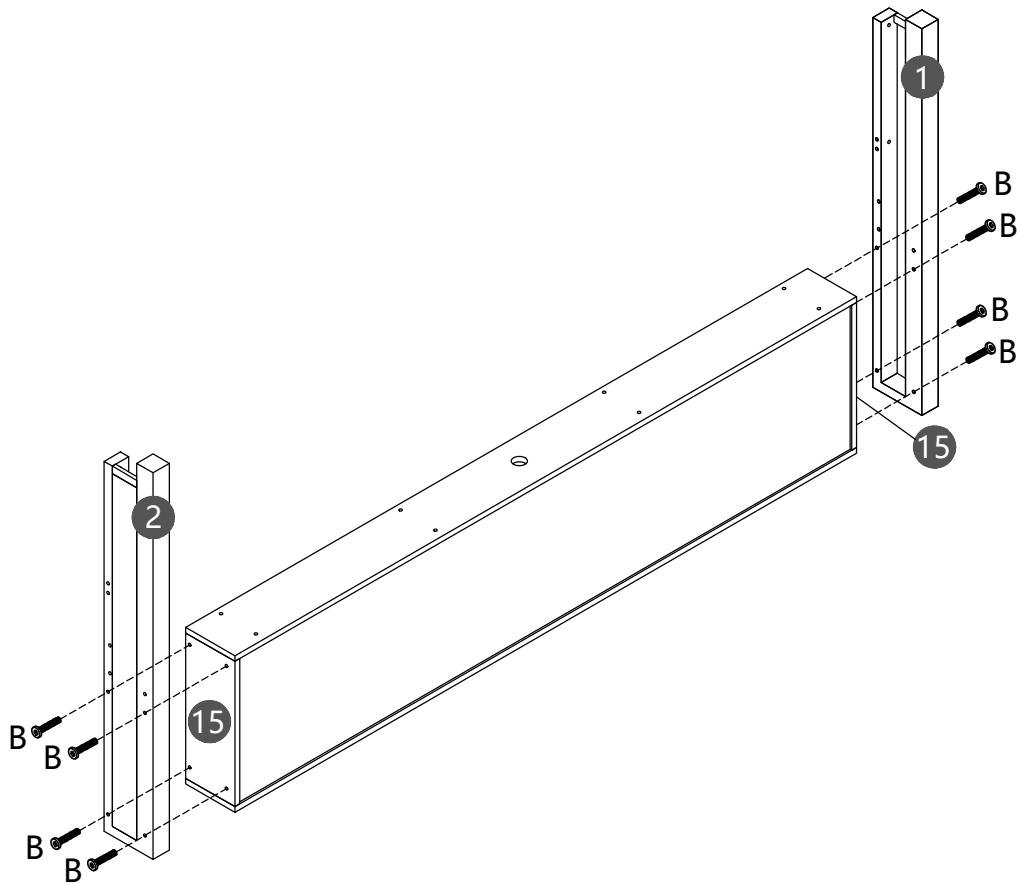B
M6*60mm
8PCS




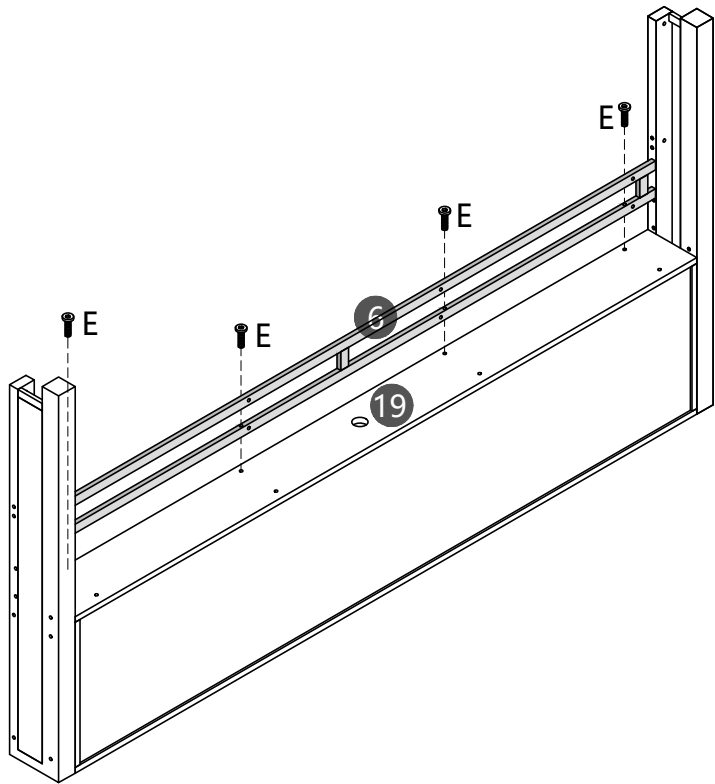STEP 7:




E

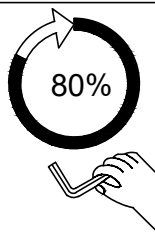M6*30mm
4PCS




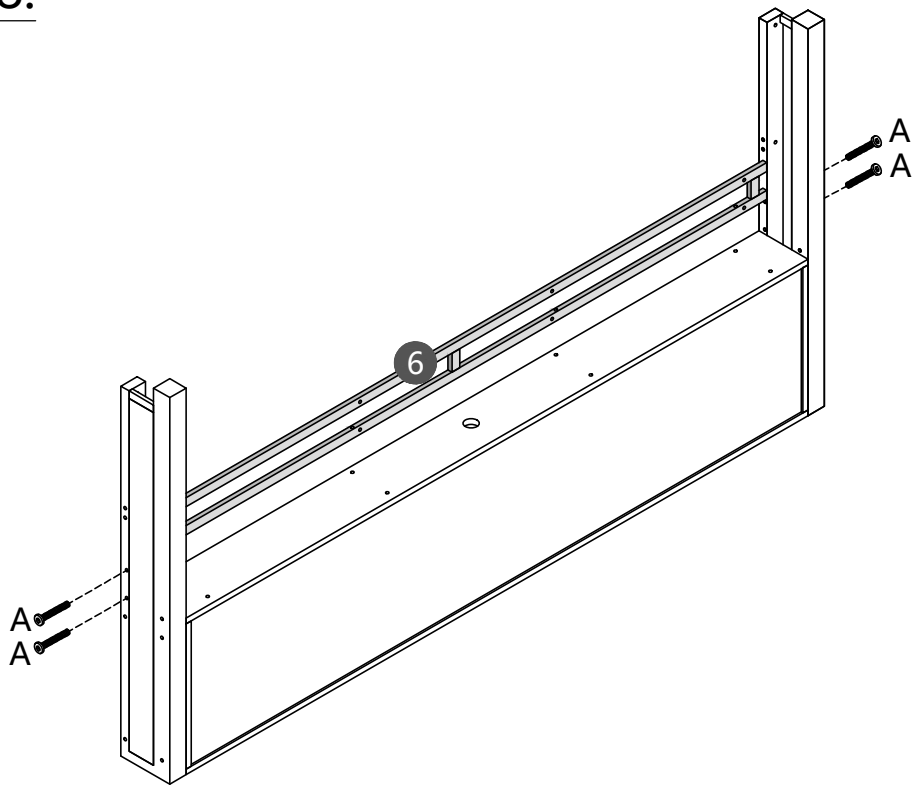STEP 8:



A

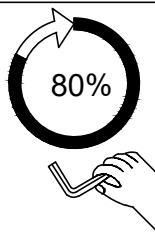
M6*70mm
4PCS



STEP 9:



F

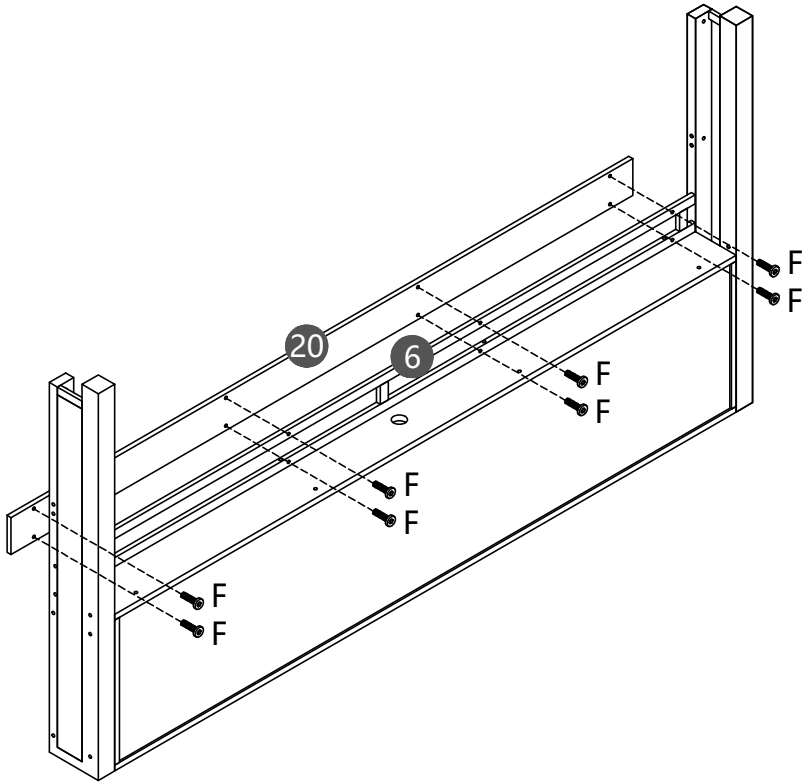M6*20mm
8PCS



STEP 10:


A	E
	
M6*70mm	M6*30mm
2PCS	4PCS

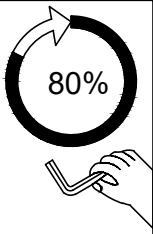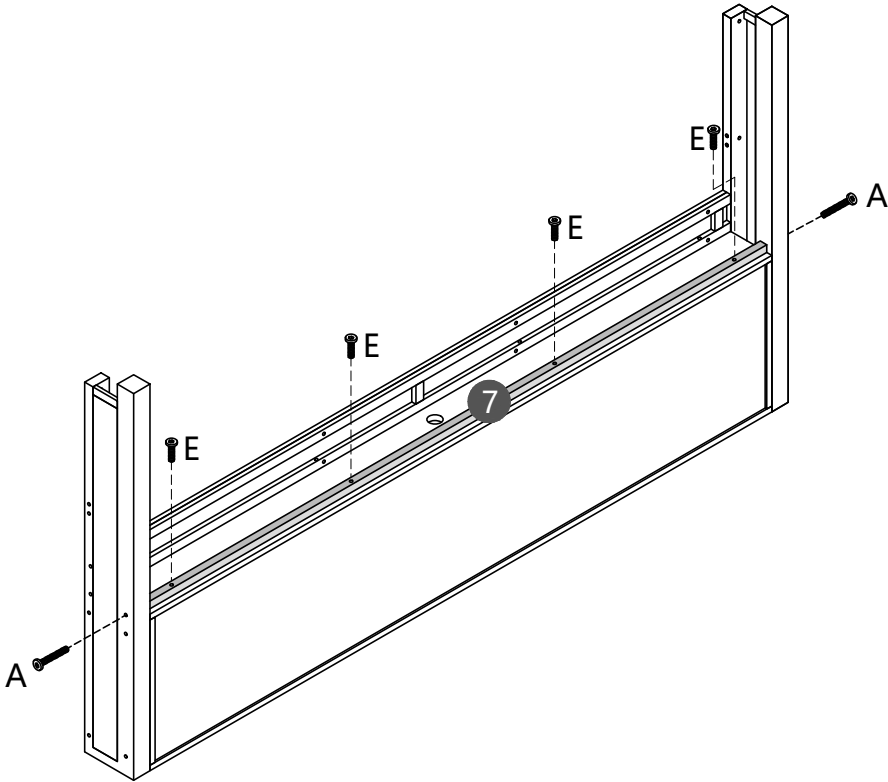

STEP 11:

C


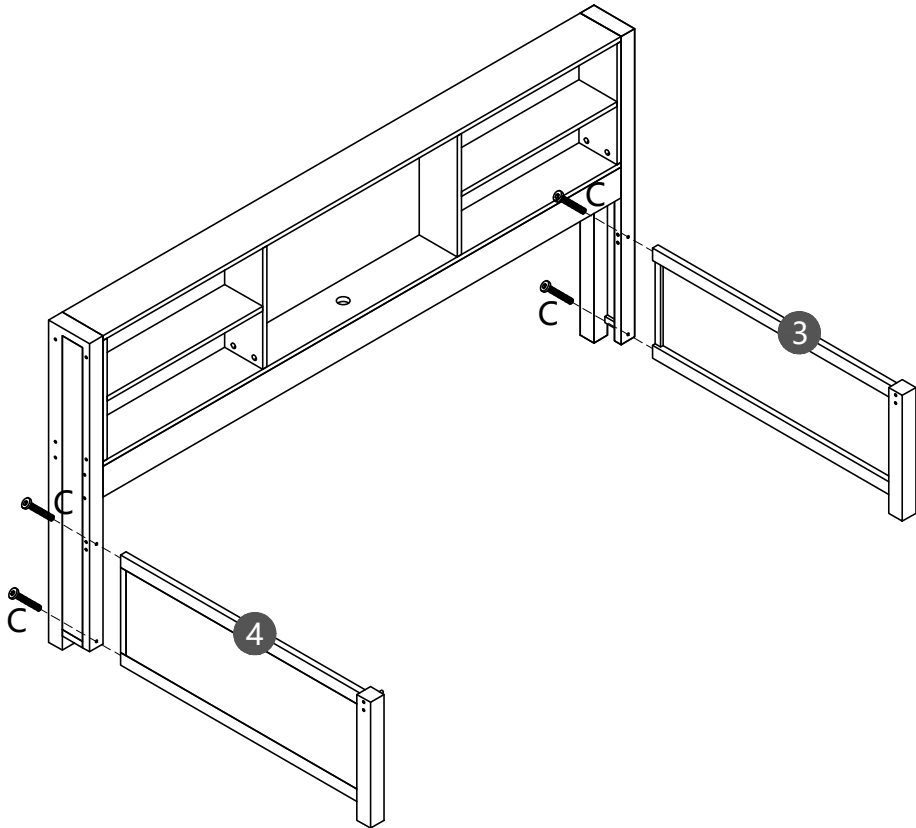
M6*45mm
4PCS



STEP 12:



G

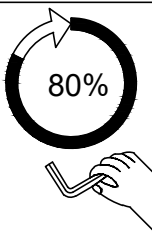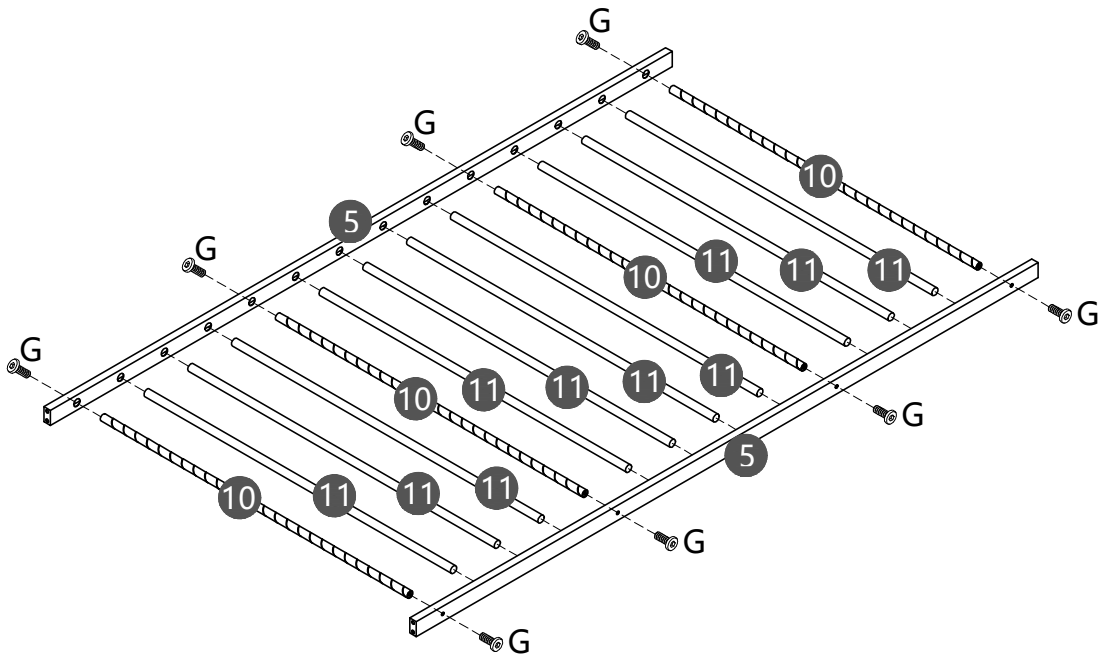M6*16mm
8PCS



STEP 13:

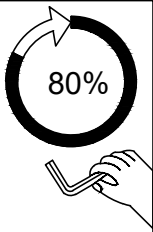
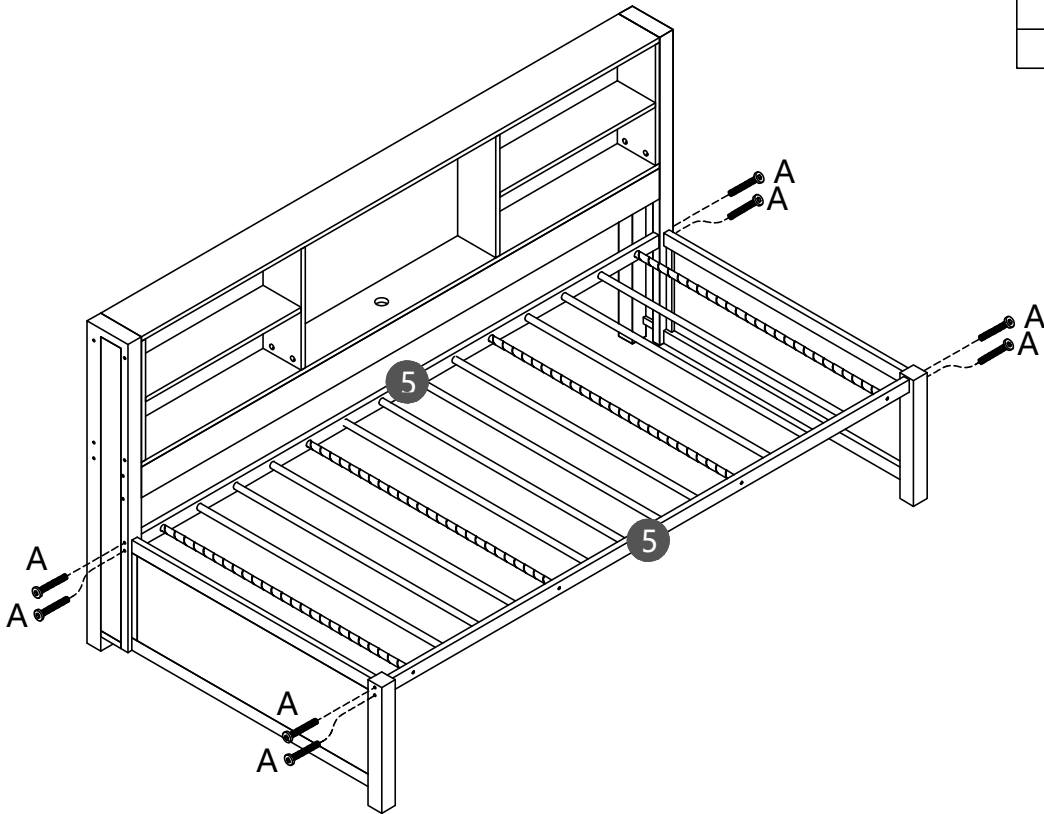
A
 M6*70mm
8PCS



STEP 14:


N

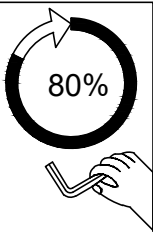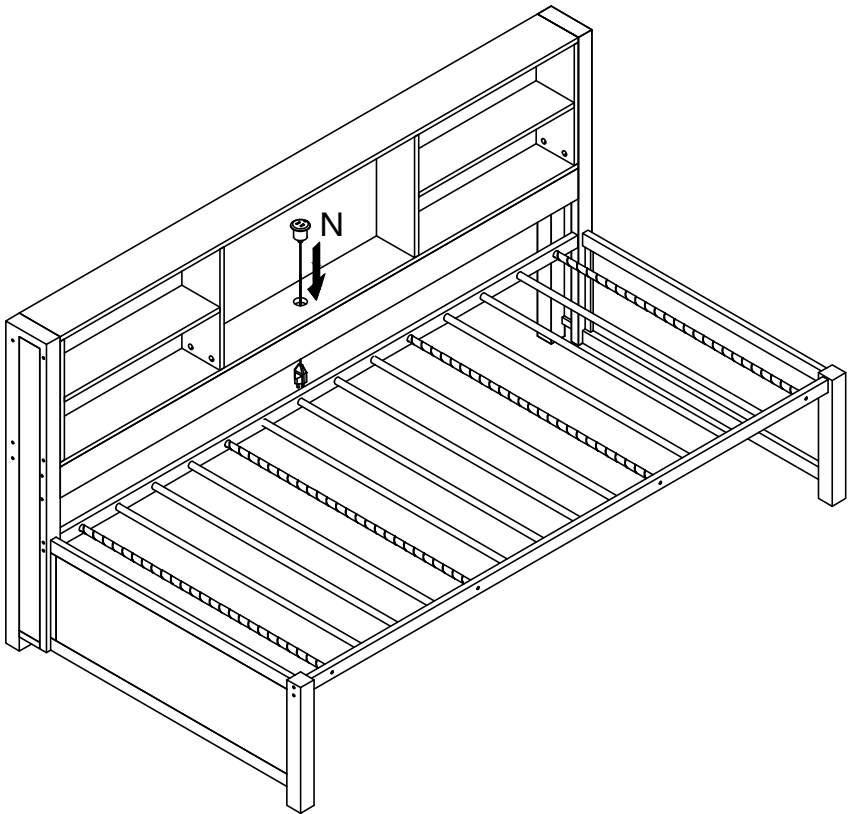1PC



STEP 15:


D	G
 M6*40mm	 M6*16mm
4PCS	4PCS

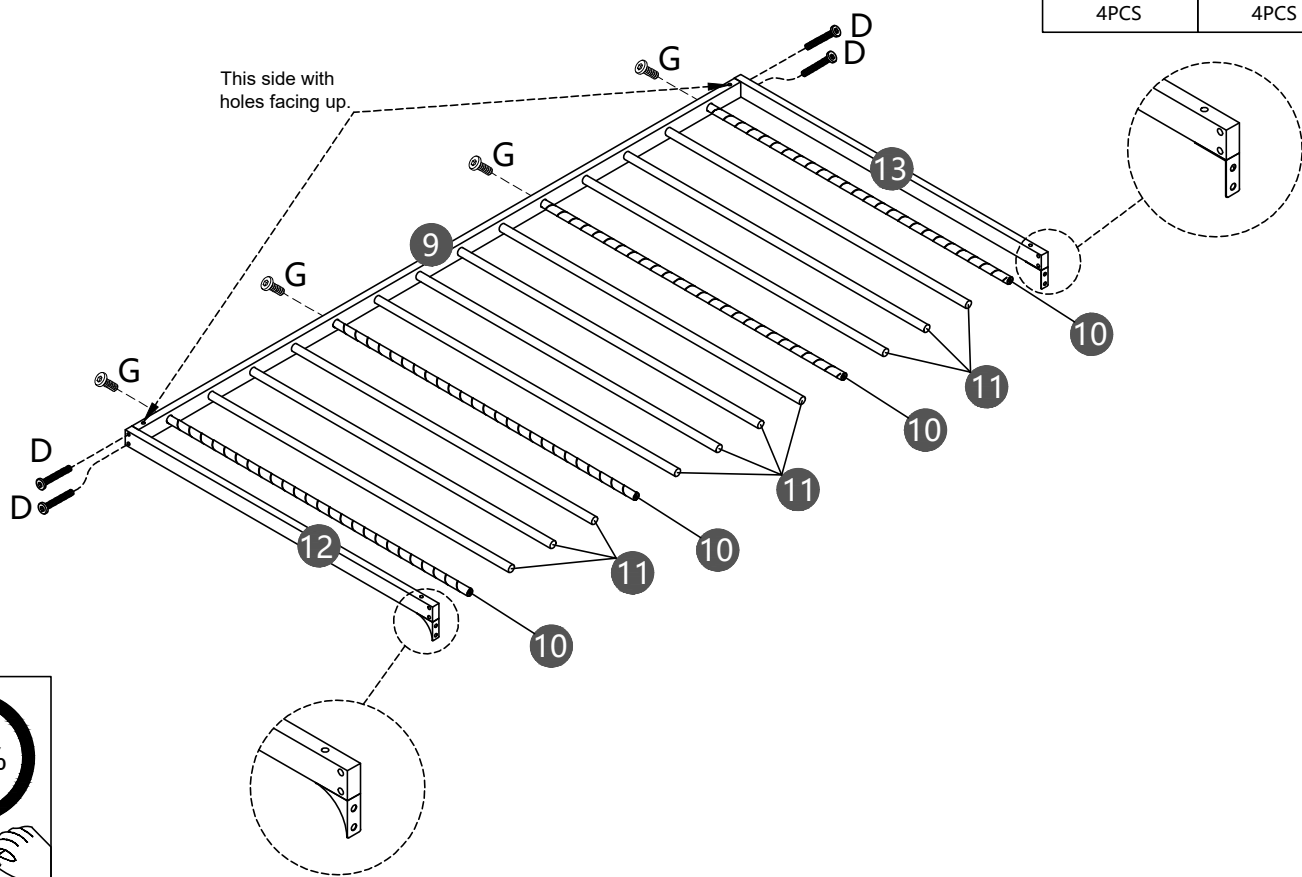

STEP 16:


D	G
 M6*40mm	 M6*16mm
4PCS	4PCS

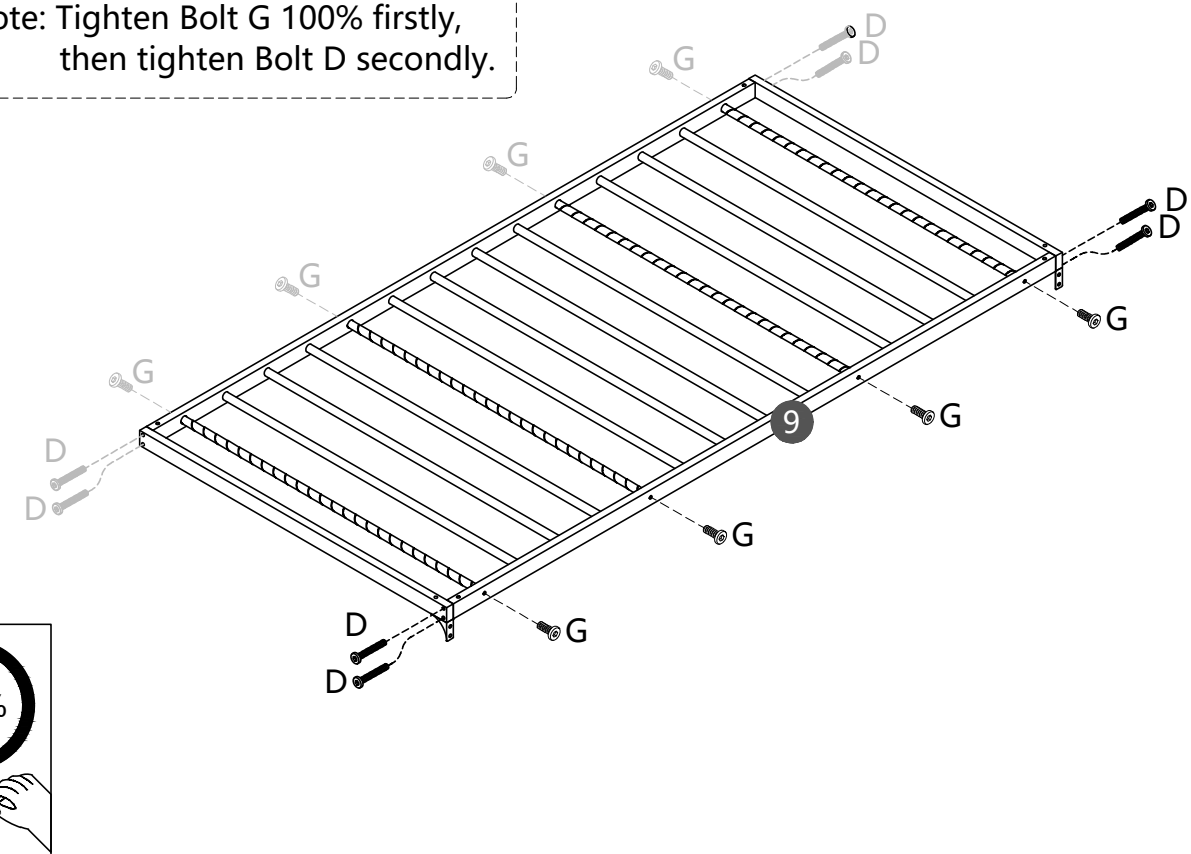Note: Tighten Bolt G 100% firstly, then tighten Bolt D secondly.



STEP 17:



K	M
	
2PCS	2PCS

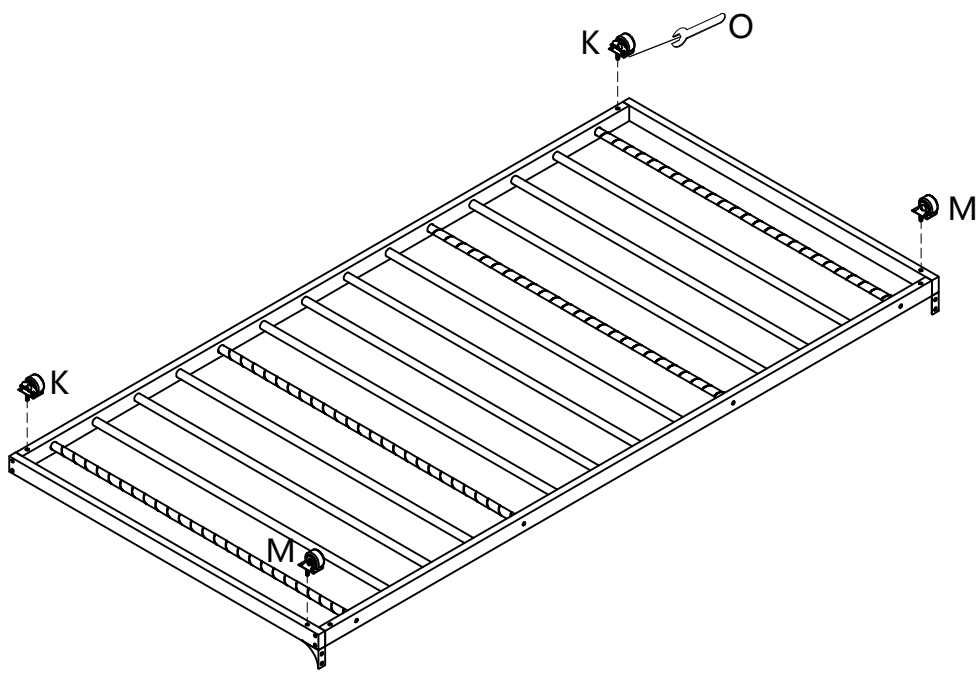

STEP 18:

H

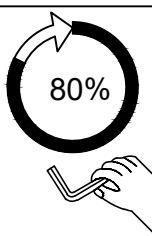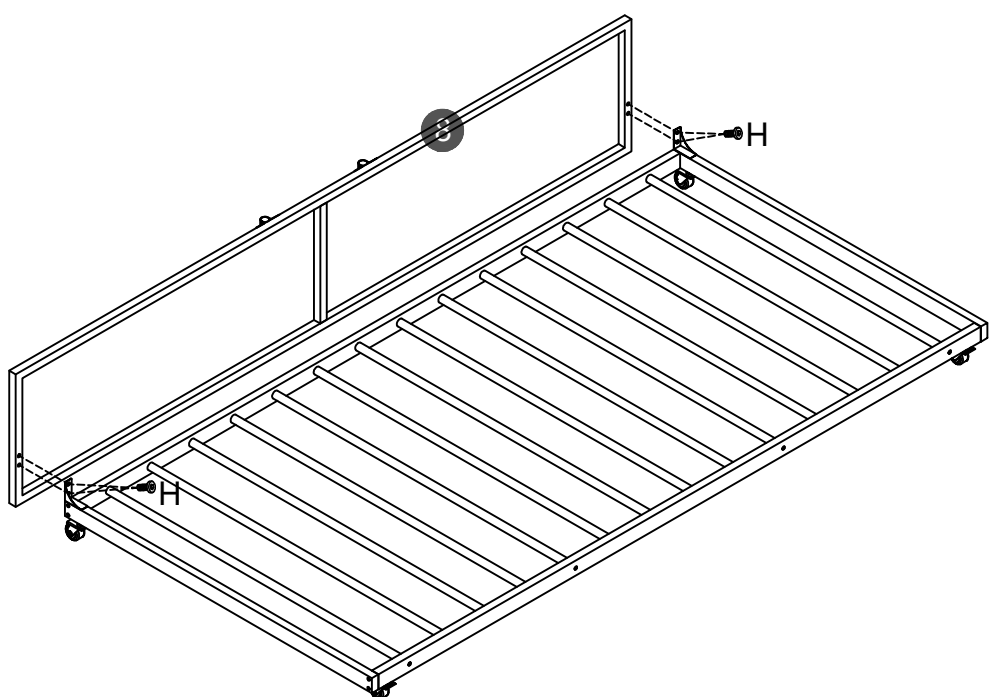M6*12mm
4PCS



STEP 19:

