



MANUFACTURED BY:
Backyard Discovery
3305 Airport Drive, Pittsburg, KS 66762
800-856-4445

Basepoint Business Centre: Rivermead Drive, Westlea, Swindon SN5 7EX Phone: 0800-118-2476
J.P. Coenstraat 7, The Bridge, The Hague, 2595 WP, Netherlands Phone: 0800-567-8990

HIGHLANDER

Swing Set

Model # 2106017

The assembly manual must be retained
since it contains important information



WARNING

Adult Assembly Required.

Not suitable for children under 36 months due to small parts.

FOR DOMESTIC USE ONLY. INTENDED FOR OUTDOOR USE.



Please visit www.backyarddiscovery.com

For the most up to date assembly manual, to register your set, or to order replacement parts

Para obtener instrucciones en español, visite www.backyarddiscovery.com



EASY STEP-BY-STEP
3D INTERACTIVE INSTRUCTIONS
DOWNLOAD THE FREE APP



INSTALLATION
SERVICES
AVAILABLE!
See inside for details

Made in China
INS-2106017-A-HIGHLANDER-ENG 03/21/2022



Place the set on level ground, not less than 6'-7" [2 m] from any structure or obstruction such as a fence, garage, house, overhanging branches, laundry lines, or electrical wires.

- While assembling unit, take time before and after each phase to make sure fort is level. If fort is not level, assembly will be difficult and improper assembly may result. Extra care must be taken to insure the fort is square.
- The safe play area refers to a zone extending 6'-7" (2m) beyond the play product on all sides, including the space above the play product.


SAFE PLAY AREA DIAGRAM

Ground Dimension


15'-5" [4.7m] x 15'-6" [4.7m]

Safe Play Area

28'-7" [8.7m] x 28'-7" [8.7m]

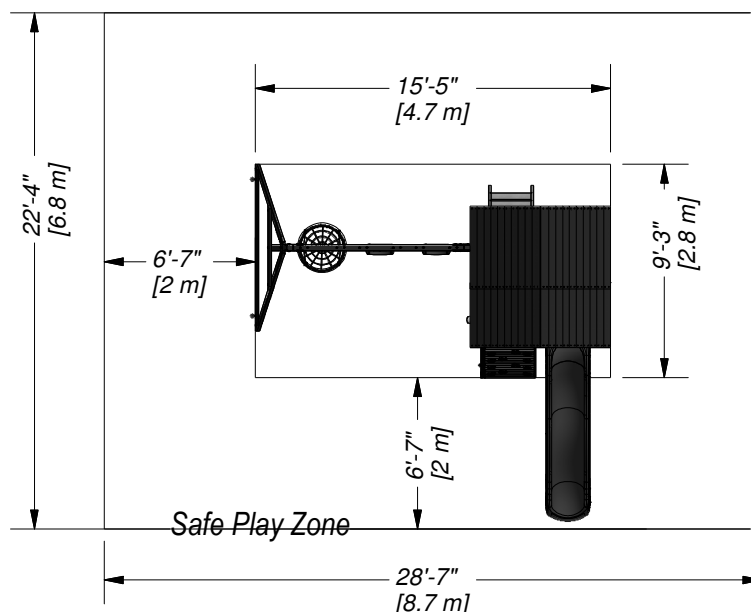

SAFE PLAY HEIGHT: 12'-9" [3.9 m]
MAXIMUM FALL HEIGHT: 7' [2.1 m]

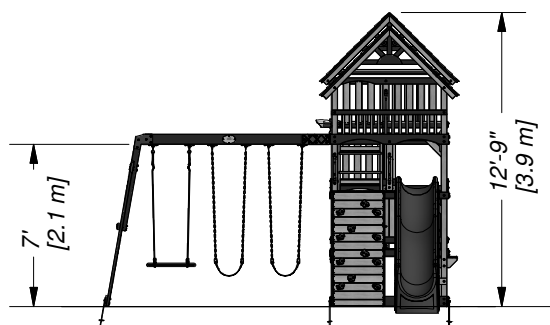

General Information:

Your set has been designed and engineered for children only and for residential use only.
A maximum of 150 lbs. per child is recommended for play activities designed for individual use.
A maximum of 120 lbs. per child is recommended for play activities designed for multiple child use.
A maximum of 9 children is recommended for this swing set.




Wood Components (Not to Scale)



A1 | SWING BEAM - W4L13989
(x1) | 3 3/8"x5 1/4"x89 1/2" (86x134x2274)



A2 | SB 9" BLOCK - W4L13990
(x1) | 3 3/8"x5 1/4"x9" (86x134x228)



B01 | POST - W4L13900
(x1) | 3"x3"x86 7/8" (76x76x2207)




B02 | POST - W4L13915
(x1) | 3"x3"x86 7/8" (76x76x2207)



B03 | POST - W4L13902
(x1) | 3"x3"x86 7/8" (76x76x2207)




B04 | POST - W2A03074
(x1) | 3 1/16"x3"x86 7/8" (78x76x2207)



B05 | POST - W4L13986
(x1) | 3"x3"x86 7/8" (76x76x2207)



B06 | POST - W4L13987
(x1) | 3"x3"x86 7/8" (76x76x2207)




B07 | POST - W4L13903
(x1) | 3"x3"x32" (76x76x814)



B09 | POST - W4L13904
(x2) | 3"x3"x32" (76x76x814)




E01 | ANGLE BRACE - W4L13971
(x8) | 1 3/8"x3 3/8"x16 1/2" (36x86x420)



E02 | LADDER RAIL - W4L13970
(x3) | 1 3/8"x3 3/8"x32 3/4" (36x86x831)




E03 | LADDER RAIL - W4L13973
(x3) | 1 3/8"x3 3/8"x32 3/4" (36x86x831)



B08 | POST - W4L13975
(x1) | 3"x3"x32" (76x76x814)



B10 | POST - W4L13905
(x2) | 3"x3"x28 1/2" (76x76x724)



E04 | ROCK WALL RAIL - W4L13972
(x1) | 1 3/8"x3 3/8"x62" (36x86x1575)



E05 | ROCK WALL RAIL - W4L13976
(x1) | 1 3/8"x3 3/8"x63 5/8" (36x86x1575)



E07 | S.B. END SUPPORT - W4L13992
(x1) | 1 3/8"x3 3/8"x44 1/8" (36x86x1120)




E06 | S.B. ANGLE BRACE - W4L13993
(x2) | 1 7/16"x3 3/8"x87 3/16" (36x86x2214)



Wood Components (Not to Scale)



F01 | TELESCOPE MOUNT - W4L13974
(x1) | 1 3/8"x2 3/8"x5 1/4" (36x60x134)



G01 | GROUND BOARD - W4L13907
(x1) | 1"x5 1/4"x67 7/8" (24x134x1724)



G02 | GROUND BOARD - W4L13984
(x1) | 1"x5 1/4"x86 1/8" (24x134x2187)




G03 | GROUND BOARD - W4L13911
(x2) | 1"x5 1/4"x60" (24x134x1524)



G04 | GROUND BOARD - W4L13982
(x1) | 1"x5 1/4"x60" (24x134x1524)



G05 | WALL RAIL - W4L13910
(x1) | 1"x5 1/4"x60" (24x134x1524)




G06 | FLOOR RAIL - W4L13908
(x1) | 1"x5 1/4"x66" (24x134x1676)



G07 | FLOOR RAIL - W4L13953
(x1) | 1"x5 1/4"x66" (24x134x1676)



G08 | FLOOR RAIL - W4L13912
(x1) | 1"x5 1/4"x61 7/8" (24x134x1572)



G09 | WALL RAIL - W4L13909
(x1) | 1"x5 1/4"x61 7/8" (24x134x1572)



G10 | PICNIC TABLE SUPPORT - W4L13938
(x2) | 1"x5 1/4"x13 1/2" (24x134x344)




G11 | GROUND BOARD - W4L13991
(x1) | 1"x5 1/4"x86 3/4" (24x134x2202)



Wood Components (Not to Scale)




H01 | RAIL - W4L13926
(x1) | 1"x3 3/8"x61 7/8" (24x86x1572)



H02 | RAIL - W4L13985
(x2) | 1"x3 3/8"x34 1/2" (24x86x876)



H03 | RAIL - W4L13927
(x1) | 1"x3 3/8"x61 7/8" (24x86x1572)



H04 | RAIL - W4L13928
(x3) | 1"x3 3/8"x60" (24x86x1524)




H05 | RAIL - W4L13932
(x2) | 1"x3 3/8"x34 1/2" (24x86x876)




H06 | RAIL - W4L13983
(x1) | 1"x3 3/8"x60" (24x86x1524)




H07 | RAIL - W4L13925
(x1) | 1"x3 3/8"x61 7/8" (24x86x1572)



H08 | RAIL - W4L13924
(x1) | 1"x3 3/8"x61 1/4" (24x86x1556)




H09 | LADDER RUNG - W4L13939
(x6) | 1"x3 3/8"x22" (24x86x560)




H10 | RAIL - W4L13934
(x1) | 1"x3 3/8"x32 3/4" (24x86x833)




H11 | RAIL - W4L13937
(x1) | 1"x3 3/8"x26 7/8" (24x86x681)



H12 | BENCH - W4L13933
(x2) | 1"x3 3/8"x32 1/2" (24x86x824)



H13 | RAIL - W4L13923
(x1) | 1"x3 3/8"x66" (24x86x1676)



H14 | RAIL - W4L13922
(x1) | 1"x3 3/8"x66" (24x86x1676)



H15 | RAFTER - W4L13929
(x4) | 1"x3 3/8"x49 3/4" (24x86x1262)




Wood Components (Not to Scale)



H16 | RAFTER - W4L13931
(x2) | 1"x3 3/8"x49 7/8" (24x86x1268)




H18 | RAIL - W4L13935
(x1) | 1"x3 3/8"x28 3/4" (24x86x731)



H20 | PICNIC TABLE SEAT SUPPORT - W4L13941
(x2) | 1"x3 3/8"x14 1/2" (24x86x368)




L1 | ROCK WALL BOARD - W4L13916
(x4) | 5/8"x4 3/8"x26 1/4" (16x112x668)



L2 | ROCK WALL BOARD - W4L13917
(x4) | 5/8"x4 3/8"x26 1/4" (16x112x668)




L3 | ROCK WALL BOARD - W4L13918
(x5) | 5/8"x4 3/8"x26 1/4" (16x112x668)




M01 | WALL RAIL - W4L13947
(x11) | 5/8"x3 3/8"x34 1/2" (16x86x876)




M02 | WALL RAIL - W4L13943
(x2) | 5/8"x3 3/8"x61 1/4" (16x86x1556)



M03 | WALL BOARD - W4L13944
(x1) | 5/8"x3 3/8"x52 3/8" (16x86x1332)



M04 | WALL RAIL - W4L13946
(x2) | 5/8"x3 3/8"x34 1/8" (16x86x868)




M05 | WALL RAIL - W4L13949
(x1) | 5/8"x3 3/8"x33 1/4" (16x86x844)



M06 | WALL BOARD - W4L13952
(x40) | 5/8"x3 3/8"x23 1/4" (16x86x591)



M07 | WALL BOARD - W4L13951
(x12) | 5/8"x3 3/8"x26 5/8" (16x86x677)



M08 | PICNIC TABLE - W4L13950
(x4) | 5/8"x3 3/8"x28 1/2" (16x86x724)



M09 | ROCK WALL BOARD - W4L13920
(x1) | 5/8"x3 3/8"x26 1/4" (16x86x668)



M10 | ROCK WALL BOARD - W4L13948
(x1) | 5/8"x3 3/8"x27 5/8" (16x86x702)



Wood Components (Not to Scale)




N01 | WALL RAIL - W4L13954
(x2) | 5/8"x2 3/8"x55" (16x60x1398)




N02 | LADDER BACK - W4L13960
(x6) | 5/8"x2 3/8"x23 1/2" (16x60x596)




N03 | GABLE BOARD - W4L13956
(x2) | 5/8"x2 3/8"x34" (16x60x864)



N04 | ROCKWALL CLEAT - W4L13955
(x1) | 5/8"x2 3/8"x54 1/2" (16x60x1385)




N05 | ROCK WALL BOARD - W4L13958
(x1) | 5/8"x2 3/8"x27 5/8" (16x60x702)




N06 | PICNIC TABLE SUPPORT - W4L13959
(x1) | 5/8"x2 3/8"x12 3/8" (16x60x314)



N07 | UPPER WALL RAIL - W4L13919
(x1) | 5/8"x2 3/8"x60" (16x60x1524)



N08 | GABLE BOARD - W4L13961
(x2) | 5/8"x2 3/8"x16" (16x60x406)



N09 | GABLE BOARD - W4L13962
(x4) | 5/8"x2 3/8"x10" (16x60x254)




N10 | GABLE BOARD - W4L13963
(x2) | 5/8"x2 3/8"x3" (16x60x76)



O2 | WALL BOARD - W4L13921
(x14) | 5/8"x1 3/8"x14" (16x36x356)



O70 | SLIDE MOUNTING BOARD - W4L09040
(x1) | 5/8"x1 3/8"x20 3/8" (16x34x517)



SP1 | SWING BEAM SUPPORT - W4L13988
(x1) | 3 3/8"x3 3/8"x49 3/8" (86x86x1254)




Wood Components (Not to Scale)



HH1 | FLOOR PANEL - W2A03079
(x2) | 1 1/4"x20 1/8"x36 3/8" (32x510x924)




HH4 | FLOOR PANEL - W2A03075
(x1) | 32 7/16"x1 1/4"x21 1/8" (824x32x536)

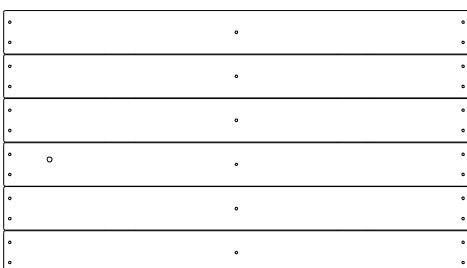

HH2 | FLOOR PANEL - W2A03080
(x1) | 36 3/8"x1 1/4"x20 9/16" (924x32x522)




HH5 | FLOOR PANEL - W2A03076
(x1) | 1 1/4"x20 9/16"x32 7/16" (32x522x824)

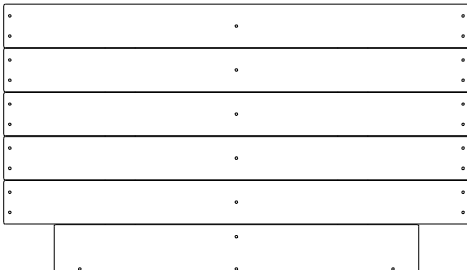

HH3 | FLOOR PANEL - W2A03078
(x2) | 36 3/8"x1 1/4"x21 1/8" (924x32x536)




HH6 | FLOOR PANEL - W2A03077
(x1) | 1 1/4"x20 1/8"x32 7/16" (32x510x824)

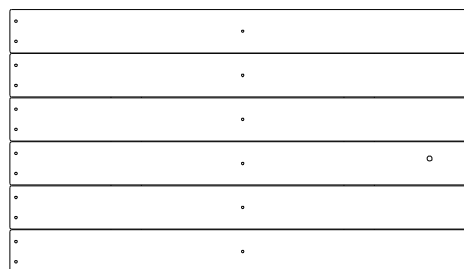


HH7 | FLOOR PANEL - W2A03087
(x1) | 36 3/8"x1 1/4"x20 9/16" (924x32x522)




Wood Components (Not to Scale)

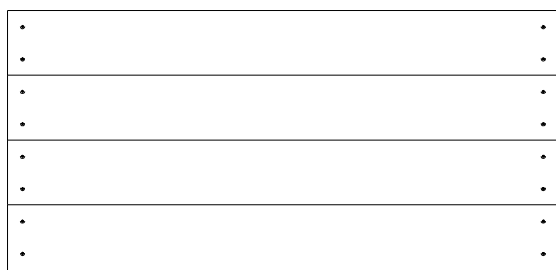


RP1 | ROOF PANEL - W2A03081
(x2) | 1 5/8"x20 11/16"x43 1/16" (42x526x1094)

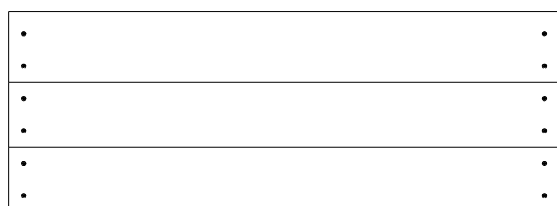


RP2 | ROOF PANEL - W2A03082
(x2) | 1 5/8"x15 5/8"x43 1/16" (41x397x1094)

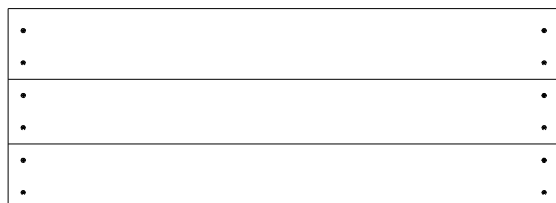


RP3 | ROOF PANEL - W2A03135
(x2) | 1 5/8"x15 5/8"x43 1/16" (41x397x1094)

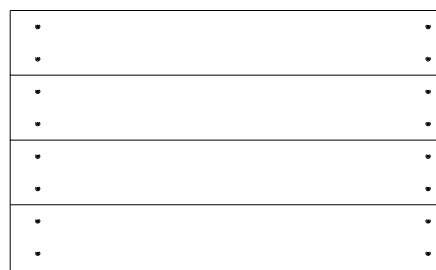


RP4 | ROOF PANEL - W2A03083
(x1) | 33 7/8"x1 5/8"x20 11/16" (860x42x526)

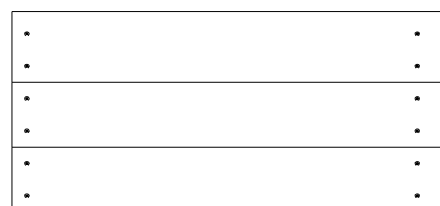


RP5 | ROOF PANEL - W2A03084
(x1) | 1 5/8"x15 5/8"x33 7/8" (42x397x860)

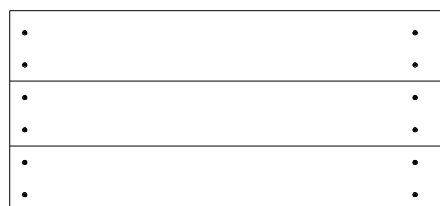


RP6 | ROOF PANEL - W2A03072
(x1) | 1 5/8"x15 5/8"x33 7/8" (42x397x860)

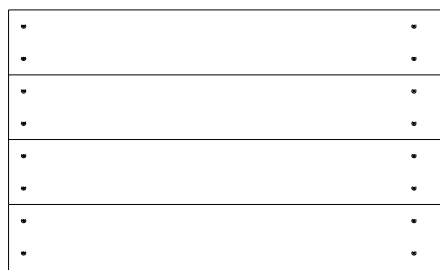

RP7 | ROOF PANEL - W2A03085
(x1) | 1 5/8"x20 11/16"x33 7/8" (42x526x860)

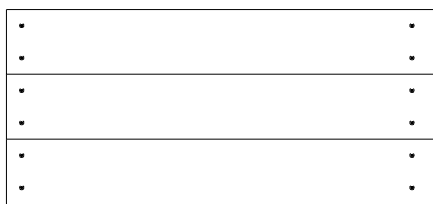









RP8 | ROOF PANEL - W2A03086
(x1) | 1 5/8"x15 5/8"x33 7/8" (42x397x860)

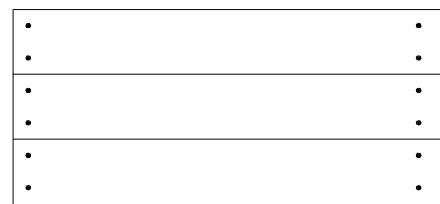

RP9 | ROOF PANEL - W2A03073
(x1) | 1 5/8"x15 5/8"x33 7/8" (42x397x860)



Hardware Components

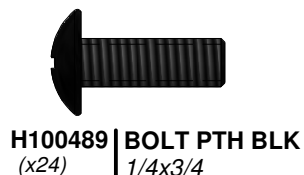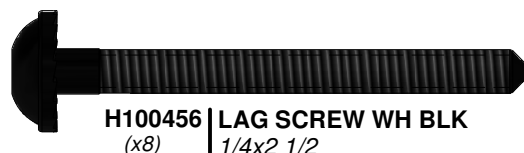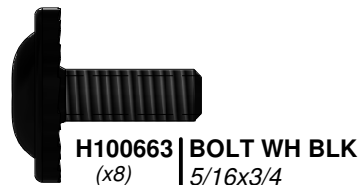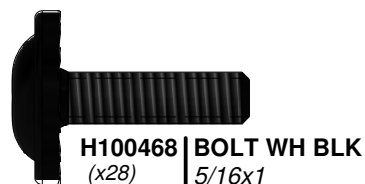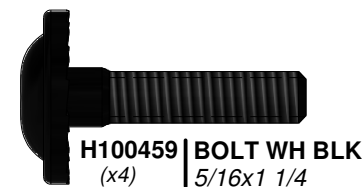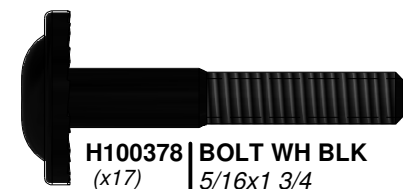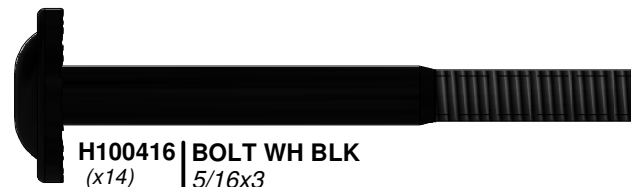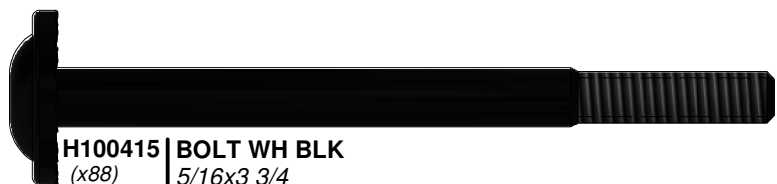



Hardware Components



H100201 | SCREW PFH BLK
(x12) | 8x2-1/2



H100483 | SCREW PFH BLK
(x2) | 8x2 1/4



H100380 | SCREW PFH BLK
(x30) | 8x1 1/8




H100202 | SCREW PWH BLK
(x6) | 8x5/8




H100111 | SCREW PFH
(x116) | 8x2



H100089 | SCREW PFH
(x24) | 8x1 3/4



H100086 | SCREW PFH
(x322) | 8x1 1/2



H100087 | SCREW PFH
(x8) | 8x1 1/4



H100088 | SCREW PFH
(x259) | 8x1 1/8



H100199 | WASHER LOCK EXT BLK
(x29) | 12x19



H100405 | WASHER LOCK EXT BLK
(x8) | 6x15



H100473 | WASHER LOCK INT BLK
(x24) | 8x15



H100193 | NUT BARREL WH BLK
(x2) | 5/16x1-1/2




H100192 | NUT BARREL WH BLK
(x31) | 5/16x7/8



H100469 | NUT BARREL WH BLK
(x9) | 5/16x5/8



H100831 | NUT BARREL PTH BLK
(x4) | 1/4x3/4

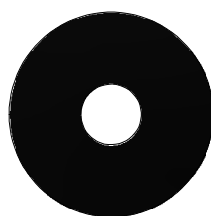

H100478 | WASHER FLAT BLK
(x4) | 8x27



H100198 | WASHER LOCK EXT BLK
(x165) | 8x19




H100477 | WASHER SPLIT BLK
(x4) | 5/16




H100379 | T-NUT BLK
(x183) | 5/16




H100398 | T-NUT BLK
(x24) | 1/4

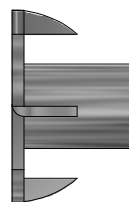

H100073 | T-NUT
(x12) | 3/8

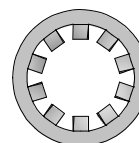


H100107 | WASHER LOCK INT
(x12) | 10x18

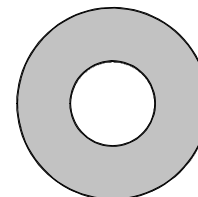

H100102 | WASHER FLAT
(x12) | 11x25



Hardware Components

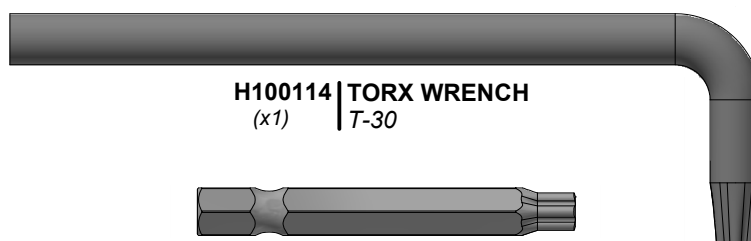


H100114 | TORX WRENCH
(x1) | T-30


H100147 | TORX BIT
(x1) | T-30



H100764 | SCREW SETTER
(x1)




H101100 | MAGNETIC DRIVER
(x1)

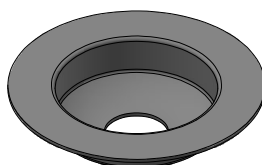

H100225 | FLANGE CUP WASHER
(x1) | 9x34



H100082 | SCREW TAPPING
(x1) | 14x2 1/2

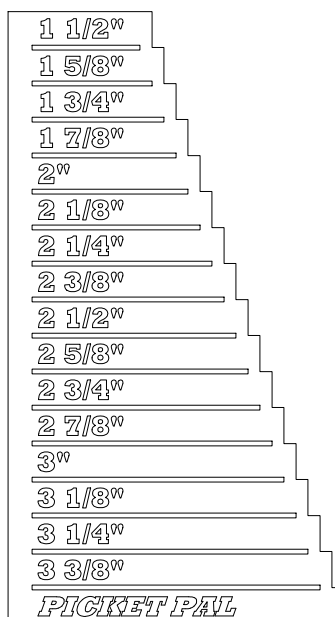

A6P00410 | PICKET PAL
(x1)




Accessory Components (Not to Scale)




A100164
(x1) | **BYD ID TAG (LARGE) AGES 3-10**




A6P00037
(x8) | **GREEN HC ROCK #2**

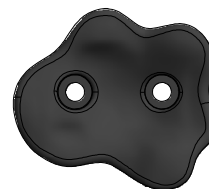

A6P00036
(x4) | **GREEN HC ROCK #1**

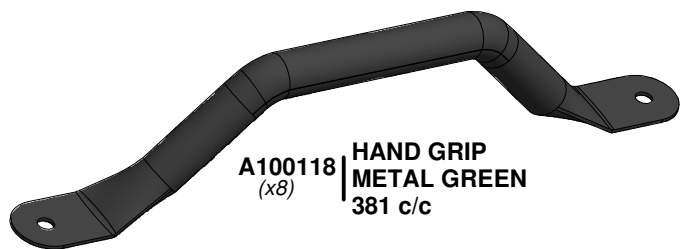


A100118
(x8) | **HAND GRIP
METAL GREEN
381 c/c**

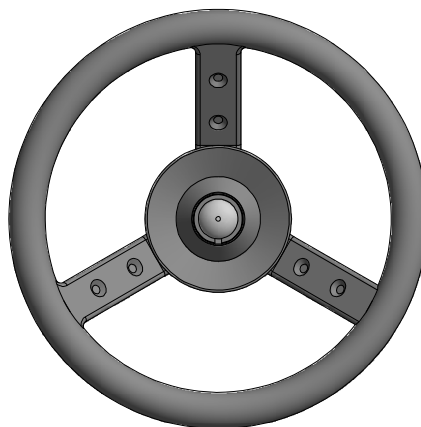


A100107
(x1) | **STEERING WHEEL**



A4M01047
(x9) | **L BRACKET
2.5x38x55x55**




A100314
(x1) | **"A" REVISION TAG**

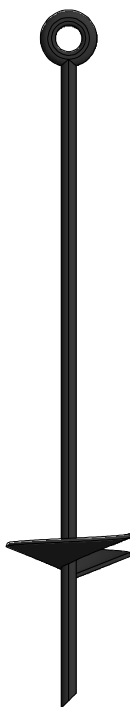


A100178
(x6) | **AUGER GROUND STAKE**




Accessory Components (Not to Scale)

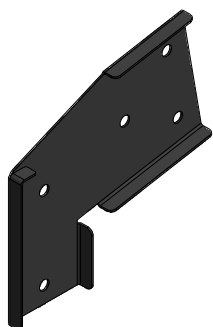


A100325
(x1) | **SWING BEAM
EXTENSION
BRACKET-LEFT**

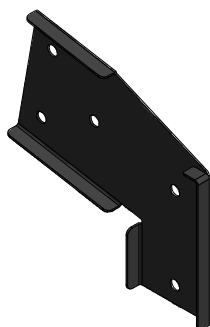


A100326
(x1) | **SWING BEAM
EXTENSION
BRACKET-RIGHT**

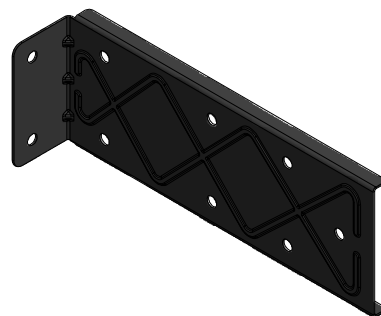


A4M00993
(x2) | **EXTENDED
SWING BEAM
BRACKET**

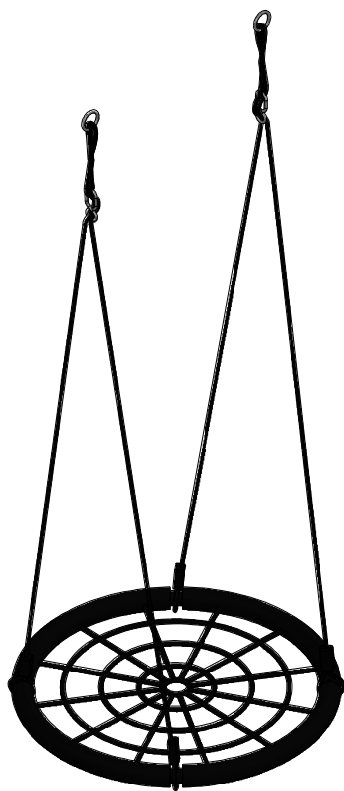


A4M01126
(x1) | **26" WEB SWING SEAT ROPE**

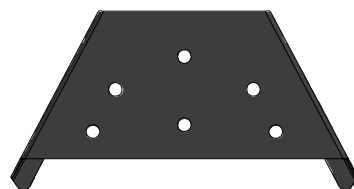

A4M01169
(x1) | **A-FRAME BRACKET**

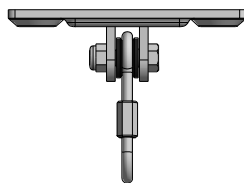

A4M00505
(x6) | **SWING HANGER**



A100069
(x4) | **QUICK LINK**




A6P00054
(x2) | **SWING SEAT GREEN 22"**




A100047
(x4) | **CHAIN GREEN 57"**



Accessory Components (Not to Scale)

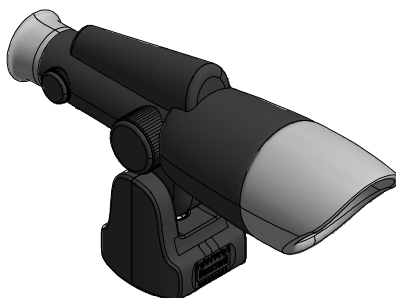

A100104
(x1) | TELESCOPE KIT

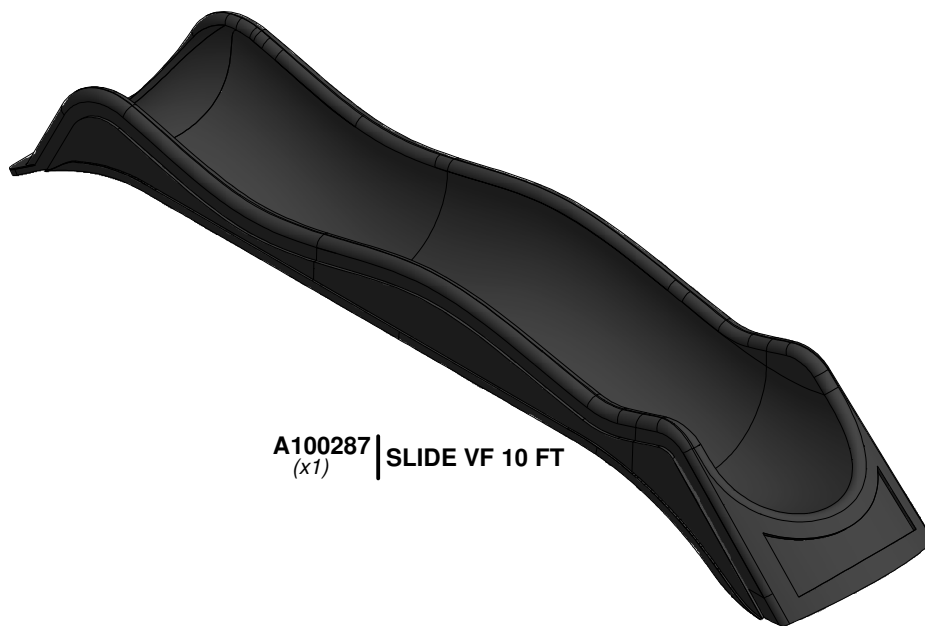

A100287
(x1) | SLIDE VF 10 FT


PRE-ASSEMBLY STEP 1 - SORTING PARTS

It is critical for ease of assembly that you take the time to sort and organize the wood and hardware.

WOOD PARTS:


- Organize wood parts by the three-digit, alpha-numeric number stamped on each board (ex. P01).
- If there are multiple boards with the same stamped number, stack those pieces together.
- Stamps can be found on the flat surface of the boards or on the end of the boards.
- Allow yourself plenty of room - the wood pieces can take up a significant amount of space.

NOTE: CARTONS ARE NOT ORGANIZED BY BOARD NUMBER.

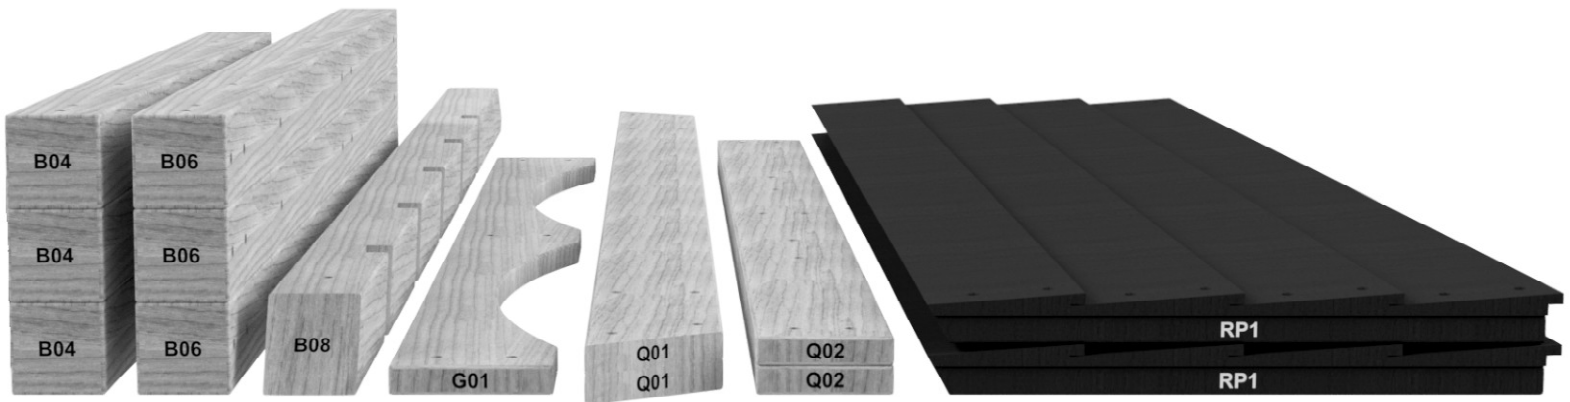

HARDWARE PARTS:

- We recommend that you have a separate table to organize the hardware.
- Hardware bags are printed with a seven-digit, alpha-numeric part number.
- You can organize your hardware by part number or group by hardware type (i.e. bolts, nuts, etc.).
- During assembly you only need to reference the last four digits of the number.

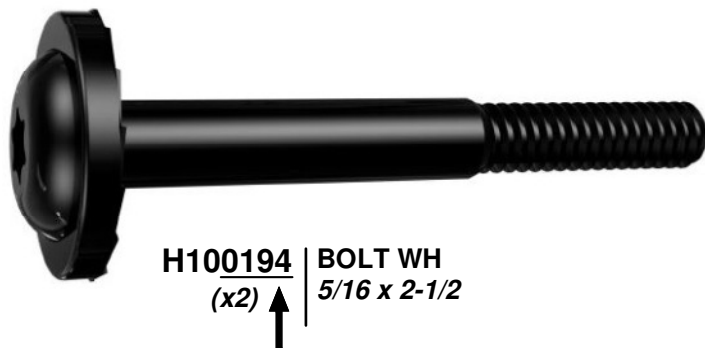

PRE-ASSEMBLY STEP 2 - TOOLS REQUIRED



Cordless Drill or
Electric Drill



Drill Attachments:
Phillips Head



1/8", 3/16", 3/8" & 7/16"
Drill Bits



Phillips Screw Driver



Open End Wrenches 1/2" & 9/16"



3/8" Drive Ratchet, 1/2" &
9/16" STD Sockets 1/2" & 9/16"
Deep Sockets




Claw Hammer



Rubber Mallet - Optional



Tape Measure

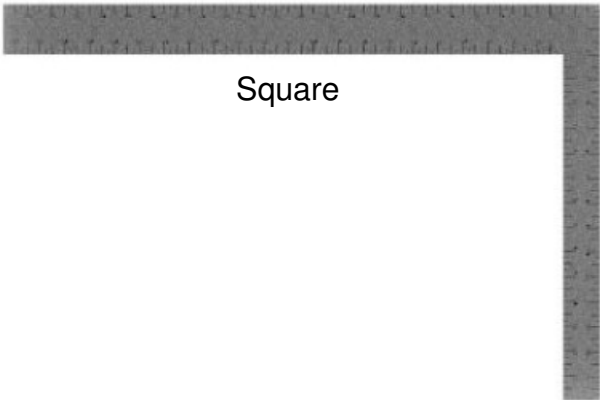

Square



Level 24"

PRE-ASSEMBLY STEP 3 - CHOOSE YOUR ASSEMBLY METHOD

There are several types of assembly instructions available to you.


1. Printed Assembly Manual included with your set
2. BILT APP - 3D interactive instructions
3. Combination of the Printed Manual and BILT APP (Note: Step numbers can differ between the two methods)



Scan for easy 3D instructions

Download the BILT app
before you begin



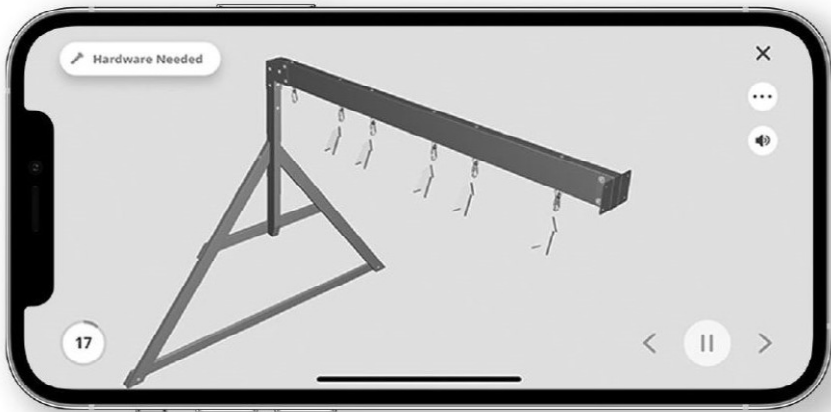



LADDER ASSEMBLY

STEP 1

E02 | LADDER RAIL - W4L13970
(x3) | 1 3/8"x3 3/8"x32 3/4" (36x86x831)

E03 | LADDER RAIL - W4L13973
(x3) | 1 3/8"x3 3/8"x32 3/4" (36x86x831)


H09 | LADDER RUNG - W4L13939
(x6) | 1"x3 3/8"x22" (24x86x560)

H100111 | SCREW PFH
(x24) | 8x2



TIP:

LAY PARTS ON GROUND OR SAW HORSES FOR EASE OF ASSEMBLY.

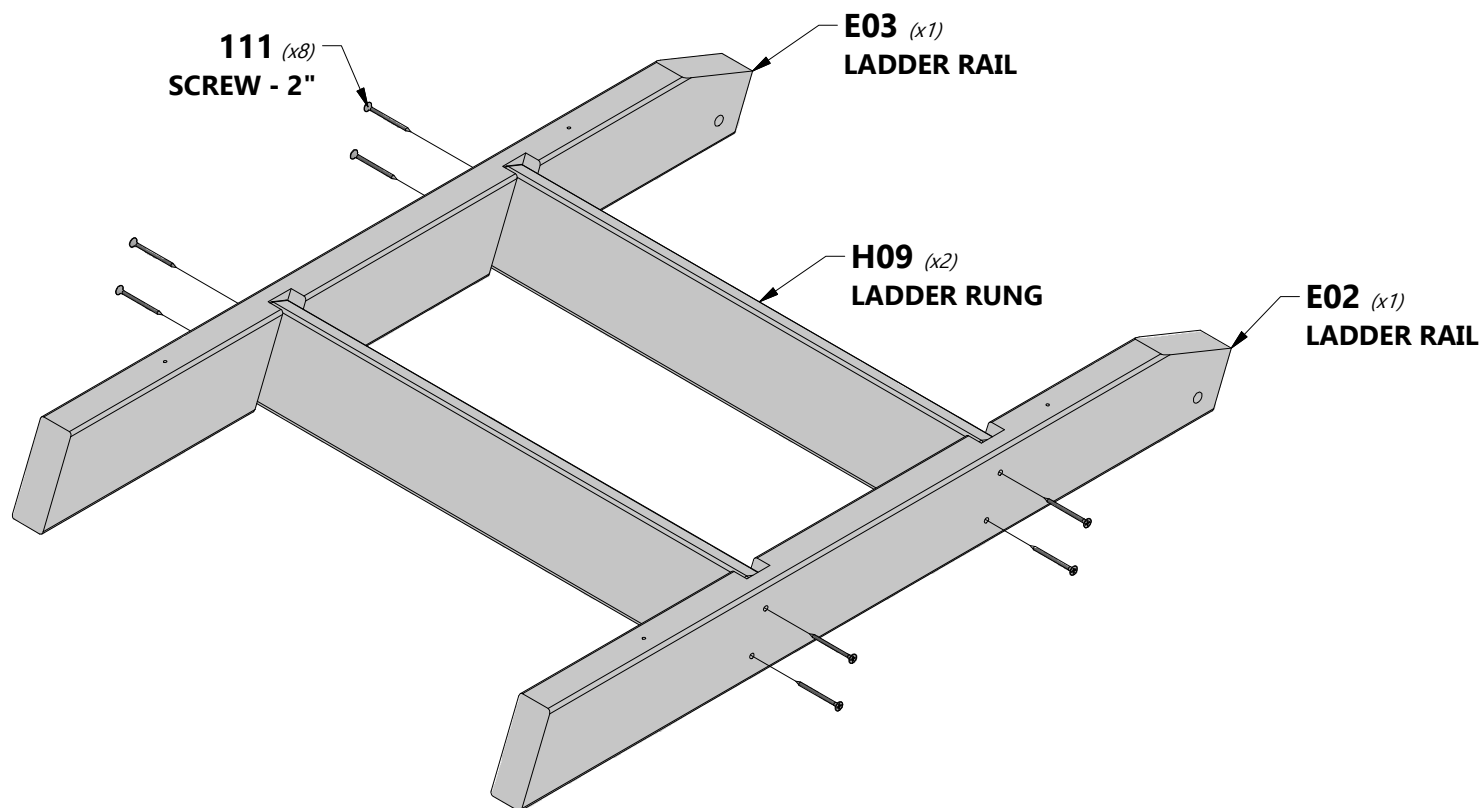

REPEAT THIS STEP TO COMPLETE THREE LADDER ASSEMBLIES




LADDER ASSEMBLY

STEP 2

N02
(x6)

LADDER BACK - W4L13960
5/8"x2 3/8"x23 1/2" (16x60x596)

H100111 | **SCREW PFH**
(x12) | 8x2

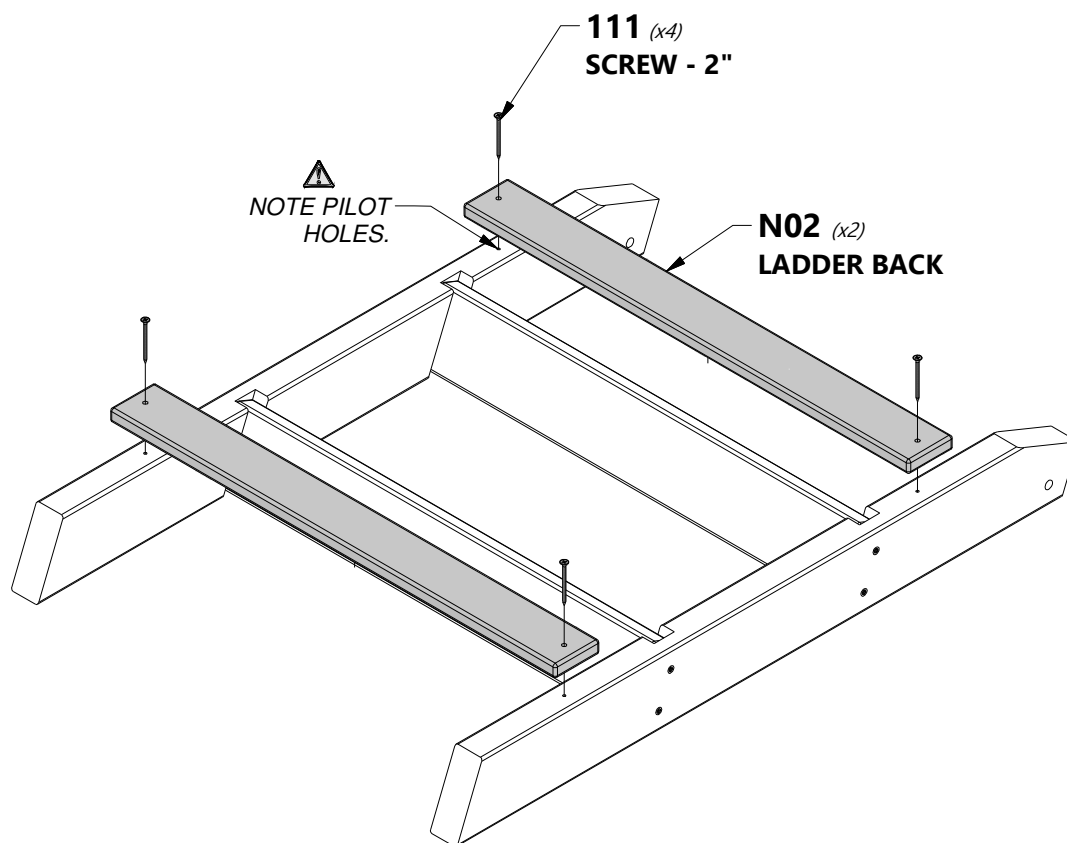

REPEAT THIS STEP TO COMPLETE THREE LADDER ASSEMBLIES



LADDER ASSEMBLY

STEP 3



A4M01047 | L BRACKET
(x6) 2.5x38x55x55




H100468 | BOLT WH BLK
(x6) 5/16x1



H100192 | NUT BARREL WH BLK
(x6) 5/16x7/8



H100199 | WASHER LOCK
(x6) EXT 12x19 BLK

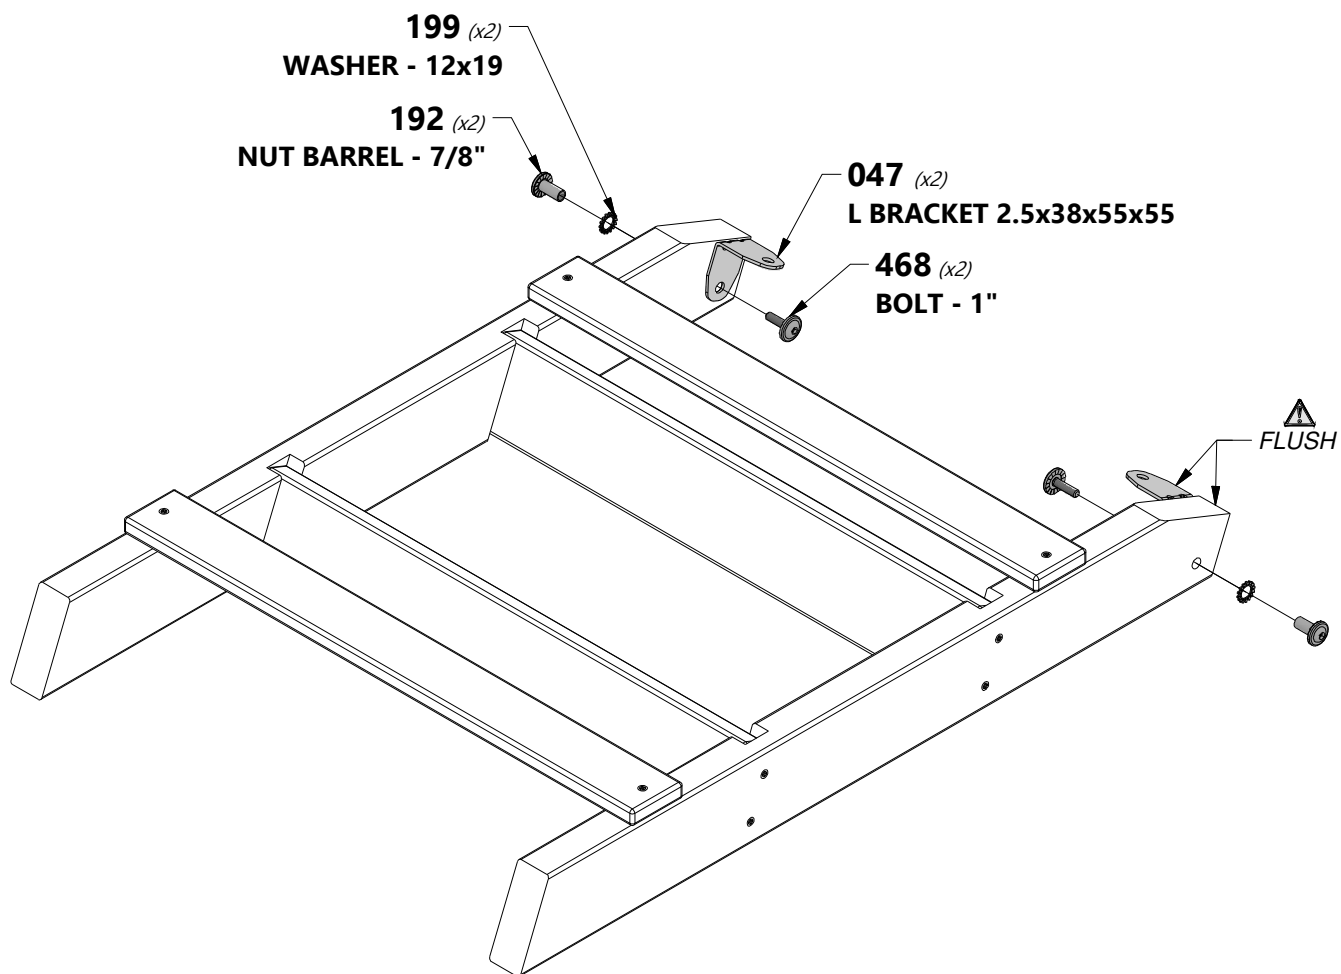

REPEAT THIS STEP TO COMPLETE THREE LADDER ASSEMBLIES




ROCK WALL ASSEMBLY

STEP 1




L1 | **ROCK WALL BOARD - W4L13916**
(x4) 5/8"x4 3/8"x26 1/4" (16x112x668)




L2 | **ROCK WALL BOARD - W4L13917**
(x4) 5/8"x4 3/8"x26 1/4" (16x112x668)




L3 | **ROCK WALL BOARD - W4L13918**
(x5) 5/8"x4 3/8"x26 1/4" (16x112x668)



M09 | **ROCK WALL BOARD - W4L13920**
(x1) 5/8"x3 3/8"x26 1/4" (16x86x668)



E05 | **ROCK WALL RAIL - W4L13976**
(x1) 1 3/8"x3 3/8"x63 5/8" (36x86x1575)



E04 | **ROCK WALL RAIL - W4L13972**
(x1) 1 3/8"x3 3/8"x62" (36x86x1575)




H100398 | **T-NUT BLK**
(x24) 1/4"



H100086 | **SCREW PFH**
(x56) 8x1 1/2"


PREPARATION: INSTALL T-NUTS

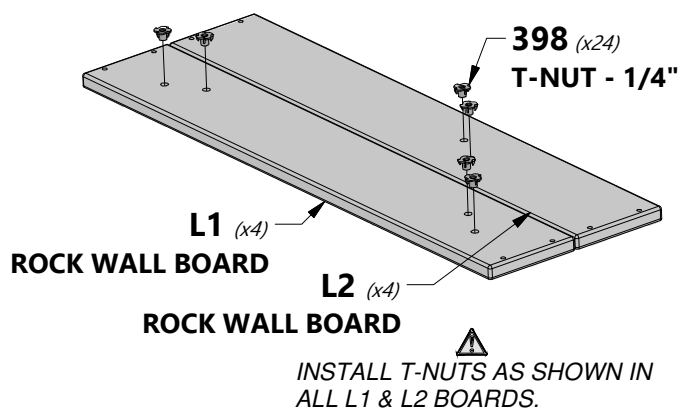

ASSEMBLY NOTE:

USE THE FOLLOWING REPEATING PATTERN TO BUILD THE ROCK WALL. BEGINNING AT THE TOP THE PATTERN IS L3, L2, L1. REPEAT 4 TIMES AND END WITH AN ADDITIONAL L3 & M09 BOARD AS SHOWN. MAKE SURE TO PLACE EACH L2 BOARD SO THE HOLES ALTERNATE RIGHT TO LEFT OF CENTER.


NOTE: INSTALL ALL L1 & L2 BOARDS WITH T-NUTS FACING DOWN (HIDDEN).

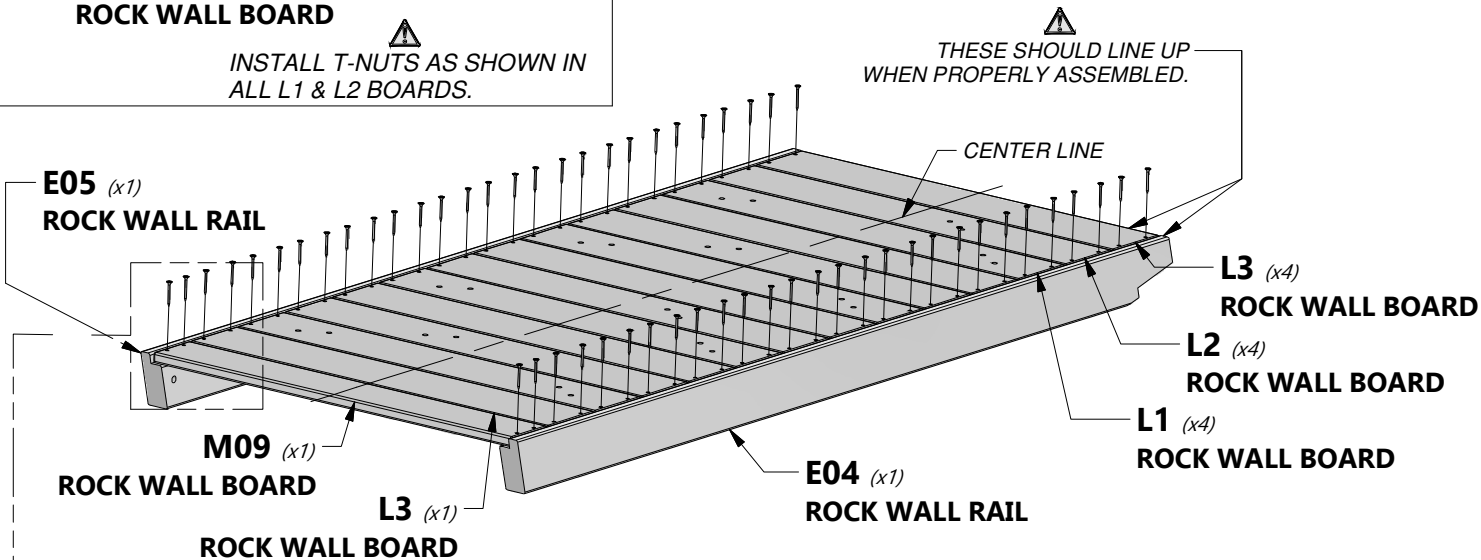

ASSEMBLY TIP:

IT CAN HELP TO SET ALL THE BOARDS IN PLACE TO MAKE SURE THEY MATCH THE DIAGRAM PRIOR TO MOUNTING THEM WITH THE PROVIDED SCREWS.

086 (x56)
SCREW - 1 1/2"

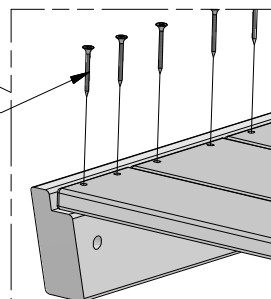



ROCK WALL ASSEMBLY

STEP 2



M10 | ROCK WALL BOARD - W4L13948
(x1) | 5/8"x3 3/8"x27 5/8" (16x86x702)





H100379 | T-NUT BLK
(x2) | 5/16"




H100086 | SCREW PFH
(x4) | 8x1 1/2"

PREPARATION: INSTALL T-NUTS

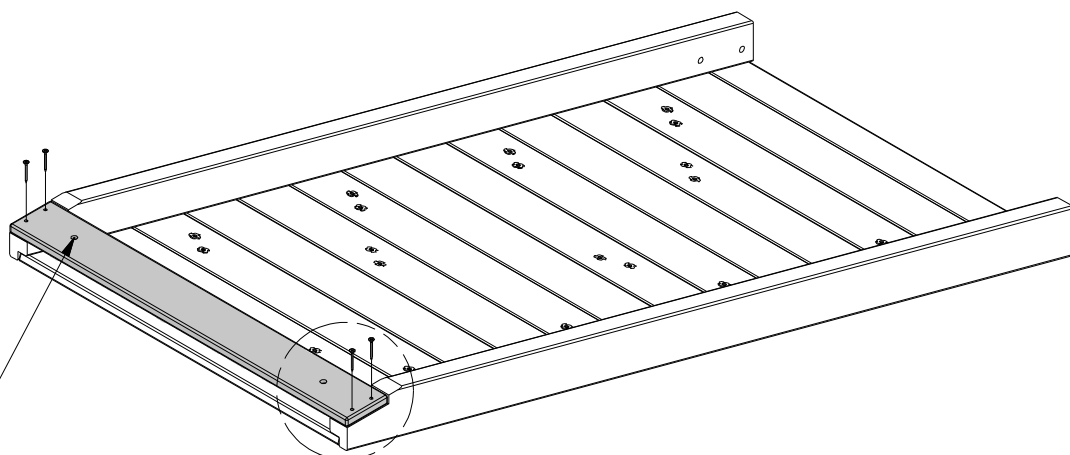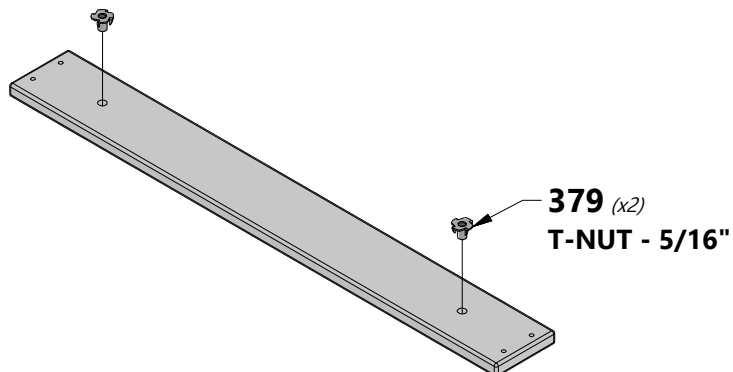

NOTE PRE-INSTALLED
T-NUTS MUST FACE DOWN.

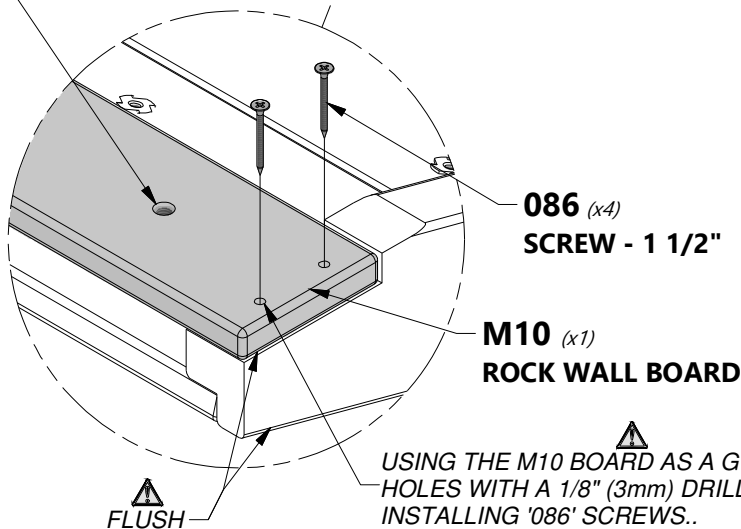



ROCK WALL ASSEMBLY

STEP 3


N04 | ROCKWALL CLEAT - W4L13955
(x1) 5/8"x2 3/8"x54 1/2" (16x60x1385)

N05 | ROCK WALL BOARD - W4L13958
(x1) 5/8"x2 3/8"x27 5/8" (16x60x702)

H100086 | SCREW PFH
(x4) 8x1 1/2

H100088 | SCREW PFH
(x9) 8x1 1/8


BOTTOM VIEW

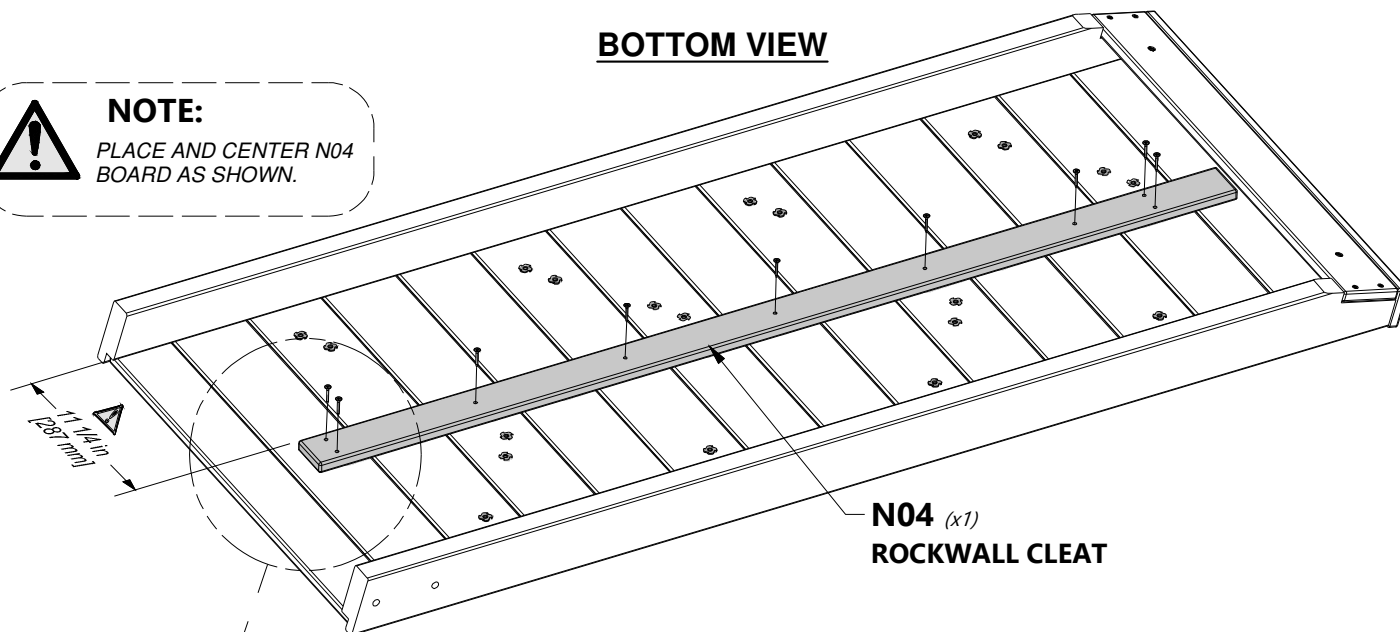

N04 (x1)
ROCKWALL CLEAT

088 (x9)
SCREW - 1 1/8"

TOP VIEW

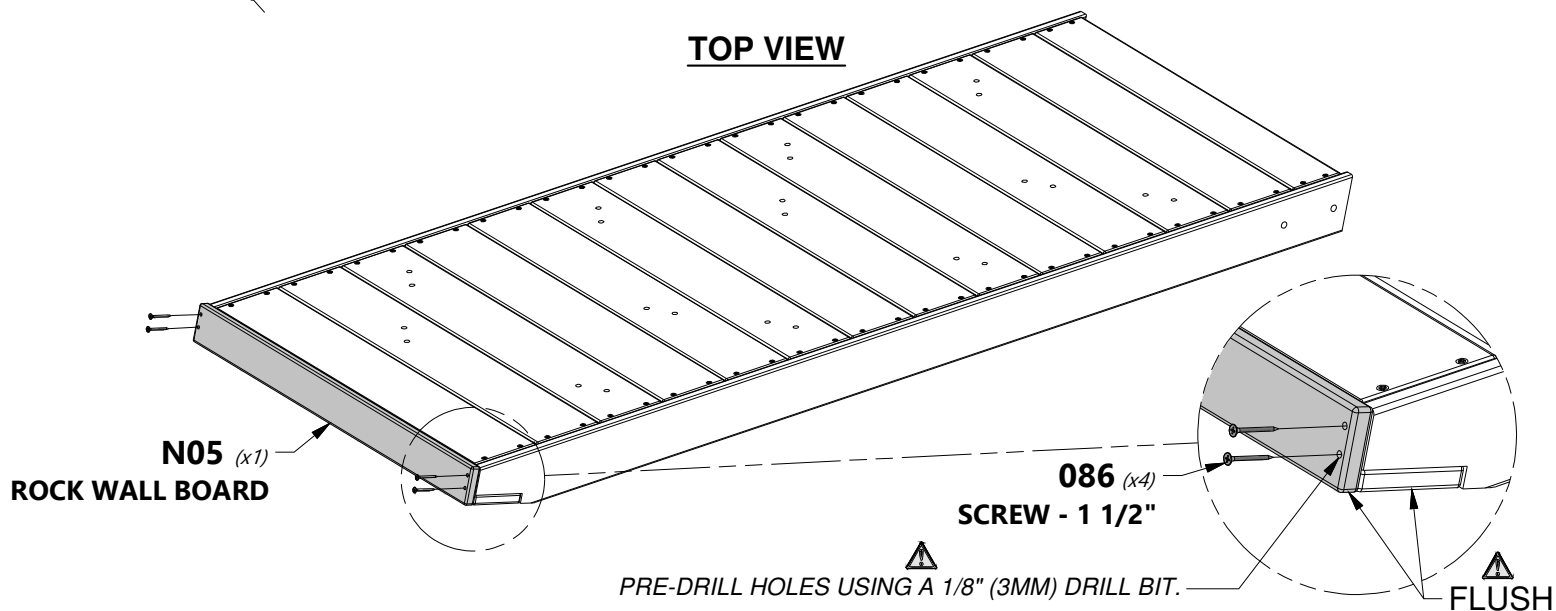



ROCK WALL ASSEMBLY

STEP 4



A6P00037 (x8) | GREEN HC ROCK #2



A6P00036 (x4) | GREEN HC ROCK #1



H100489 (x24) | BOLT PTH BLK
1/4x3/4



H100473 (x24) | WASHER LOCK INT BLK
8x15




NOTE:

INSTALL ROCKS USING THE SHOWN HARDWARE WITH THE T-NUTS THAT WERE PRE-INSTALLED.




NOTE ARROW SHOULD FACE UP.

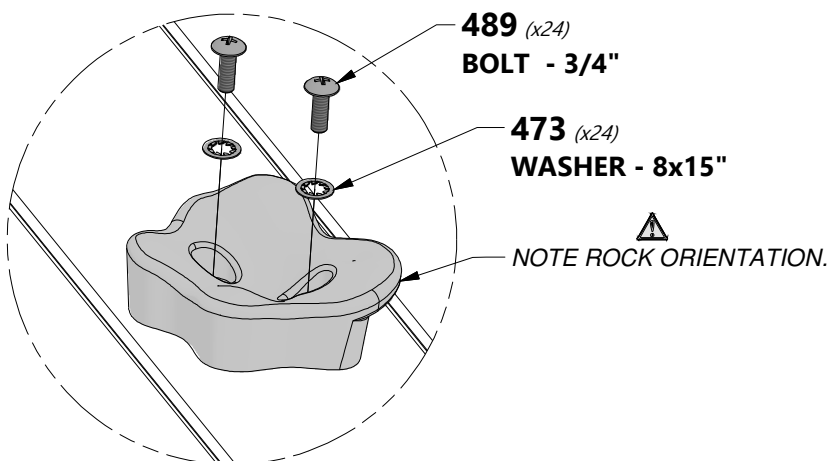

489 (x24)
BOLT - 3/4"

473 (x24)
WASHER - 8x15"

NOTE ROCK ORIENTATION.

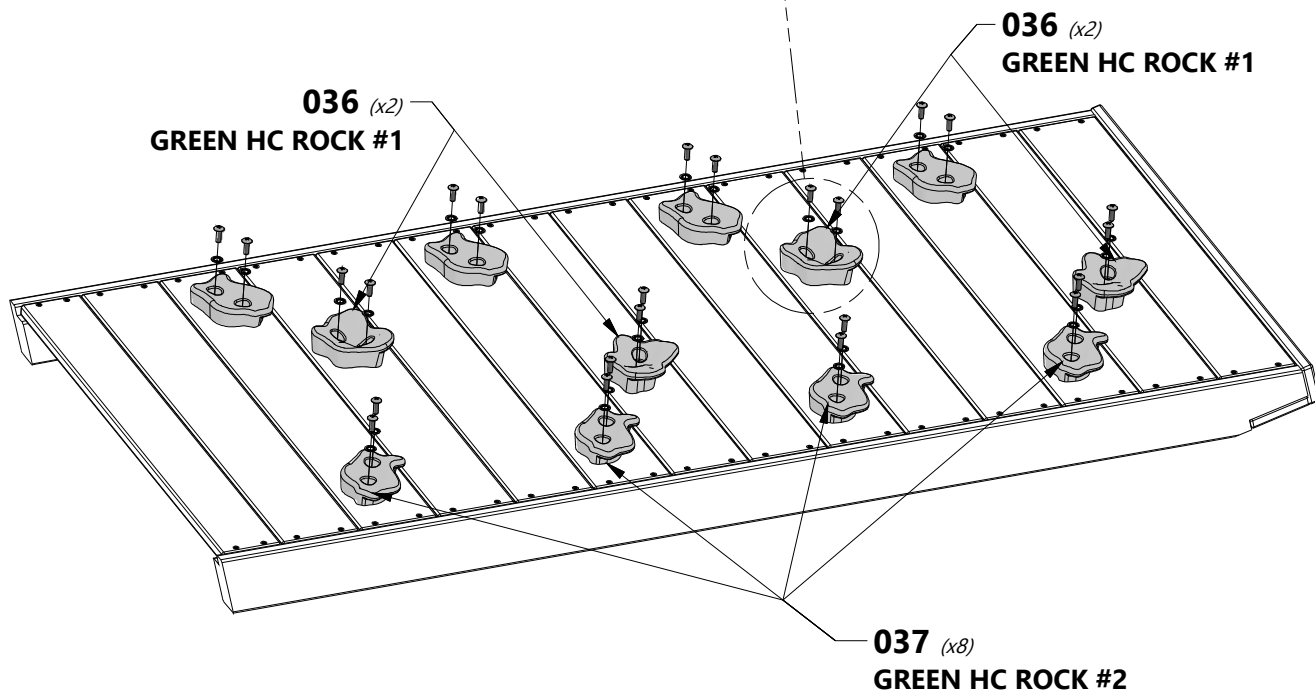

036 (x2)
GREEN HC ROCK #1

036 (x2)
GREEN HC ROCK #1

037 (x8)
GREEN HC ROCK #2



SWING BEAM

STEP 1

A1 | SWING BEAM - W4L13989
(x1) | 3 3/8"x5 1/4"x89 1/2" (86x134x2274)

A2 | SB 9" BLOCK - W4L13990
(x1) | 3 3/8"x5 1/4"x9" (86x134x228)


A100325 | SWING BEAM
EXTENSION
BRACKET-LEFT
(x1)

A100326 | SWING BEAM
EXTENSION
BRACKET-RIGHT
(x1)

A4M00993 | EXTENDED
SWING BEAM
BRACKET
(x2)

H100416 | BOLT WH BLK
(x10) | 5/16x3


H100192 | NUT BARREL WH BLK
(x10) | 5/16x7/8

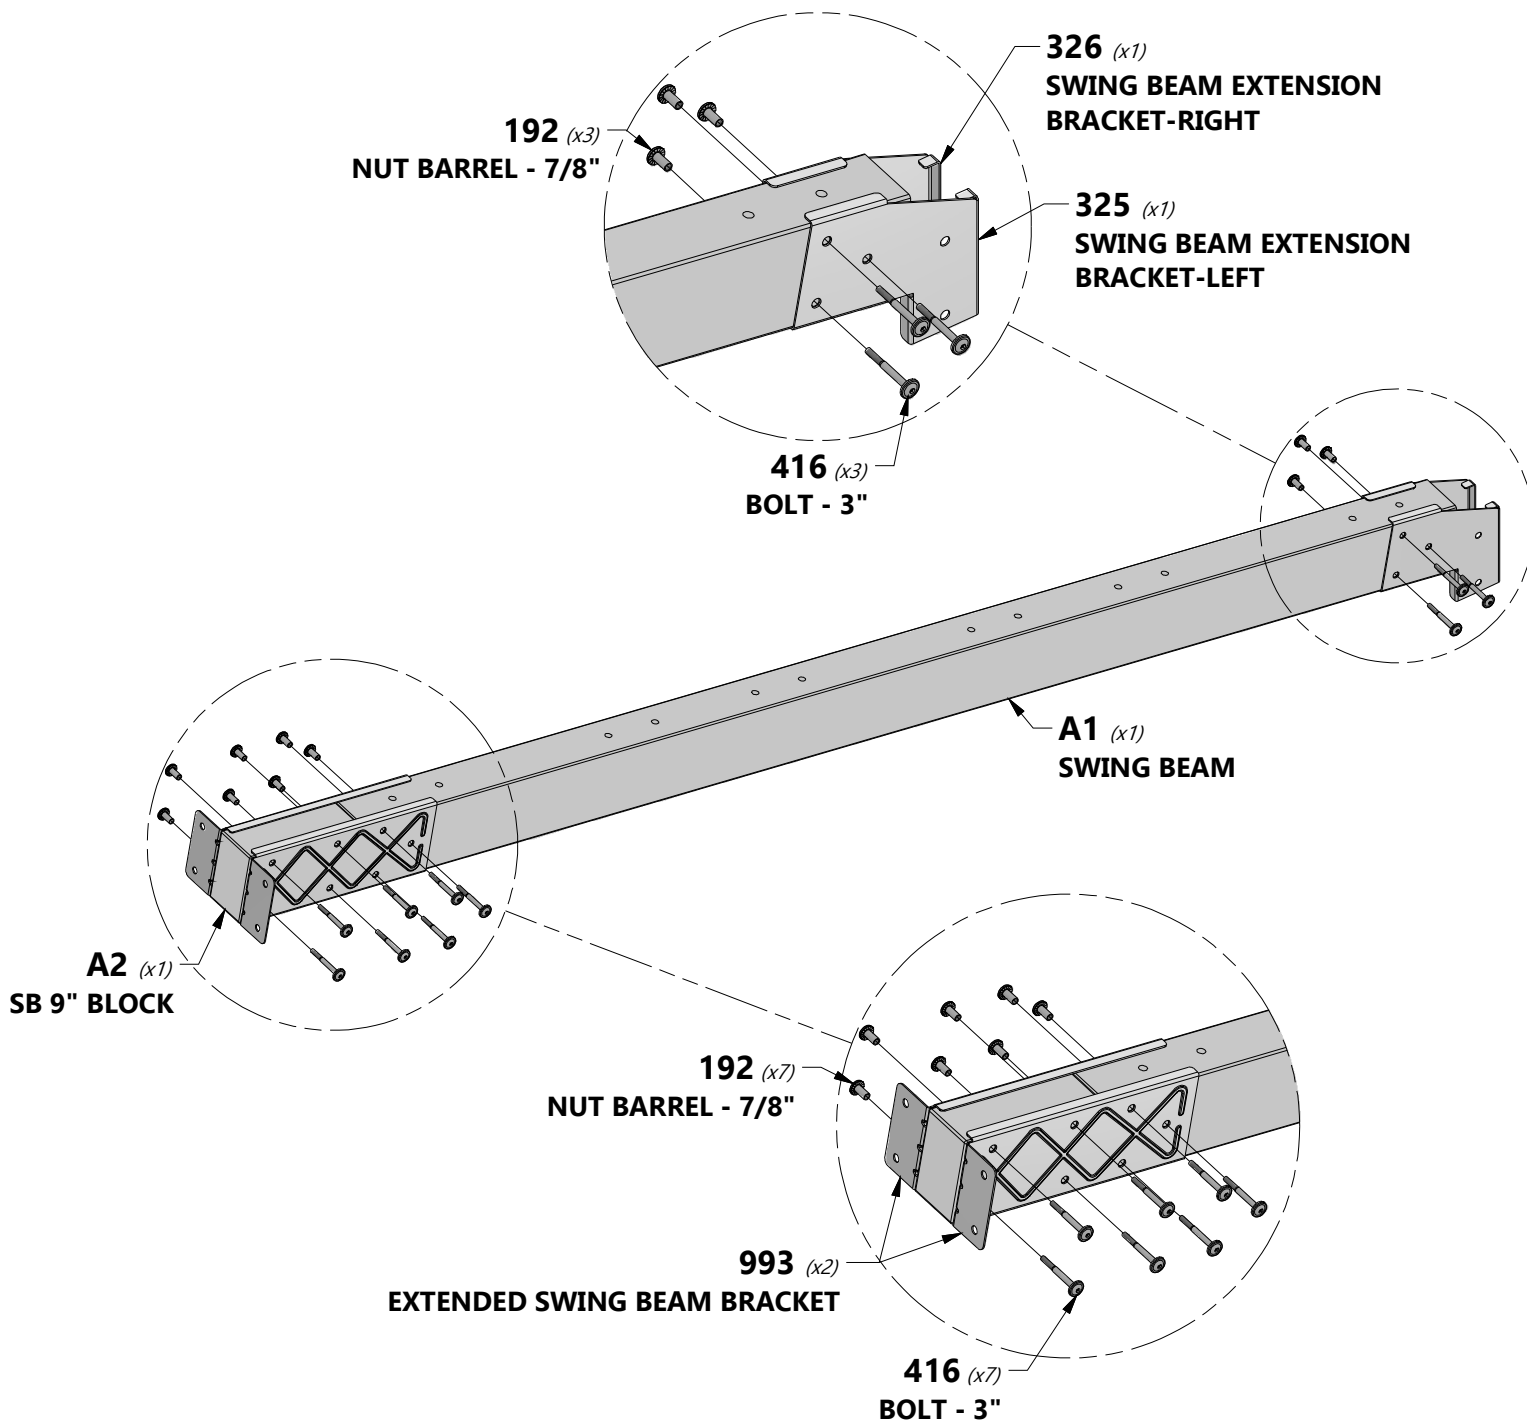



SWING BEAM


STEP 2

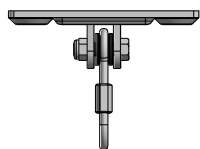

A4M00505 | **SWING HANGER**
(x6)




H100654 | **BOLT HEX**
(x12) | 3/8x5-1/2




H100102 | **WASHER FLAT**
(x12) | 11x25



H100107 | **WASHER LOCK INT**
(x12) | 10x18



H100073 | **T-NUT**
(x12) | 3/8

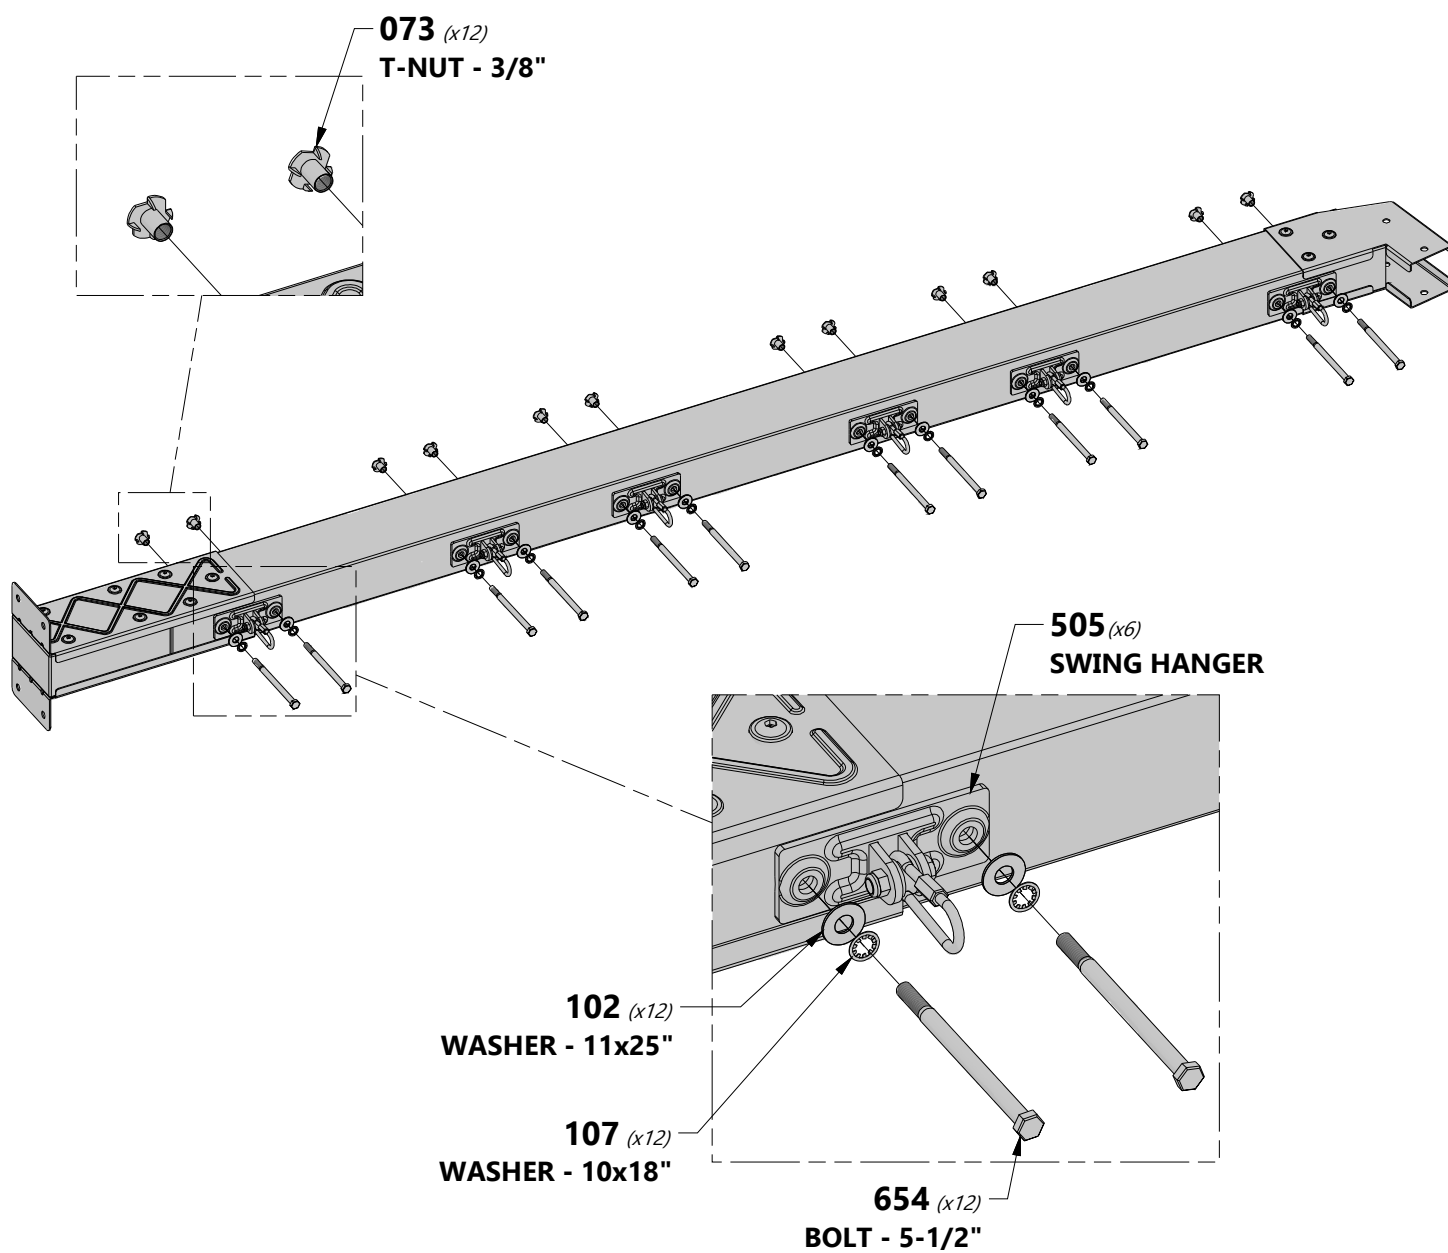



SWING BEAM

E06 | S.B. ANGLE BRACE - W4L13993
(x2) | 1 7/16"x3 3/8"x87 3/16" (36x86x2214)

G11 | GROUND BOARD - W4L13991
(x1) | 1"x5 1/4"x86 3/4" (24x134x2202)

SP1 | SWING BEAM SUPPORT - W4L13988
(x1) | 3 3/8"x3 3/8"x49 3/8" (86x86x1254)

A4M01169 | A-FRAME BRACKET
(x1)

E07 | S.B. END SUPPORT - W4L13992
(x1) | 1 3/8"x3 3/8"x44 1/8" (36x86x1120)

STEP 3

H100416 | BOLT WH BLK
(x2) | 5/16x3

H100457 | BOLT WH BLK
(x4) | 5/16x2

H100468 | BOLT WH BLK
(x4) | 5/16x1

H100415 | BOLT WH BLK
(x2) | 5/16x3 3/4


H100193 | NUT BARREL WH BLK
(x2) | 5/16x1-1/2


H100192 | NUT BARREL WH BLK
(x12) | 5/16x7/8

H100205 | BOLT WH BLK
(x2) | 5/16x2-1/4

H100199 | WASHER LOCK
(x14) | EXT 12x19 BLK



H100198 | WASHER LOCK
(x8) | EXT 8x19 BLK

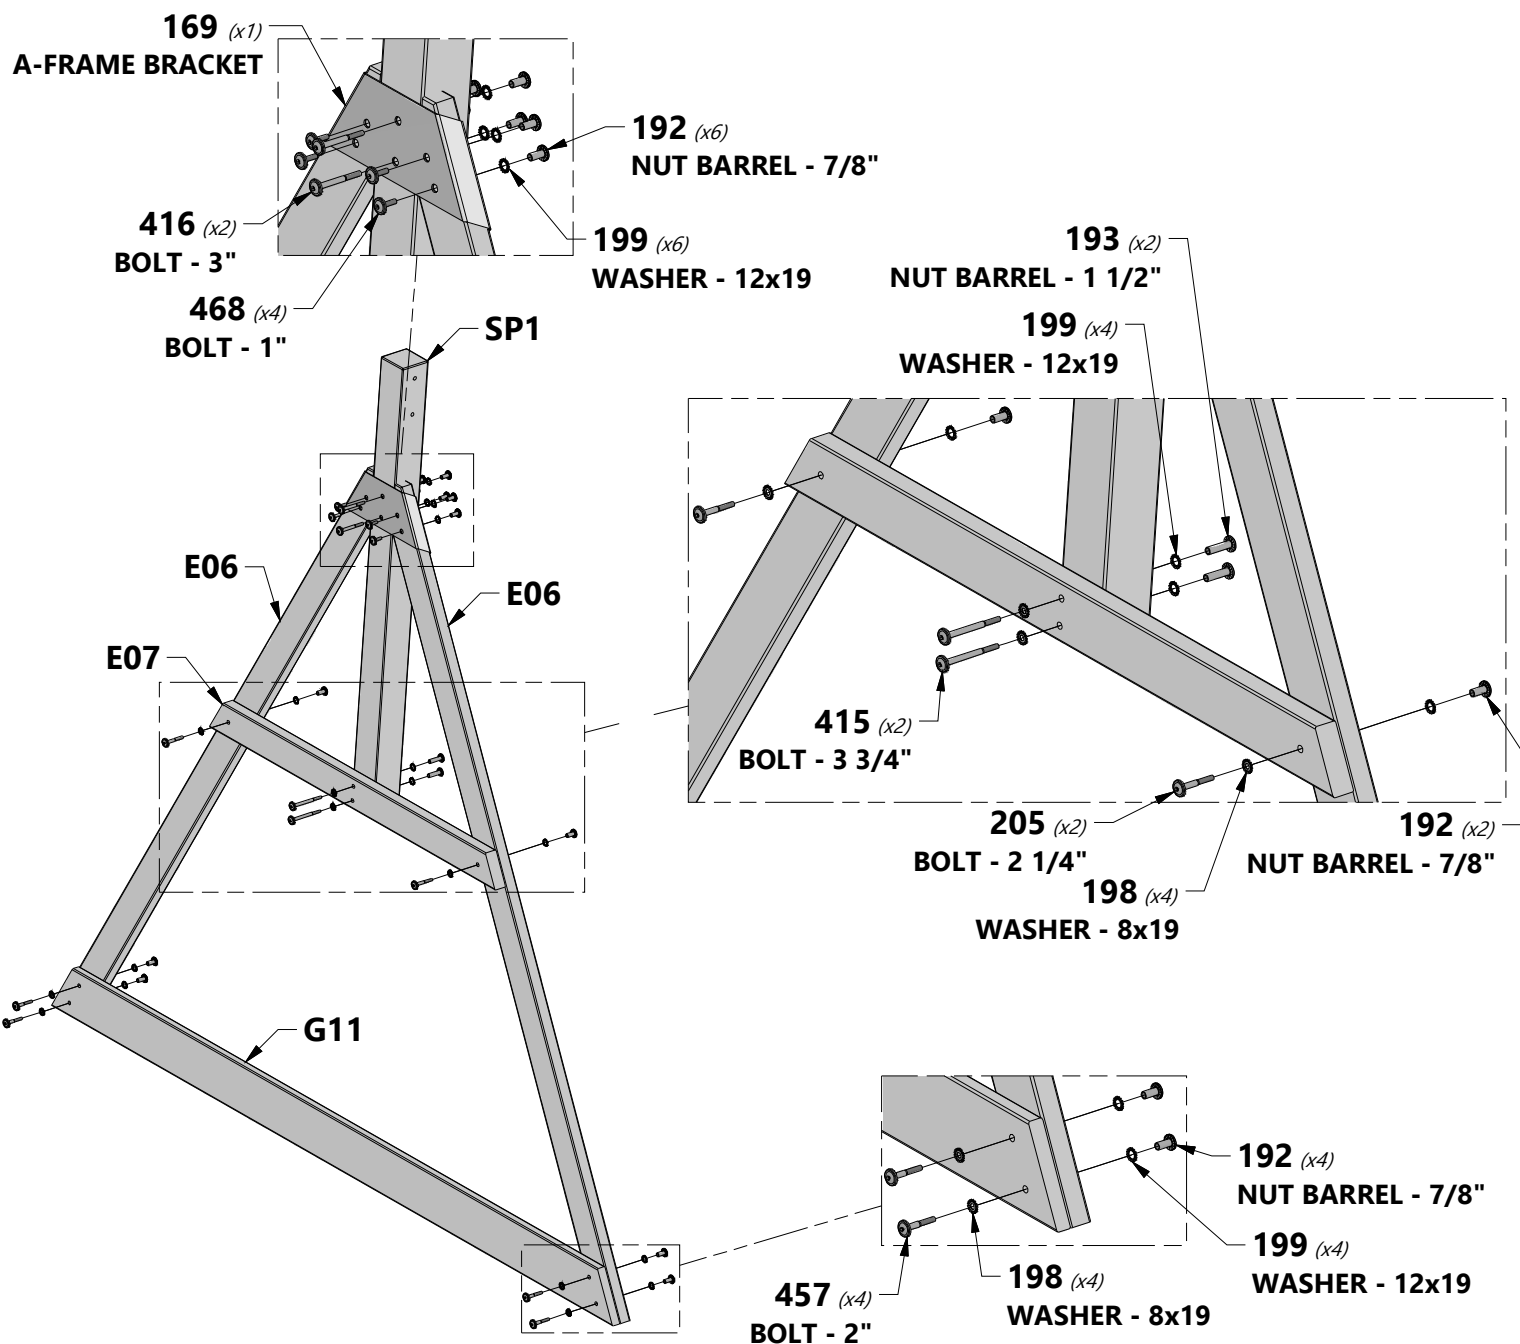



SWING BEAM

STEP 4

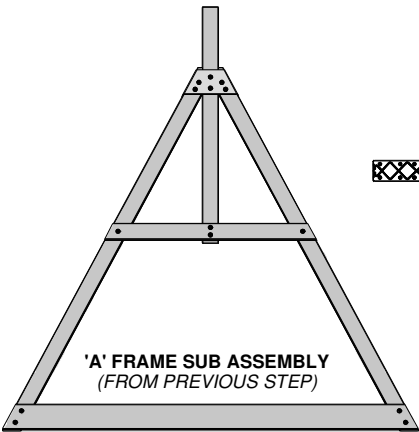


SWING BEAM SUB ASSEMBLY
(FROM PREVIOUS STEP)




H100416 | BOLT WH BLK
(x2) 5/16x3



H100192 | NUT BARREL WH BLK
(x2) 5/16x7/8

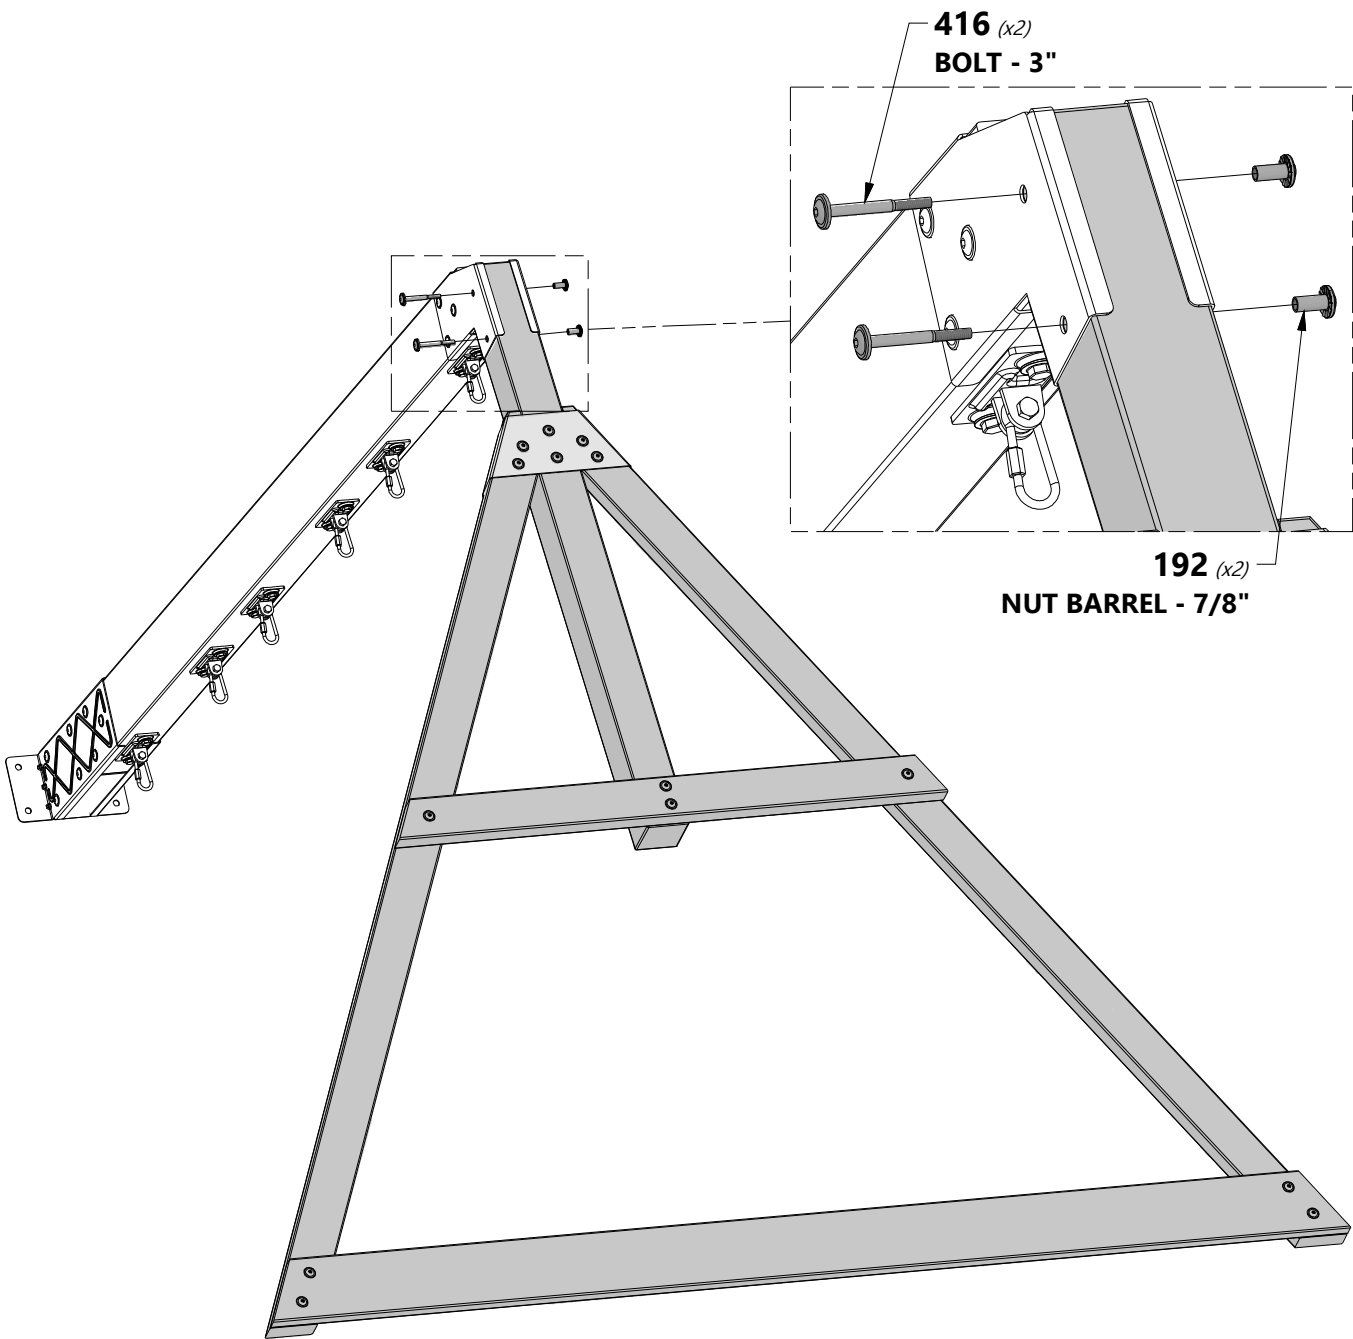



SETUP

WEB SWING

WEB SWING SETUP INSTRUCTIONS:

FOLLOW INSTRUCTIONS BELOW BEFORE USING THE WEB SWING.



H100832 | BOLT PTH
(4) | 1/4x3/4




H100831 | NUT BARREL PTH BLK
(4) | 1/4x3/4




IMPORTANT:
SLIDE ROPE LOOPS OVER TUBE ENDS FIRST!

SLIDE NARROW END OF TUBES INTO
LARGER OPENING **AFTER** SLIDING
ROPE LOOPS ONTO TUBES.

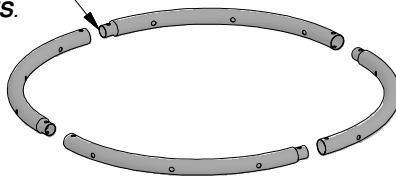

NOTE: ROPE WEBBING NOT
SHOWN IN ILLUSTRATION
FOR CLARITY.

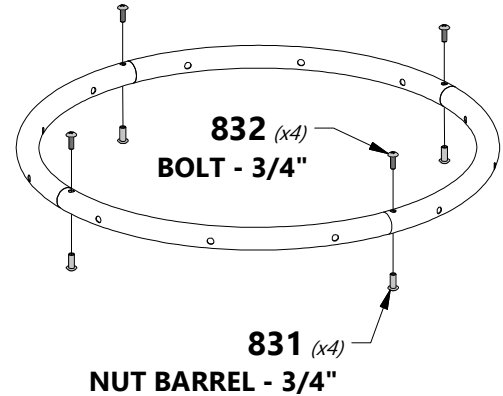

*Note: It is important that
the web swing hang level.*





IMPORTANT

TO ENSURE STRAIGHT
SWINGING MOTION,
ADJUST BOTH
"S" BRACKETS UNTIL
WEB SEAT IS LEVEL.



IMPORTANT:

SWING MUST BE SET
AT A MINIMUM OF 8
INCHES OFF THE
GROUND WHEN
INSTALLED.

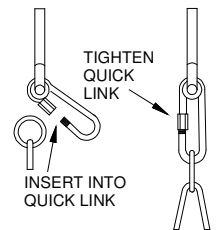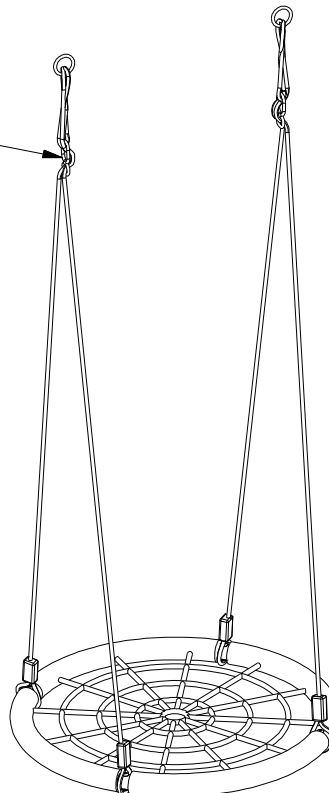



FORT ASSEMBLY

STEP 1

B02 | POST - W4L13915
(x1) 3"x3"x86 7/8" (76x76x2207)

B03 | POST - W4L13902
(x1) 3"x3"x86 7/8" (76x76x2207)





B05 | POST - W4L13986
(x1) 3"x3"x86 7/8" (76x76x2207)

H05 | RAIL - W4L13932
(x1) 1"x3 3/8"x34 1/2" (24x86x876)

G01 | GROUND BOARD - W4L13907
(x1) 1"x5 1/4"x67 7/8" (24x134x1724)

G07 | FLOOR RAIL - W4L13953
(x1) 1"x5 1/4"x66" (24x134x1676)

H02 | RAIL - W4L13985
(x1) 1"x3 3/8"x34 1/2" (24x86x876)

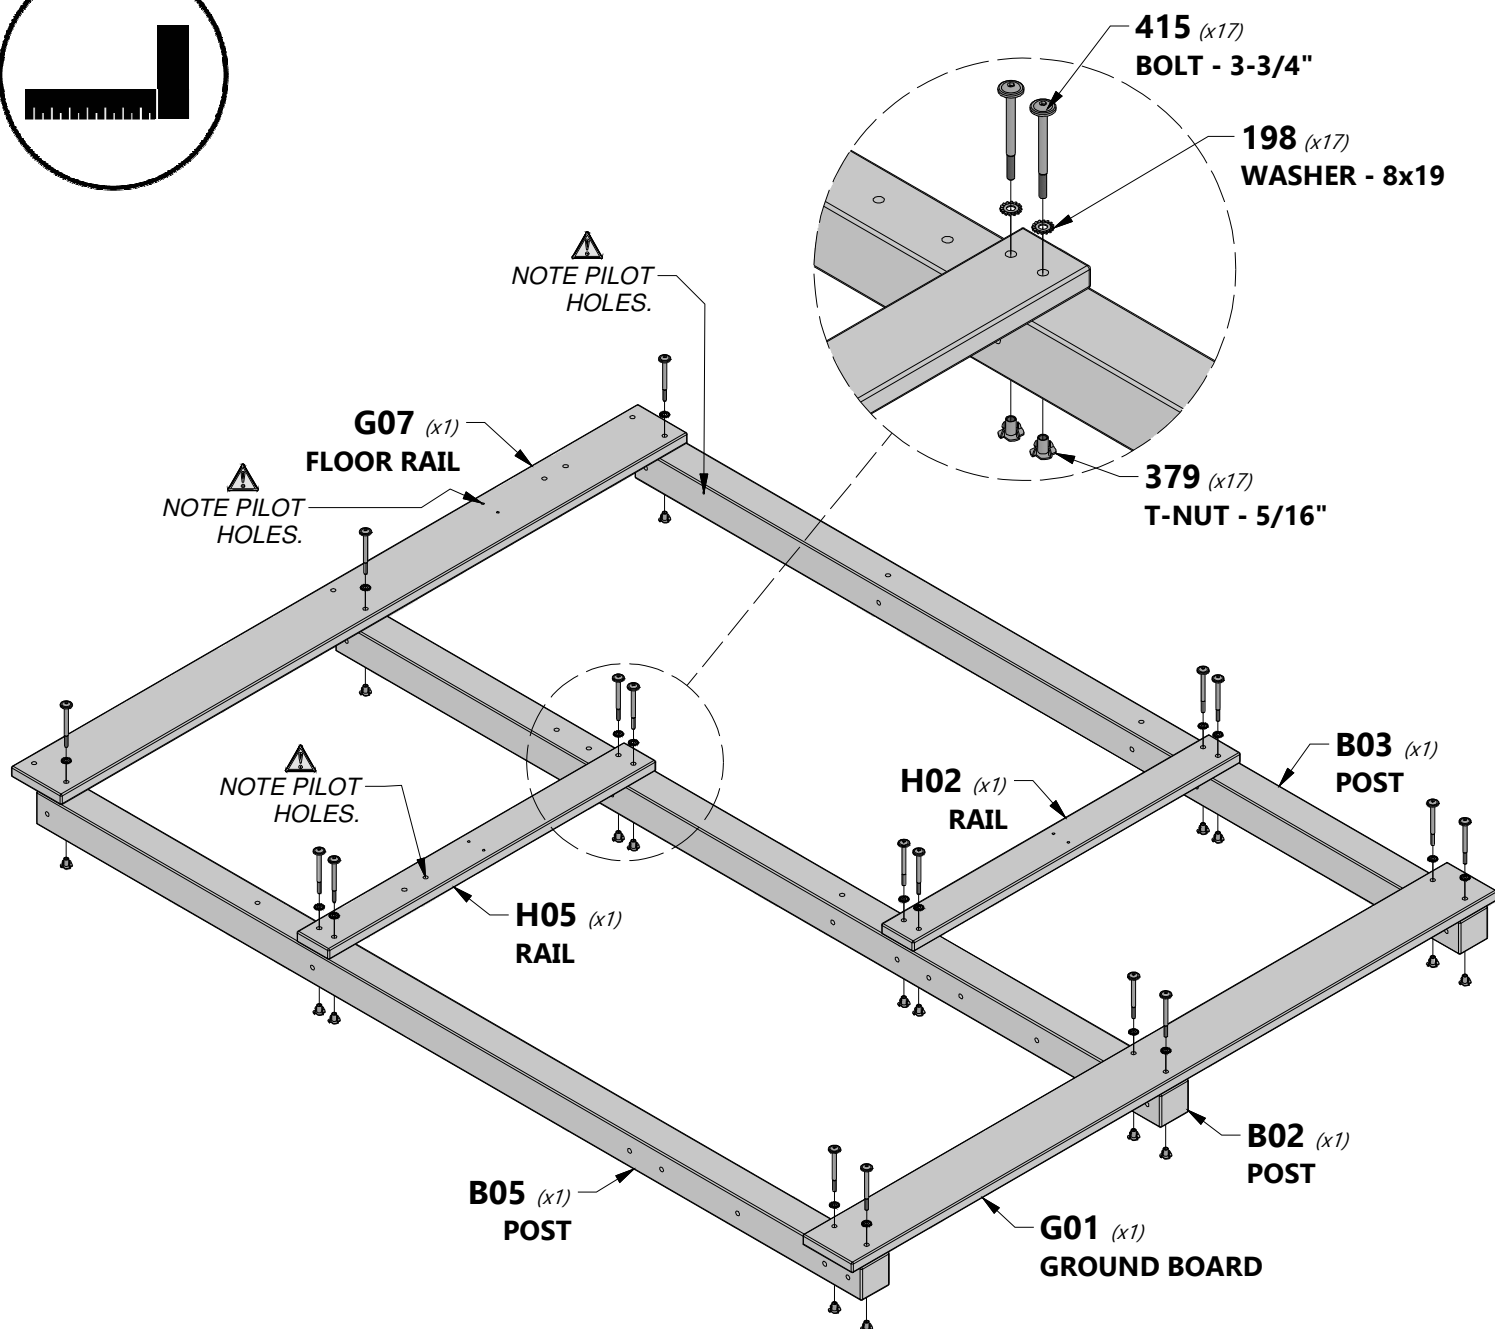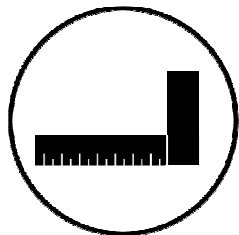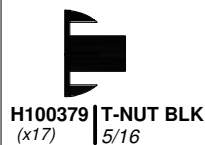




FORT ASSEMBLY

STEP 2



- G02** | GROUND BOARD - W4L13984
(x1) | 1"x5 1/4"x86 1/8" (24x134x2187)
- B04** | POST - W2A03074
(x1) | 3 1/16"x3"x86 7/8" (78x76x2207)
- B01** | POST - W4L13900
(x1) | 3"x3"x86 7/8" (76x76x2207)
- B06** | POST - W4L13987
(x1) | 3"x3"x86 7/8" (76x76x2207)

- G06** | FLOOR RAIL - W4L13908
(x1) | 1"x5 1/4"x66" (24x134x1676)
- H02** | RAIL - W4L13985
(x1) | 1"x3 3/8"x34 1/2" (24x86x876)
- H05** | RAIL - W4L13932
(x1) | 1"x3 3/8"x34 1/2" (24x86x876)



H100379 | T-NUT BLK
(x21) | 5/16

H100198 | WASHER LOCK EXT BLK
(x17) | 8x19

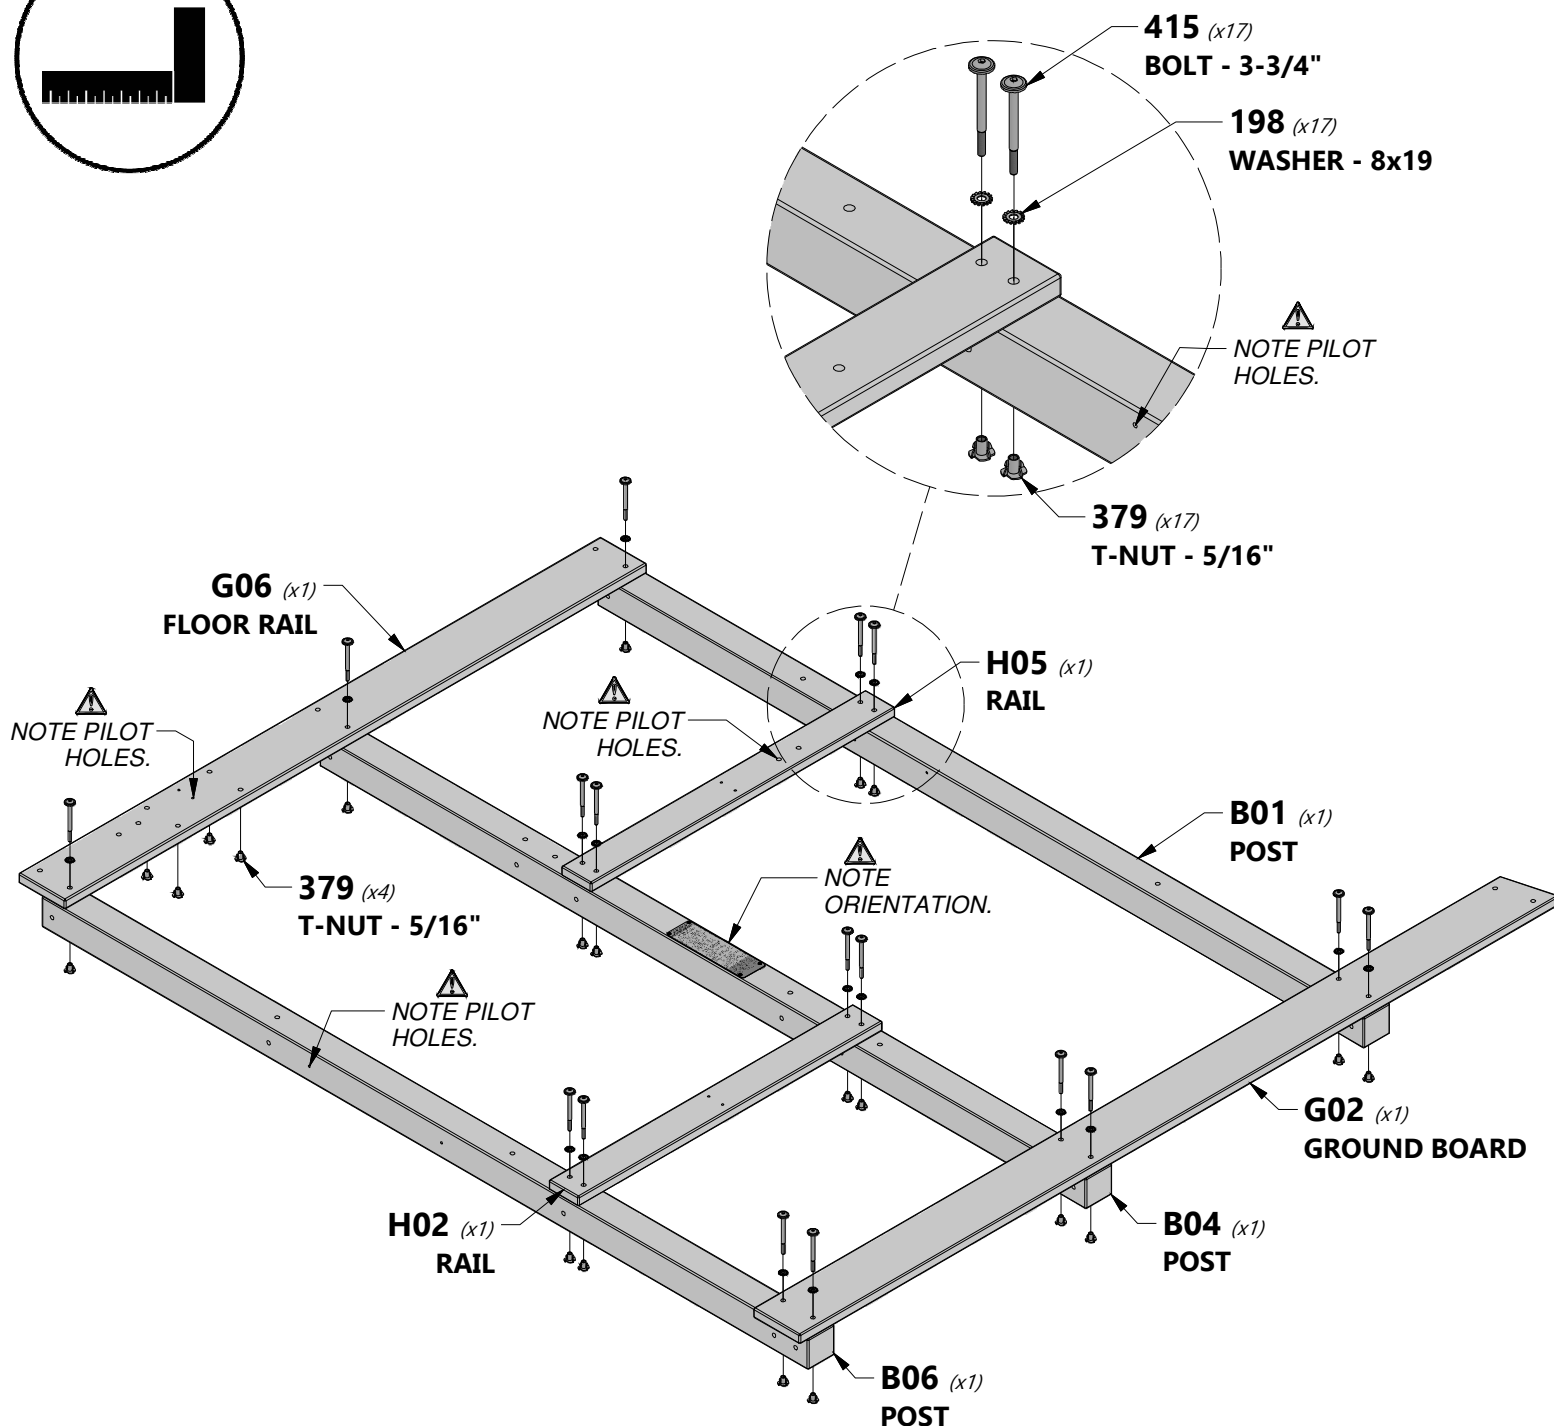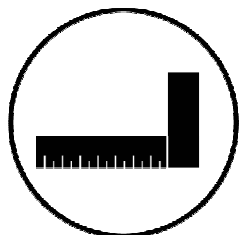



FORT ASSEMBLY

STEP 3

G03 | GROUND BOARD - W4L13911
(x1) | 1"x5 1/4"x60" (24x134x1524)

G04 | GROUND BOARD - W4L13982
(x1) | 1"x5 1/4"x60" (24x134x1524)

H01 | RAIL - W4L13926
(x1) | 1"x3 3/8"x61 7/8" (24x86x1572)

G08 | FLOOR RAIL - W4L13912
(x1) | 1"x5 1/4"x61 7/8" (24x134x1572)

G09 | WALL RAIL - W4L13909
(x1) | 1"x5 1/4"x61 7/8" (24x134x1572)

H07 | RAIL - W4L13925
(x1) | 1"x3 3/8"x61 7/8" (24x86x1572)


H100415 | BOLT WH BLK
(x16) | 5/16x3 3/4



H100198 | WASHER LOCK EXT BLK
(x16) | 8x19



H100379 | T-NUT BLK
(x16) | 5/16

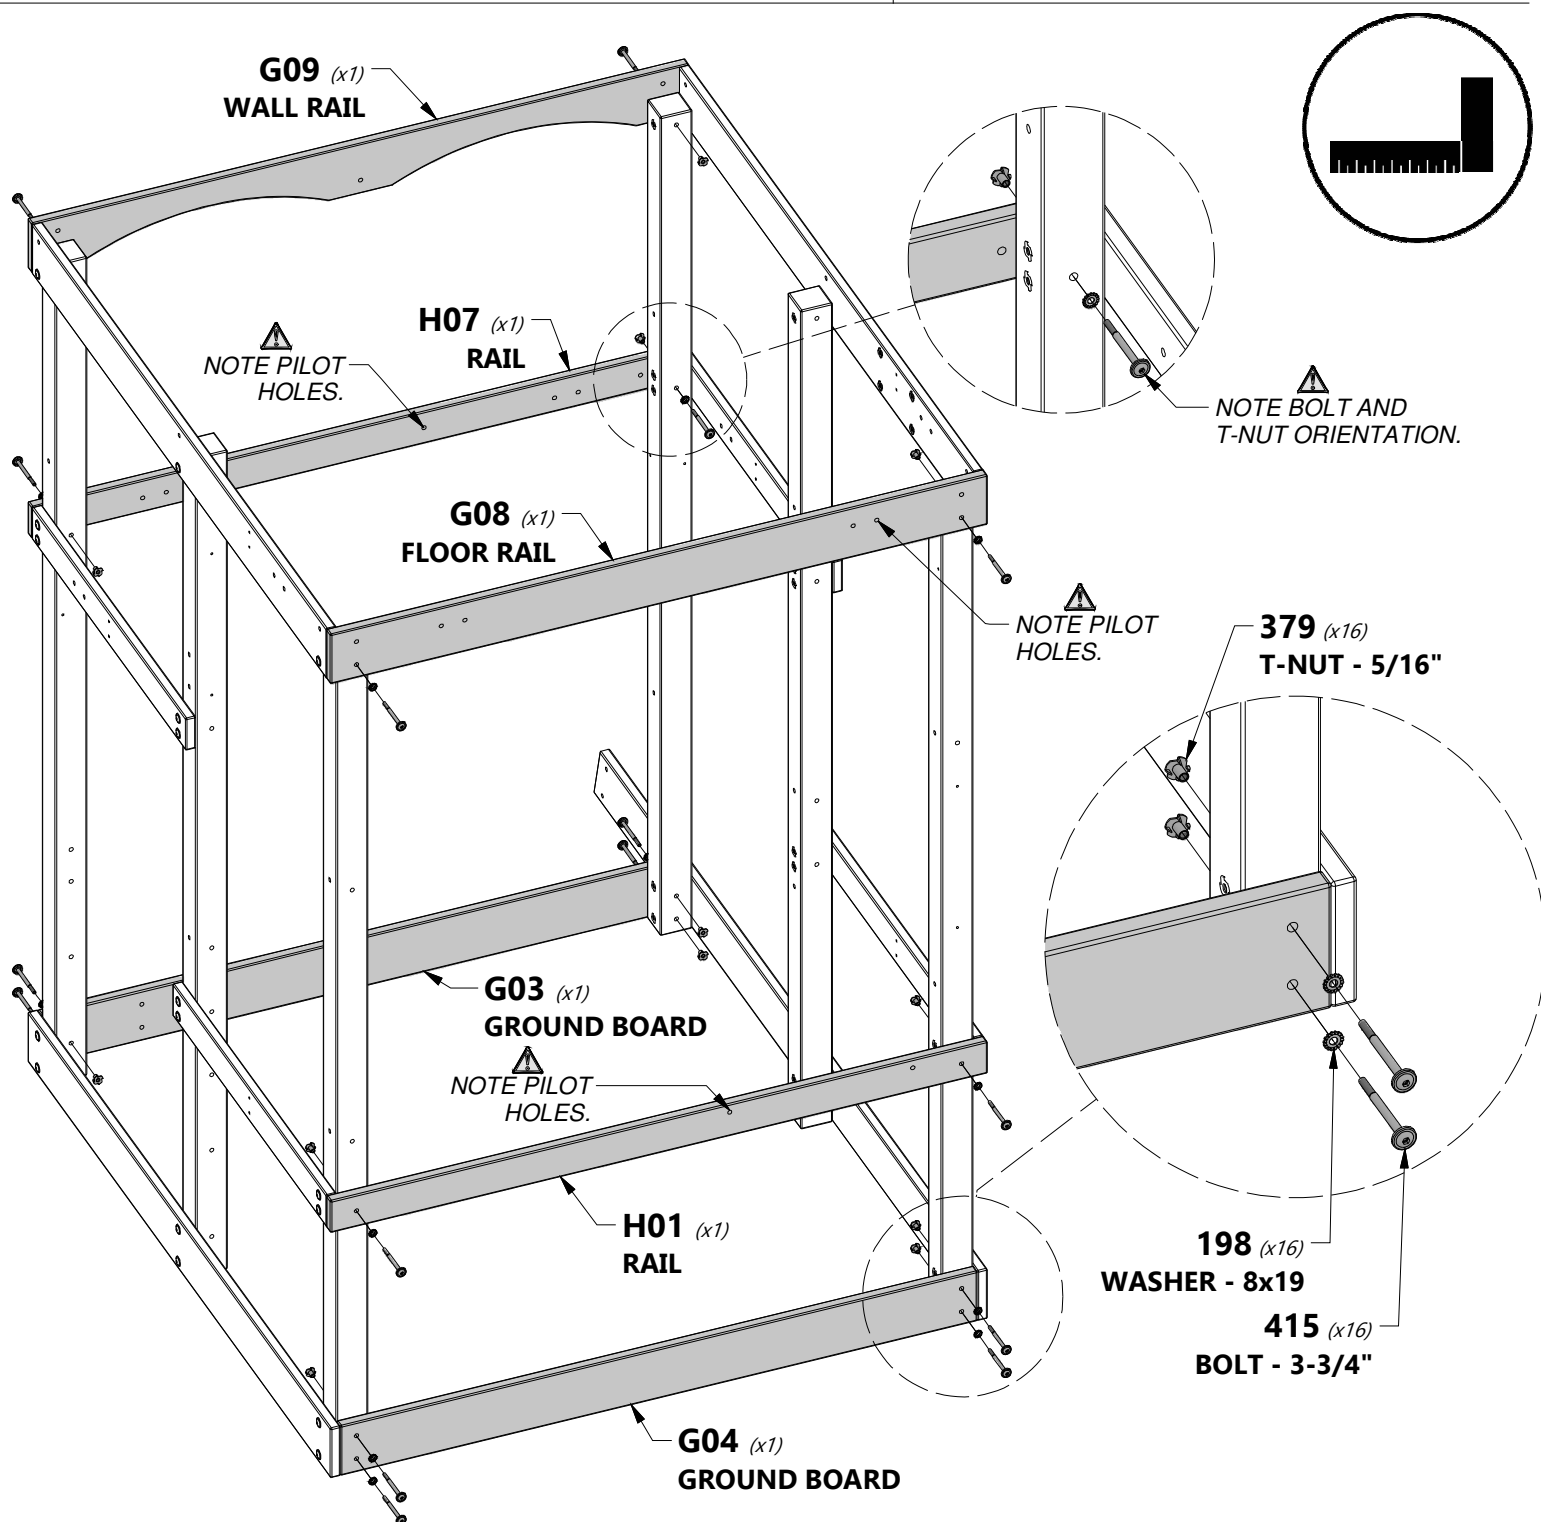



FORT ASSEMBLY

STEP 4

G03 | GROUND BOARD - W4L13911
(x1) | 1"x5 1/4"x60" (24x134x1524)

H06 | RAIL - W4L13983
(x1) | 1"x3 3/8"x60" (24x86x1524)

G05 | WALL RAIL - W4L13910
(x1) | 1"x5 1/4"x60" (24x134x1524)


H03 | RAIL - W4L13927
(x1) | 1"x3 3/8"x61 7/8" (24x86x1572)



H100198 | WASHER LOCK EXT BLK
(x10) | 8x19




H100379 | T-NUT BLK
(x10) | 5/16

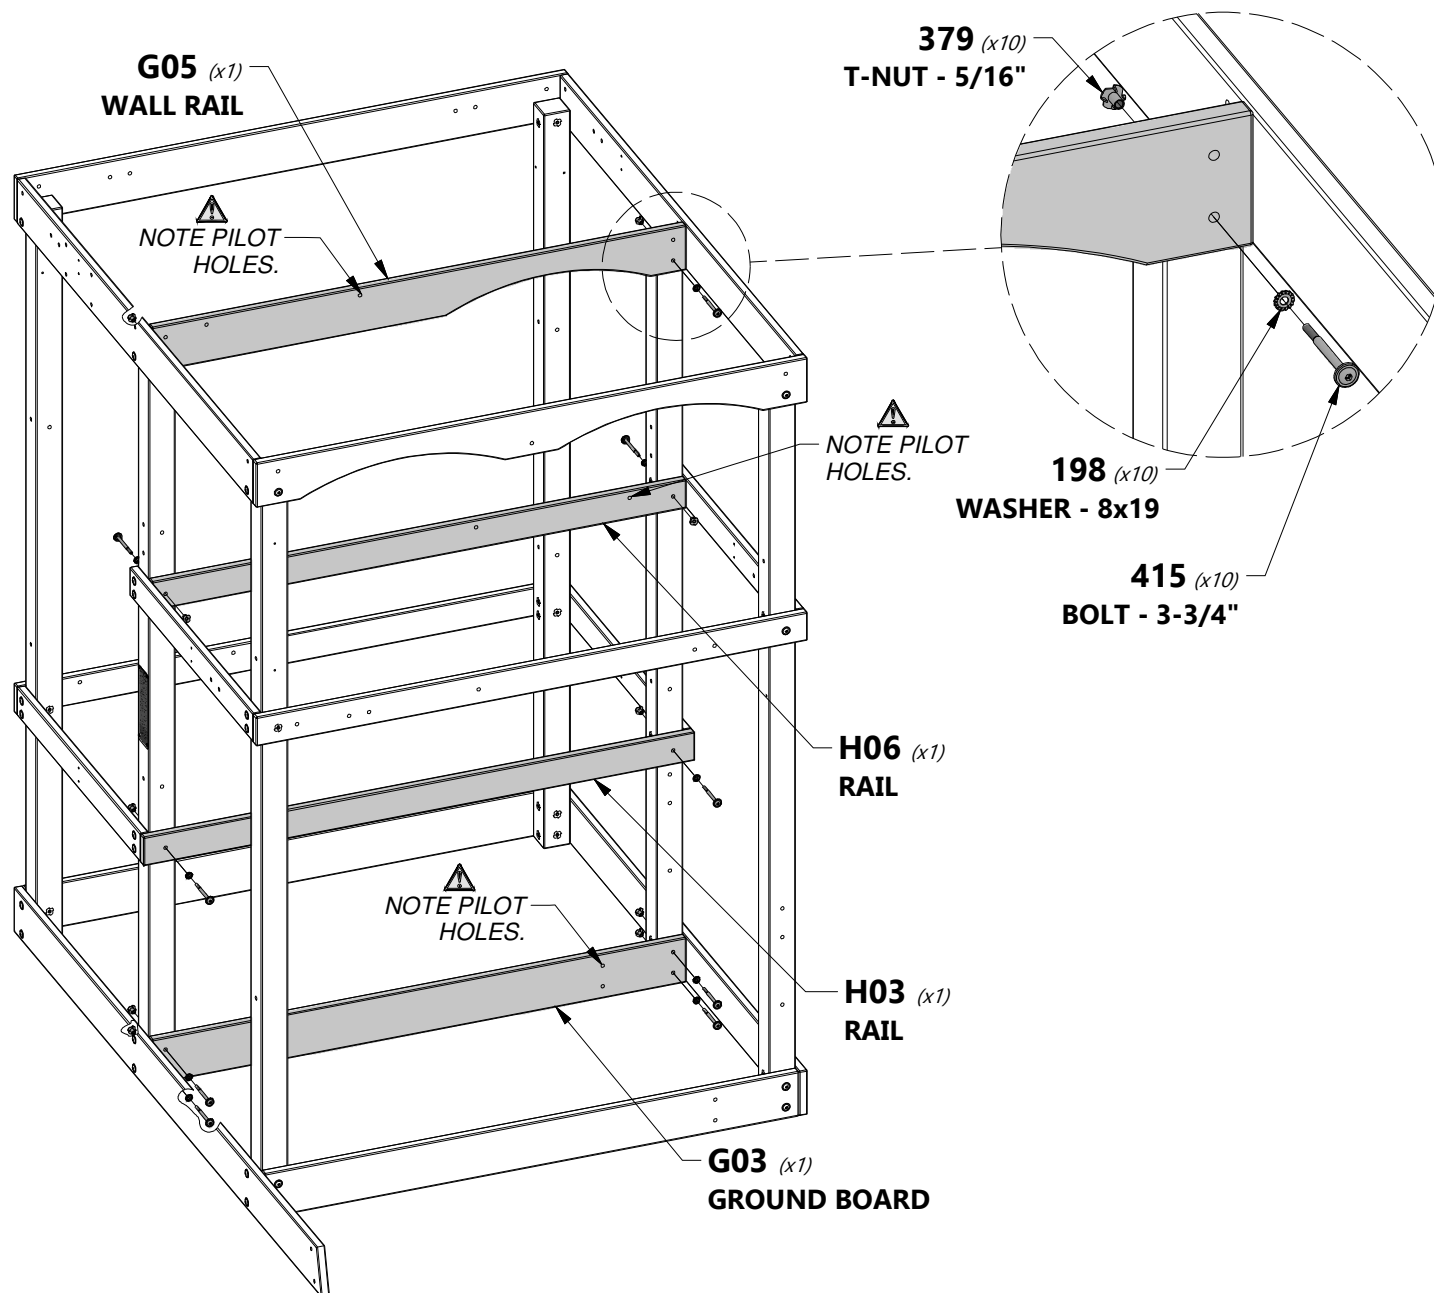



FORT ASSEMBLY

STEP 5



E01 | ANGLE BRACE - W4L13971
(x8) | 1 3/8"x3 3/8"x16 1/2" (36x86x420)



H100205 | BOLT WH BLK
(x16) | 5/16x2-1/4



H100456 | LAG SCREW WH BLK
(x8) | 1/4x2 1/2




H100198 | WASHER LOCK EXT BLK
(x16) | 8x19




H100405 | WASHER LOCK EXT BLK
(x8) | 6x15



H100379 | T-NUT BLK
(x16) | 5/16

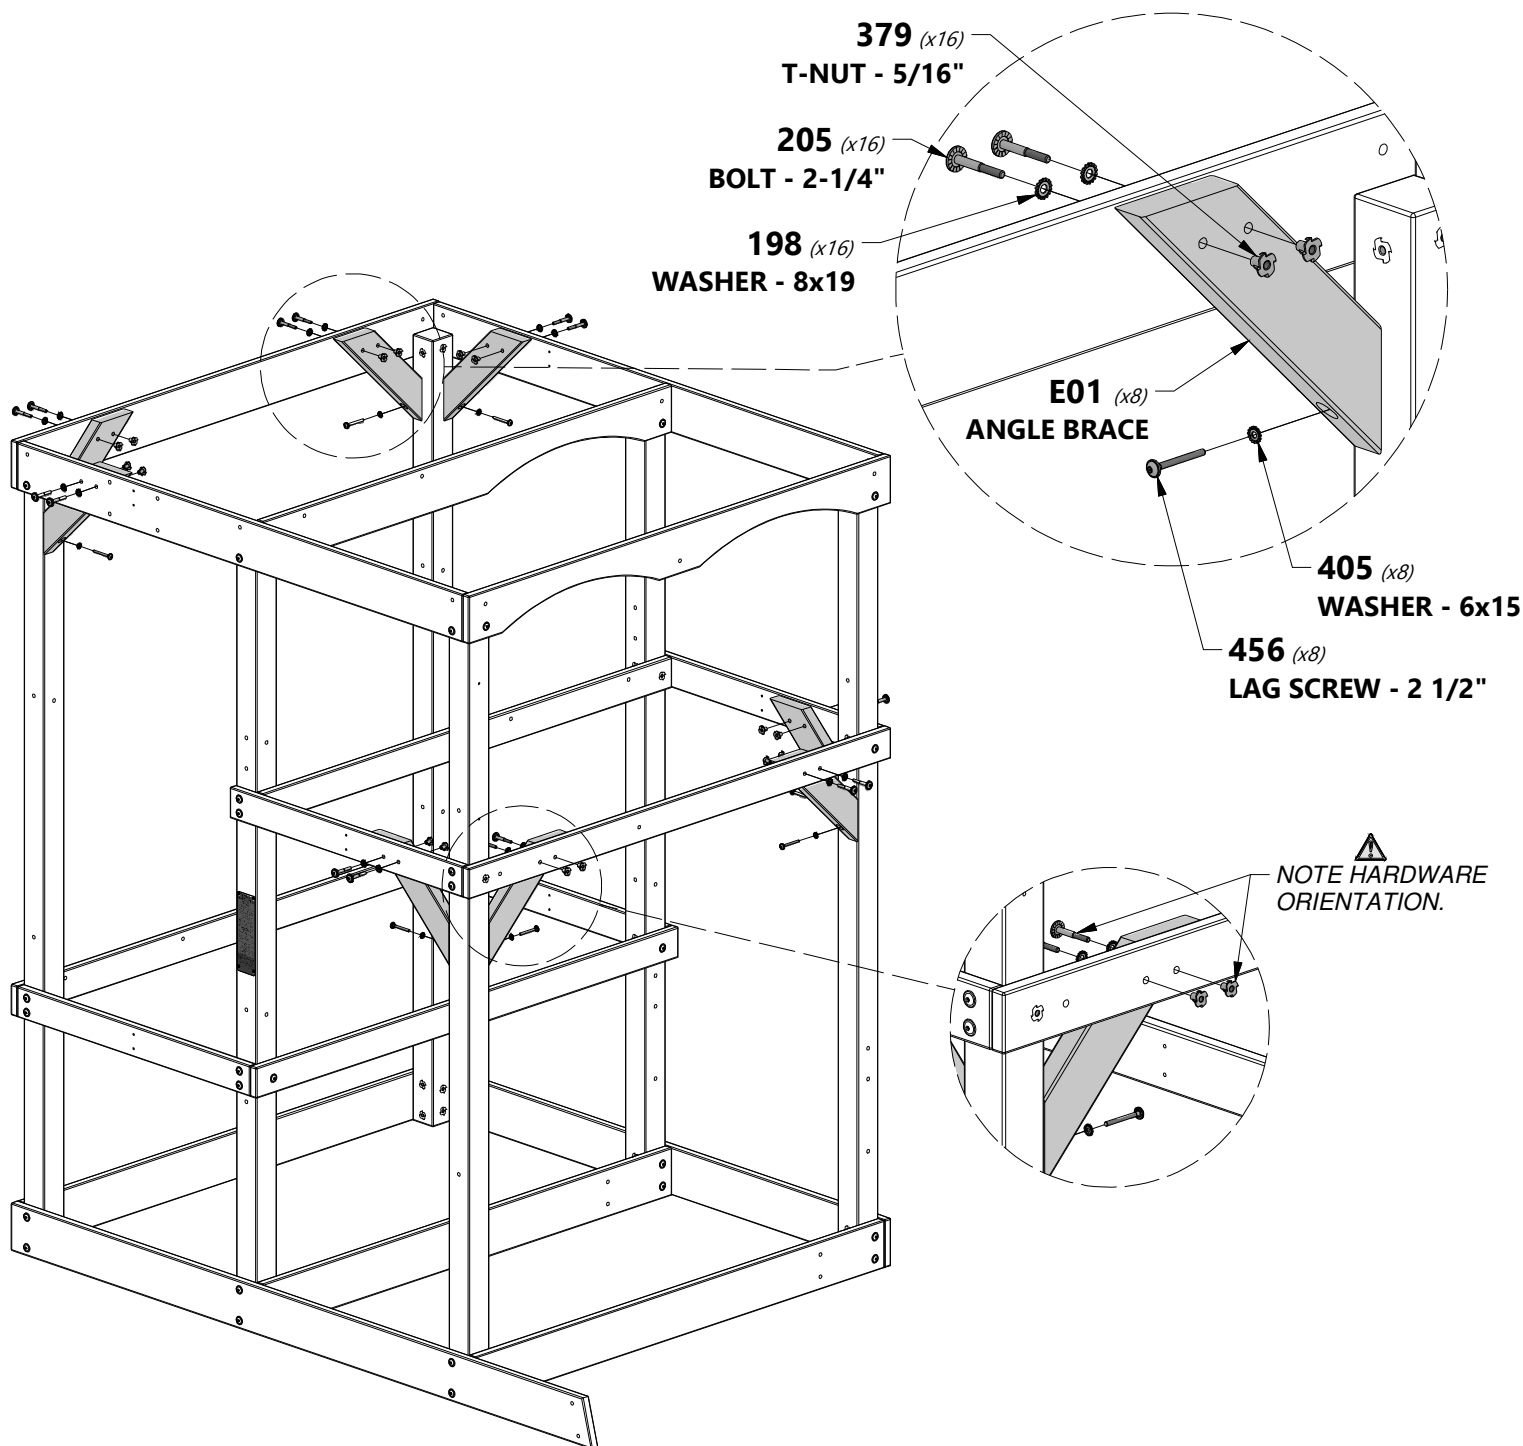

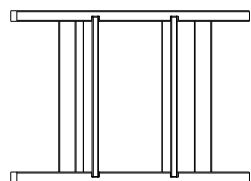


LADDER ASSEMBLY
FROM PREVIOUS STEPS



H100468 | BOLT WH BLK
(x2) | 5/16x1




H100379 | T-NUT BLK
(x2) | 5/16

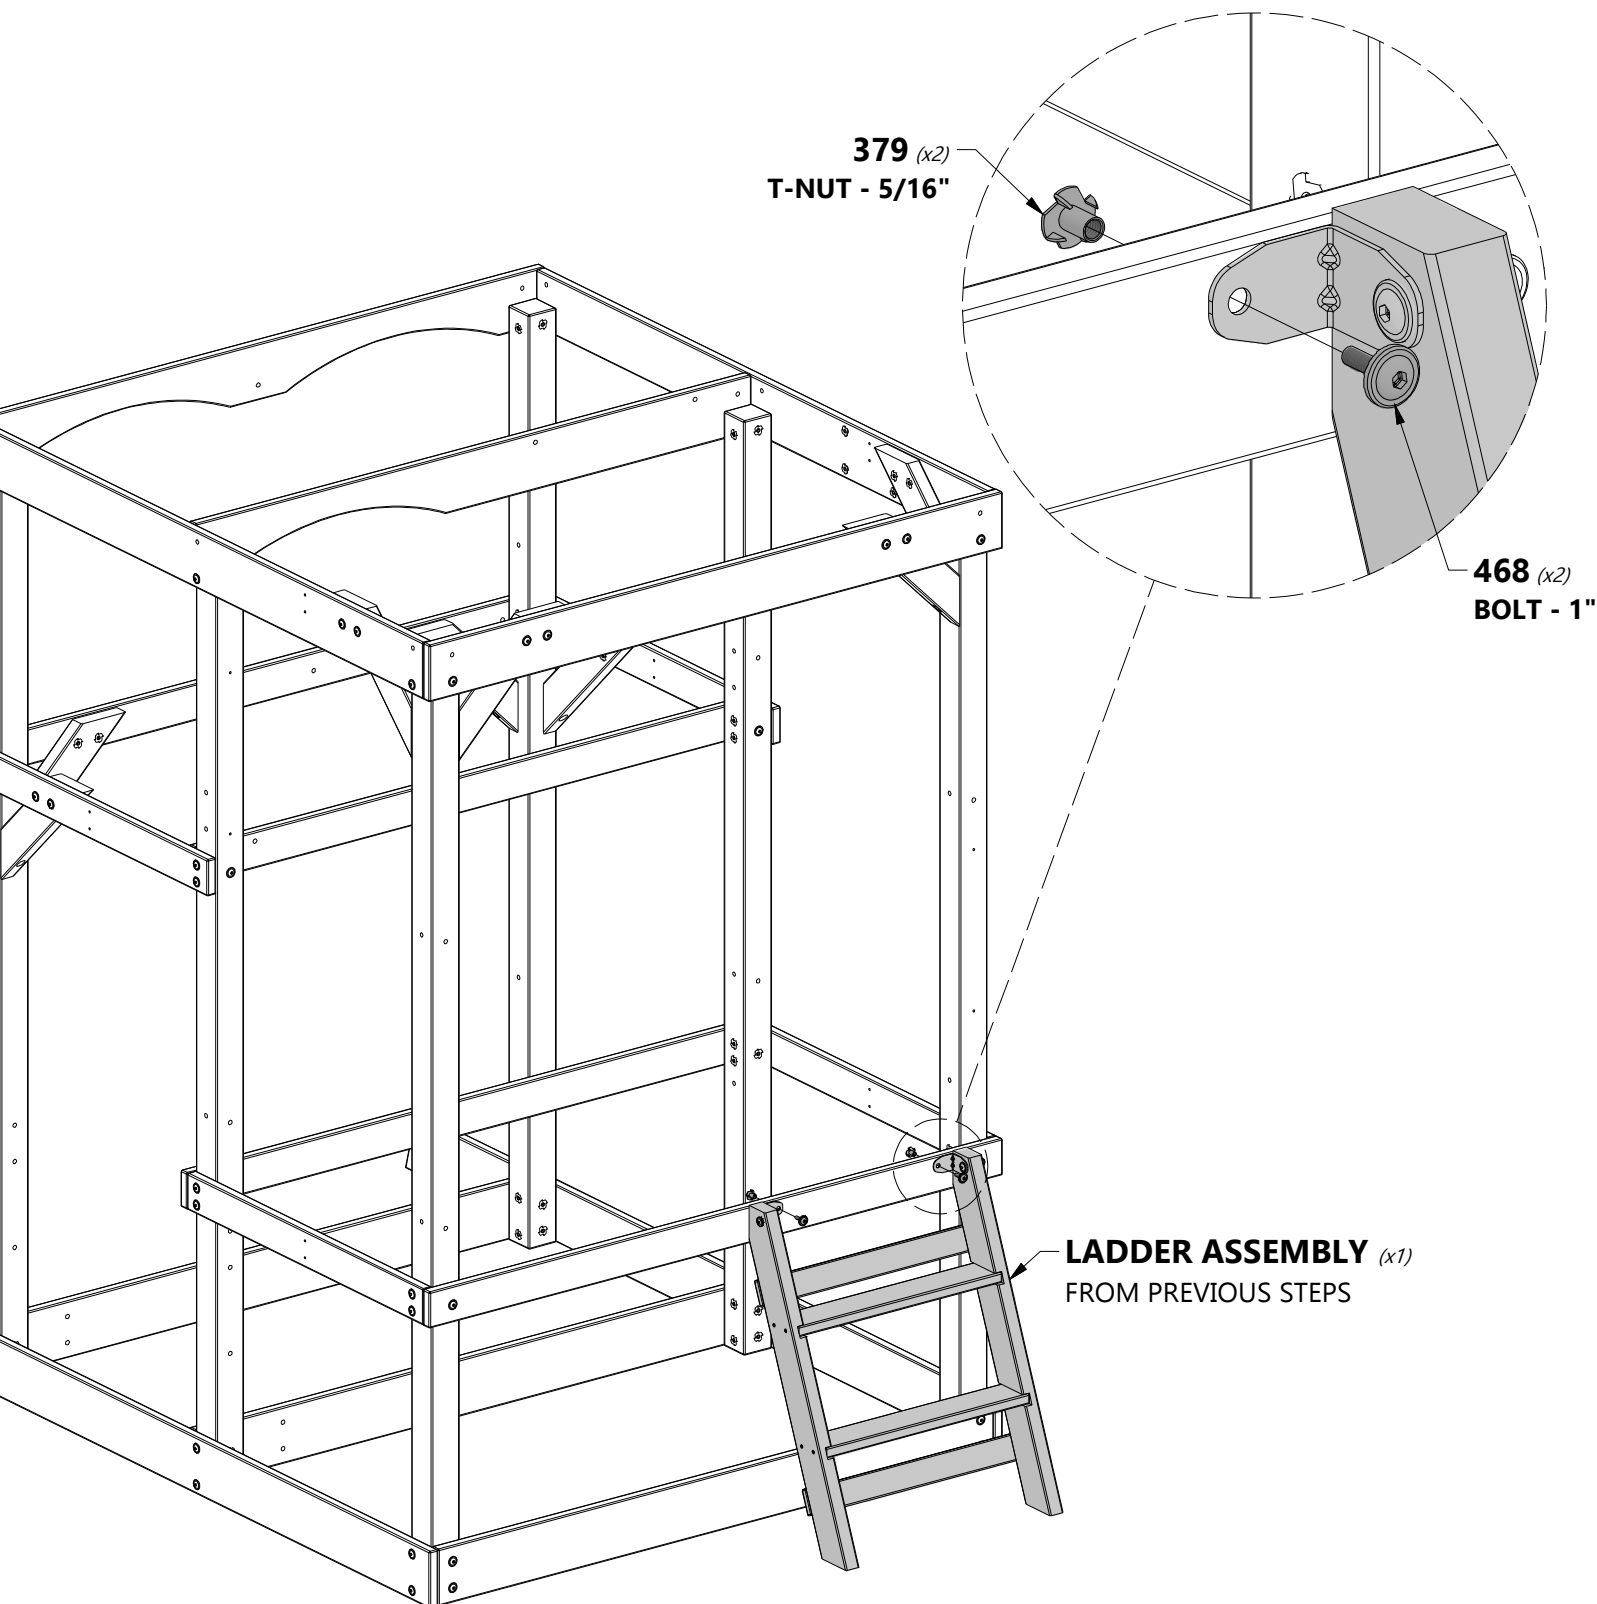




FORT ASSEMBLY


STEP 7

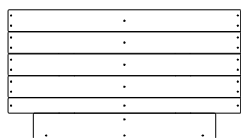

HH1 | FLOOR PANEL - W2A03079
(x1) | 1 1/4"x20 1/8"x36 3/8" (32x510x924)

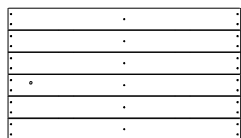

HH2 | FLOOR PANEL - W2A03080
(x1) | 36 3/8"x1 1/4"x20 9/16" (924x32x522)

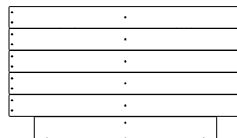

HH3 | FLOOR PANEL - W2A03078
(x1) | 36 3/8"x1 1/4"x21 1/8" (924x32x536)




H04 | RAIL - W4L13928
(x1) | 1"x3 3/8"x60" (24x86x1524)

H100201 | SCREW PFH BLK
(x4) | 8x2-1/2

H100086 | SCREW PFH
(x86) | 8x1 1/2



NOTE:
INSTALL H04 RAIL FIRST, THEN
INSTALL THE FLOOR PANELS AS
SHOWN.

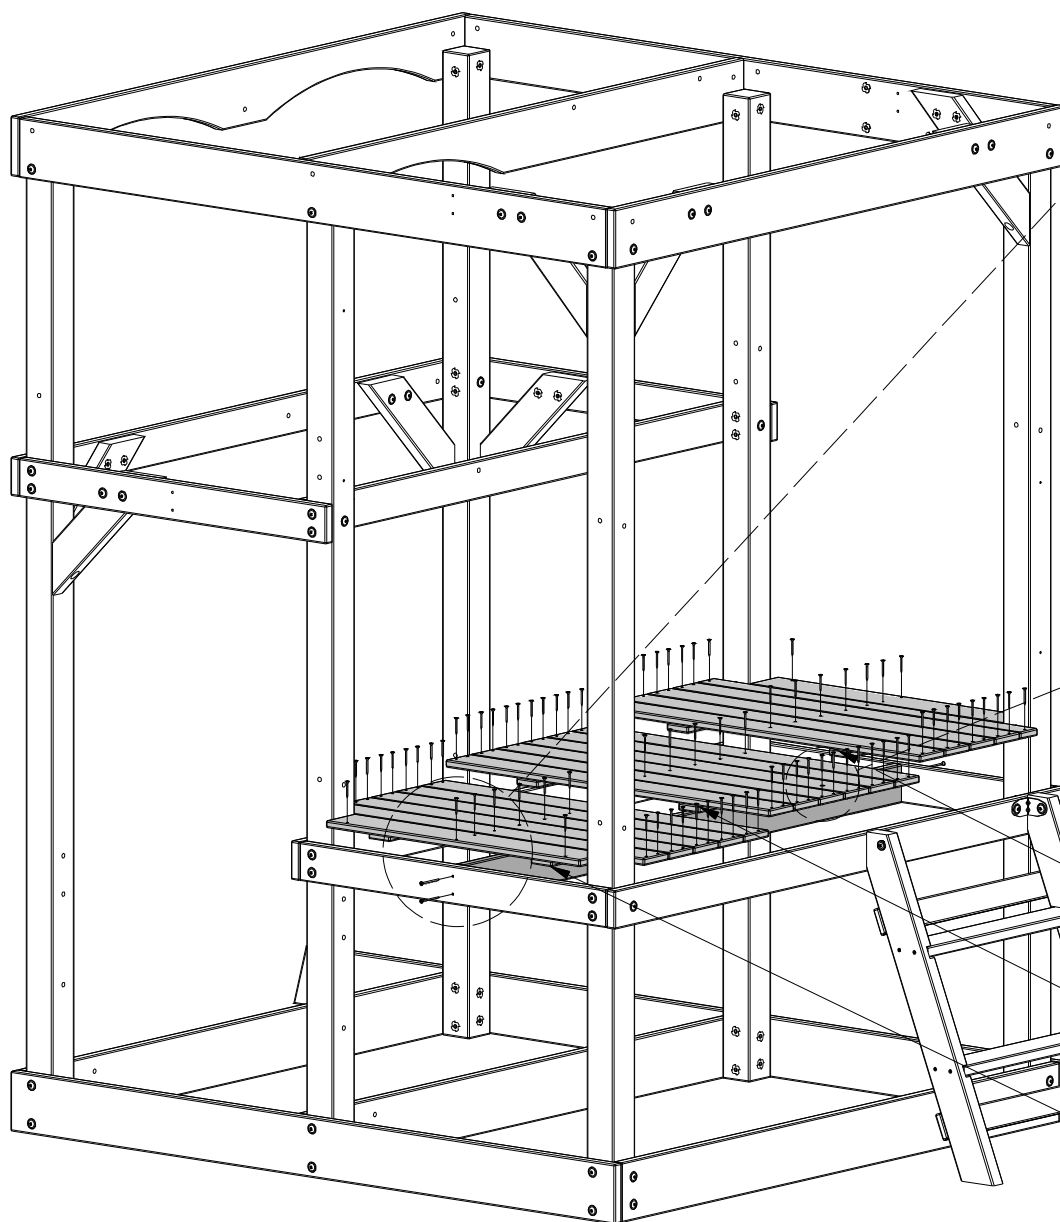

086 (x86)
SCREW - 1 1/2"

H04 (x1)
RAIL

201 (x4)
SCREW - 2 1/2"

NOTE HOLE
ORIENTATION.

HH1 (x1)
FLOOR PANEL

HH2 (x1)
FLOOR PANEL

HH3 (x1)
FLOOR PANEL



A100314 (x1) "A" REVISION TAG



H100202 SCREW PWH BLK
(x2) 8x5/8




H100379 T-NUT BLK
(x4) 5/16

314 (x1)
"A" REVISION TAG

202 (x2)
SCREW - 5/8"

379 (x2)
T-NUT - 5/16"


379 (x2)
T-NUT - 5/16"

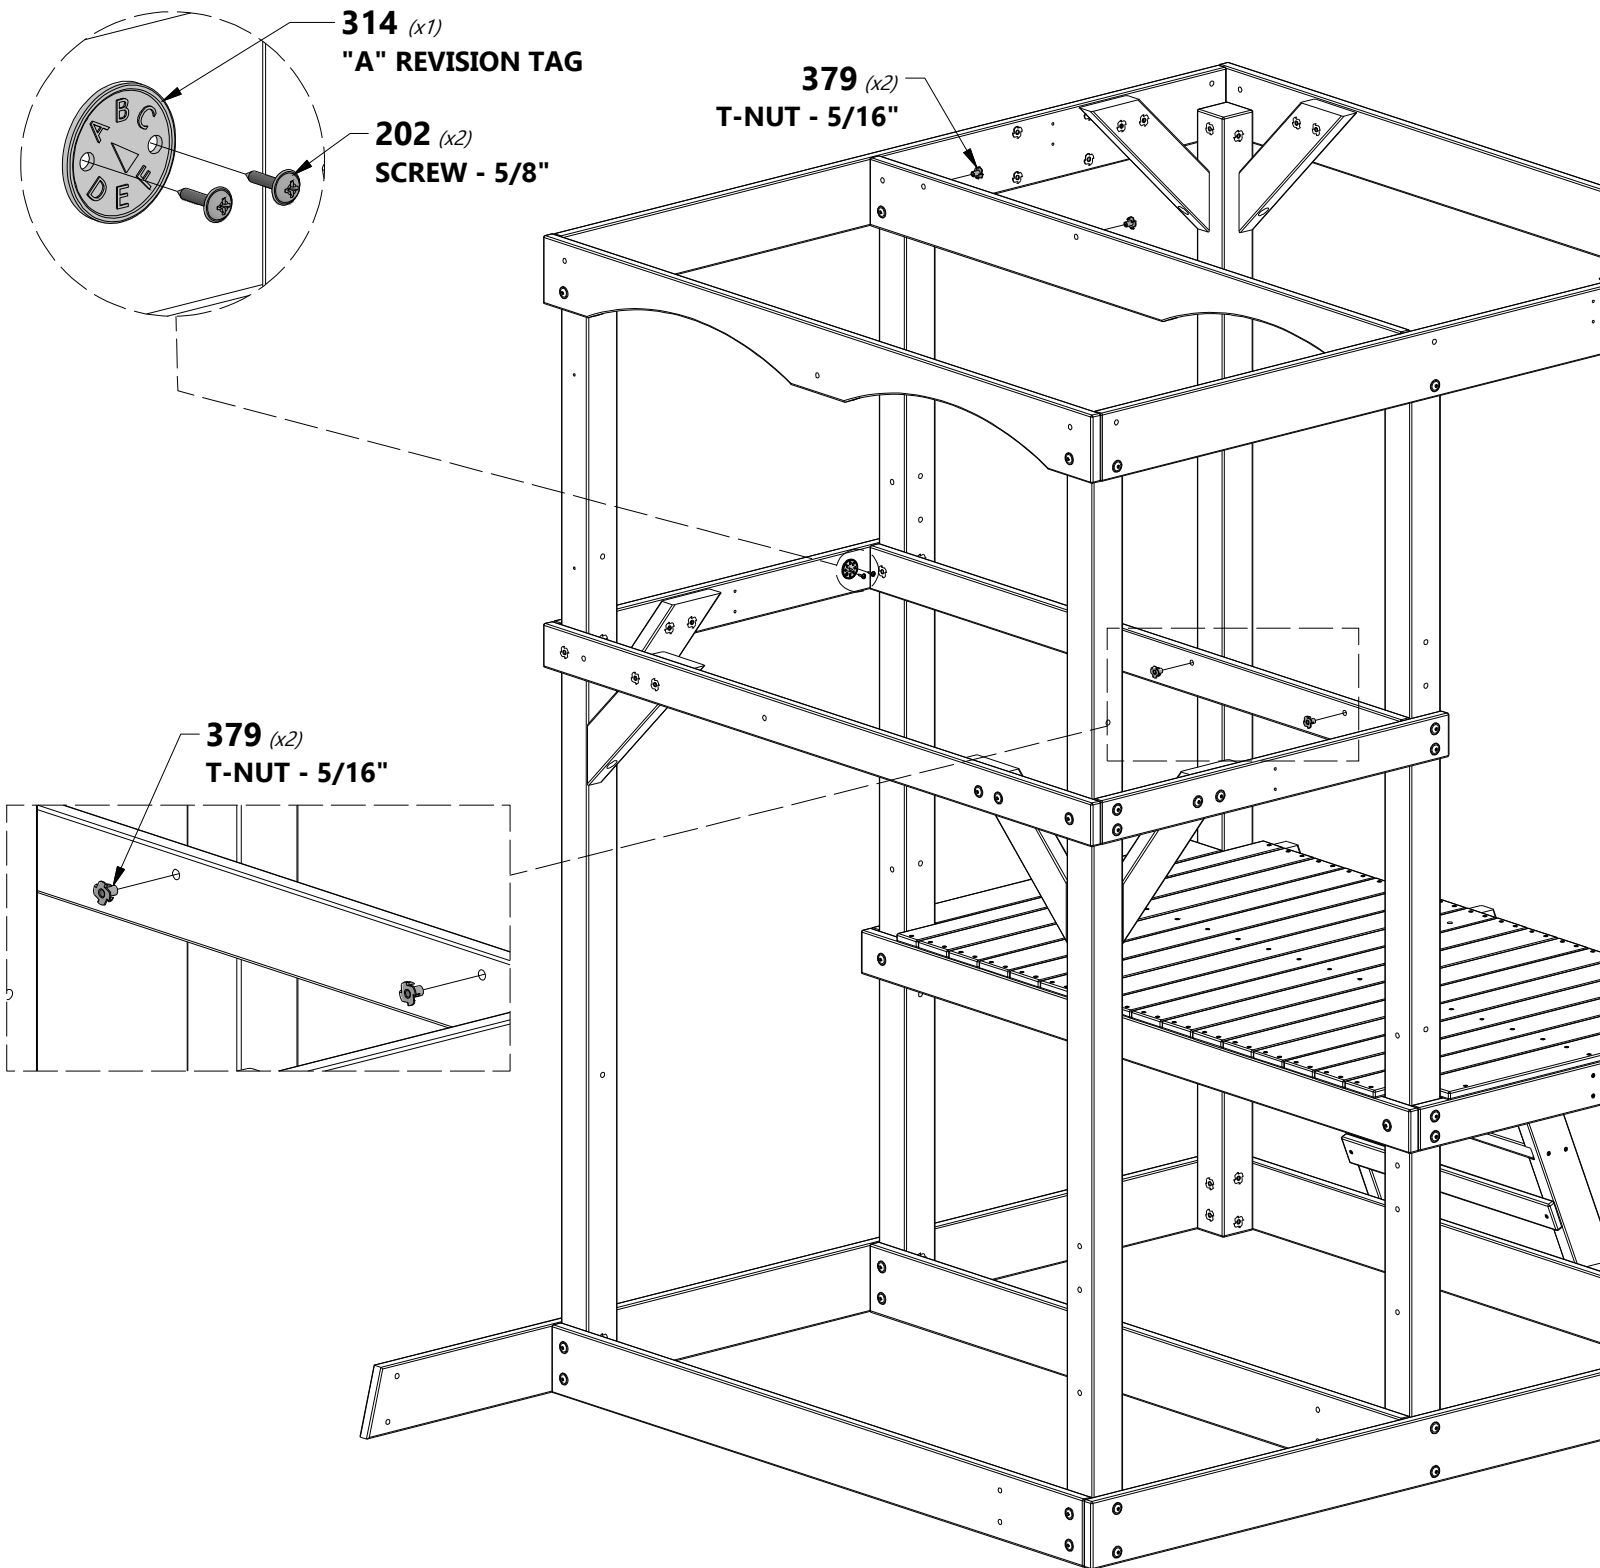



FORT ASSEMBLY


STEP 9

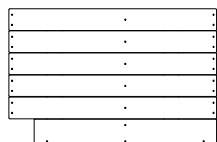

HH4 FLOOR PANEL - W2A03075
(x1) | 32 7/16"x1 1/4"x21 1/8" (824x32x536)



HH5 FLOOR PANEL - W2A03076
(x1) | 1 1/4"x20 9/16"x32 7/16" (32x522x824)

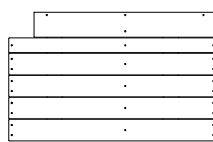

HH6 FLOOR PANEL - W2A03077
(x1) | 1 1/4"x20 1/8"x32 7/16" (32x510x824)



H04 RAIL - W4L13928
(x1) | 1"x3 3/8"x60" (24x86x1524)



H100201 SCREW PFH BLK
(x4) | 8x2-1/2



H100086 SCREW PFH
(x86) | 8x1 1/2



NOTE:

INSTALL H04 RAIL FIRST, THEN
INSTALL THE FLOOR PANELS AS
SHOWN.

086 (x86)

SCREW - 1 1/2"


H04 (x1)
RAIL

201 (x4)

SCREW - 2 1/2"

 **NOTE PILOT
HOLES.**


 **NOTE HOLE
ORIENTATION.**

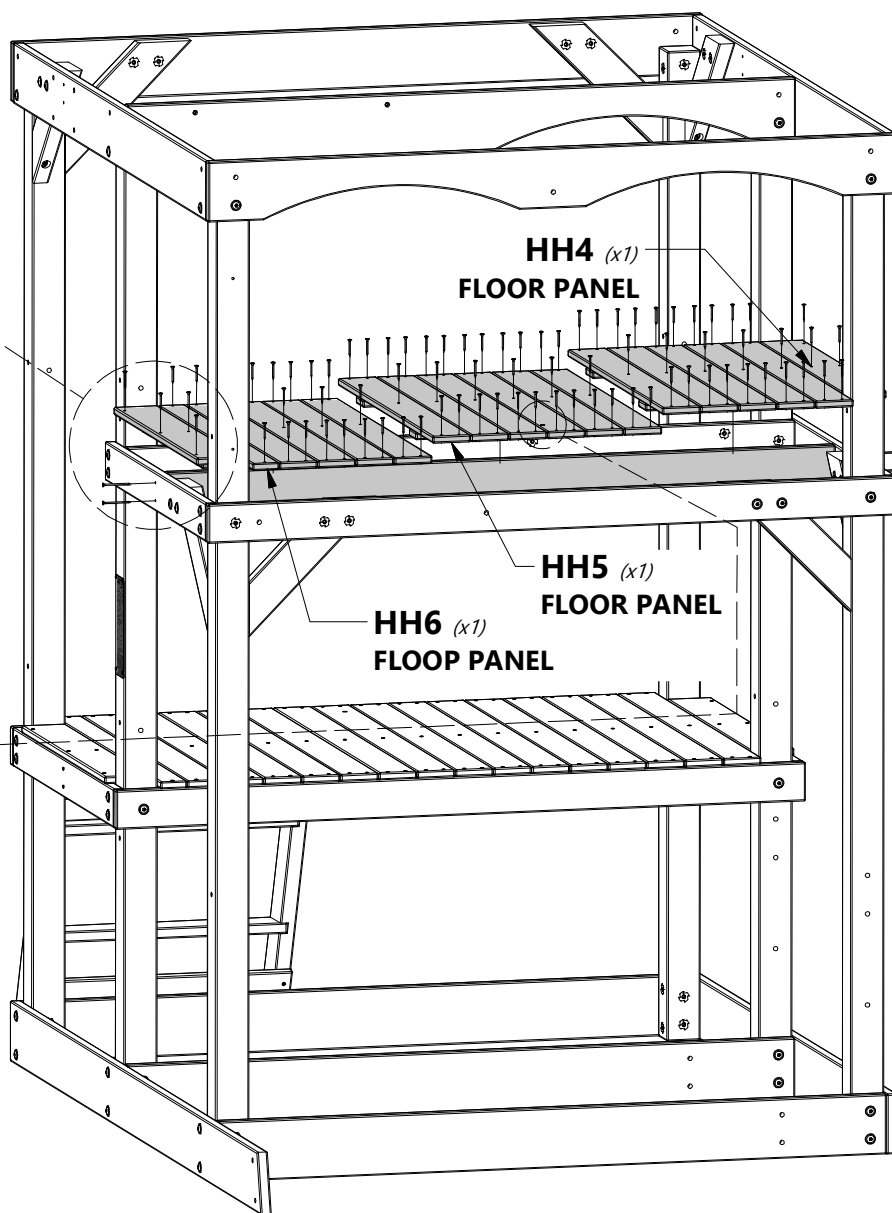



FORT ASSEMBLY

STEP 10



M02 | WALL RAIL - W4L13943
(x1) | 5/8"x3 3/8"x61 1/4" (16x86x1556)





H100503 | BOLT WH BLK
(x2) | 5/16x3 1/2



H100198 | WASHER LOCK EXT BLK
(x2) | 8x19



H100379 | T-NUT BLK
(x2) | 5/16

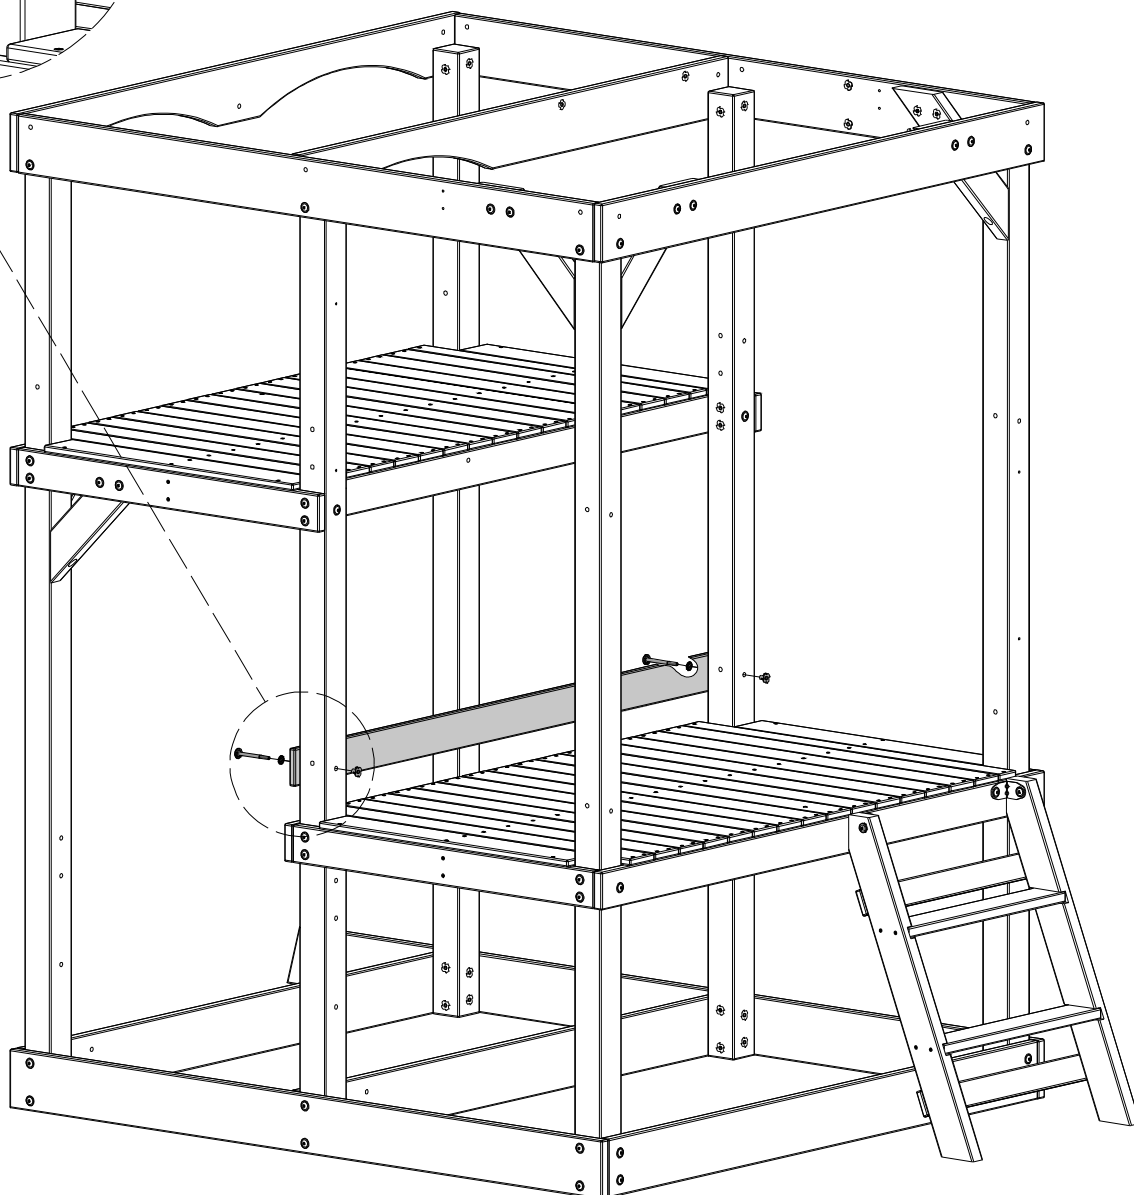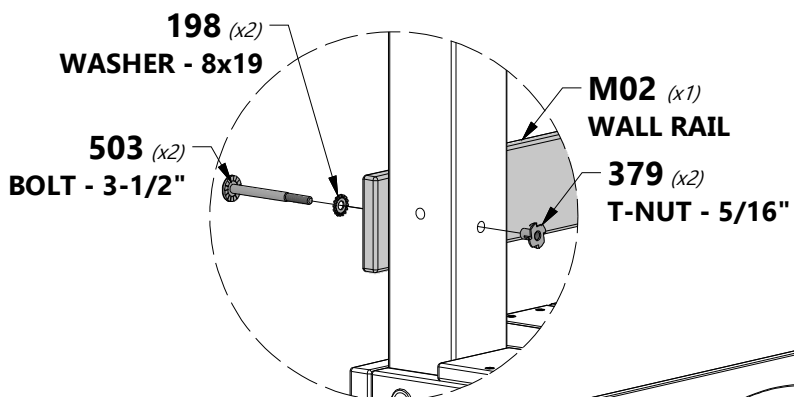



FORT ASSEMBLY

STEP 11

M03 | WALL BOARD - W4L13944
(x1) | 5/8"x3 3/8"x52 3/8" (16x86x1332)

M05 | WALL RAIL - W4L13949
(x1) | 5/8"x3 3/8"x33 1/4" (16x86x844)

H100503 | BOLT WH BLK
(x1) | 5/16x3 1/2

H100088 | SCREW PFH
(x6) | 8x1 1/8

H100459 | BOLT WH BLK
(x1) | 5/16x1 1/4




H100379 | T-NUT BLK
(x2) | 5/16

H100198 | WASHER LOCK EXT BLK
(x2) | 8x19



NOTE:





START BY ASSEMBLING M03 & M05 BOARDS AS SHOWN. THEN MOUNT M05 TO POST USING A SQUARE AND/OR THE DIMENSIONS BELOW TO ENSURE CORRECT PLACEMENT AND INSTALL WITH SCREWS AS SHOWN.

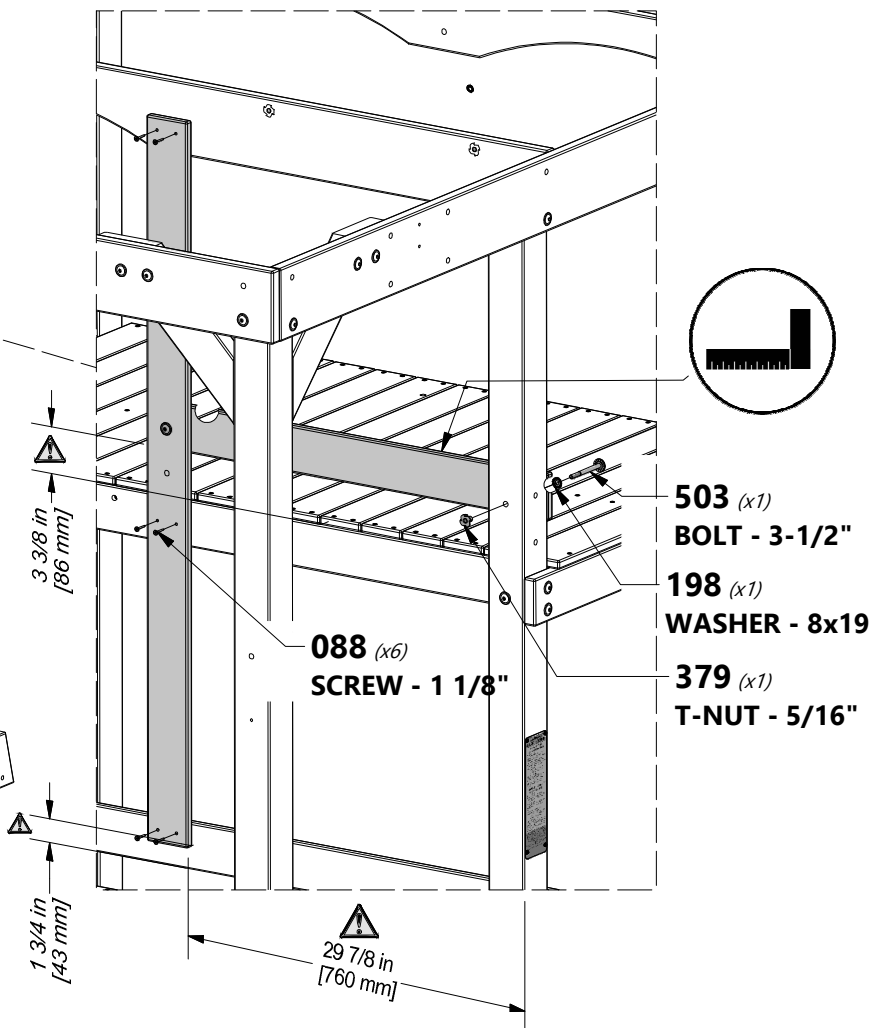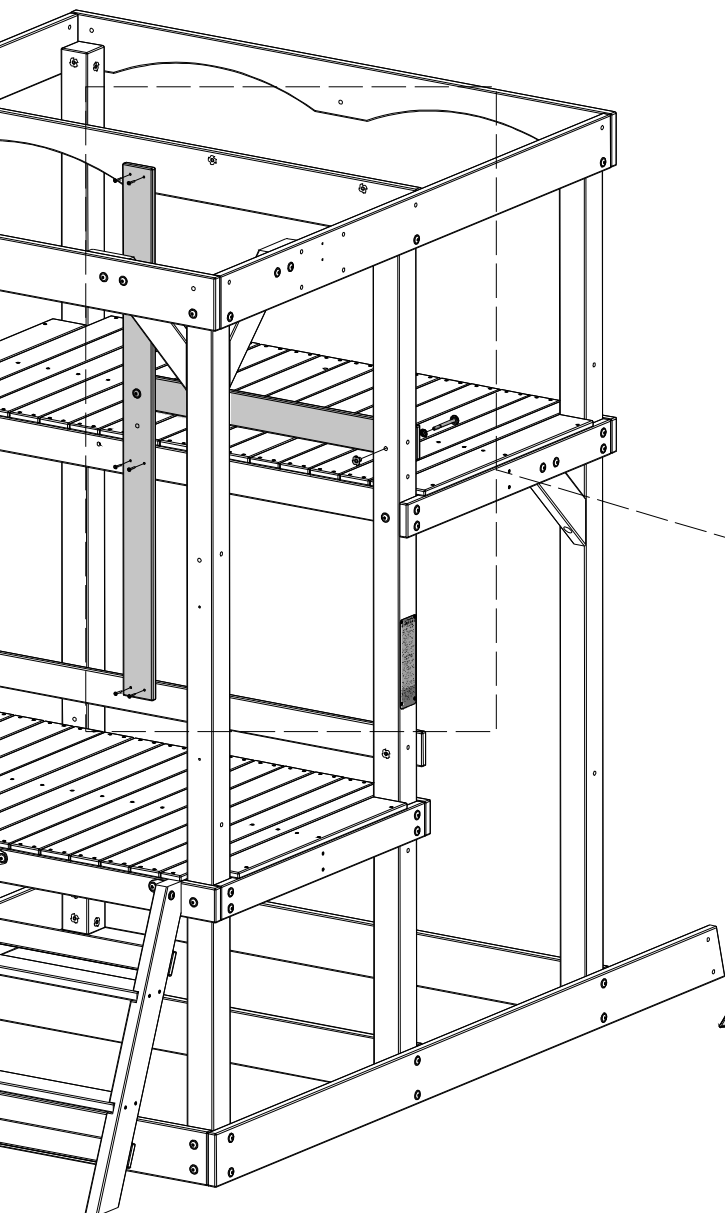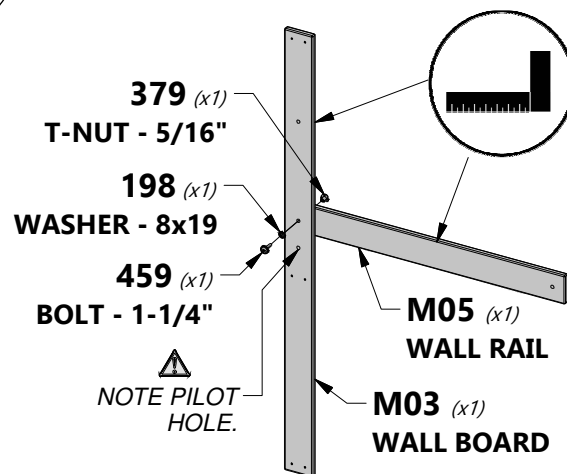



FORT ASSEMBLY







STEP 12

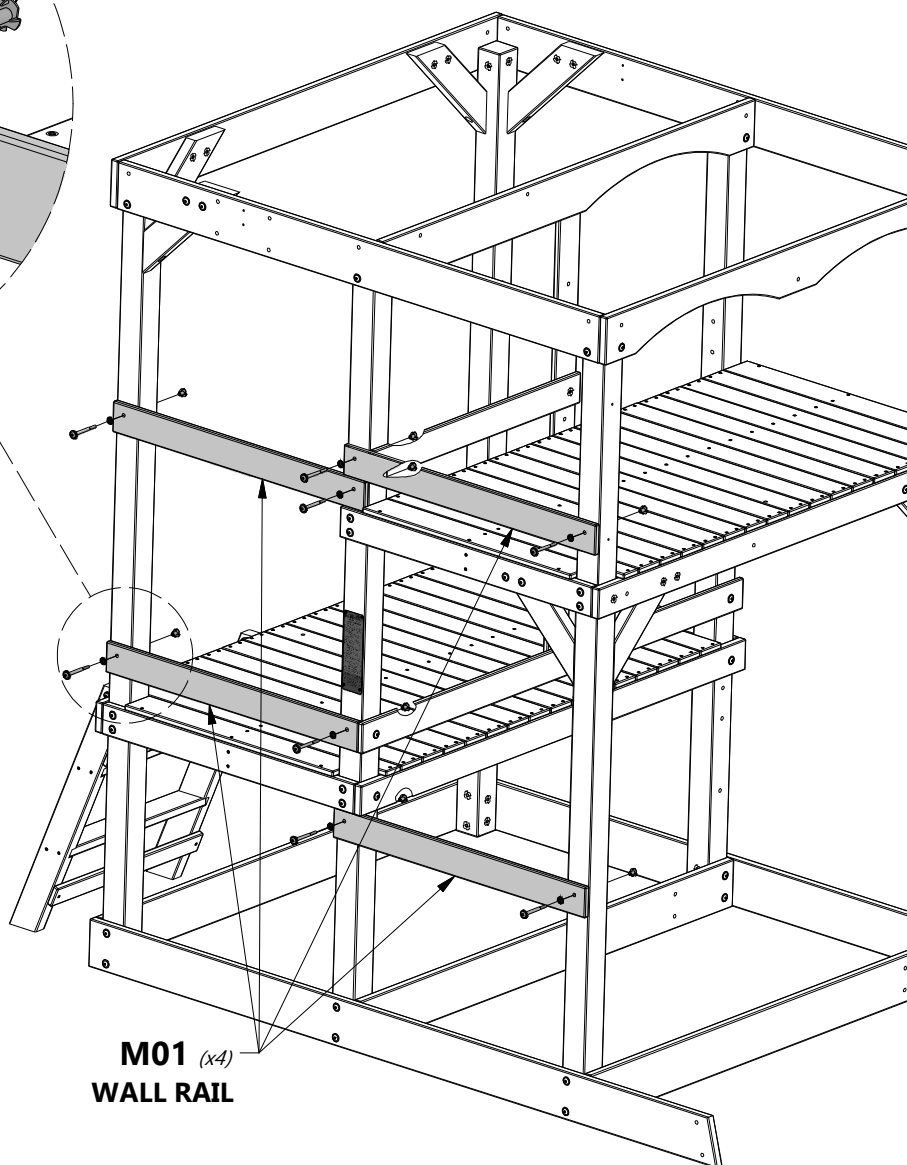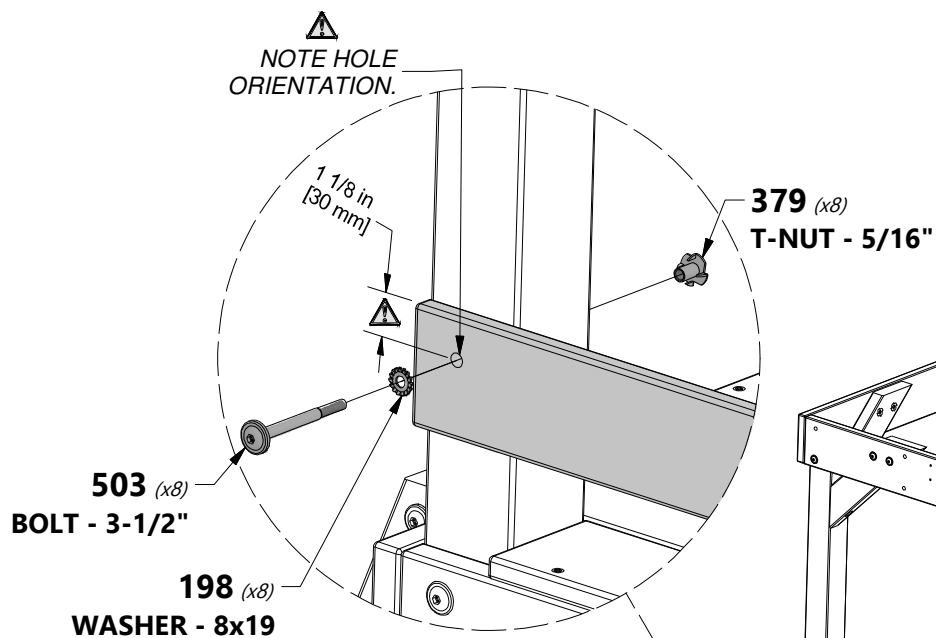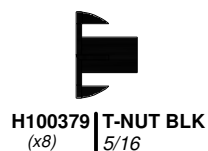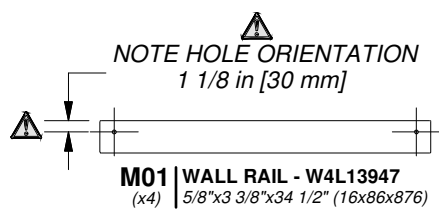



FORT ASSEMBLY

STEP 13

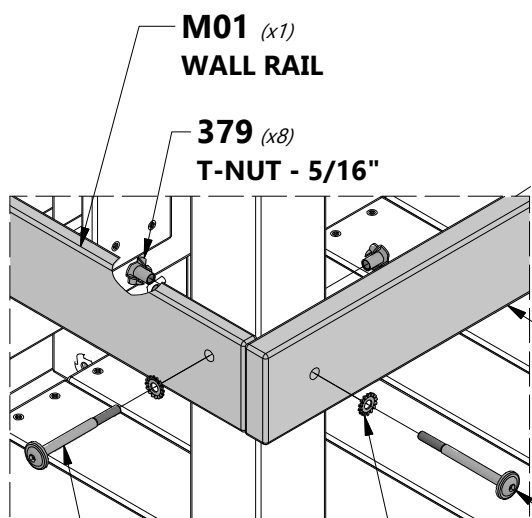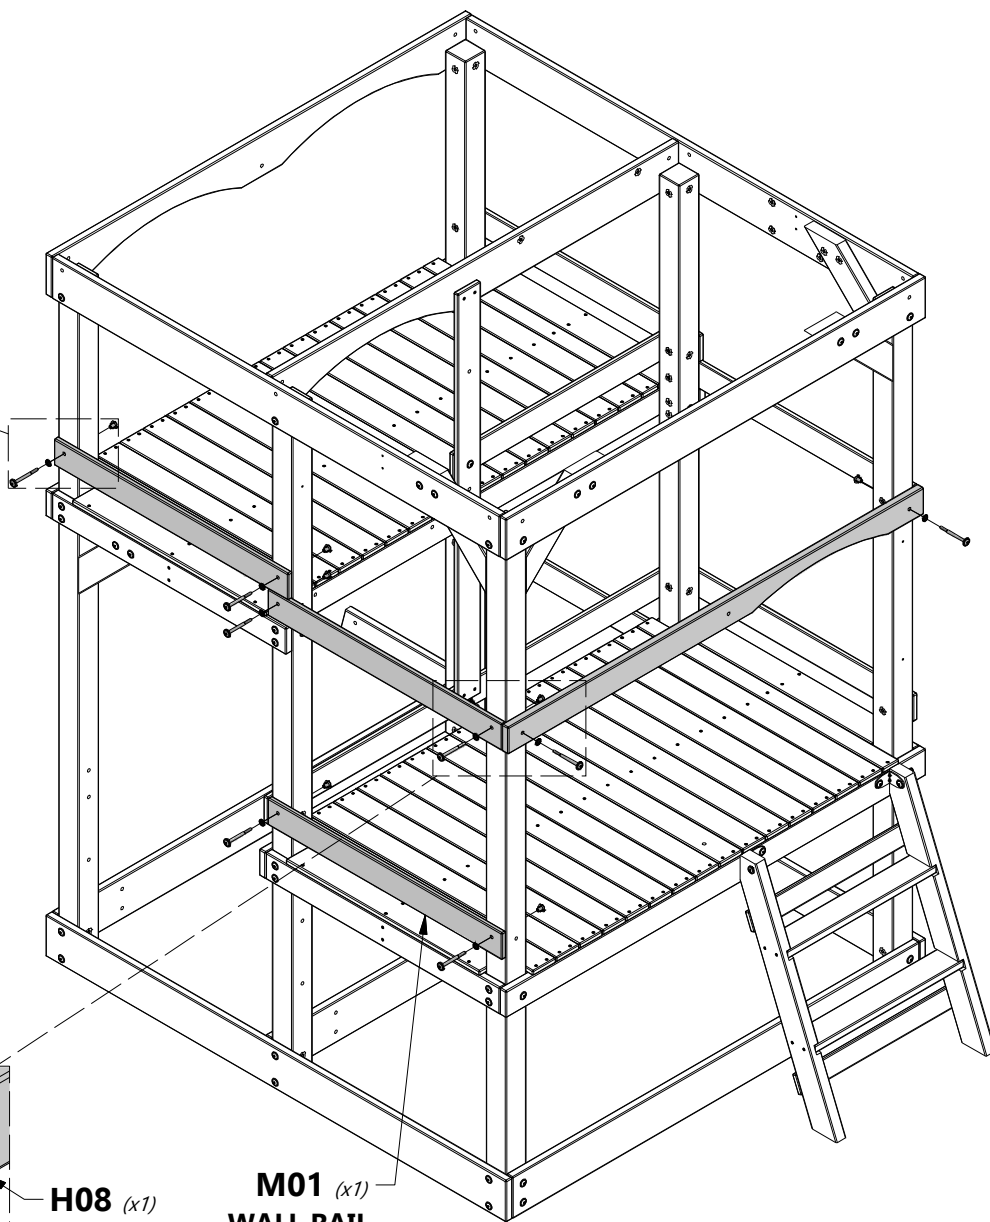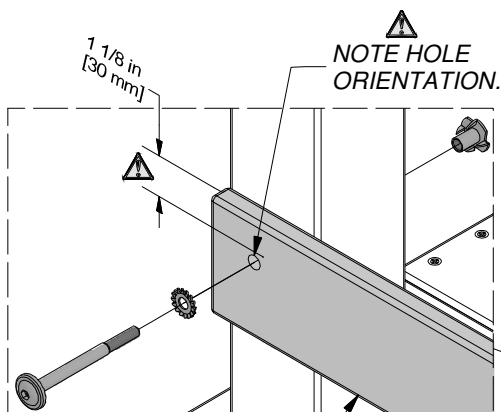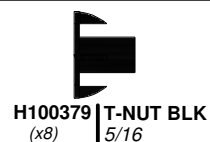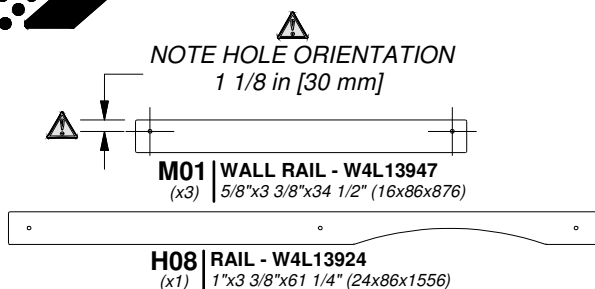

H08 (x1) RAIL

M01 (x1) WALL RAIL

503 (x6) BOLT - 3-1/2"

198 (x8) WASHER - 8x19

415 (x2) BOLT - 3-3/4"



FORT ASSEMBLY

STEP 14

M04 | WALL RAIL - W4L13946
(x1) | 5/8"x3 3/8"x34 1/8" (16x86x868)



H10 | RAIL - W4L13934
(x1) | 1"x3 3/8"x32 3/4" (24x86x833)



H11 | RAIL - W4L13937
(x1) | 1"x3 3/8"x26 7/8" (24x86x681)

A4M01047 | L BRACKET
(x2) | 2.5x38x55x55



H100503 | BOLT WH BLK
(x1) | 5/16x3 1/2

H100378 | BOLT WH BLK
(x2) | 5/16x1 3/4

H100407 | BOLT WH BLK
(x1) | 5/16x1 1/2


H100198 | WASHER LOCK EXT BLK
(x4) | 8x19


H100199 | WASHER LOCK EXT BLK
(x2) | 12x19

H100663 | BOLT WH BLK
(x4) | 5/16x3/4

H100469 | NUT BARREL WH BLK
(x2) | 5/16x5/8

H100379 | T-NUT BLK
(x6) | 5/16

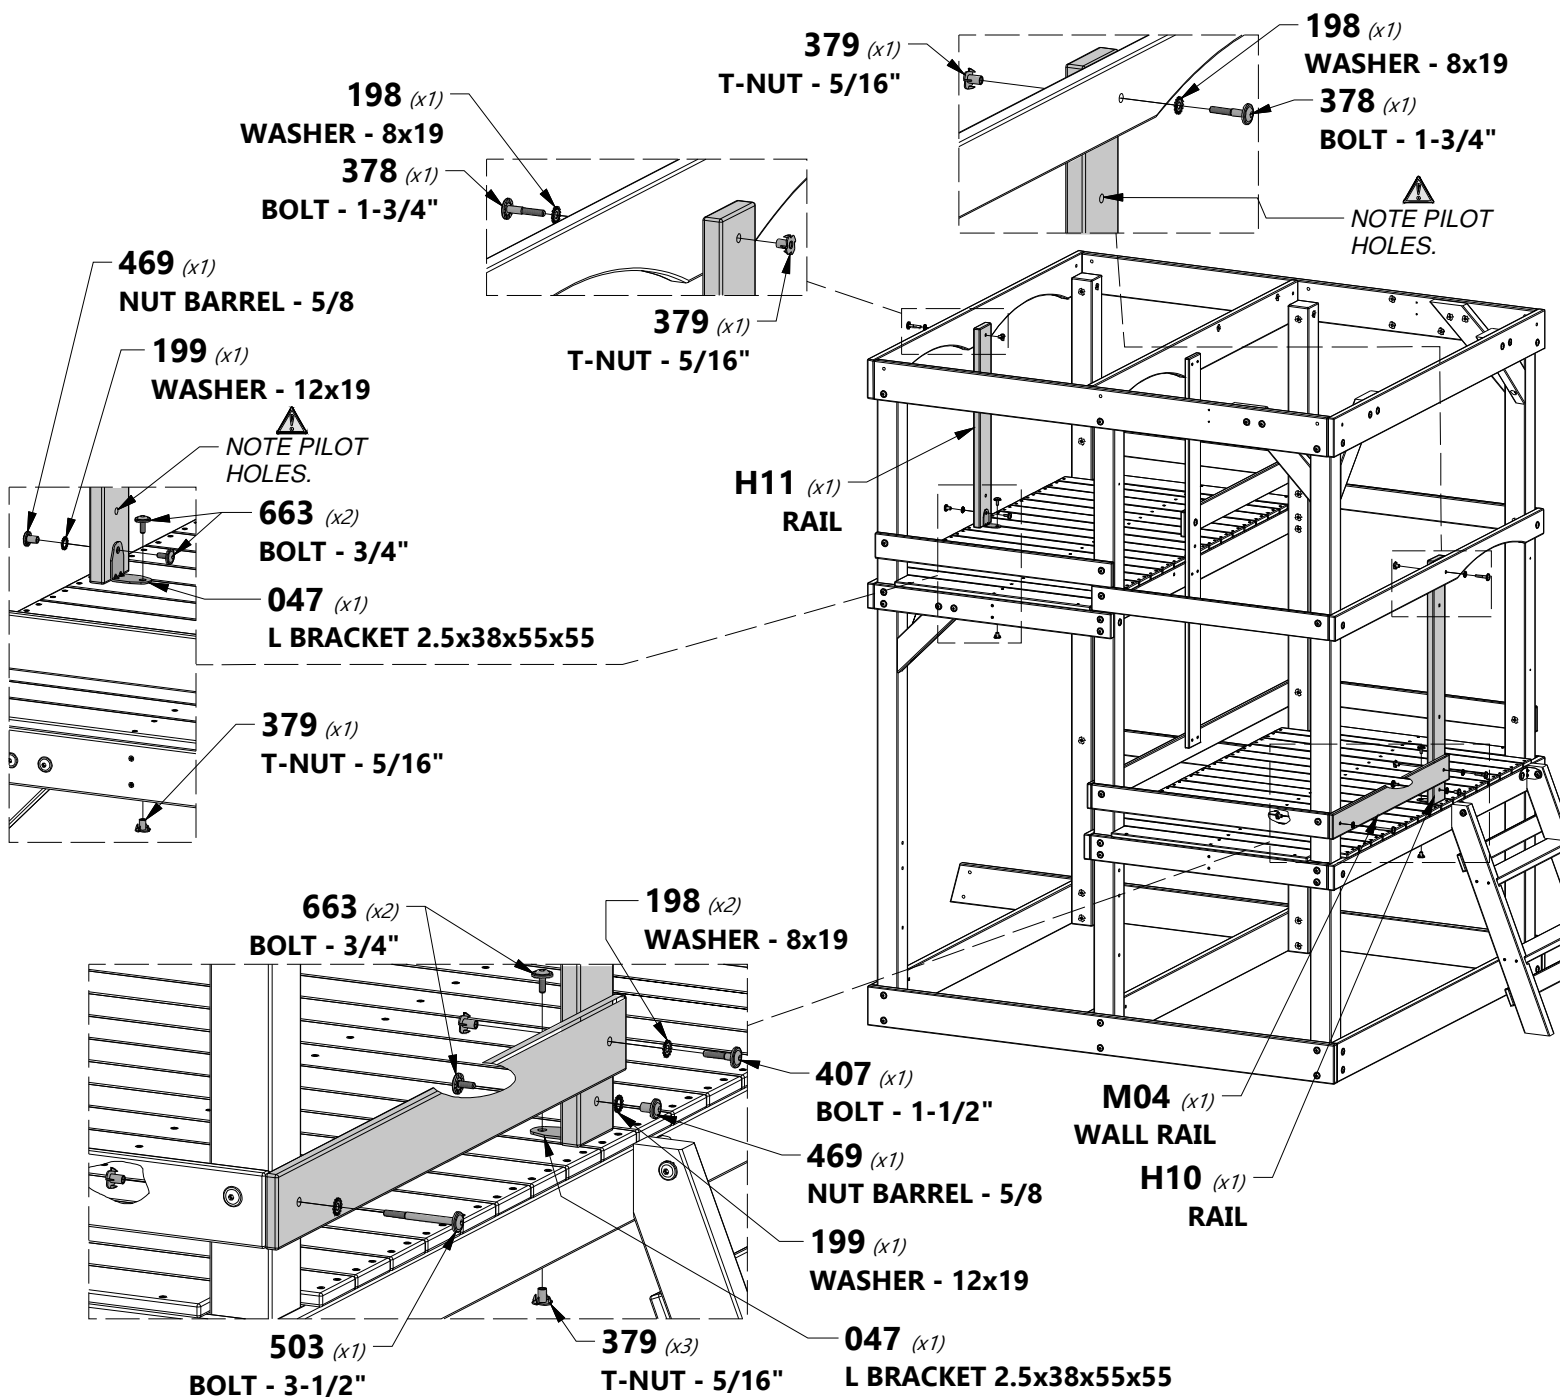




FORT ASSEMBLY


STEP 15




B07 POST - W4L13903
(x1) 3"x3"x32" (76x76x814)




B09 POST - W4L13904
(x2) 3"x3"x32" (76x76x814)



B08 POST - W4L13975
(x1) 3"x3"x32" (76x76x814)



B10 POST - W4L13905
(x2) 3"x3"x28 1/2" (76x76x724)




N07 UPPER WALL RAIL - W4L13919
(x1) 5/8"x2 3/8"x60" (16x60x1524)

NOTE PILOT HOLES.



H100415 BOLT WH BLK
(x12) 5/16x3 3/4



H100503 BOLT WH BLK
(x2) 5/16x3 1/2



H100379 T-NUT BLK
(x14) 5/16



H100198 WASHER LOCK EXT BLK
(x14) 8x19



NOTE:

USE THE PILOT HOLES TO ORIENTATE EACH POST AND ASSEMBLE AS SHOWN.

415 (x12)
BOLT - 3-3/4"

198 (x12)
WASHER - 8x19

379 (x12)
T-NUT - 5/16"

B07 (x1)
POST

B08 (x1)
POST

NOTE PILOT HOLES.

379 (x2)
T-NUT - 5/16"

198 (x2)
WASHER - 8x19

503 (x2)
BOLT - 3-1/2"


B10 (x1)
POST

N07 (x1)
UPPER WALL RAIL


B09 (x1)
POST

B10 (x1)
POST

B09 (x1)
POST

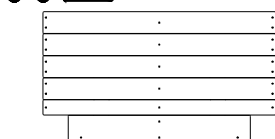

HH1 | FLOOR PANEL - W2A03079
(x1) | 1 1/4"x20 1/8"x36 3/8" (32x510x924)

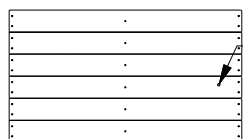

HH7 | FLOOR PANEL - W2A03087
(x1) | 36 3/8"x1 1/4"x20 9/16" (924x32x522)

NOTE PILOT HOLE.




HH3 | FLOOR PANEL - W2A03078
(x1) | 36 3/8"x1 1/4"x21 1/8" (924x32x536)



H04 | RAIL - W4L13928
(x1) | 1"x3 3/8"x60" (24x86x1524)

 **H100201** | SCREW PFH BLK
(x4) | 8x2-1/2

 **H100086** | SCREW PFH
(x86) | 8x1 1/2

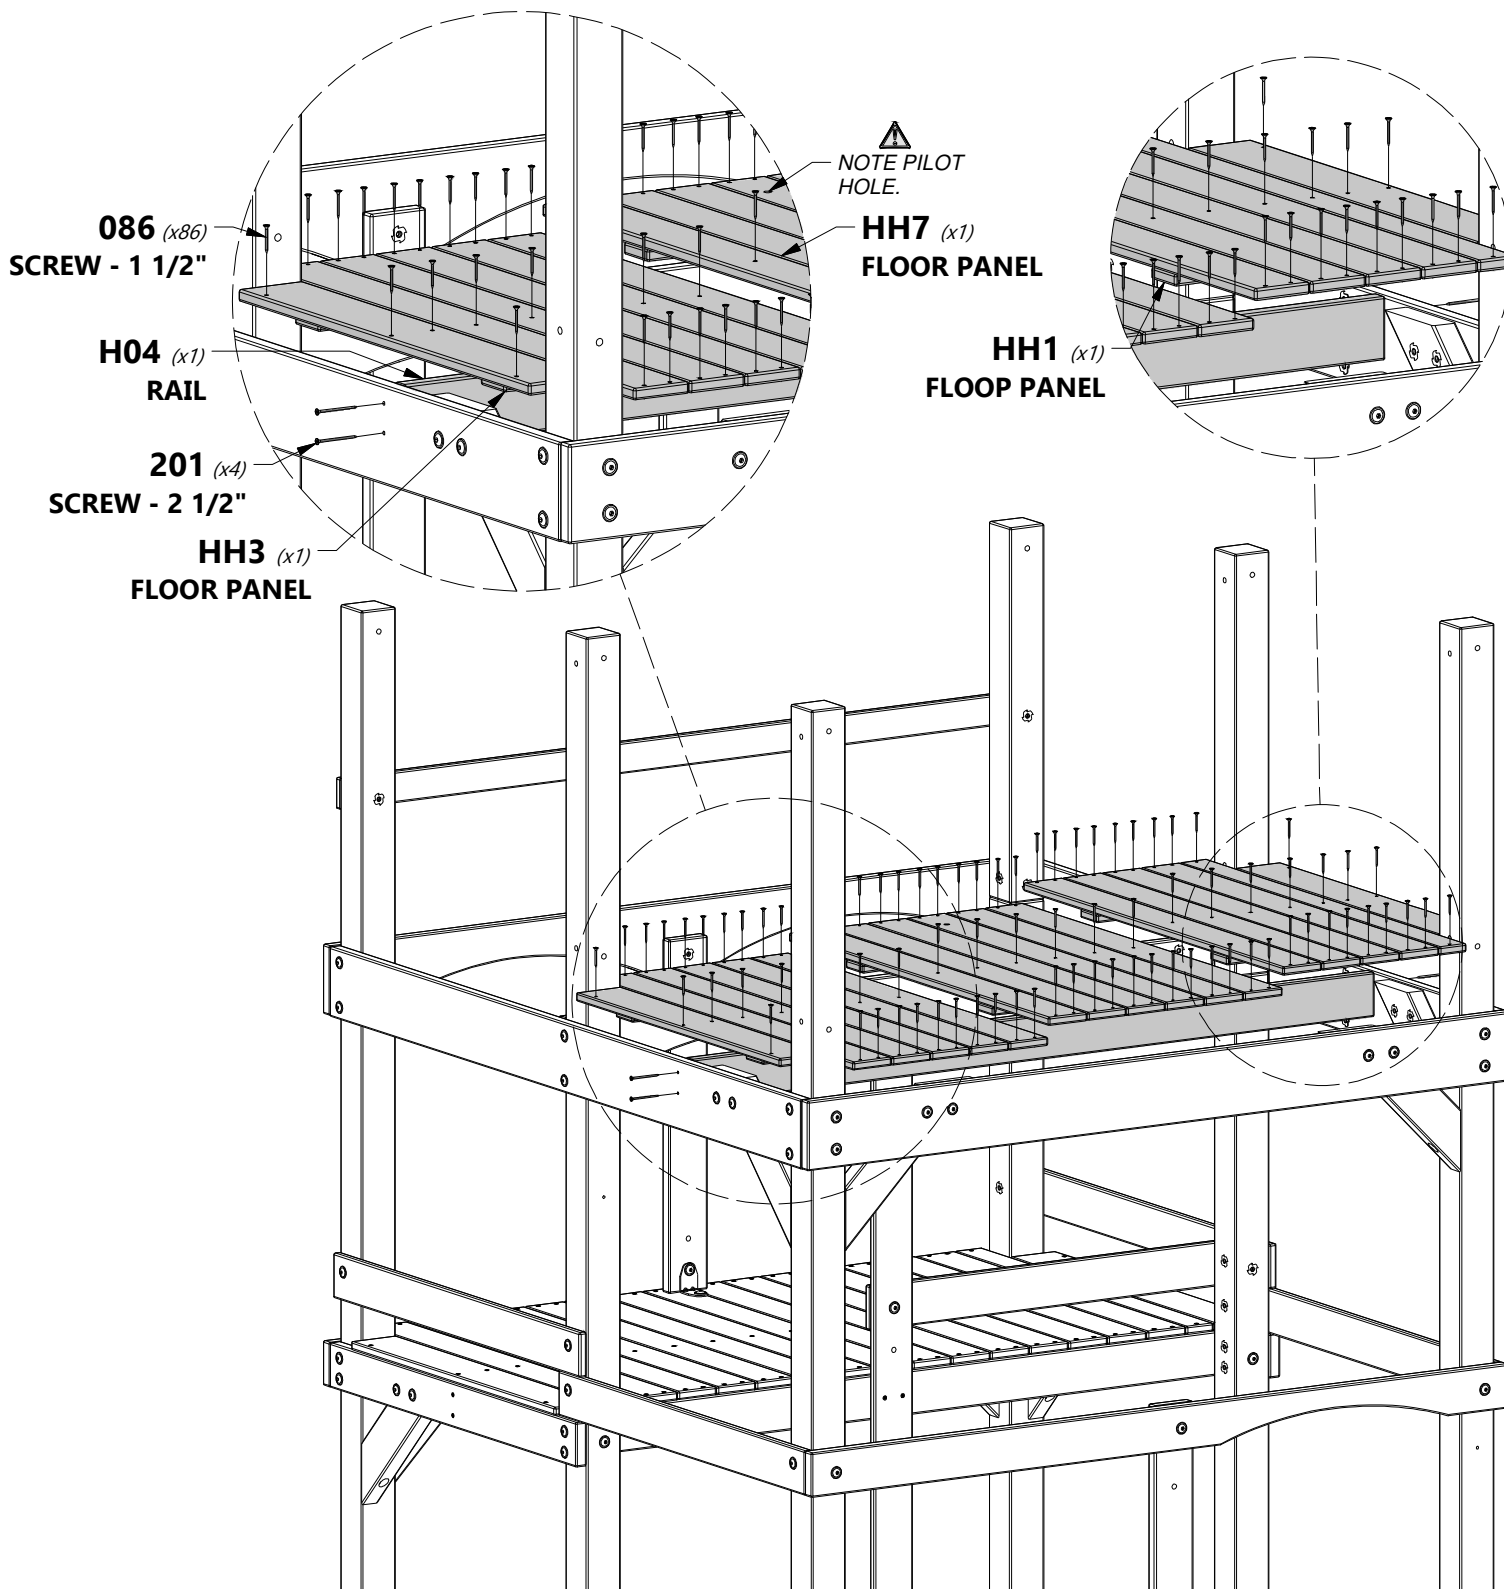






FORT ASSEMBLY

STEP 17


M01 | WALL RAIL - W4L13947
(x4) | 5/8"x3 3/8"x34 1/2" (16x86x876)

H13 | RAIL - W4L13923
(x1) | 1"x3 3/8"x66" (24x86x1676)

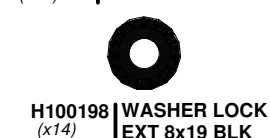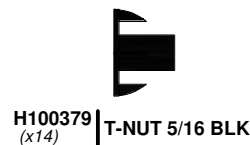


M02 | WALL RAIL - W4L13943
(x1) | 5/8"x3 3/8"x61 1/4" (16x86x1556)

H14 | RAIL - W4L13922
(x1) | 1"x3 3/8"x66" (24x86x1676)



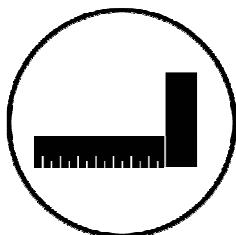


NOTE:
REPEAT THIS ON BOTH
SIDES WHERE SHOWN.

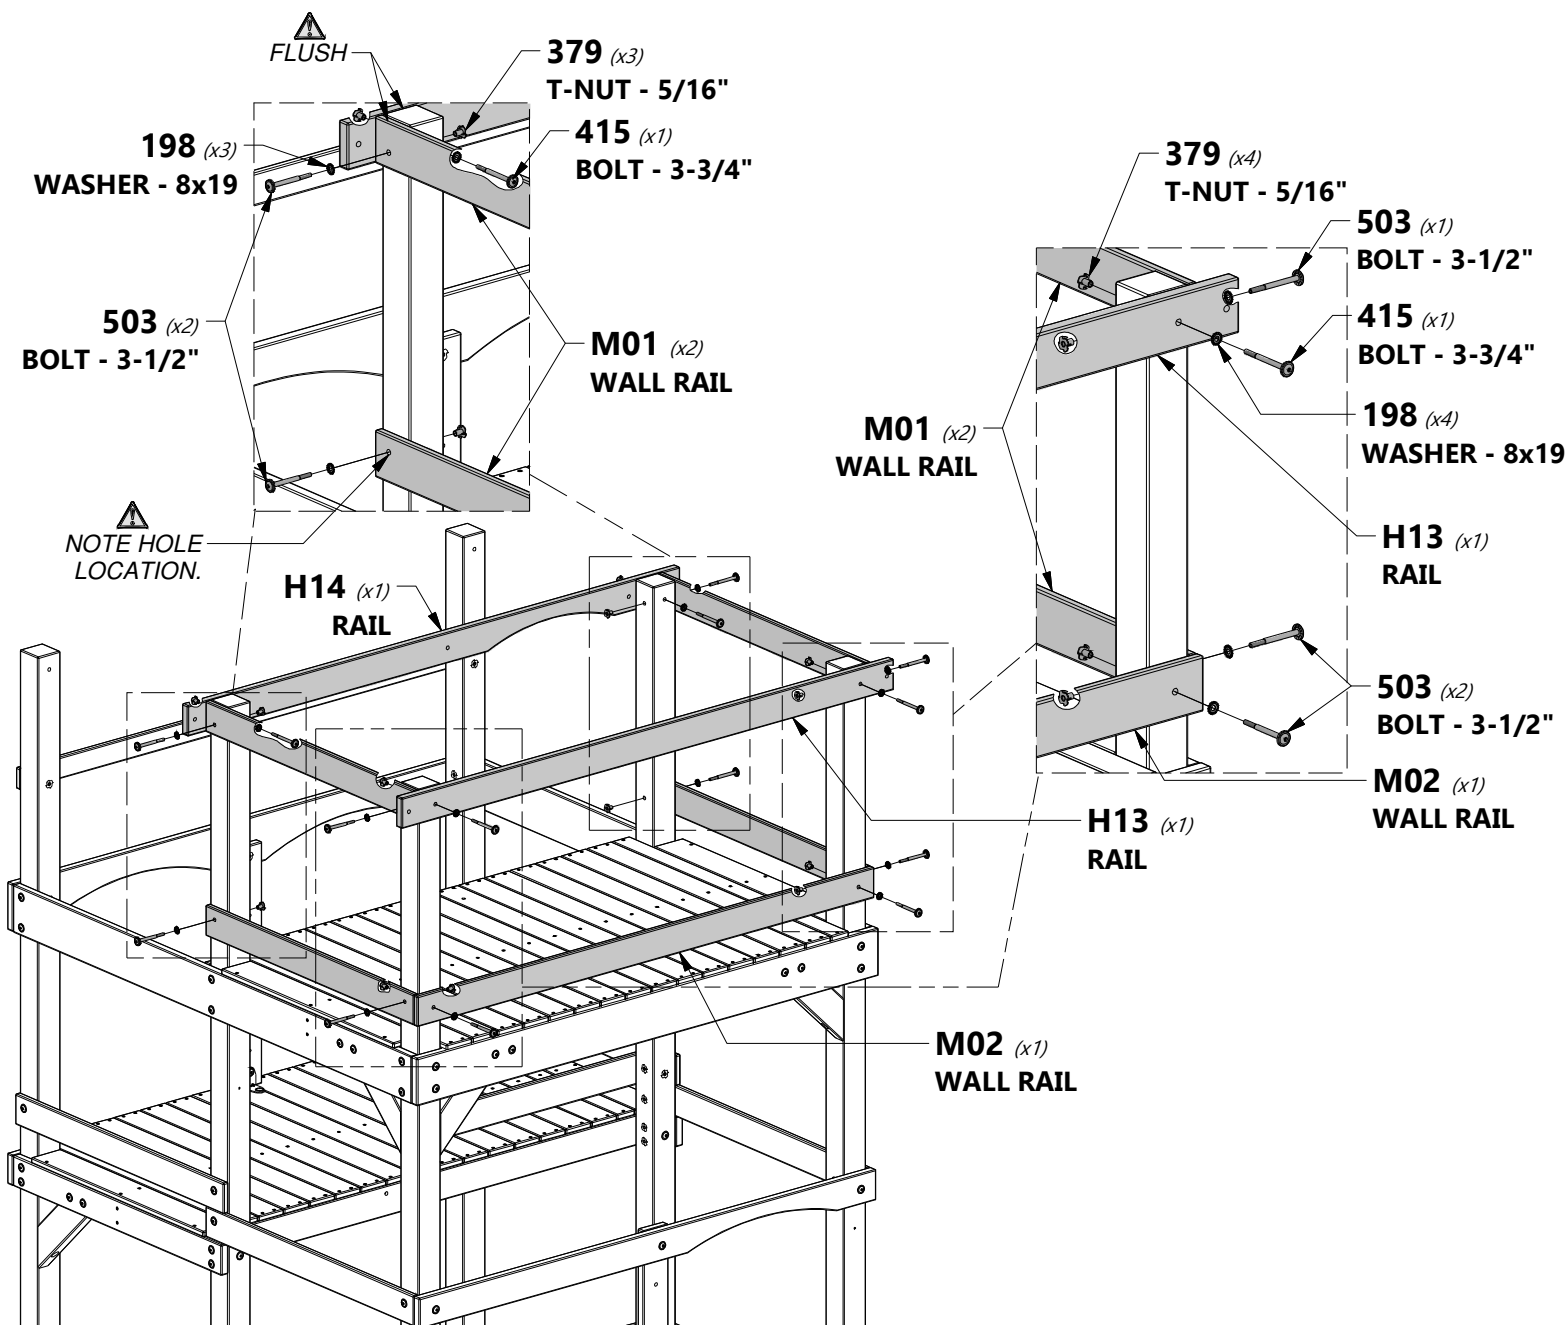

FORT ASSEMBLY

STEP 18

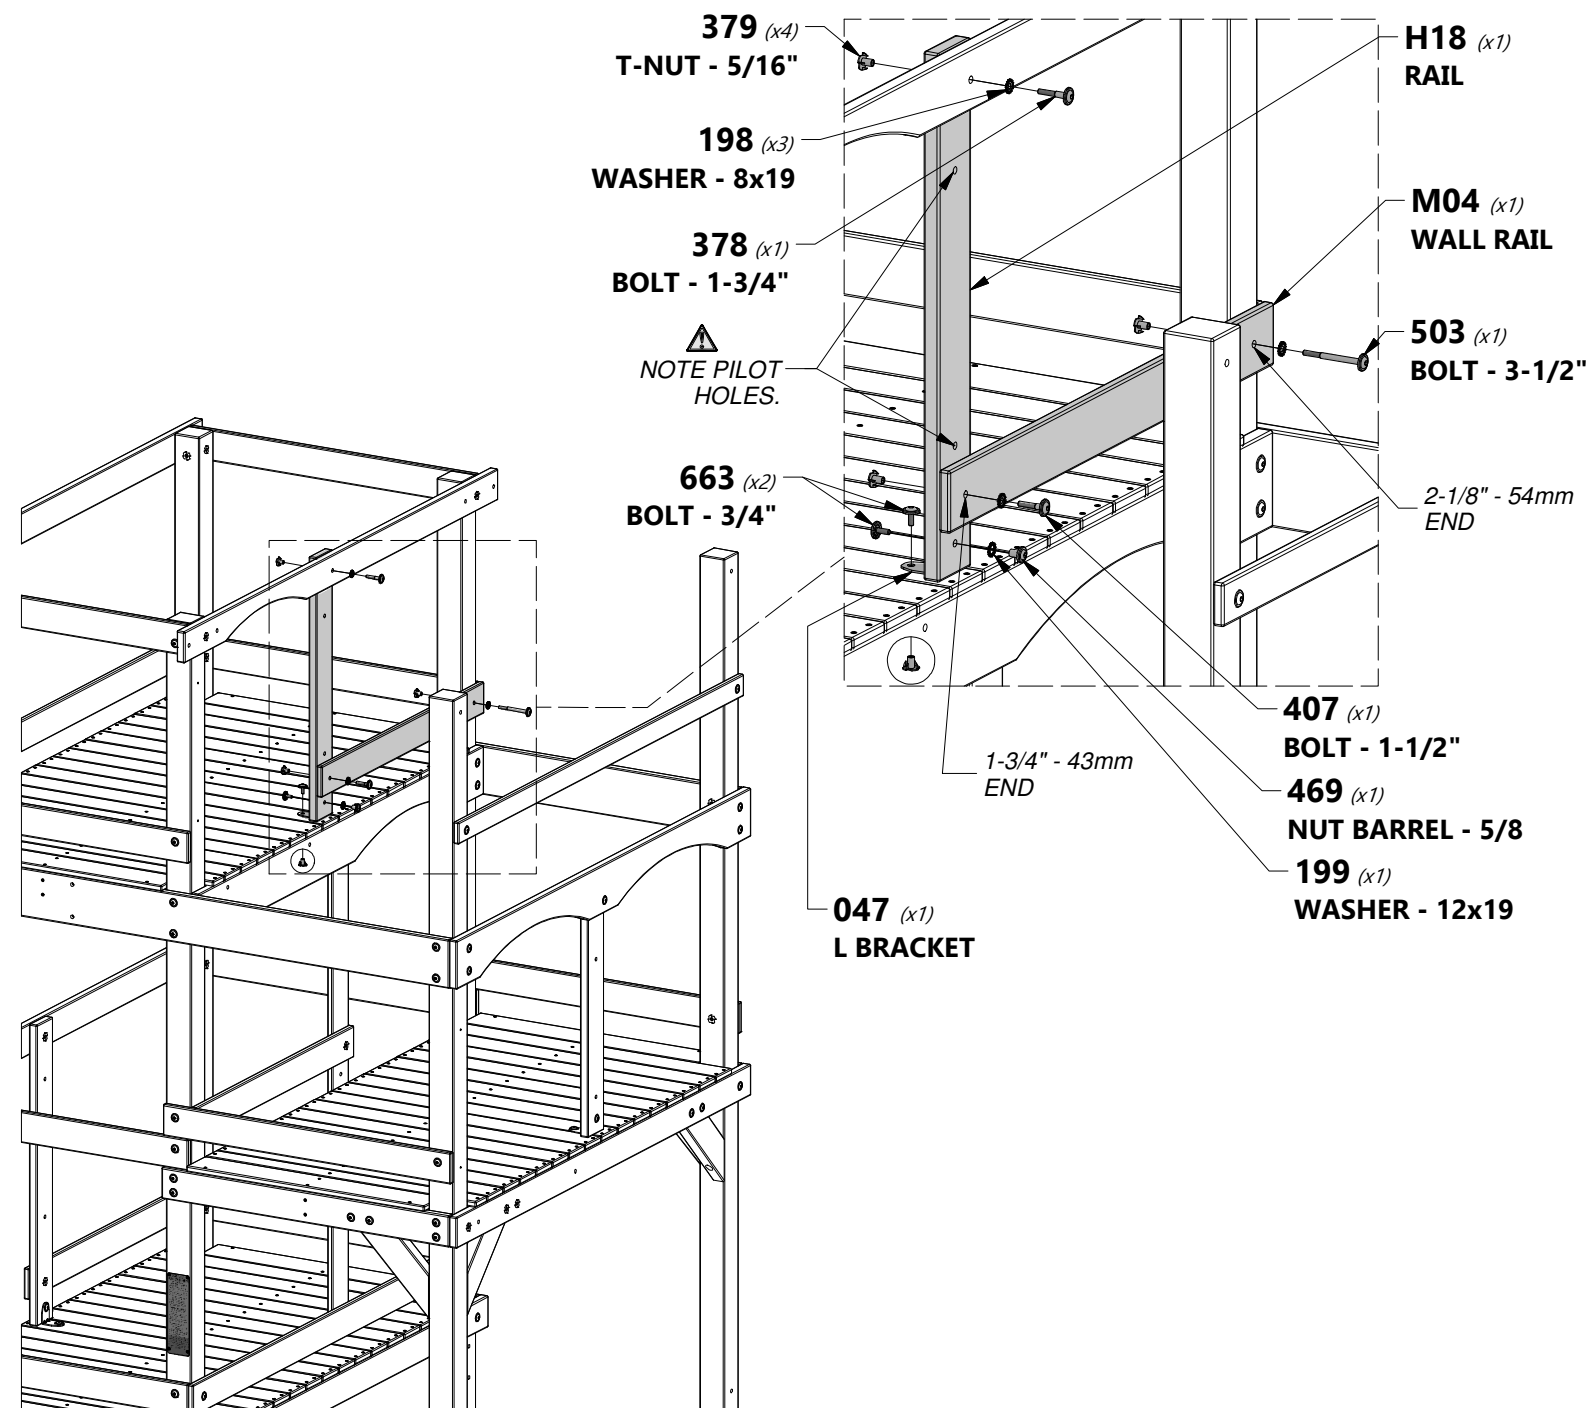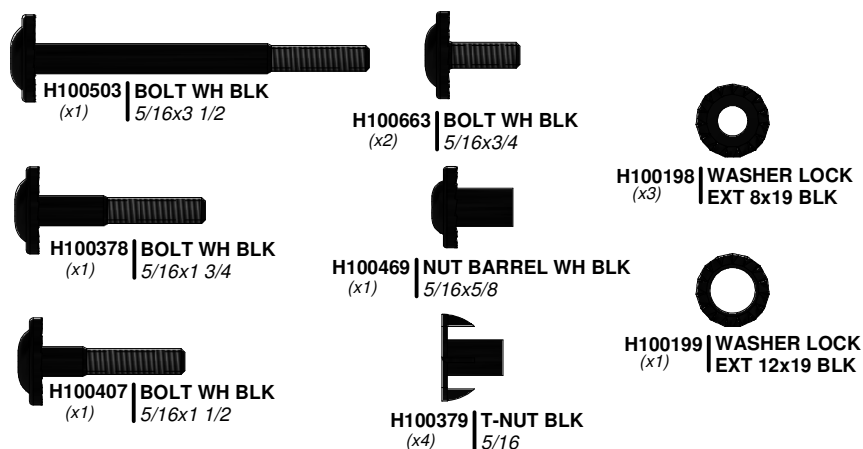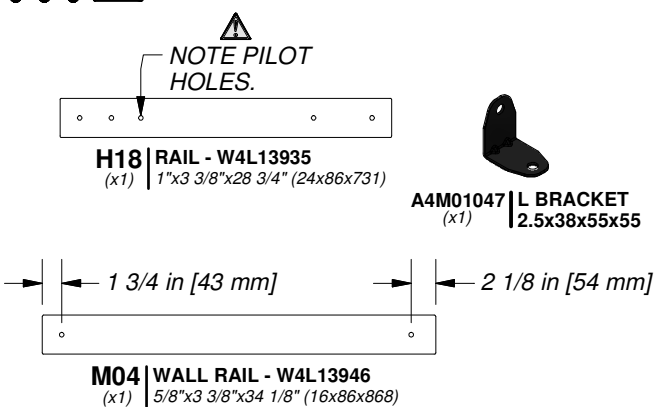



N03 GABLE BOARD - W4L13956
(x2) 5/8"x2 3/8"x34" (16x60x864)

K01 SUNBURST - W4L13914
(x2) 5/8"x5 1/4"x13 1/2" (16x134x344)

H15 RAFTER - W4L13929
(x2) 1"x3 3/8"x49 3/4" (24x86x1262)

N08 GABLE BOARD - W4L13961
(x2) 5/8"x2 3/8"x16" (16x60x406)

N09 GABLE BOARD - W4L13962
(x4) 5/8"x2 3/8"x10" (16x60x254)


H17 RAFTER - W4L13930
(x2) 1"x3 3/8"x49 7/8" (24x86x1268)

H100380 SCREW PFH BLK
(x26) 8x1 1/8




NOTE:

INSTALL N09 BOARDS AT APPROXIMATELY 45° AS SHOWN.

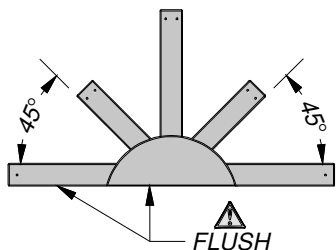

COMPLETE THIS TWICE TO MAKE TWO SUNBURST ASSEMBLIES

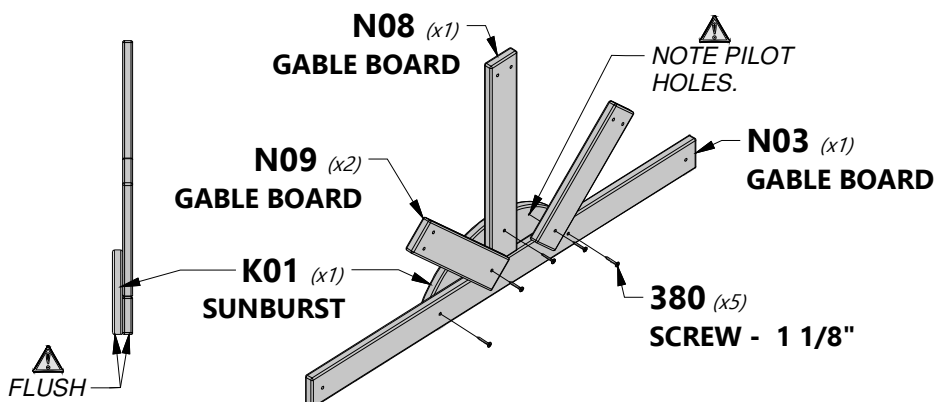


NOTE:

ASSEMBLE BOTH GABLE PANELS AS SHOWN. USE THE DIMENSIONS BELOW TO PLACE THE SUNBURST ASSEMBLIES AND ENSURE THERE'S A GAP ON ALL SIDES OF THE SUNBURST ASSEMBLIES AS SHOWN.

UPPER GABLE ASSEMBLY

LOWER GABLE ASSEMBLY

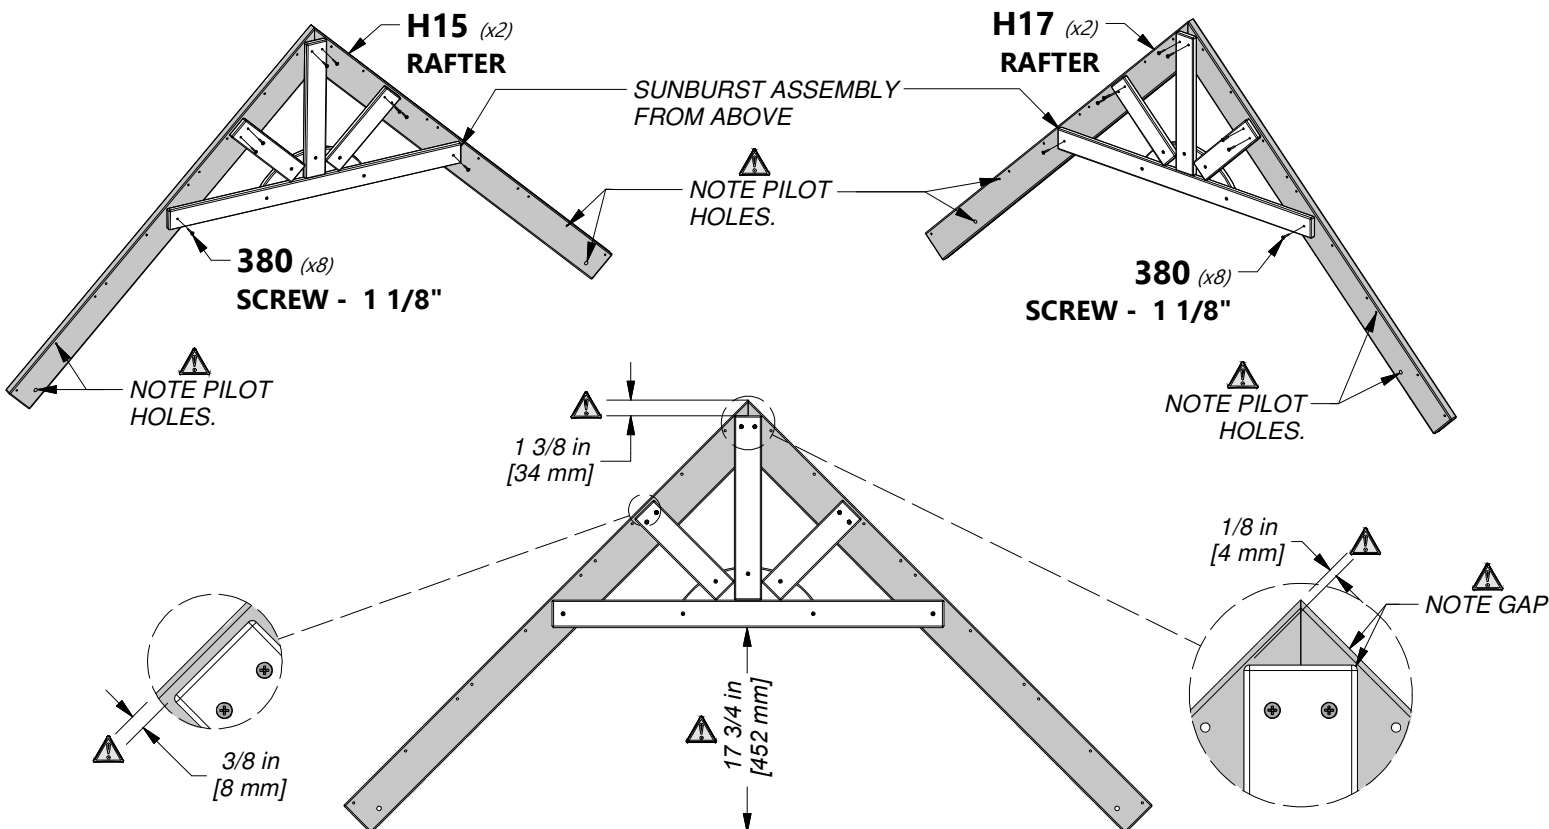

NOTE: BOTH GABLE ASSEMBLIES WILL BE USED IN A LATER STEP.



H16 | RAFTER - W4L13931
(x2) | 1"x3 3/8"x49 7/8" (24x86x1268)



N10 | GABLE BOARD - W4L13963
(x1) | 5/8"x2 3/8"x3" (16x60x76)



H100378 | BOLT WH BLK
(x2) | 5/16"x1 3/4"



H100198 | WASHER LOCK
(x2) | EXT 8x19 BLK



H100379 | T-NUT 5/16 BLK
(x2)




H100087 | SCREW PFH
(x4) | 8x1 1/4"



NOTE:

USE THE GABLE ASSEMBLY DIAGRAM TO LOCATE THE N10 BOARD AND INSTALL AS SHOWN.

GABLE ASSEMBLY

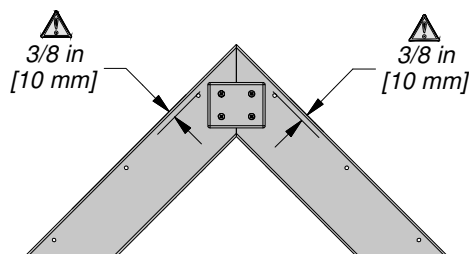

H16 (x2)
RAFTER


N10 (x1)
GABLE BOARD

087 (x4)
SCREW - 1-1/4"

378 (x2)
BOLT - 1-3/4"

198 (x2)
WASHER - 8x19





379 (x2)
T-NUT - 5/16"




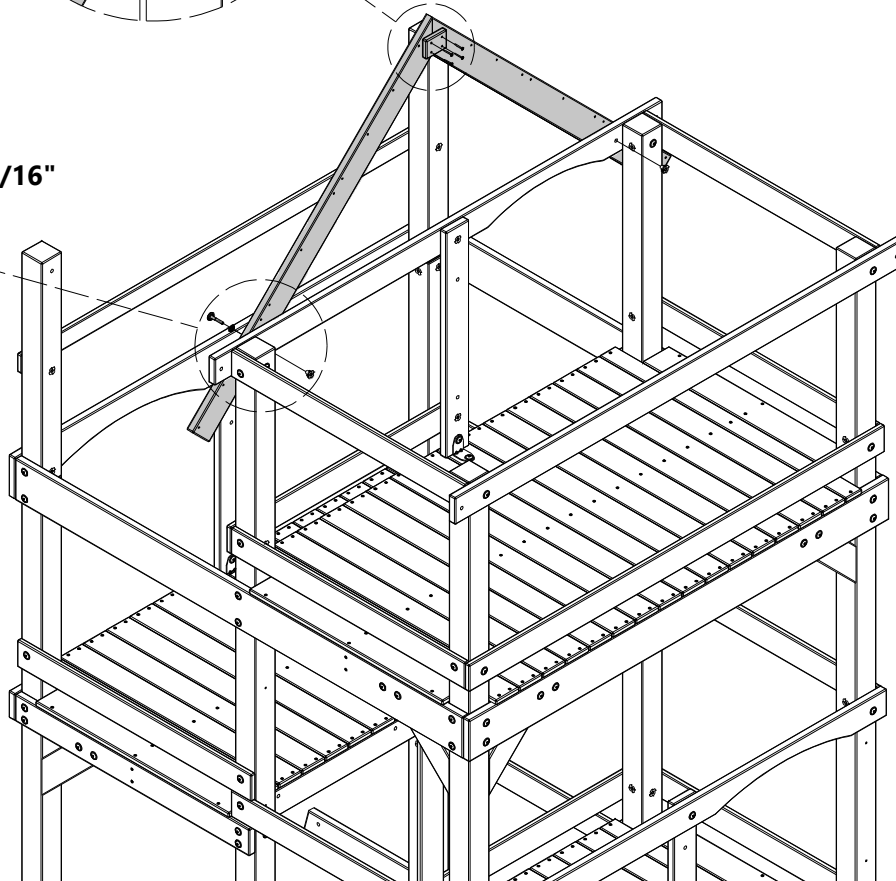







FORT ASSEMBLY

STEP 21

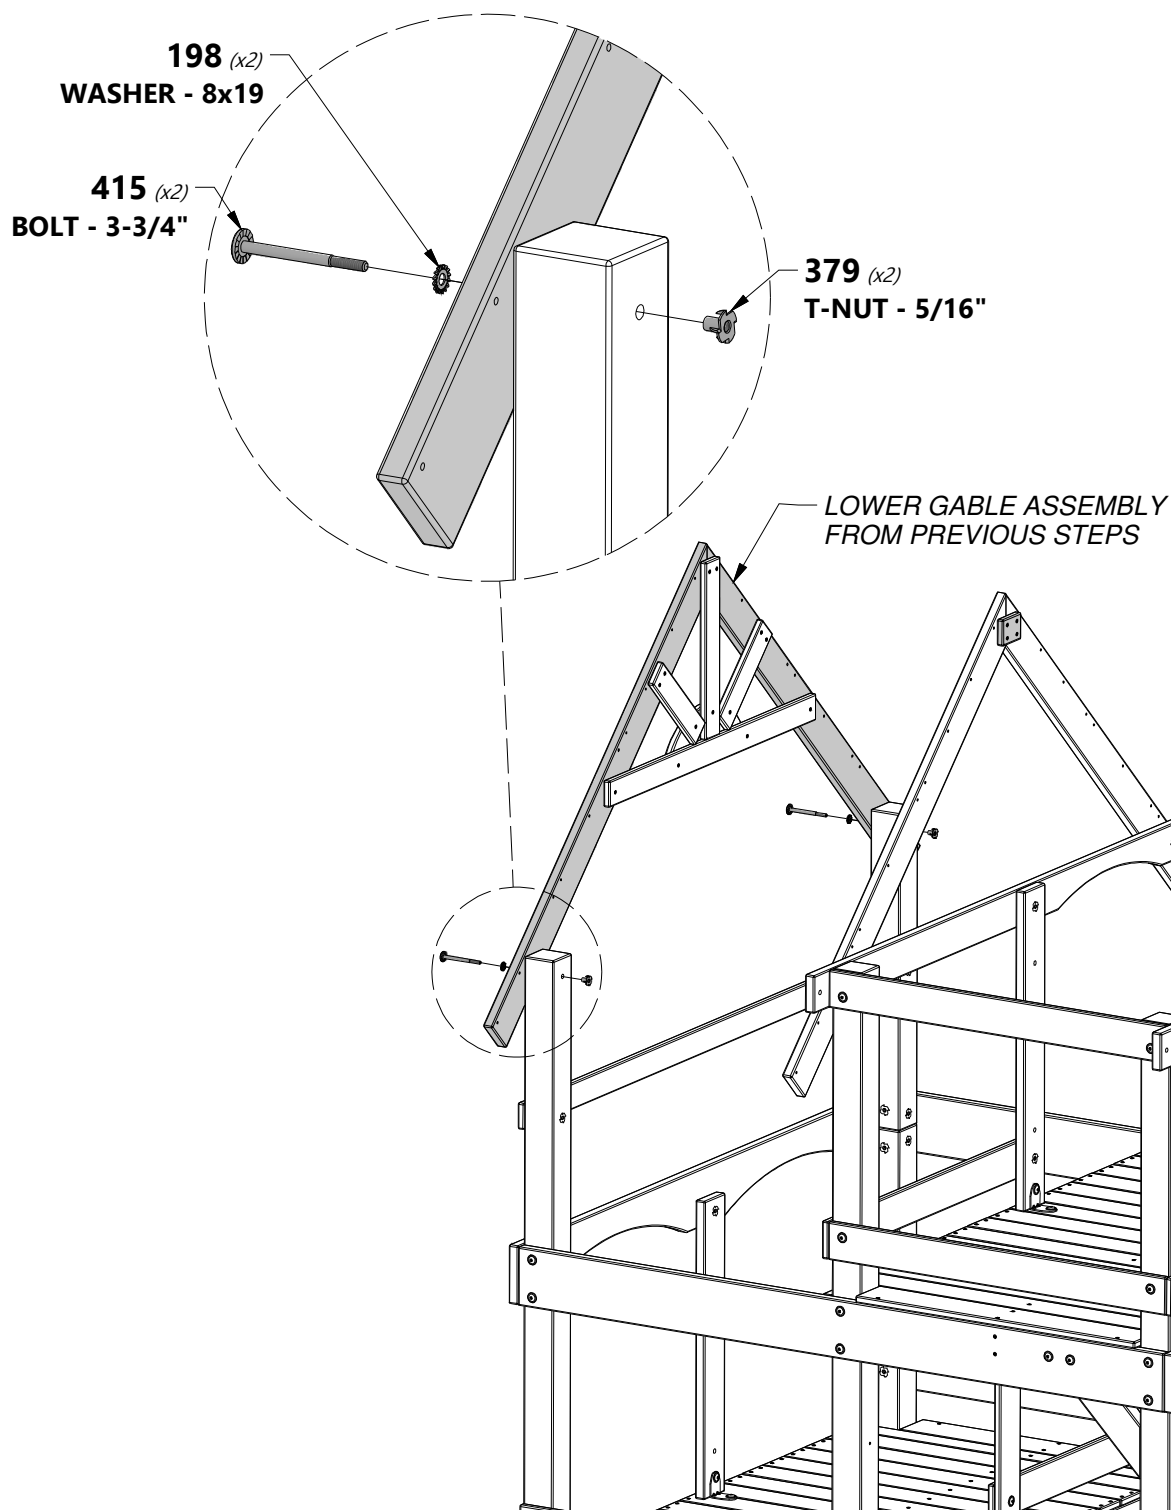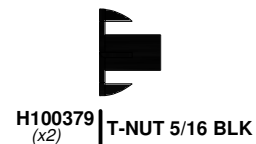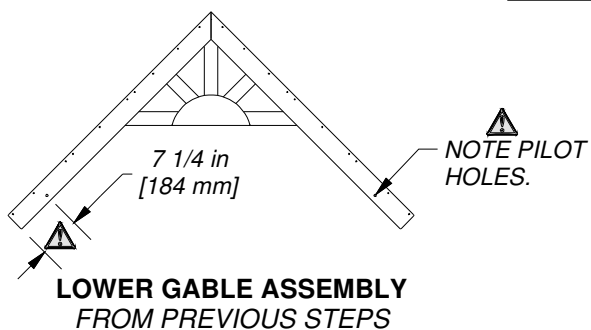

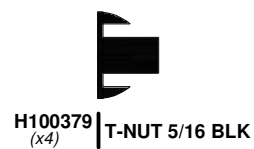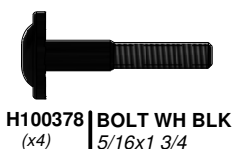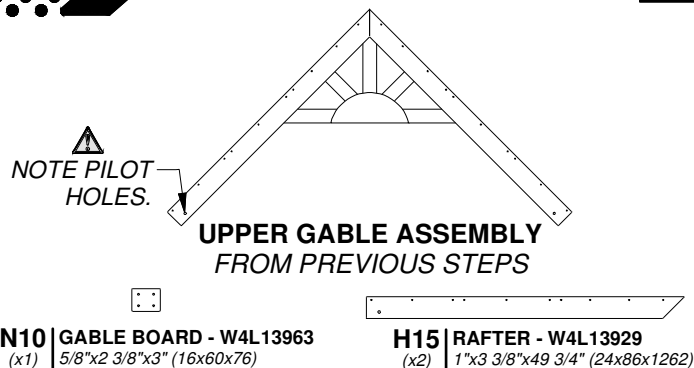


NOTE:
USE THE GABLE ASSEMBLY DIAGRAM
TO LOCATE THE N10 BOARD AND
INSTALL AS SHOWN.

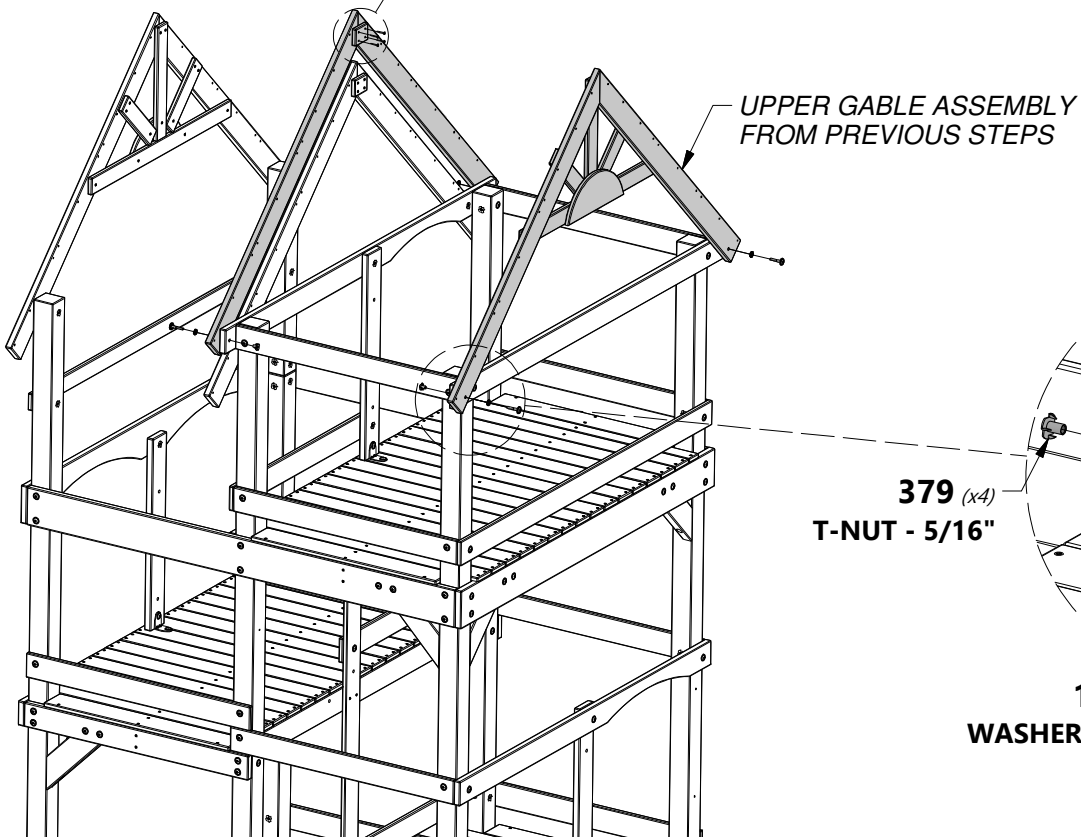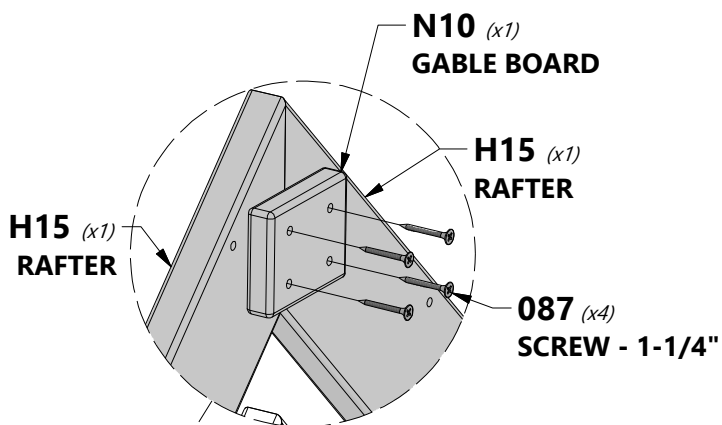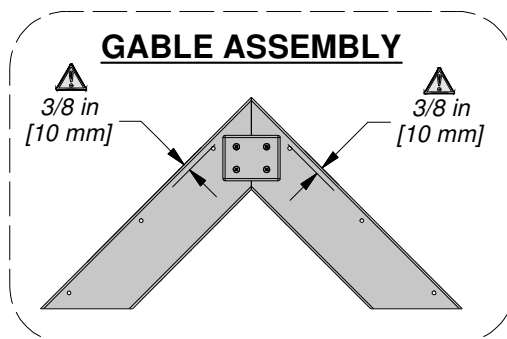


379 (x4)
T-NUT - 5/16"

198 (x4)
WASHER - 8x19


378 (x4)
BOLT - 1-3/4"

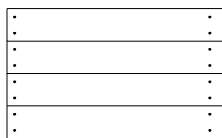


RP7 | ROOF PANEL - W2A03085
(x1) | 1 5/8"x20 11/16"x33 7/8" (42x526x860)



RP8 | ROOF PANEL - W2A03086
(x1) | 1 5/8"x15 5/8"x33 7/8" (42x397x860)



RP9 | ROOF PANEL - W2A03073
(x1) | 1 5/8"x15 5/8"x33 7/8" (42x397x860)




H100111 | SCREW PFH
(x20) | 8x2



NOTE:


START AT THE TOP WITH THE RP7 PANEL AND WORK YOUR WAY DOWN INSTALLING EACH PANEL AS SHOWN.

NOTE PILOT HOLES.

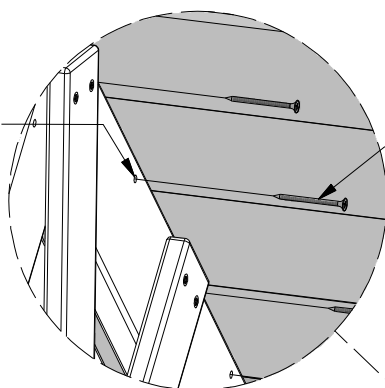


111 (x10)
SCREW - 2"

NOTE PILOT HOLES.

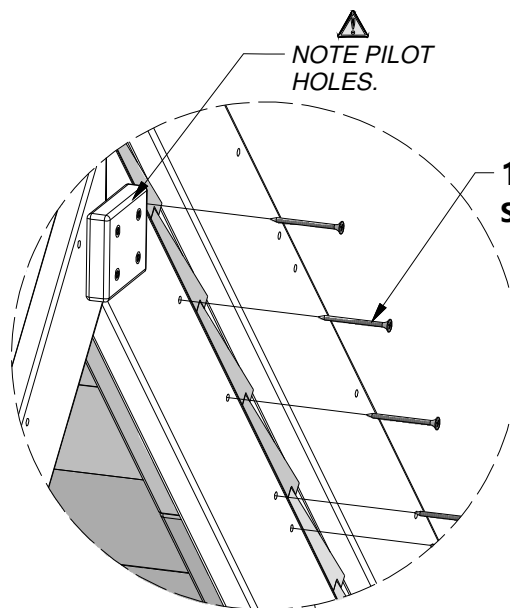



111 (x10)
SCREW - 2"

RP7 (x1)
ROOF PANEL

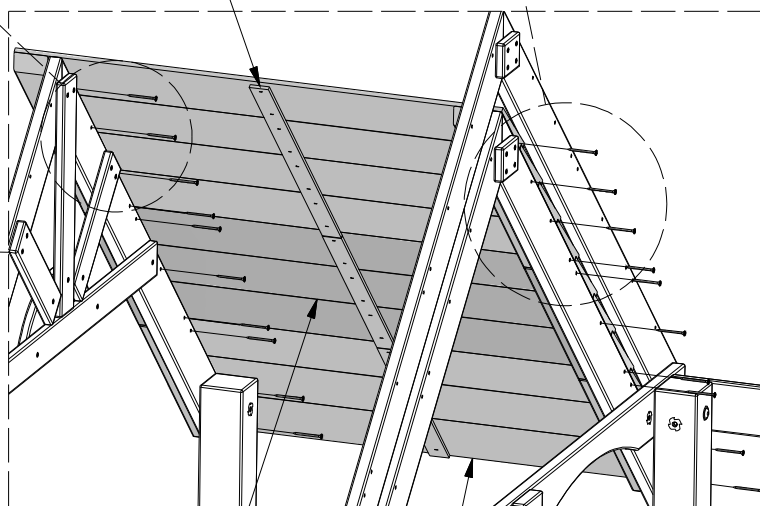


RP8 (x1)
ROOF PANEL


RP9 (x1)
ROOF PANEL

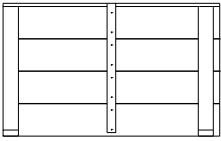

RP4 | ROOF PANEL - W2A03083
(x1) | 33 7/8"x1 5/8"x20 11/16" (860x42x526)



RP5 | ROOF PANEL - W2A03084
(x1) | 1 5/8"x15 5/8"x33 7/8" (42x397x860)






RP6 | ROOF PANEL - W2A03072
(x1) | 1 5/8"x15 5/8"x33 7/8" (42x397x860)




NOTE:

START AT THE TOP WITH THE RP4 PANEL AND WORK YOUR WAY DOWN INSTALLING EACH PANEL AS SHOWN.

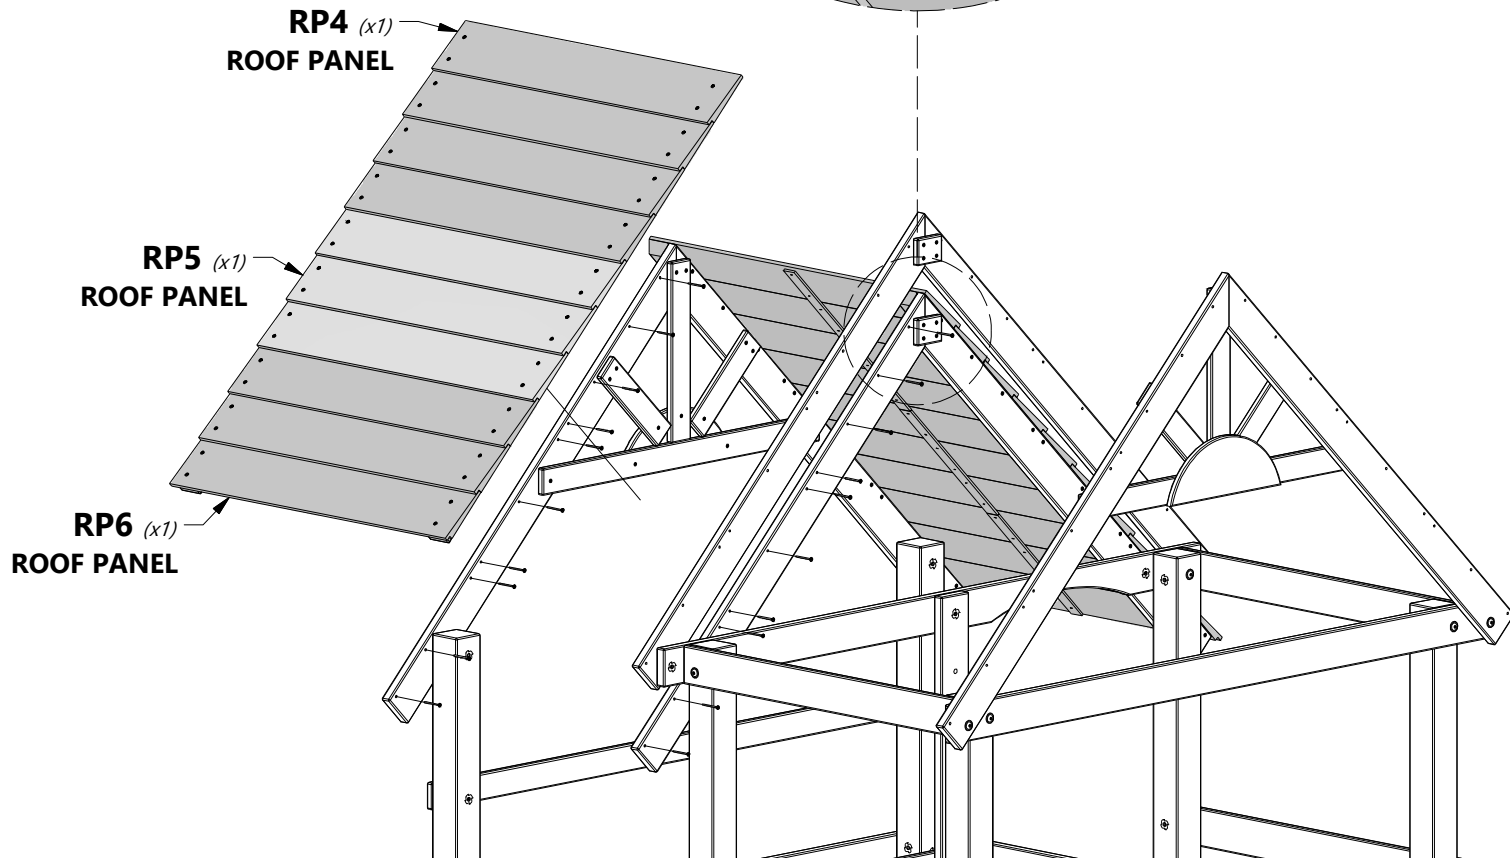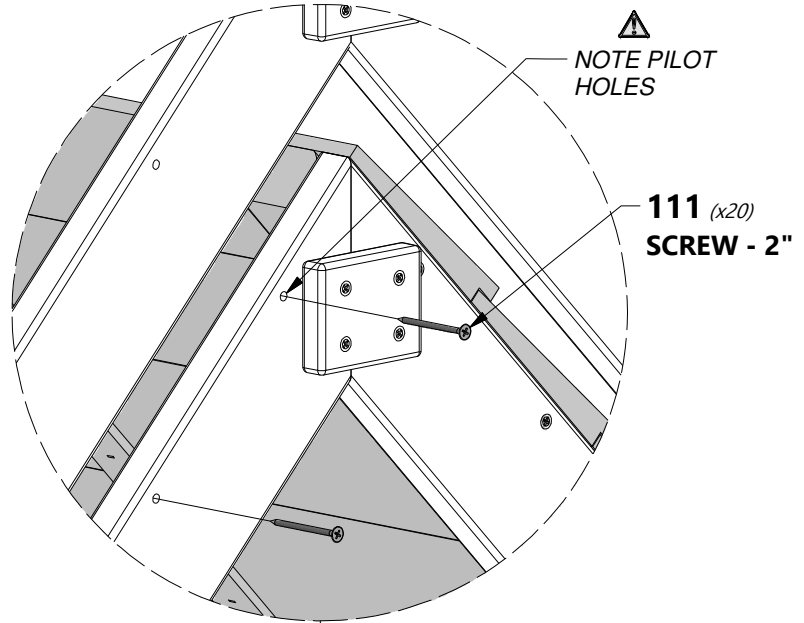


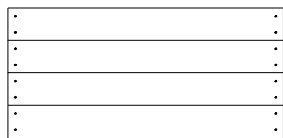

RP1 | ROOF PANEL - W2A03081
(x2) 1 5/8"x20 11/16"x43 1/16" (42x526x1094)



RP2 | ROOF PANEL - W2A03082
(x2) 1 5/8"x15 5/8"x43 1/16" (41x397x1094)



RP3 | ROOF PANEL - W2A03135
(x2) 1 5/8"x15 5/8"x43 1/16" (41x397x1094)




H100111 | SCREW PFH
(x40) 8x2



NOTE:

START AT THE TOP WITH THE RP1 PANEL AND WORK YOUR WAY DOWN INSTALLING EACH PANEL AS SHOWN.

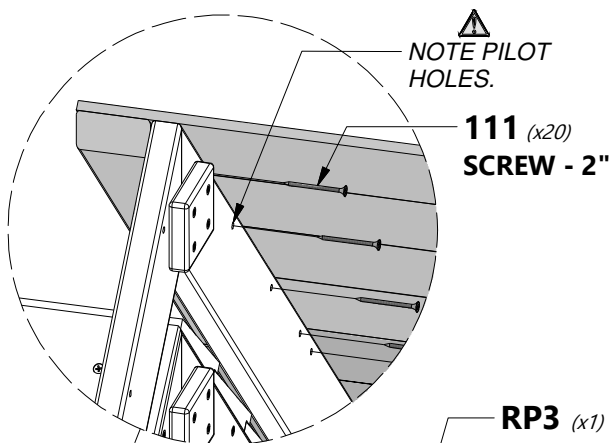

RP3 (x1)
ROOF PANEL

RP1 (x1)
ROOF PANEL


RP2 (x1)
ROOF PANEL



NOTE:

REPEAT THIS STEP TO COMPLETE AND INSTALL TWO ROOF PANEL ASSEMBLIES.

REPEAT THE STEPS SHOWN ABOVE TO COMPLETE THE UPPER ROOF.

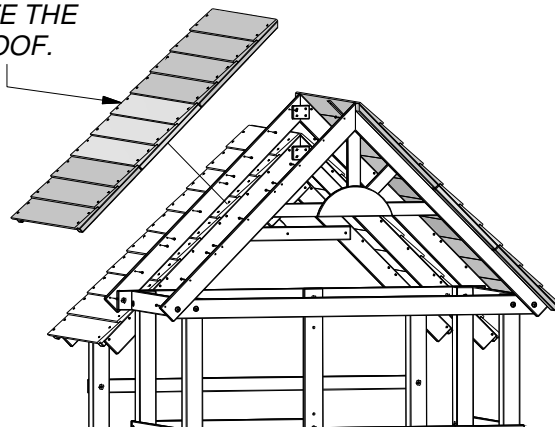




N01 | WALL RAIL - W4L13954
(x2) | 5/8"x2 3/8"x55" (16x60x1398)




H100380 | SCREW PFH BLK
(x4) | 8x1 1/8


FRONT VIEW

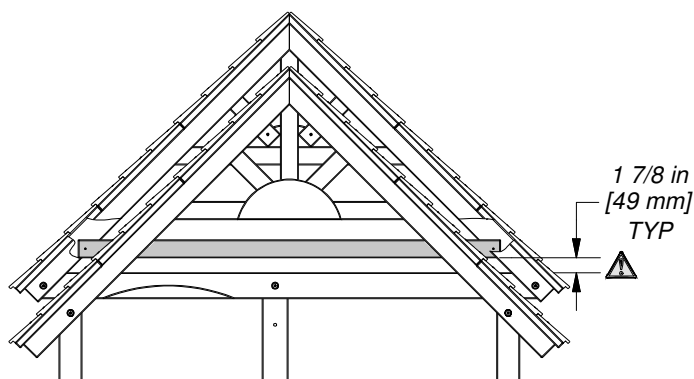

380 (x2)
SCREW - 1 1/8"

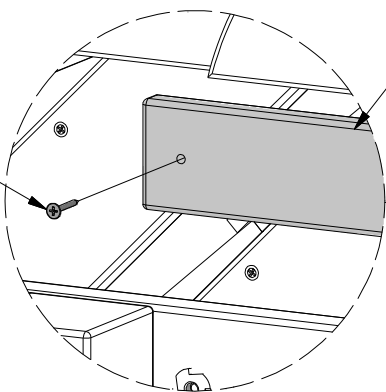


N01 (x1)
WALL RAIL

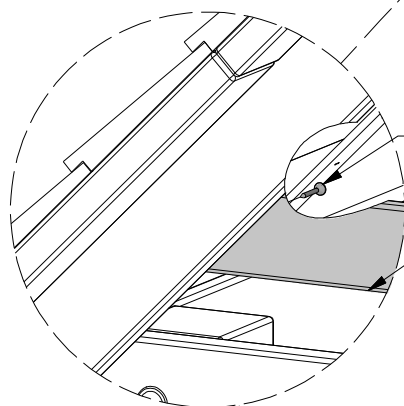

380 (x2)
SCREW - 1 1/8"

N01 (x1)
WALL RAIL

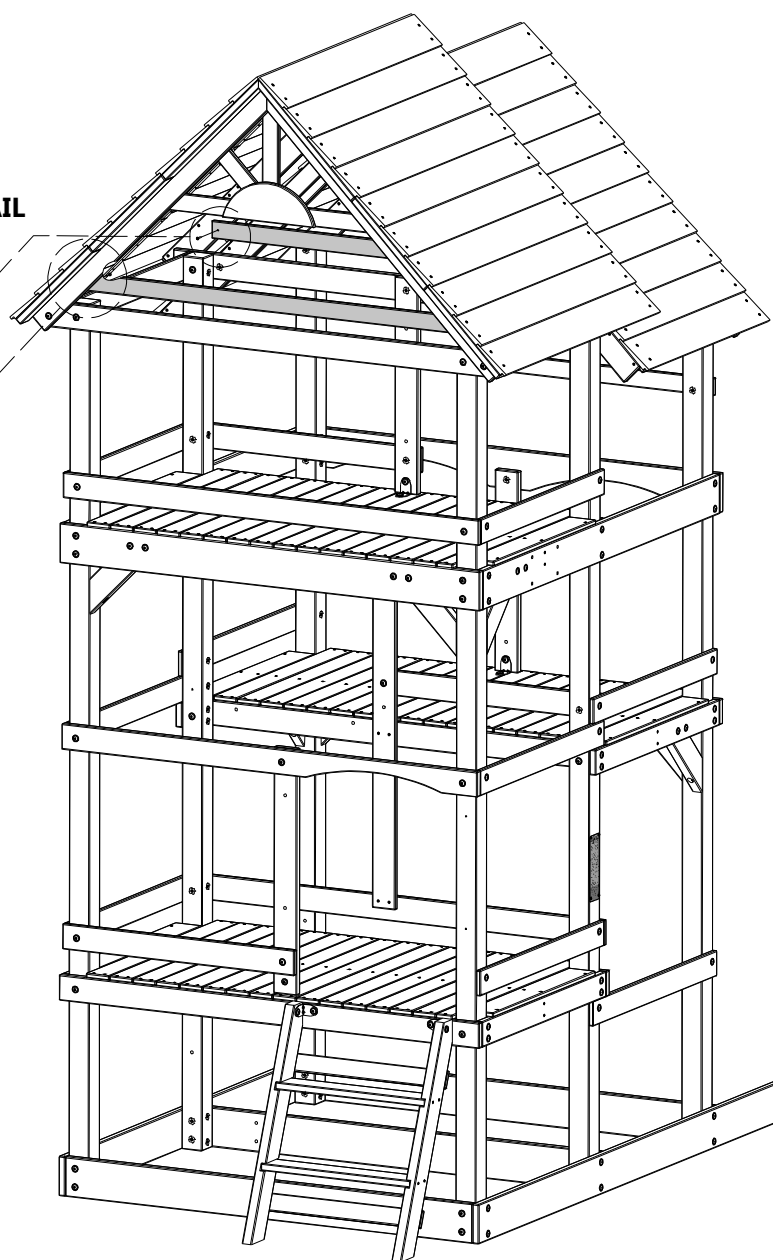





FORT ASSEMBLY

STEP 27


- H19** | PICNIC TABLE SEAT - W4L13940
(x2) | 1"x3 3/8"x14 3/4" (24x86x374)
- H20** | PICNIC TABLE SEAT SUPPORT - W4L13941
(x2) | 1"x3 3/8"x14 1/2" (24x86x368)
- G10** | PICNIC TABLE SUPPORT - W4L13938
(x2) | 1"x5 1/4"x13 1/2" (24x134x344)
- M08** | PICNIC TABLE - W4L13950
(x4) | 5/8"x3 3/8"x28 1/2" (16x86x724)
- N06** | PICNIC TABLE SUPPORT - W4L13959
(x1) | 5/8"x2 3/8"x12 3/8" (16x60x314)
- H12** | BENCH - W4L13933
(x2) | 1"x3 3/8"x32 1/2" (24x86x824)


- H100415** | BOLT WH BLK
(x6) | 5/16x3 3/4
- H100379** | T-NUT 5/16 BLK
(x14)
- H100089** | SCREW PFH
(x24) | 8x1 3/4
- H100378** | BOLT WH BLK
(x8) | 5/16x1 3/4
- H100198** | WASHER LOCK
(x14) | EXT 8x19 BLK
- H100088** | SCREW PFH
(x4) | 8x1 1/8

TABLE TOP ASSEMBLY

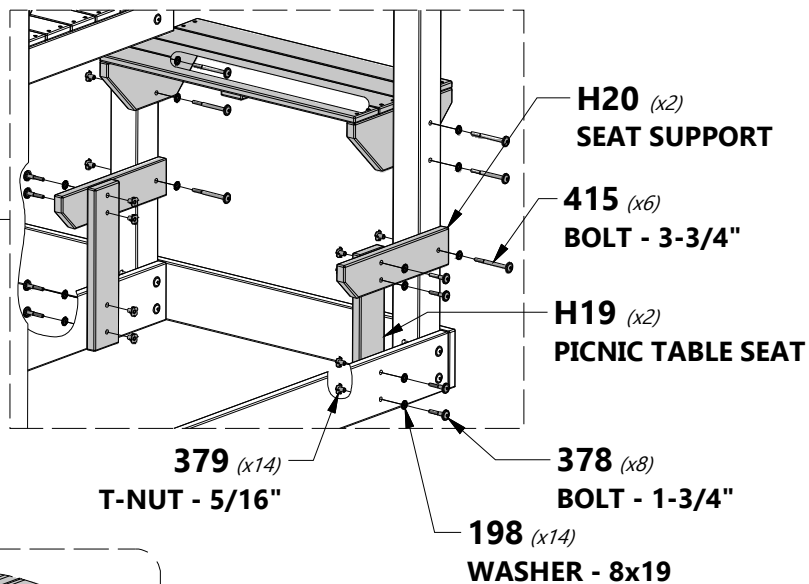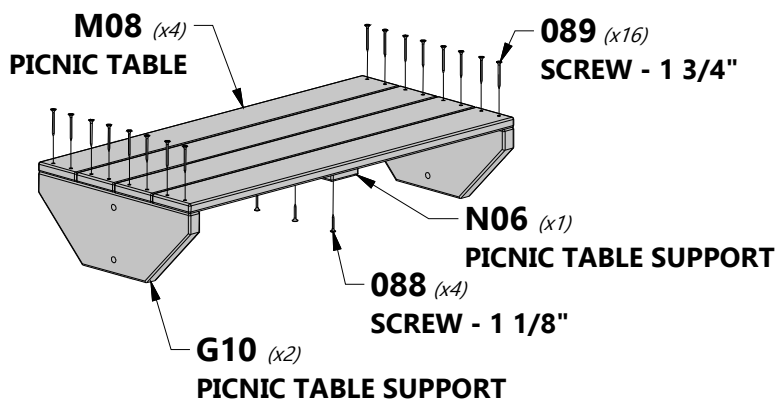


BENCH ASSEMBLY

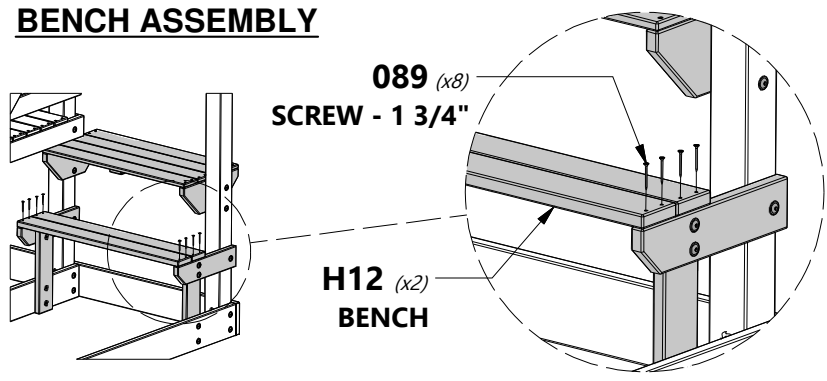

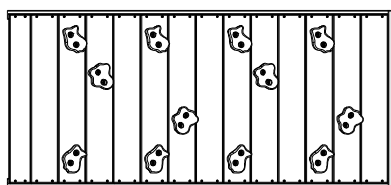

ROCK WALL ASSEMBLY
FROM PREVIOUS STEPS

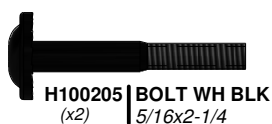

H100205 | BOLT WH BLK
(x2) | 5/16x2-1/4



H100407 | BOLT WH BLK
(x2) | 5/16x1 1/2



H100379 | T-NUT BLK
(x2) | 5/16




H100198 | WASHER LOCK
(x4) | EXT 8x19 BLK




NOTE:

MOUNT ROCK WALL ASSEMBLY USING THE T-NUTS THAT YOU PREVIOUSLY INSTALLED DURING THE ROCK WALL ASSEMBLY STEPS.

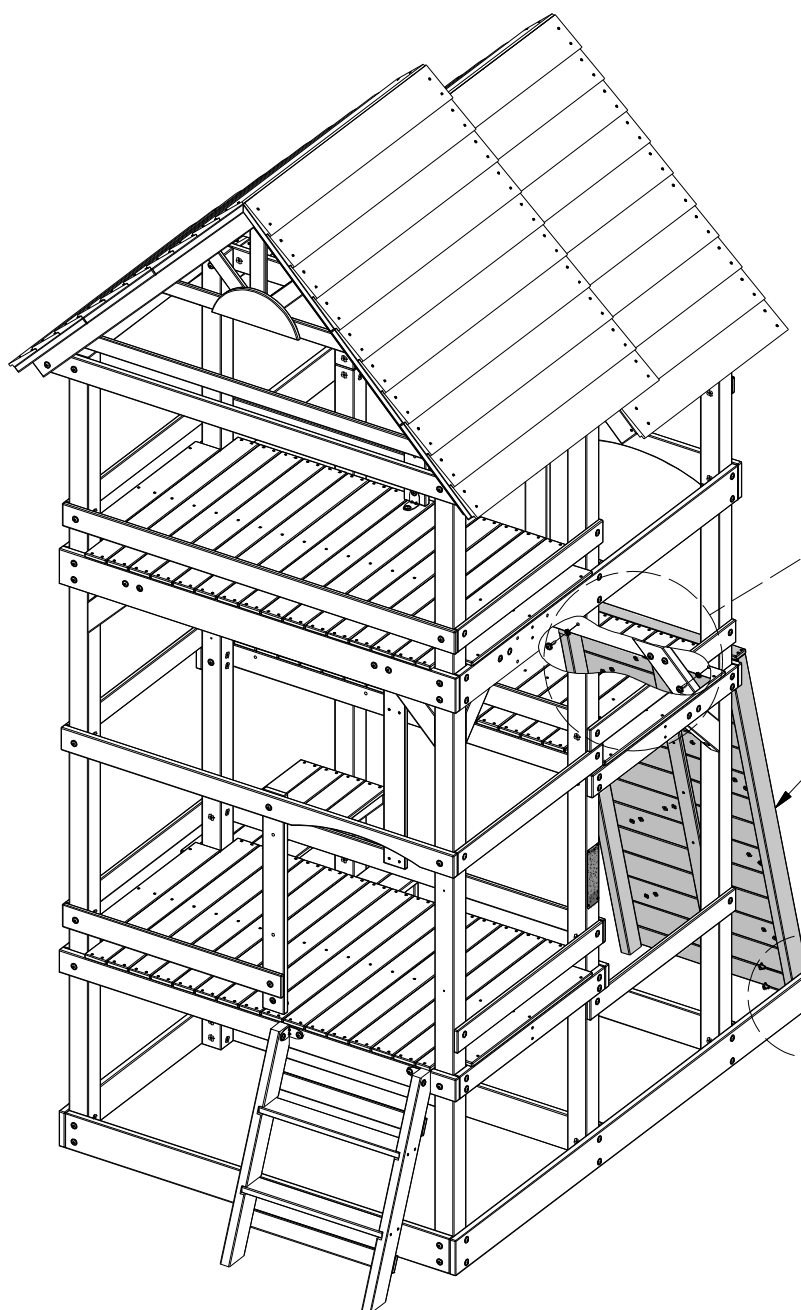


NOTE PILOT HOLES.

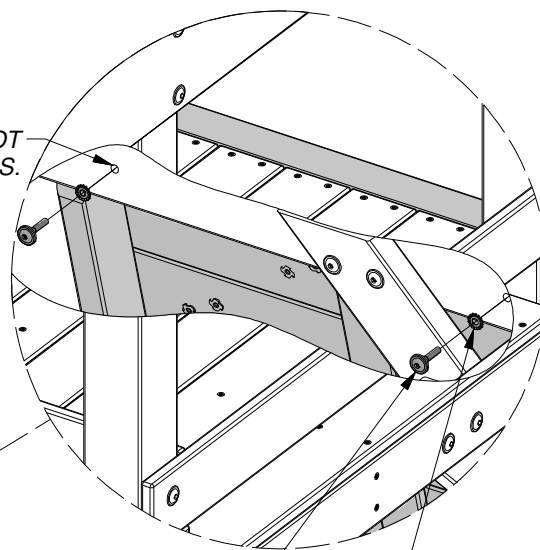

407 (x2)
BOLT - 1-1/2"
198 (x2)
WASHER - 8x19

ROCK WALL (x1)
FROM PREVIOUS STEPS

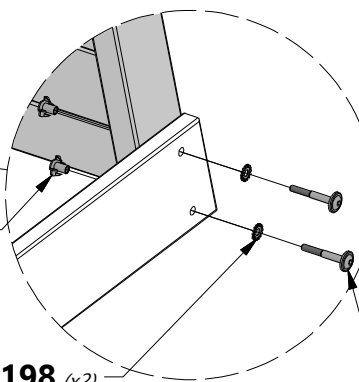

379 (x2)
T-NUT - 5/16"

198 (x2)
WASHER - 8x19

205 (x2)
BOLT - 2-1/4"



FORT ASSEMBLY

STEP 29

M06 WALL BOARD - W4L13952
(x8) 5/8"x3 3/8"x23 1/4" (16x86x591)



M07 WALL BOARD - W4L13951
(x8) 5/8"x3 3/8"x26 5/8" (16x86x677)

H100088 SCREW PFH
(x64) 8x1 1/8"




TIP:

USE THE PROVIDED PICKET PAL TO SPACE AND INSTALL EACH PICKET AS SHOWN TO THE DIMENSIONS PROVIDED BELOW.

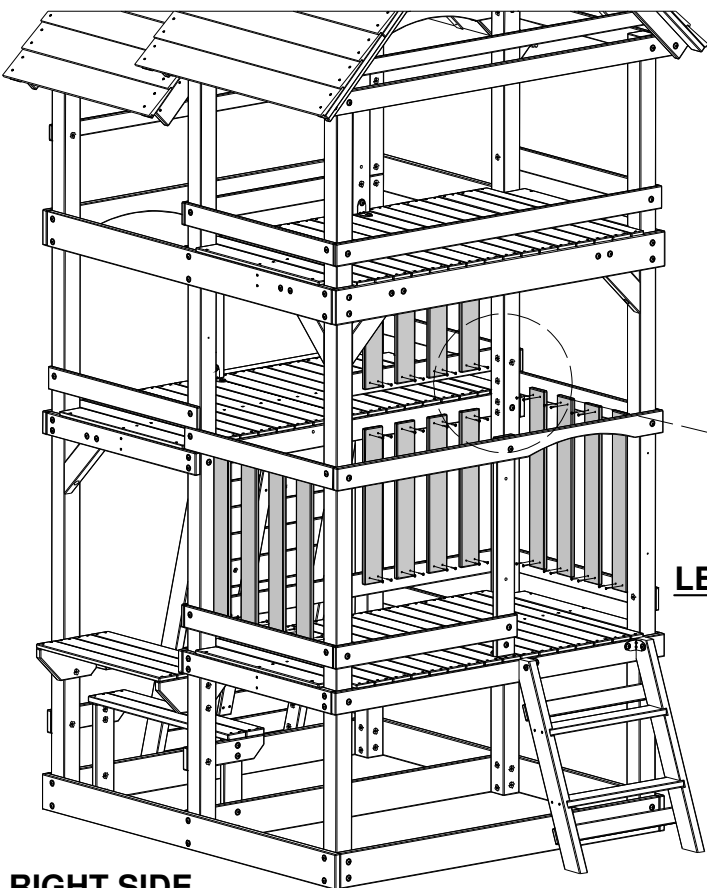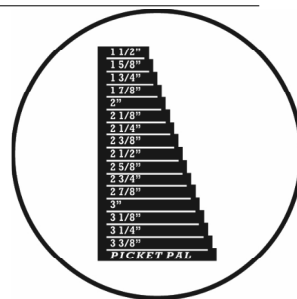


LEFT SIDE

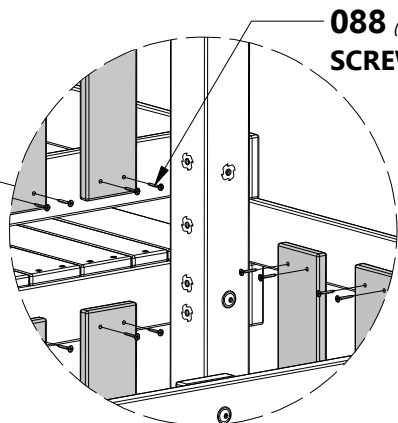

RIGHT SIDE

BACK SIDE

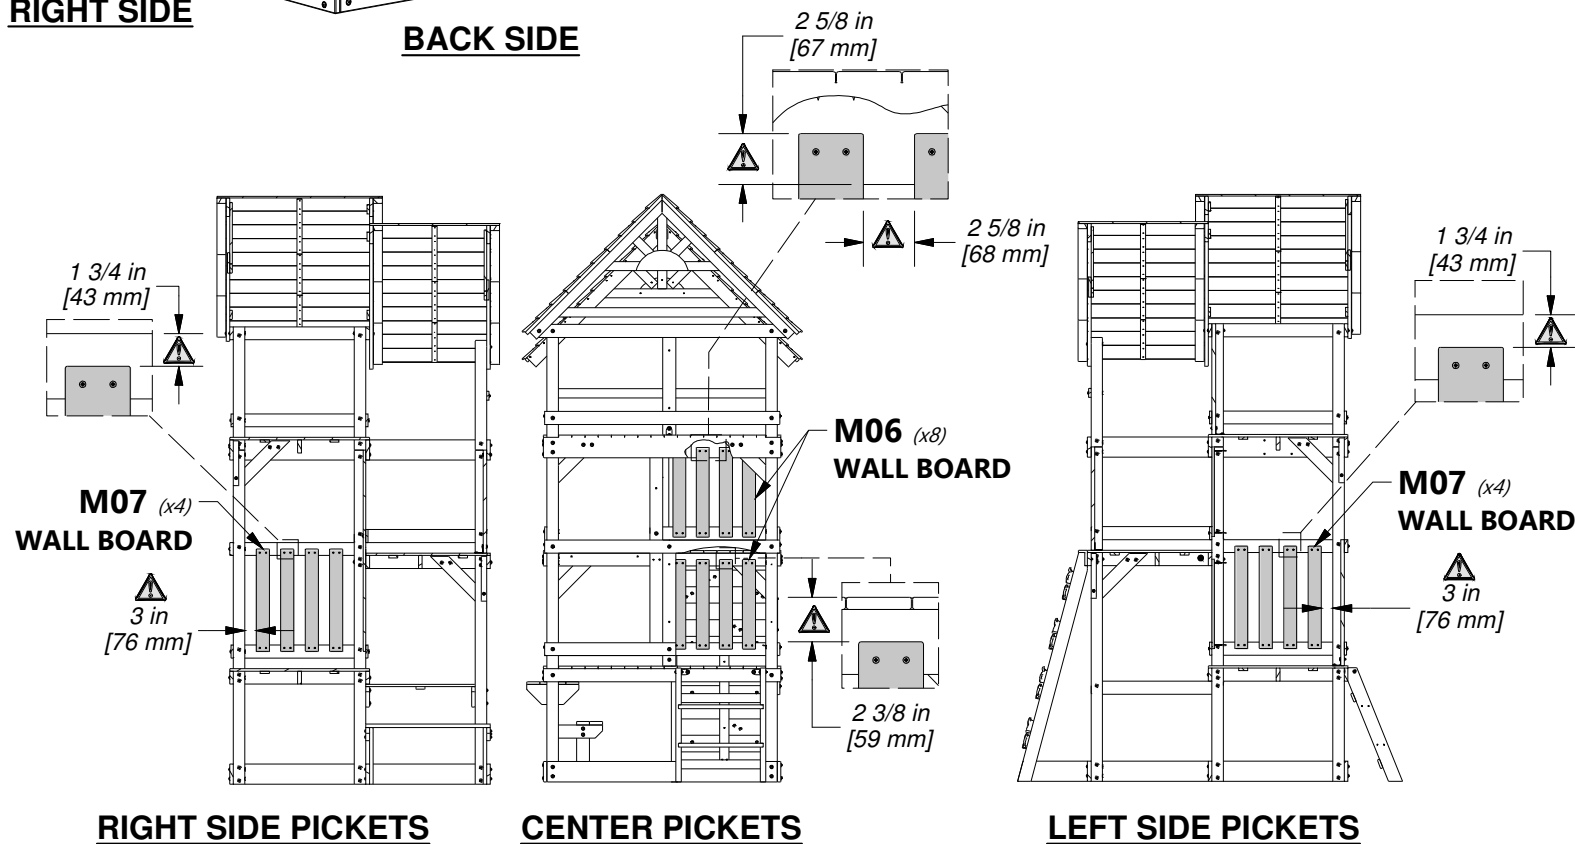




M06 | WALL BOARD - W4L13952
(x4) 5/8"x3 3/8"x23 1/4" (16x86x591)

M07 | WALL BOARD - W4L13951
(x4) 5/8"x3 3/8"x26 5/8" (16x86x677)





H100088 | SCREW PFH
(x32) 8x1 1/8"

CENTER PICKETS

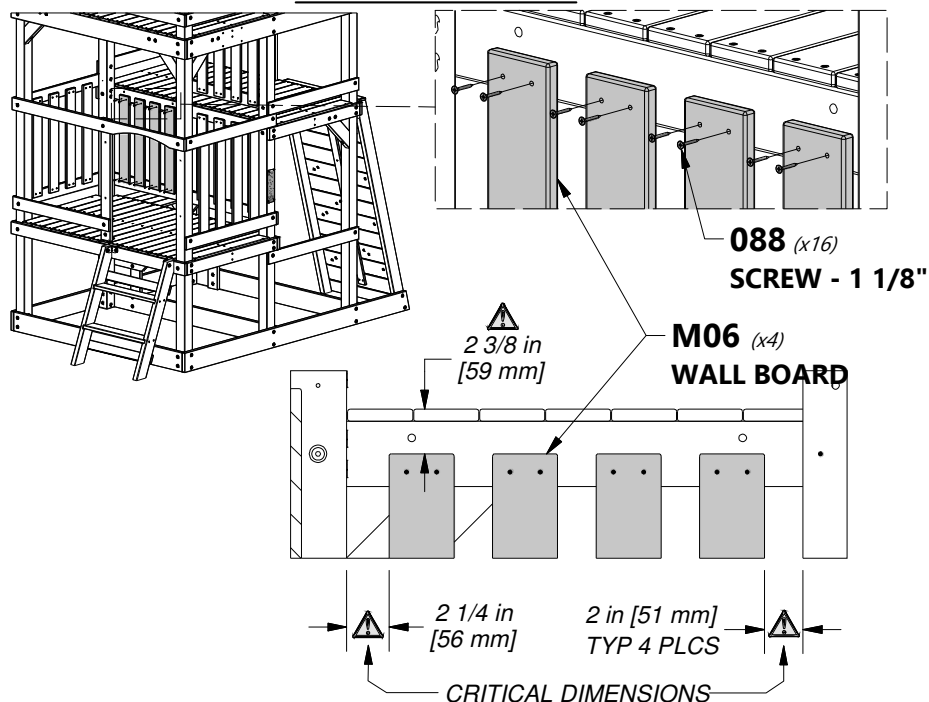


TIP:

USE THE PROVIDED PICKET PAL TO SPACE AND INSTALL EACH PICKET AS SHOWN TO THE DIMENSIONS PROVIDED BELOW.

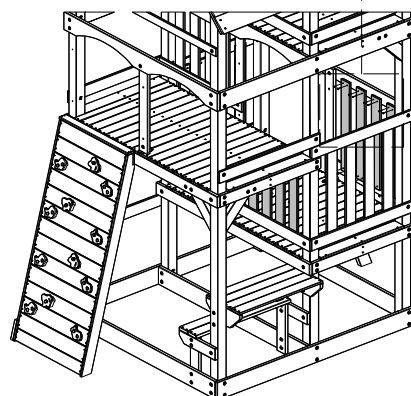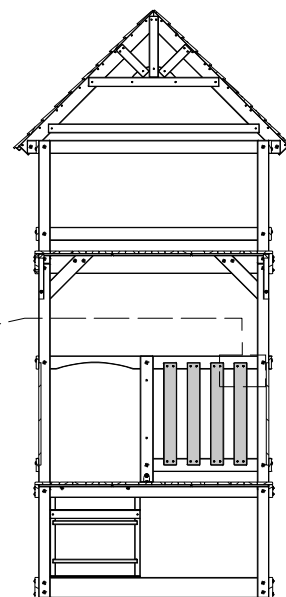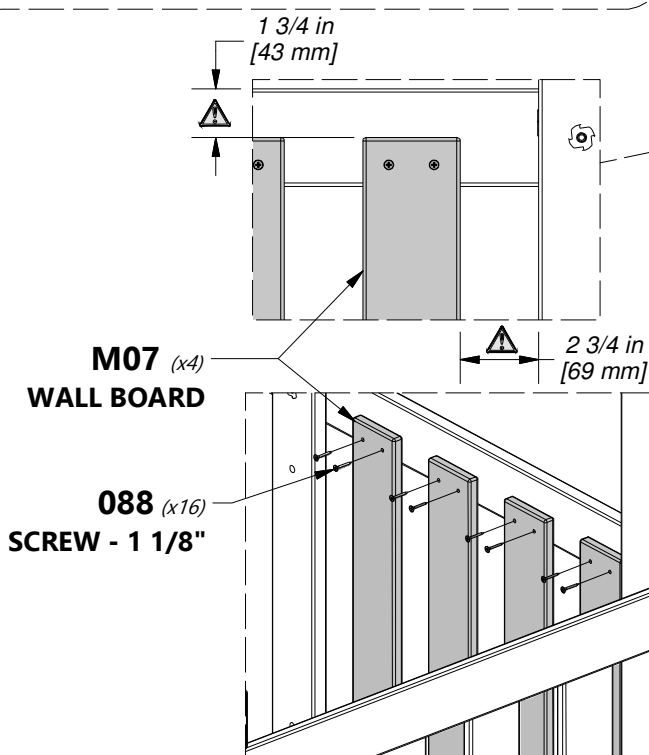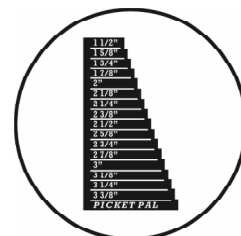

FRONT PICKETS

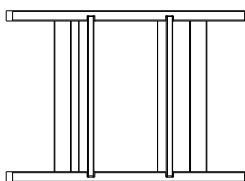

LADDER ASSEMBLY
FROM PREVIOUS STEPS




H100468 | **BOLT WH BLK**
(x2) | 5/16x1



NOTE:

T-NUTS WERE INSTALLED IN PREVIOUS STEPS AND AREN'T SHOWN IN THIS VIEW.

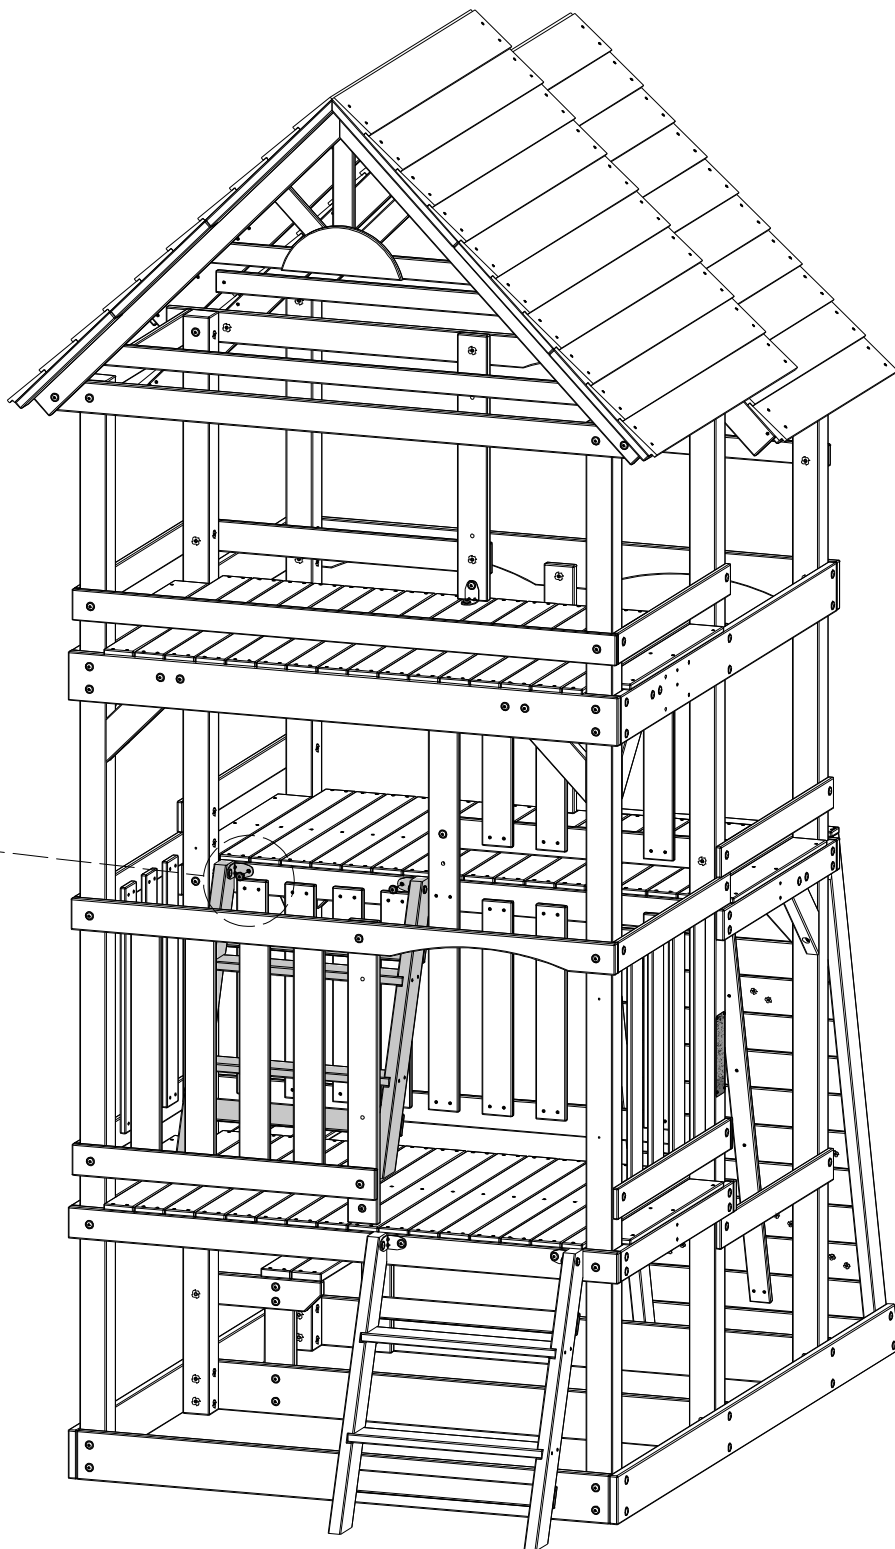

468 (x2)
BOLT - 1"

LADDER ASSEMBLY




FORT ASSEMBLY

STEP 32

M06 | WALL BOARD - W4L13952
(x8) | 5/8"x3 3/8"x23 1/4" (16x86x591)

H100088 | SCREW PFH
(x32) | 8x1 1/8"

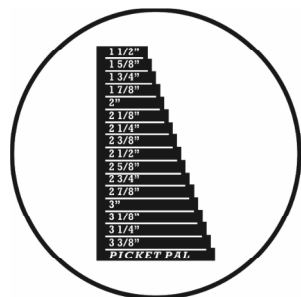

TIP:


USE THE PROVIDED PICKET PAL TO SPACE AND INSTALL EACH PICKET AS SHOWN TO THE DIMENSION PROVIDED BELOW.

M06 (x4)
WALL BOARD

1 3/4 in
[43 mm]

088 (x16)
SCREW - 1 1/8"


REPEAT ON OPPOSITE SIDE

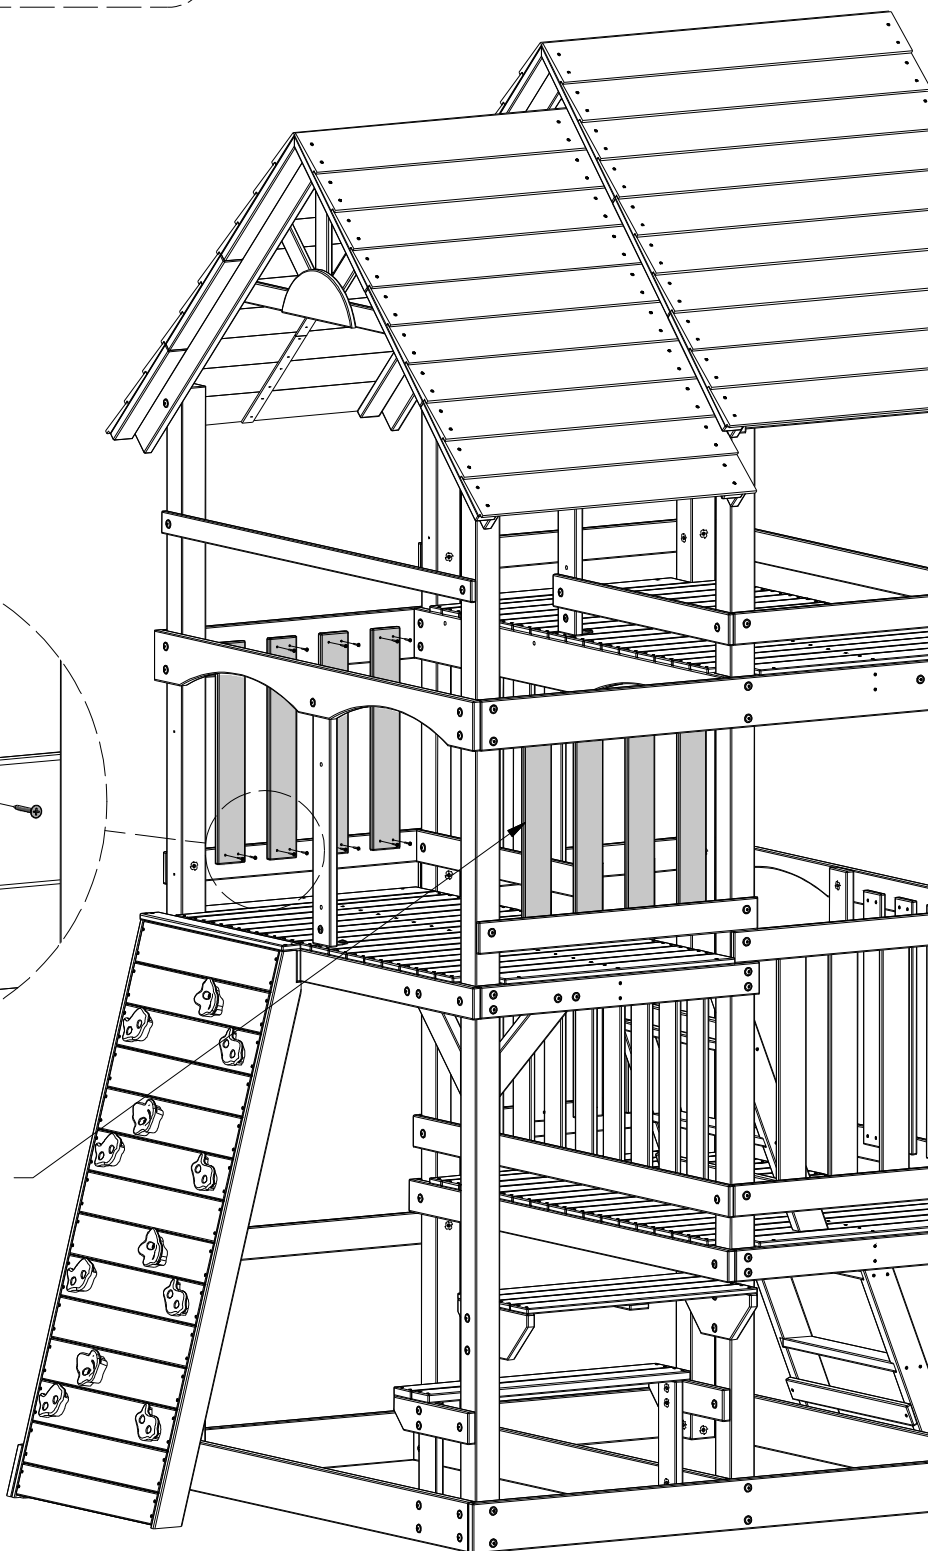




O2 | WALL BOARD - W4L13921
(x14) | 5/8"x1 3/8"x14" (16x36x356)

H100088 | SCREW PFH
(x28) | 8x1 1/8"


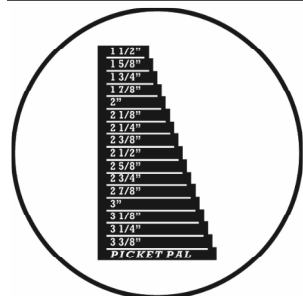


TIP:

USE THE PROVIDED PICKET PAL TO SPACE AND INSTALL EACH PICKET AS SHOWN TO THE DIMENSION PROVIDED BELOW.

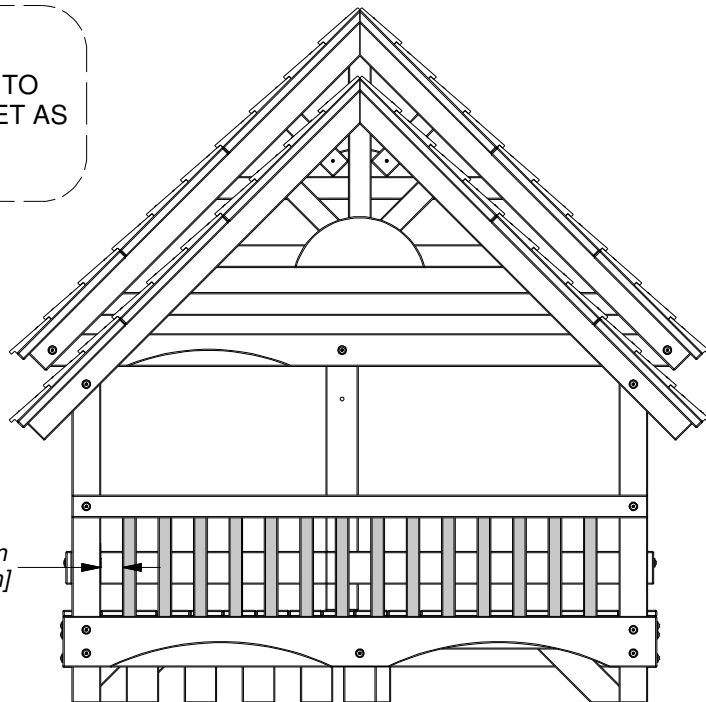


FRONT VIEW

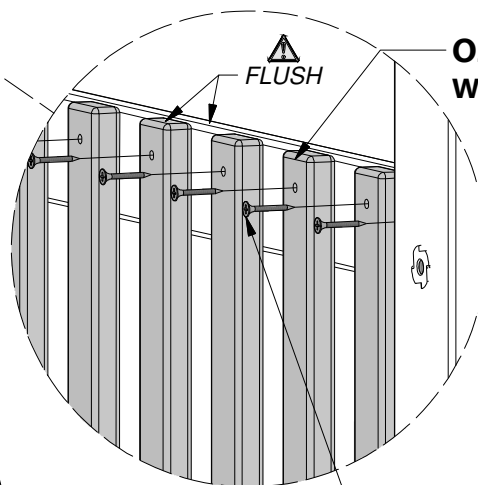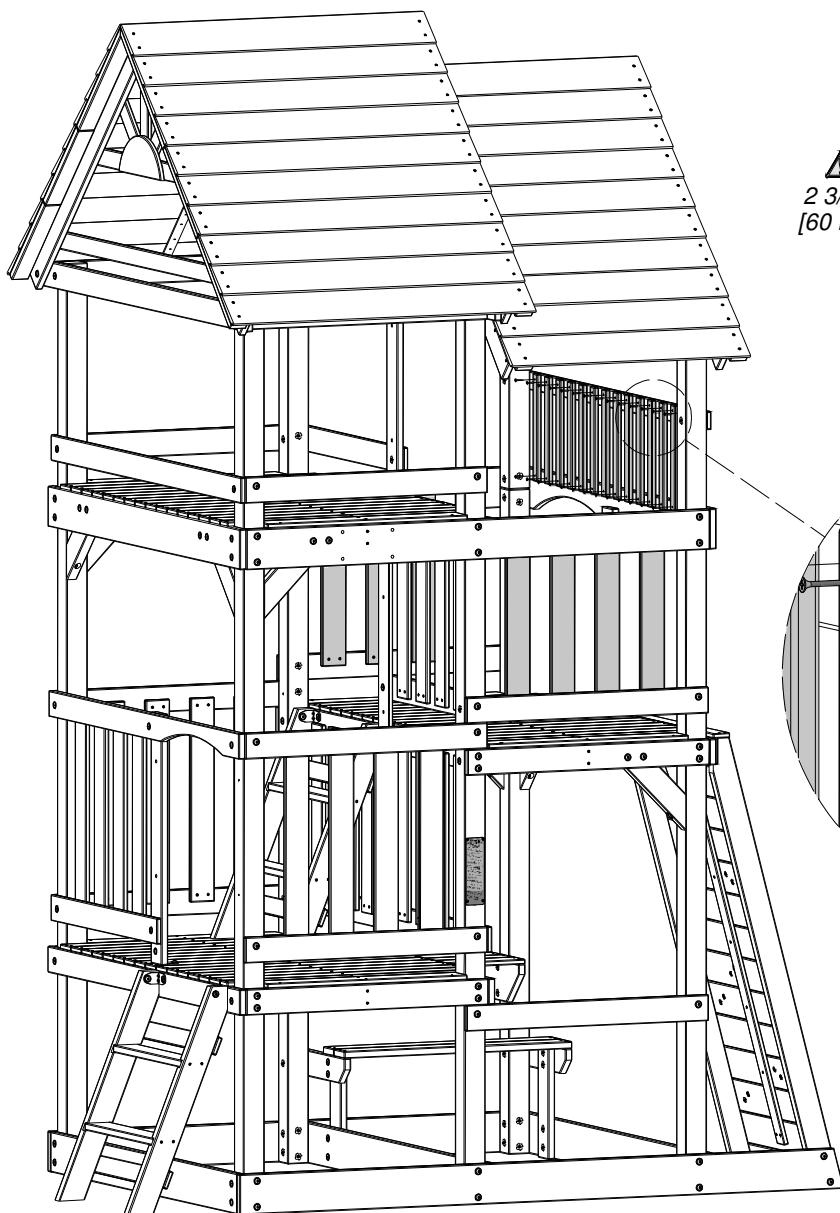

O2 (x14)
WALL BOARD

088 (x28)
SCREW - 1 1/8"

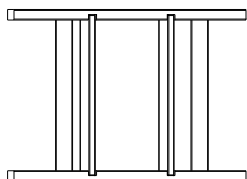

LADDER ASSEMBLY
FROM PREVIOUS STEPS




H100468 BOLT WH BLK
(x2) 5/16x1




NOTE:

T-NUTS WERE INSTALLED IN
PREVIOUS STEPS AND AREN'T
SHOWN IN THIS VIEW.

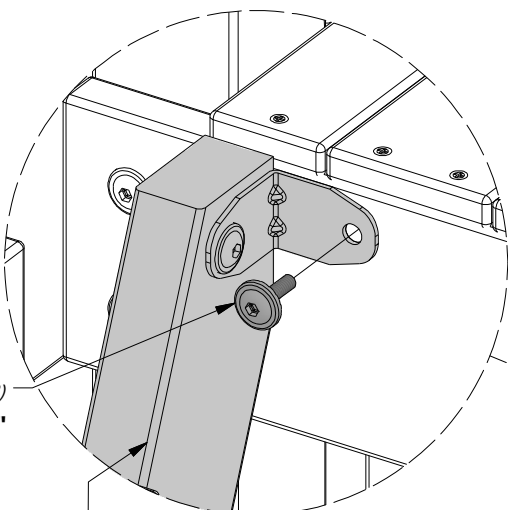

468 (x2)
BOLT - 1"

LADDER ASSEMBLY

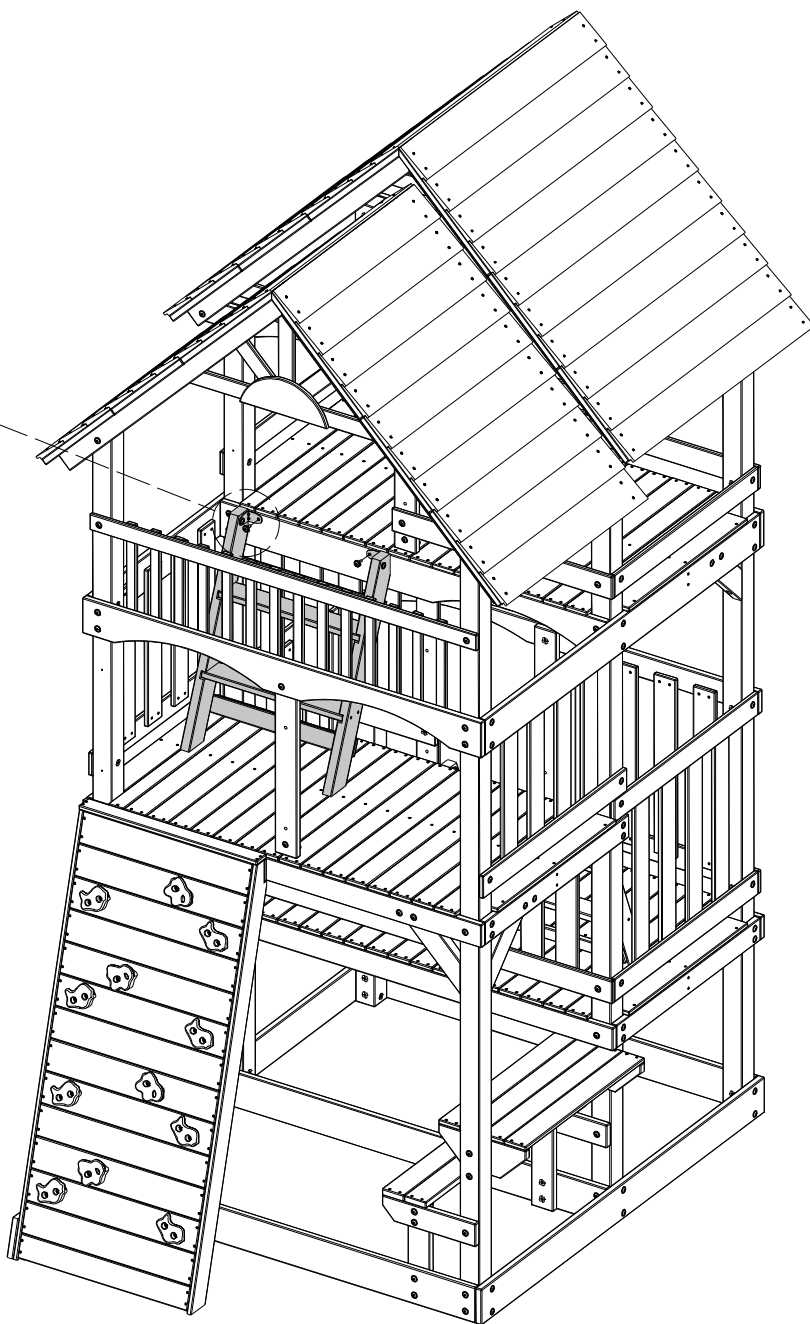




FORT ASSEMBLY

STEP 35


M06 | WALL BOARD - W4L13952
(x8) | 5/8"x3 3/8"x23 1/4" (16x86x591)

H100088 | SCREW PFH
(x32) | 8x1 1/8"

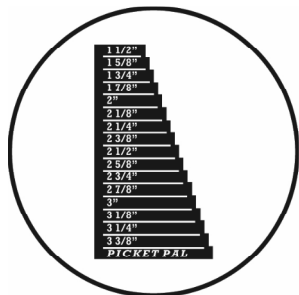



TIP:

USE THE PROVIDED PICKET PAL TO SPACE AND INSTALL EACH PICKET AS SHOWN TO THE DIMENSIONS PROVIDED BELOW.

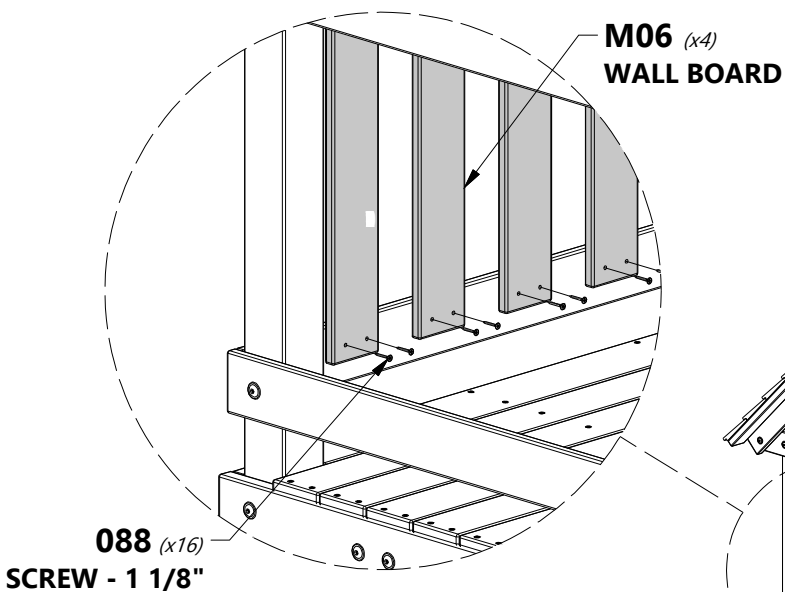

REPEAT ON OPPOSITE SIDE


PICKET SPACING

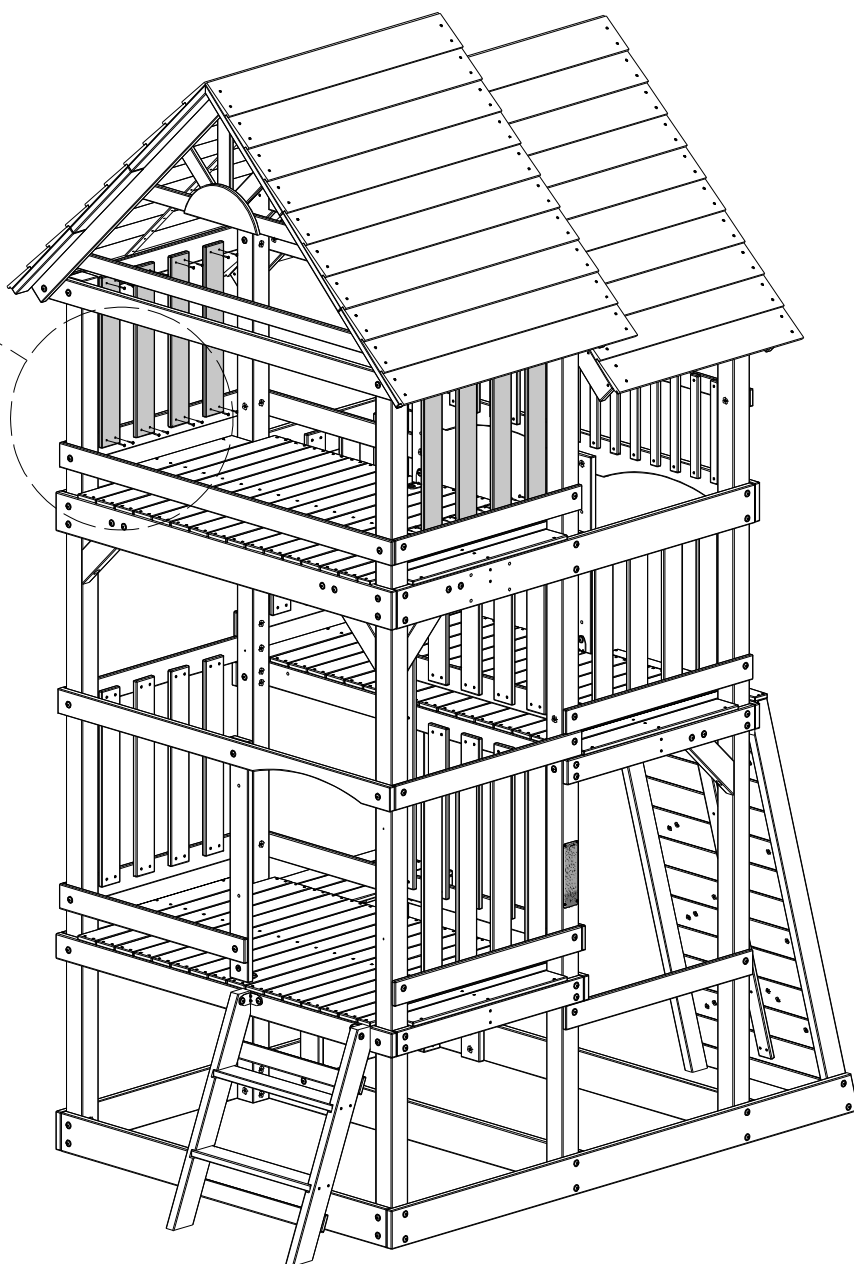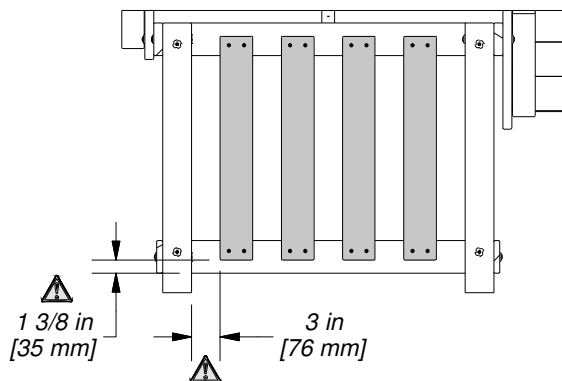







M06 | WALL BOARD - W4L13952
(x12) | 5/8"x3 3/8"x23 1/4" (16x86x591)

H100088 | SCREW PFH
(x48) | 8x1 1/8"

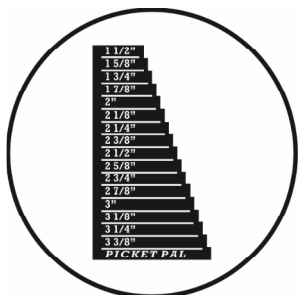

TIP:

USE THE PROVIDED PICKET PAL TO SPACE AND INSTALL EACH PICKET AS SHOWN TO THE DIMENSIONS PROVIDED BELOW.

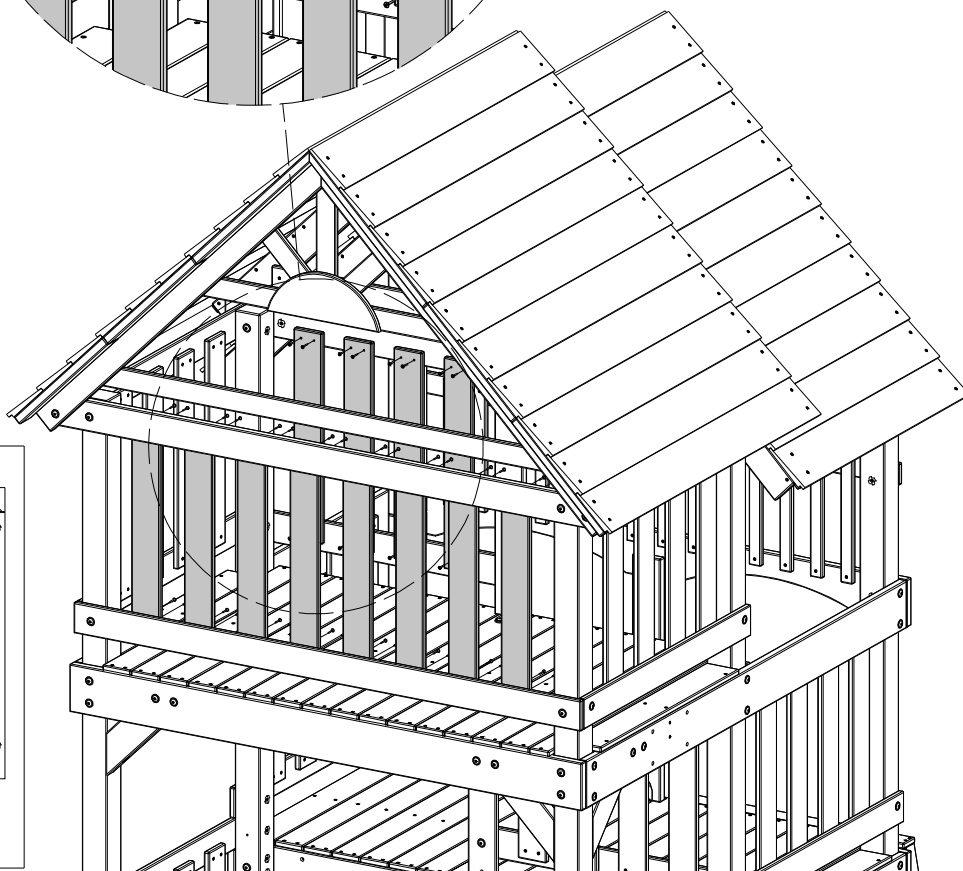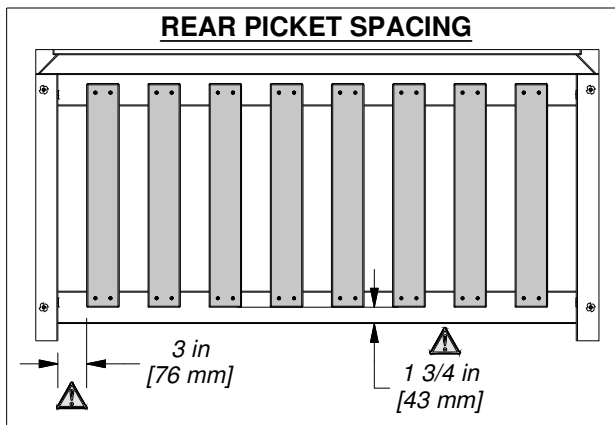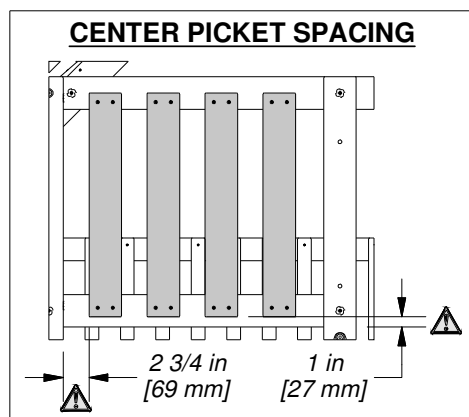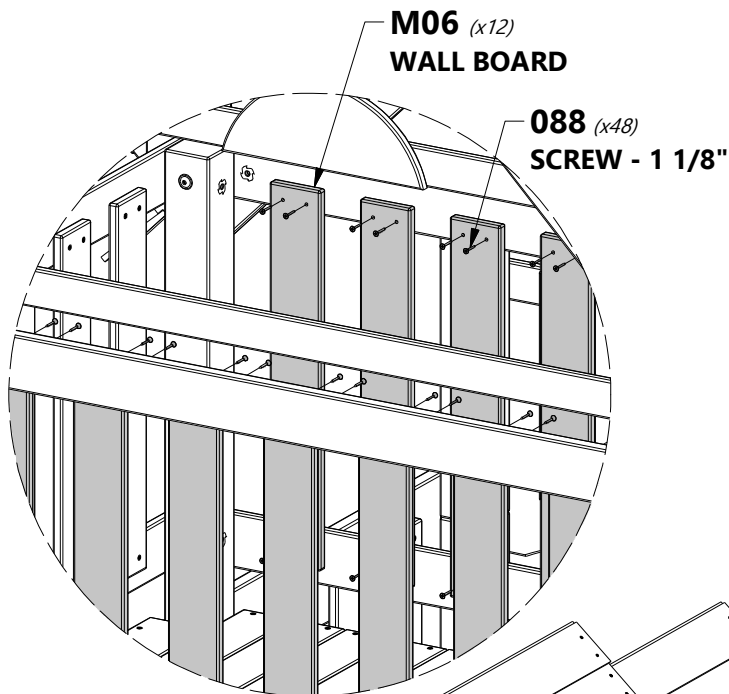



FORT ASSEMBLY

STEP 37



A100118
(x8) **HAND GRIP**
METAL GREEN
381 c/c

⚠ LOOSEN RAFTER BOLT TO HELP
WITH GRAB HANDLE INSTALL.



H100468
(x6) **BOLT WH BLK**
5/16x1



H100458
(x8) **LAG SCREW WH BLK**
5/16x2



H100663
(x2) **BOLT WH BLK**
5/16x3/4



H100379
(x8) **T-NUT BLK**
5/16

458 (x2)
LAG SCREW - 2"

379 (x2)
T-NUT - 5/16"

468 (x2)
BOLT - 1"

118 (x4)
HAND GRIP

379 (x2)
T-NUT - 5/16"

663 (x2)
BOLT - 3/4"

458 (x4)
LAG SCREW - 2"

379 (x2)
T-NUT - 5/16"


468 (x2)
BOLT - 1"

118 (x4)
HAND GRIP


458 (x2)
LAG SCREW - 2"

379 (x2)
T-NUT - 5/16"

468 (x2)
BOLT - 1"

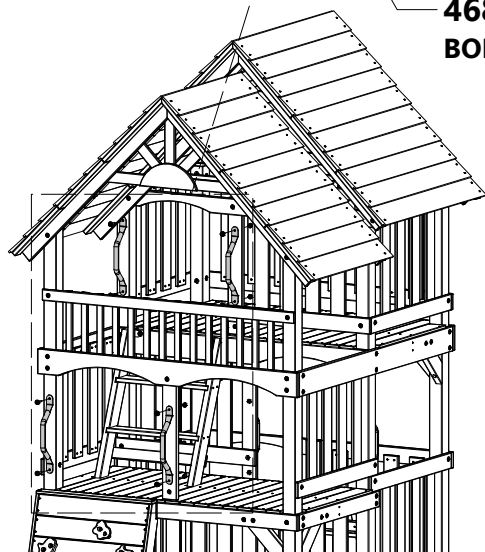

FRONT VIEW

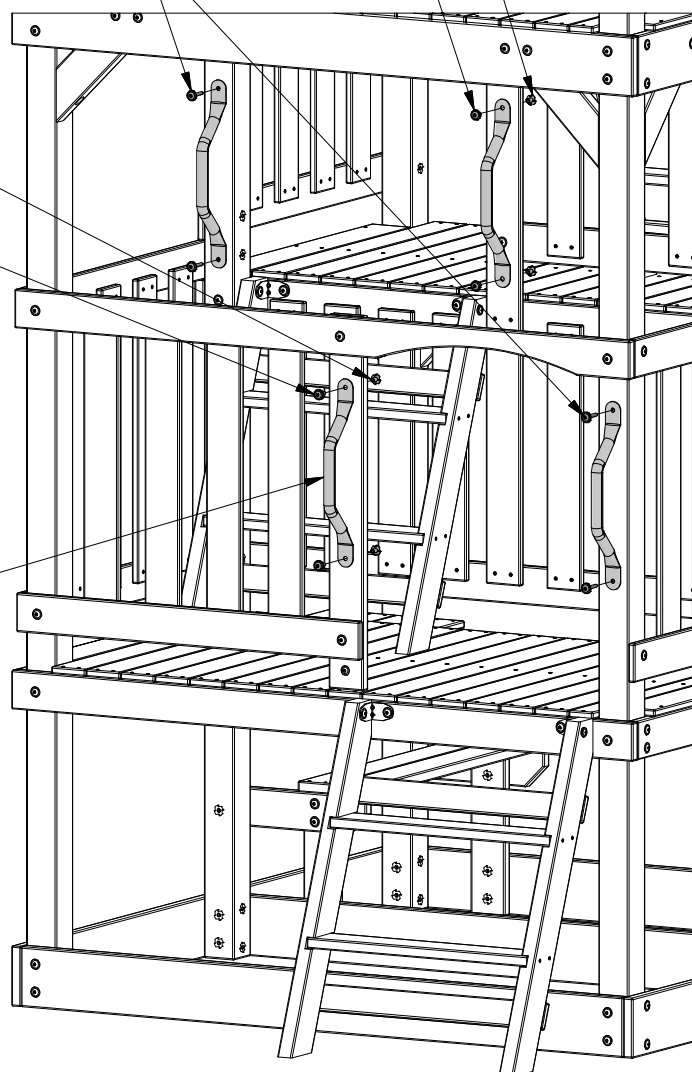


REAR VIEW



FORT ASSEMBLY

STEP 38

SWING BEAM ASSEMBLY
FROM PREVIOUS STEPS

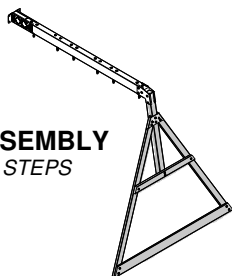

H100481 | BOLT HEX BLK
(x4) 5/16x1 1/4



H100477 | WASHER SPLIT BLK
(x4) 5/16




H100478 | WASHER FLAT BLK
(x4) 8x27



NOTE:

INSTALL SWING BEAM USING
T-NUTS PREVIOUS INSTALLED.

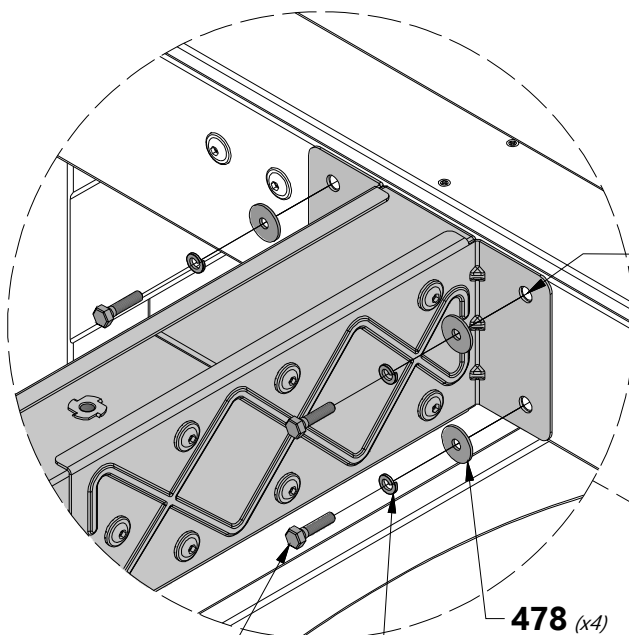


 **NOTE PILOT HOLES.**

481 (x4)
BOLT - 1 1/4"

477 (x4)
WASHER - 5/16

478 (x4)
WASHER - 8x27

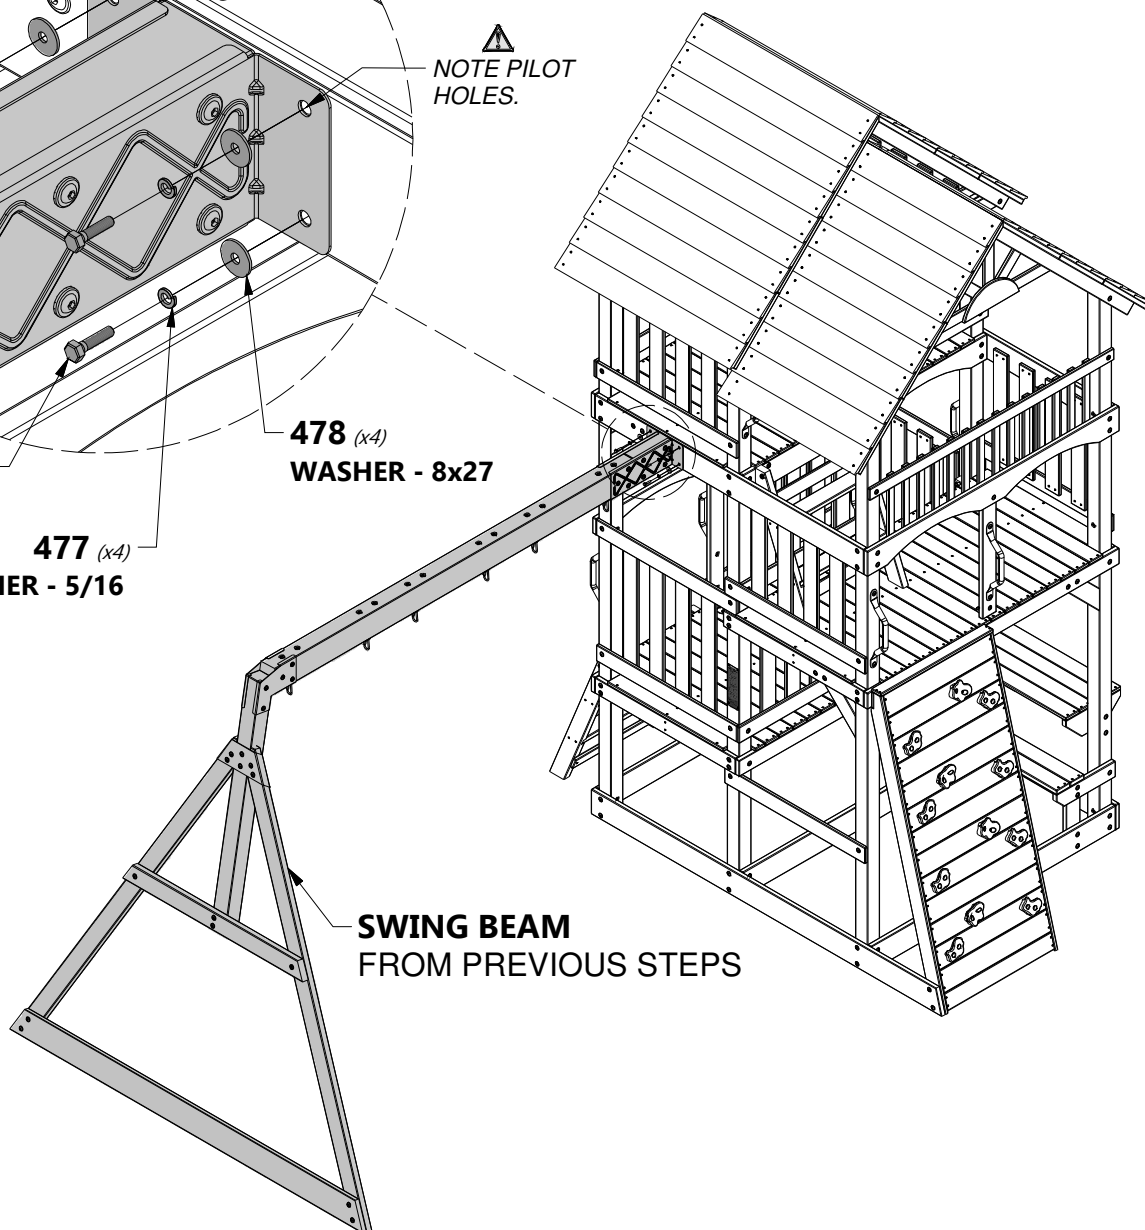

SWING BEAM
FROM PREVIOUS STEPS



FORT ASSEMBLY

STEP 39



A100069 (x4) QUICK LINK




A100164 (x1) BYD ID TAG (LARGE) AGES 3-10



A100047 (x4) CHAIN GREEN 57"





A6P00054 (x2) SWING SEAT GREEN 22"

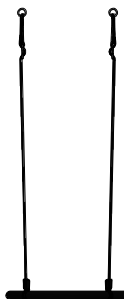

A4M01126 (x1) 26" WEB SWING SEAT ROPE



H100202 (x4) SCREW PWH BLK 8x5/8

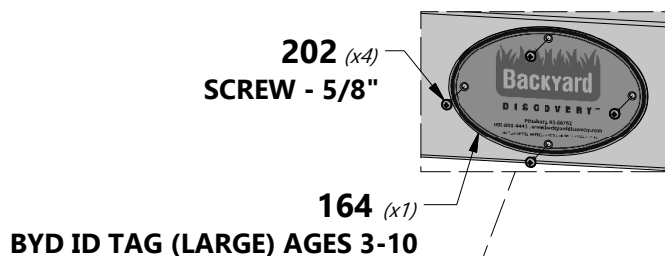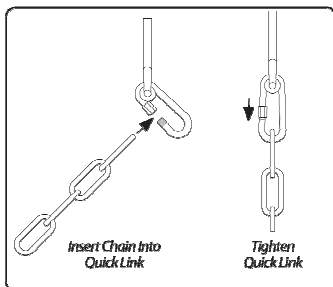

164 (x1) BYD ID TAG (LARGE) AGES 3-10

126 (x1) 26" WEB SWING

047 (x4) CHAIN GREEN 57"

069 (x4) QUICK LINK

054 (x2) SWING SEAT GREEN 22"



FORT ASSEMBLY

STEP 40



A100178 | AUGER GROUND STAKE
(x6)



H100468 | BOLT WH BLK
(x6) | 5/16x1



H100199 | WASHER LOCK EXT BLK
(x6) | 12x19




H100469 | NUT BARREL WH BLK
(x6) | 5/16x5/8



NOTE:

TWIST GROUND STAKE INTO THE GROUND WHERE SHOWN. THEN USING GROUND STAKE AS A GUIDE, DRILL A 7/16" (10mm) HOLE FOR HARDWARE.

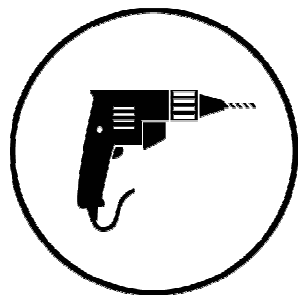

199 (x6)
WASHER - 12x19

469 (x6)
NUT BARREL - 5/8


468 (x6)
BOLT - 1"

178 (x6)
AUGER GROUND STAKE




O70 | SLIDE MOUNTING BOARD - W4L09040
(x1) | 5/8"x1 3/8"x20 3/8" (16x34x517)


H100088 | SCREW PFH
(x4) | 8x1 1/8"

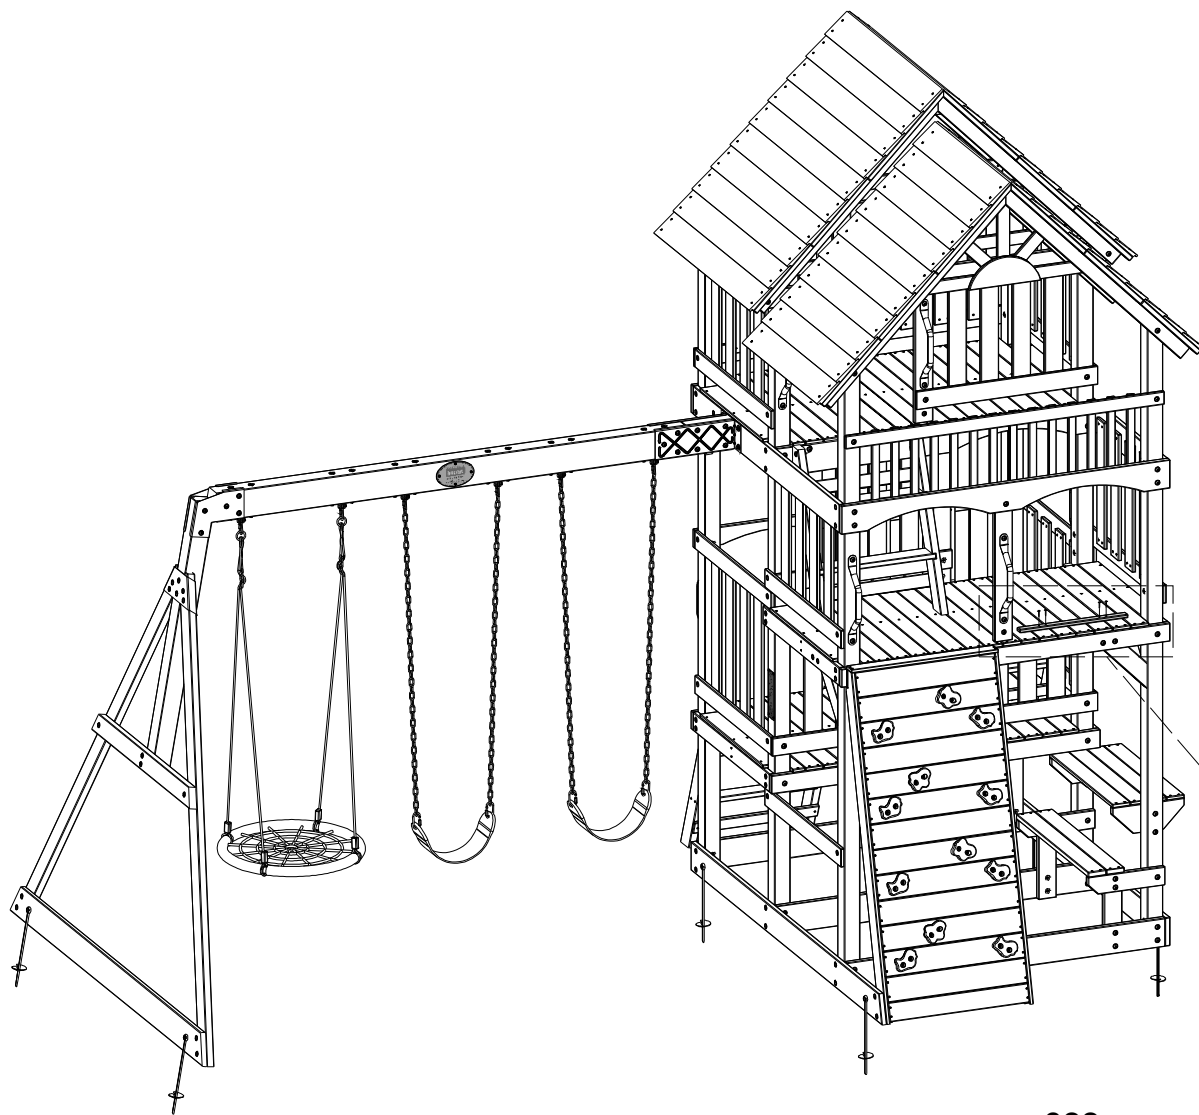

O70 BOARD PLACEMENT

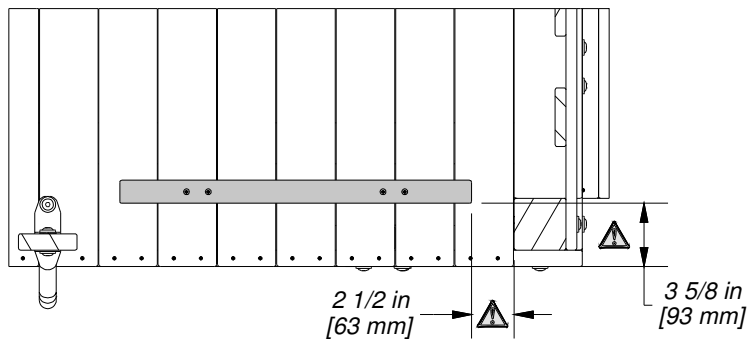

088 (x4)
SCREW - 1 1/8"

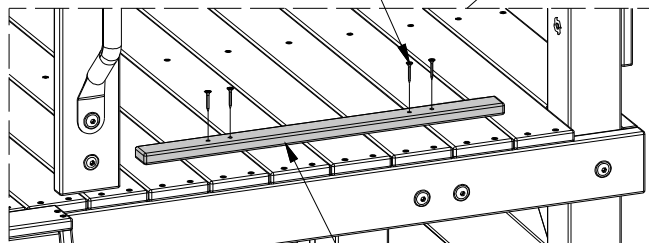

O70 (x1)
SLIDE MOUNTING BOARD



FORT ASSEMBLY

STEP 42



A100287
(x1) | **SLIDE VF 10 FT**



H100459 | **BOLT WH BLK**
(x3) | 5/16x1 1/4





H100379 | **T-NUT BLK**
(x3) | 5/16



NOTE:


PLACE THE SLIDE USING THE DIMENSIONS SHOWN BELOW. ONCE IN PLACE USE THE SLIDE AS A TEMPLATE AND DRILL (3) 3/8" (10 mm) HOLES. USE THE HOLES TO MOUNT THE SLIDE WITH THE INCLUDED HARDWARE.

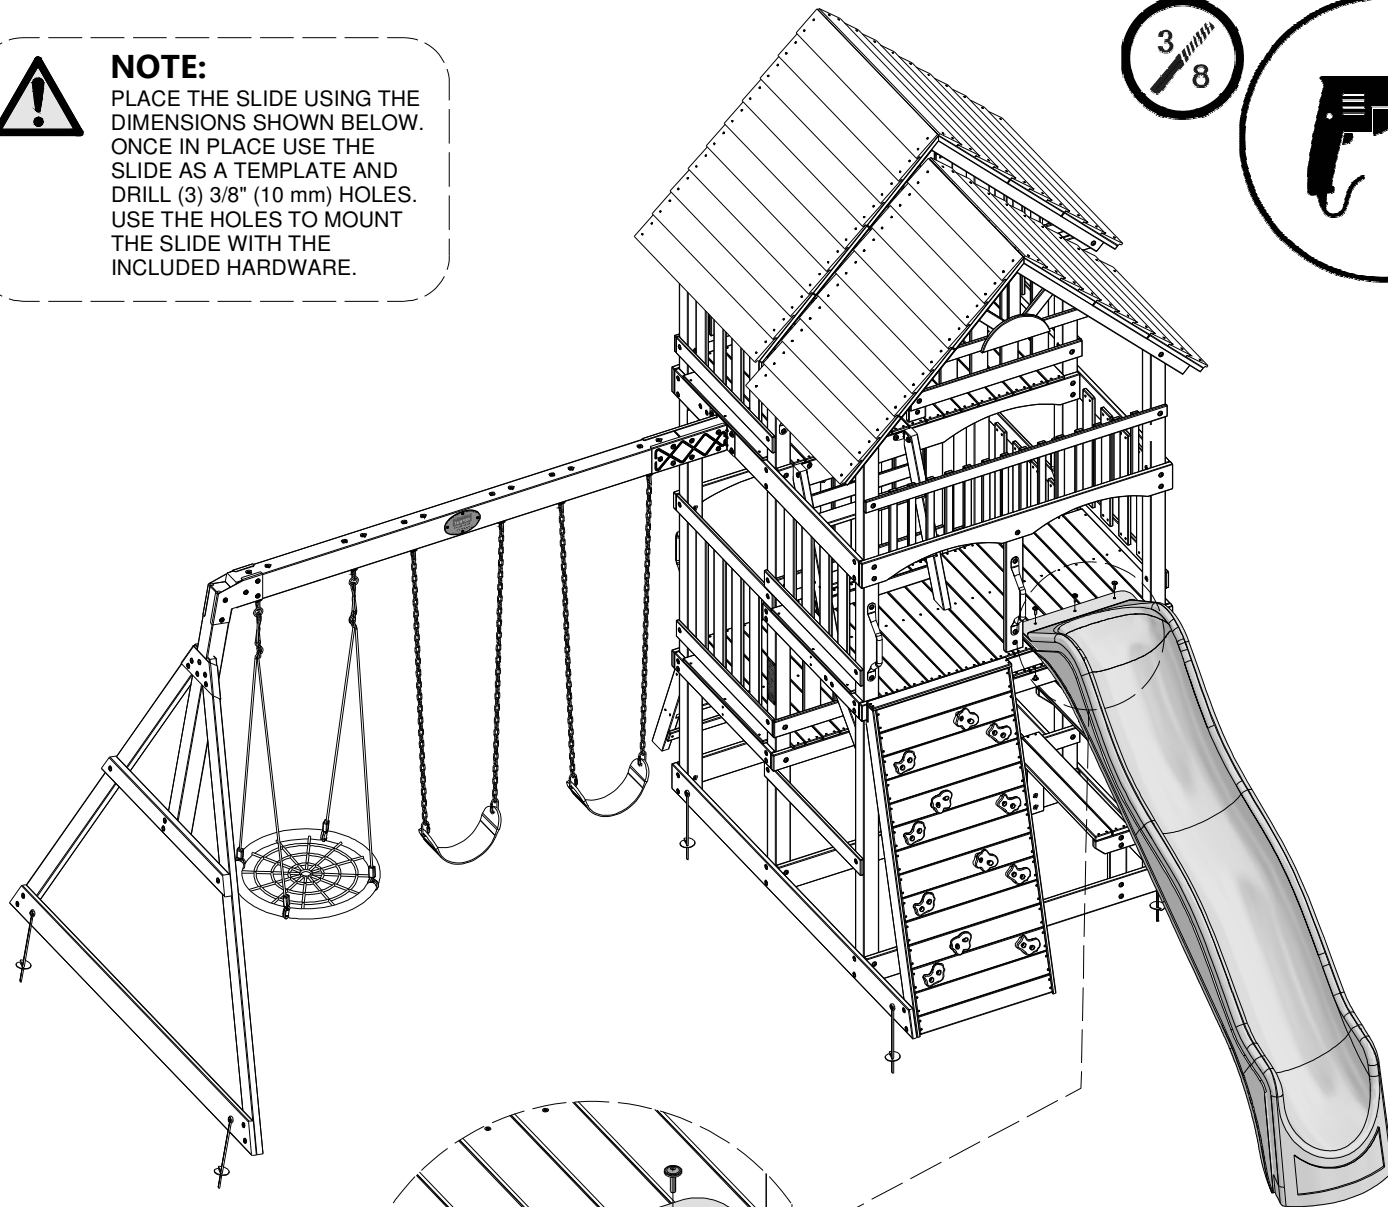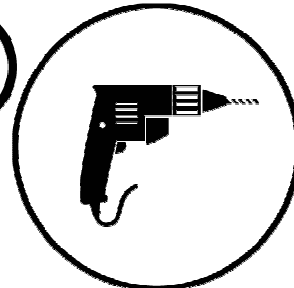


459 (x3)
BOLT - 1-1/4"

287 (x1)
SLIDE VF 10 FT

379 (x3)
T-NUT - 5/16"

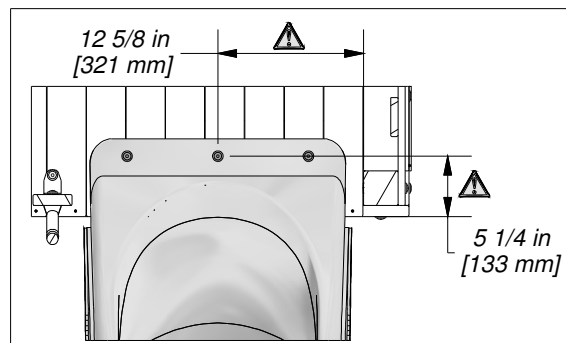


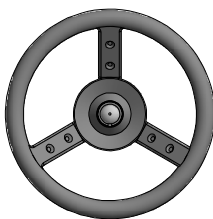


A100107 (x1) STEERING WHEEL



TIP:

FOR EASIER ASSEMBLY AND TO KEEP BOARD FROM SPLITTING PRE-DRILL PICKET USING A 3/16" (5 mm) DRILL BIT.

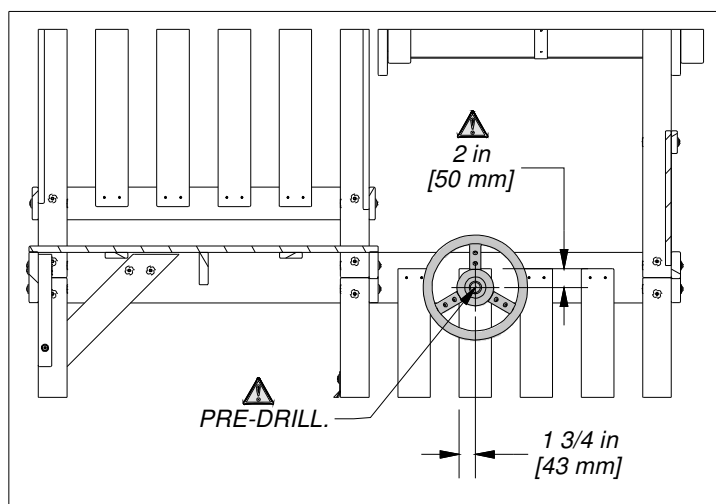
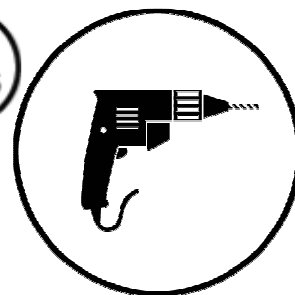


107 (x1)
STEERING WHEEL

WASHER FLAT 8x27 (x1)
(INCLUDED WITH STEERING WHEEL)

LAG SCREW HEX 5/16x2 (x1)
(INCLUDED WITH STEERING WHEEL)


CENTER CAP (x1)
(INCLUDED WITH STEERING WHEEL)

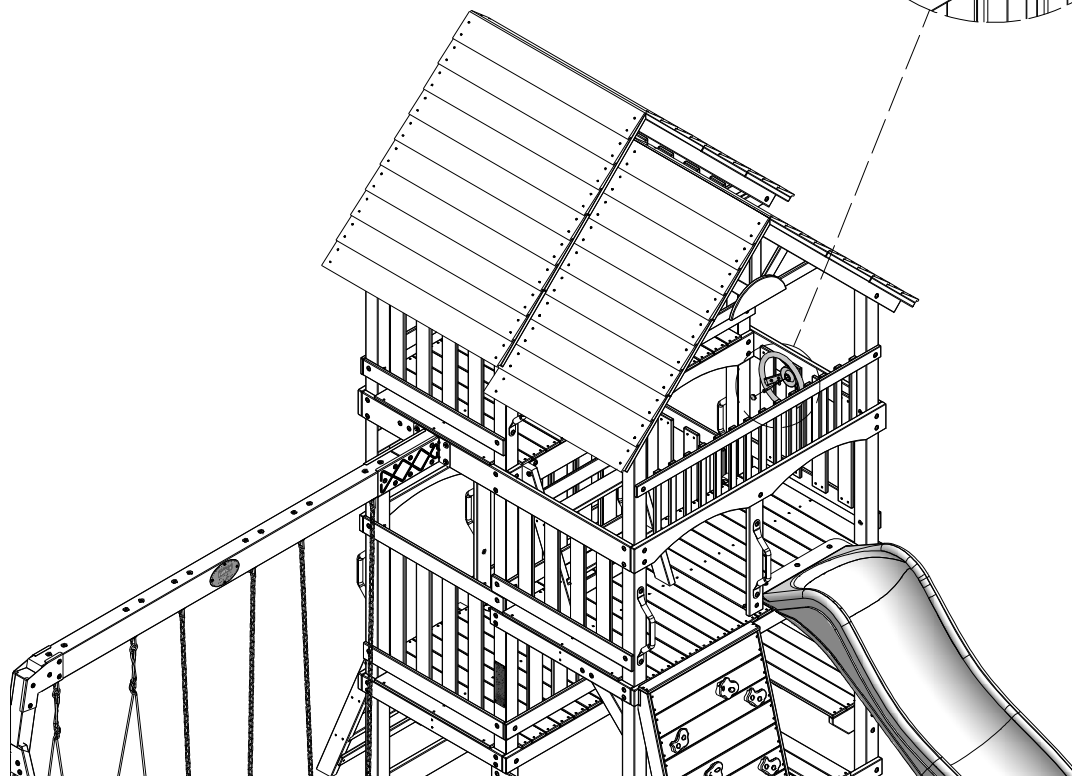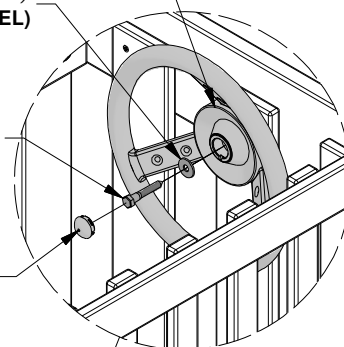



FORT ASSEMBLY


STEP 44




F01 | TELESCOPE MOUNT - W4L13974
(x1) | 1 3/8"x2 3/8"x5 1/4" (36x60x134)



H100483 | SCREW PFH BLK
(x2) | 8x2 1/4

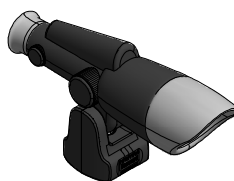

A100104 | TELESCOPE KIT
(x1)



H100082 | SCREW TAPPING
(x1) | 14x2 1/2



H100225 | FLANGE CUP WASHER
(x1) | 9x34

