


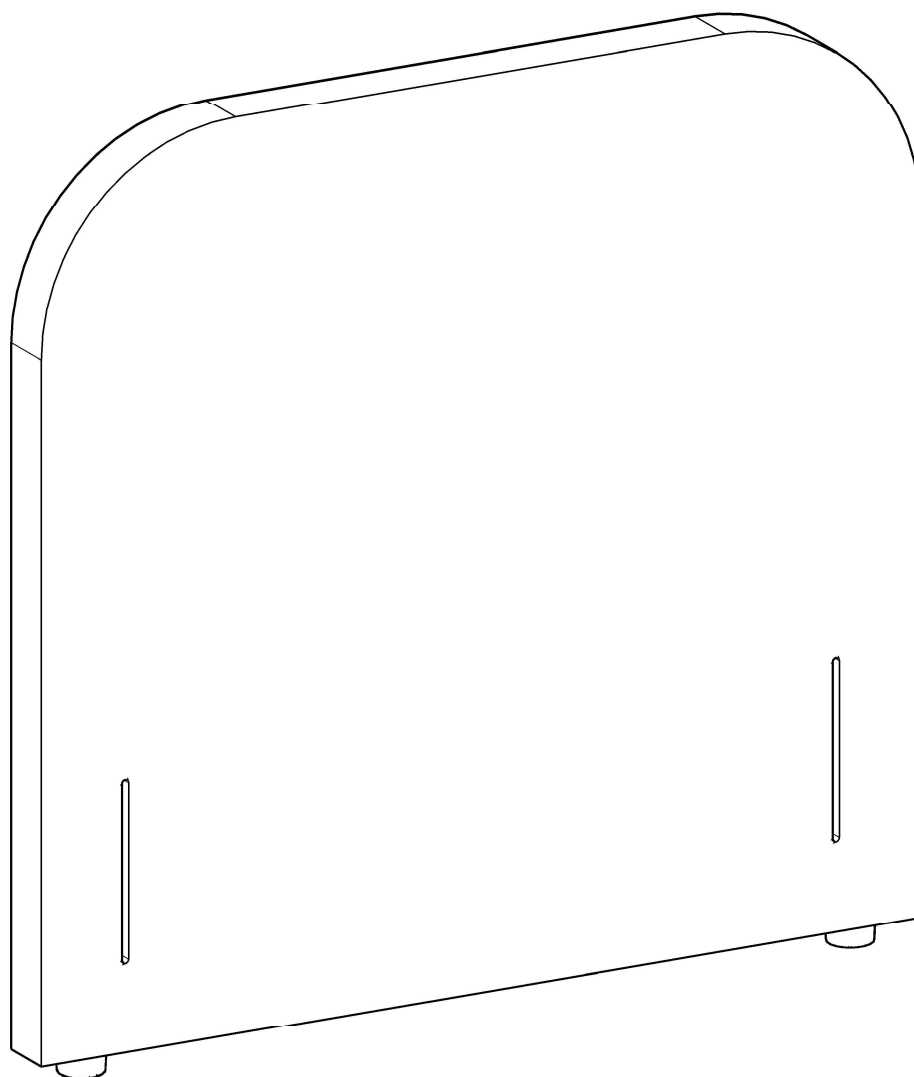

ASSEMBLY INSTRUCTIONS

Headboard

MOD-7371,7375 / V0.02.02.26

modway



Questions? Contact us!

609.256.9000

cs@modway.com

Welcome.

Let's get started.

Before you begin, here are some things to keep in mind:

Assembly will take most people **about 30 minutes**. Consider having a friend help you!

Only use hand tools to assemble this item. Do not use power tools. Do not tighten bolts or screws completely until all hardware is lined up and inserted into the holes.

Read through all of the instructions before starting. Make sure you have all parts and components before discarding any packing materials.

Do not over-tighten screws and bolts to avoid stripping the hardware or cracking the item.

Assemble your item on a flat, carpeted area, with plenty of space to work. This will prevent damage and scratches to your floors or the item while you're assembling the product.

Keep all components and packaging out of reach of children or animals to avoid risk of choking or suffocation.

Care instructions are listed in the last step of this manual.

WAIT!

Missing parts or hardware? Need assistance?
Contact us before returning your item.
We're here to help!



HARDWARE INCLUDED IN THE BOX:

A		Allen Key M4	x1
B		JCBC Bolt M6 x 40mm	x8
C		Spring Washer M6	x8
D		Flat Washer M6	x8
E		Wood Screw M4 x 35mm	x2


WHAT YOU NEED:



Phillips



Phillips Head Screwdriver

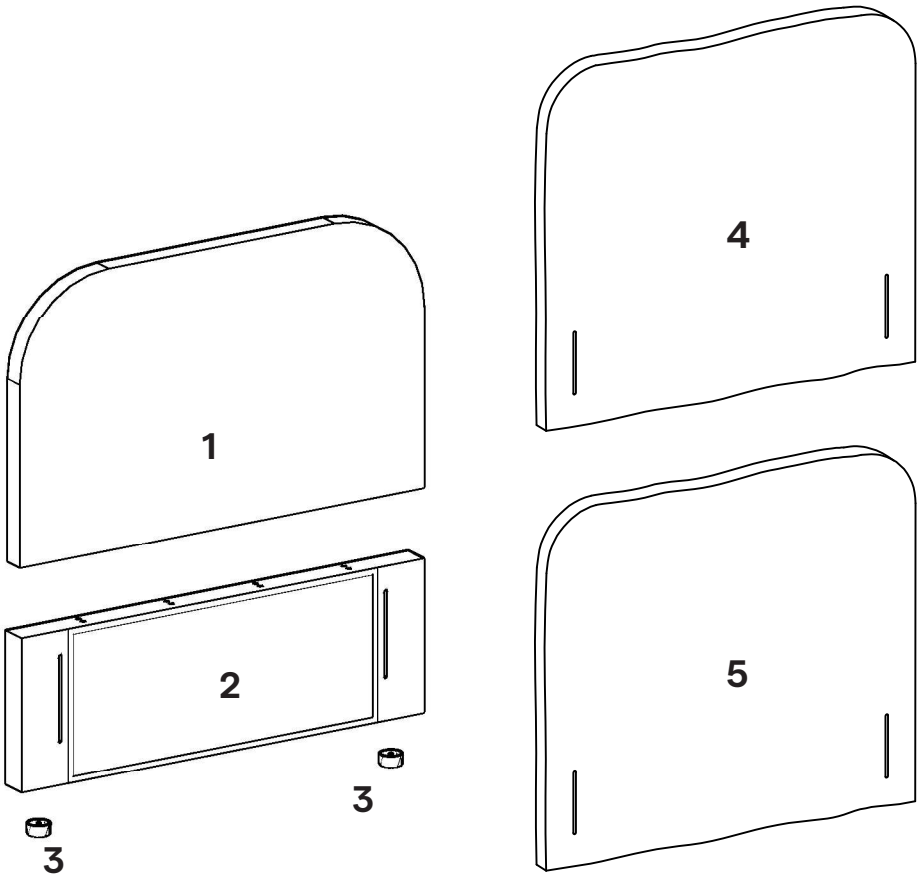

COMPONENTS CARTON PLACEMENT

Carton 1 of 1

Label	Description	Qty	Label	Description	Qty	Label	Description	Qty
1	Headboard	x1	2	Headboard Bottom	x1	3	Plastic Bun Feet	x2
4	Non-Woven Fabric	x1	5	Fabric	x1		Hardware Pack	x1

HARDWARE

Ⓑ JCBC M6 x 40mm x8

Ⓒ Spring Washer M6 x8

Ⓓ Flat Washer M6 x8


COMPONENTS

① Headboard x1

② Headboard Bottom x1

TOOLS

Ⓐ Allen Key M4 x1

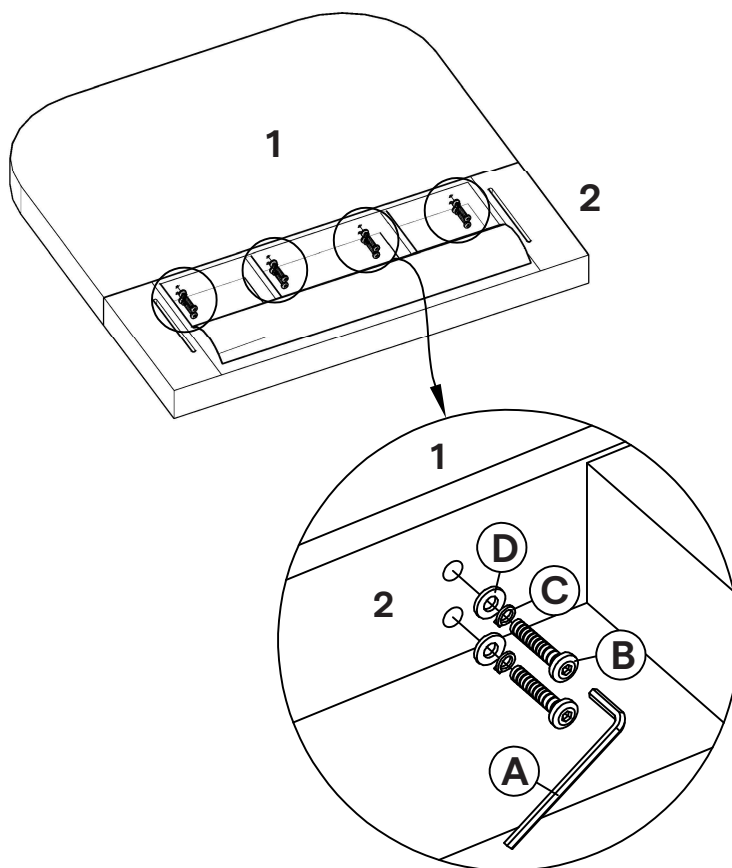

STEP 02

HARDWARE


Ⓔ Wood Screw M4 x 35mm x2

COMPONENTS

① Headboard x1

② Headboard Bottom x1

③ Plastic Bun Feet x2

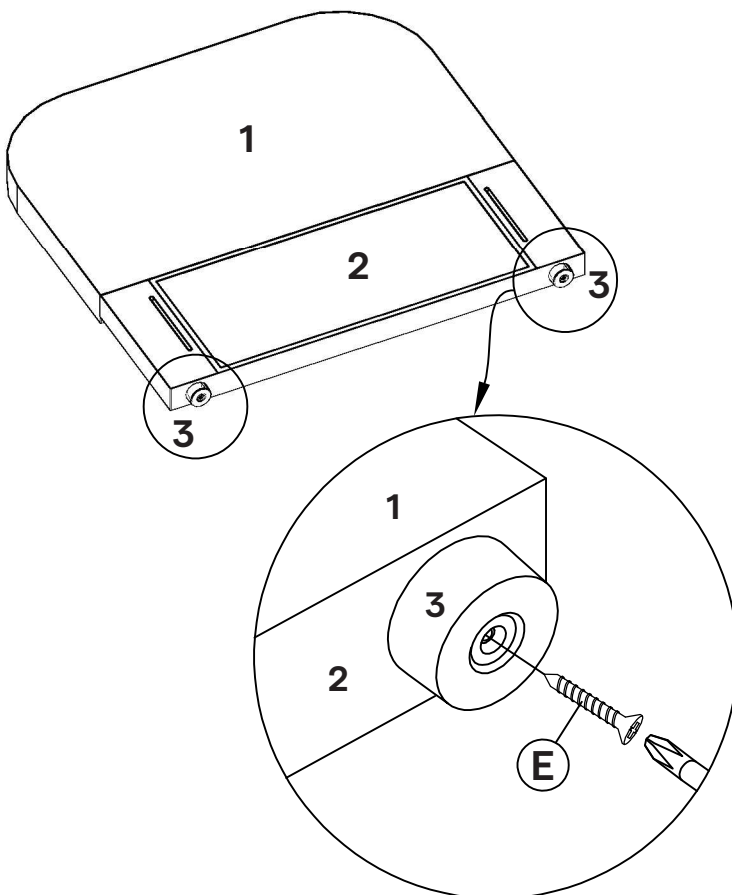


STEP 03

Page 5 of 6

COMPONENTS


④ Non-Woven Fabric x1

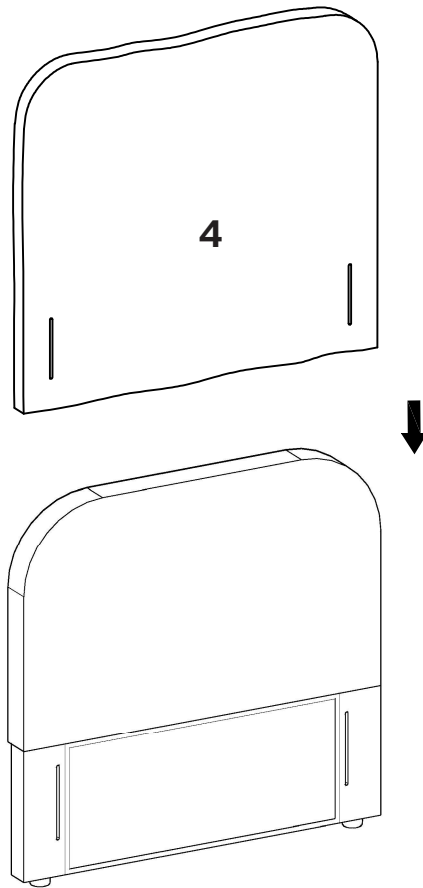

STEP 04

COMPONENTS

⑤ Fabric x1

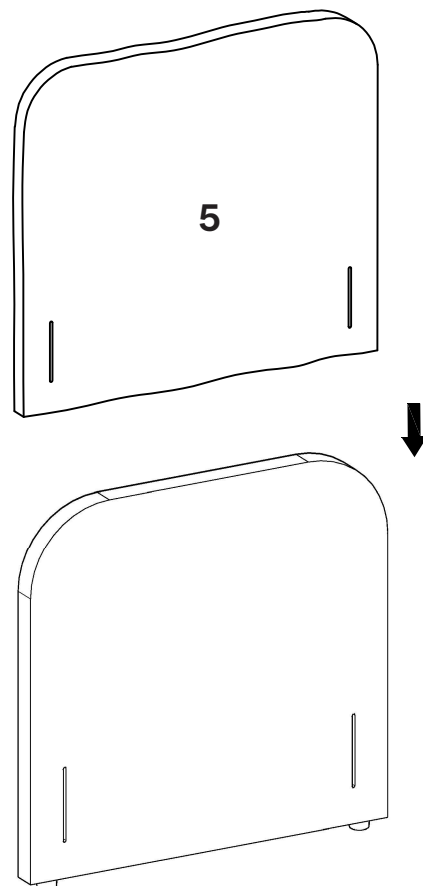


Great job!

Your new headboard is complete.

CARING FOR YOUR ITEM

- Depending on use, it may be necessary to tighten the hardware from time to time, so please save the tools that have been provided.
- Not contract grade.
- Clean using a non-abrasive cloth and a mild cleaner.

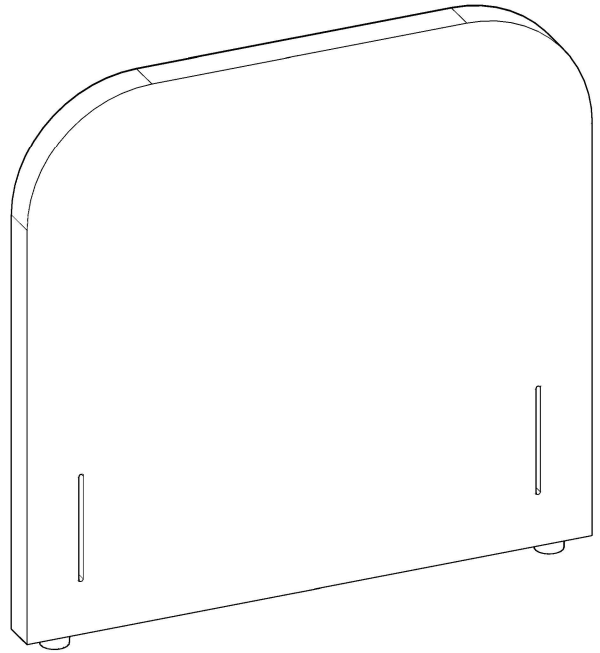

CONNECT WITH US!

Tag us **@modway_furniture** and **#modway** for a chance to be featured.

modway



Questions? Contact us!
609.256.9000
cs@modway.com