


ASSEMBLY INSTRUCTIONS

TWIN HOUSE BUNK BED

If you have any questions, please feel free to contact us.

Email: service@qualfurn.net

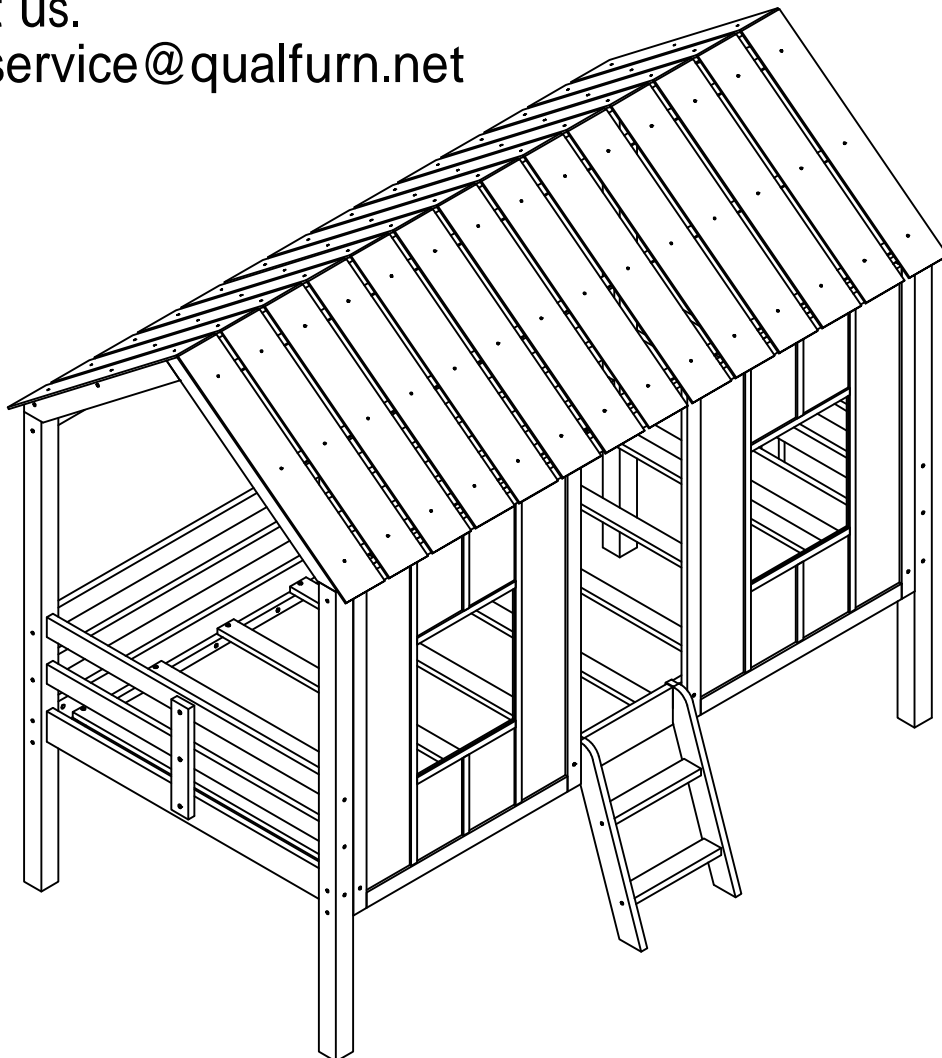

PLEASE DO NOT RETURN PRODUCT TO THE STORE.

If you have any problem or concerns, please feel free to contact our customer service department. We will reply you as soon as possible.


E-Mail: wmcsr@comptree.net

Tel: 626-912-8886 Ext.100






WF281277

WF281278

ASSEMBLY INSTRUCTIONS

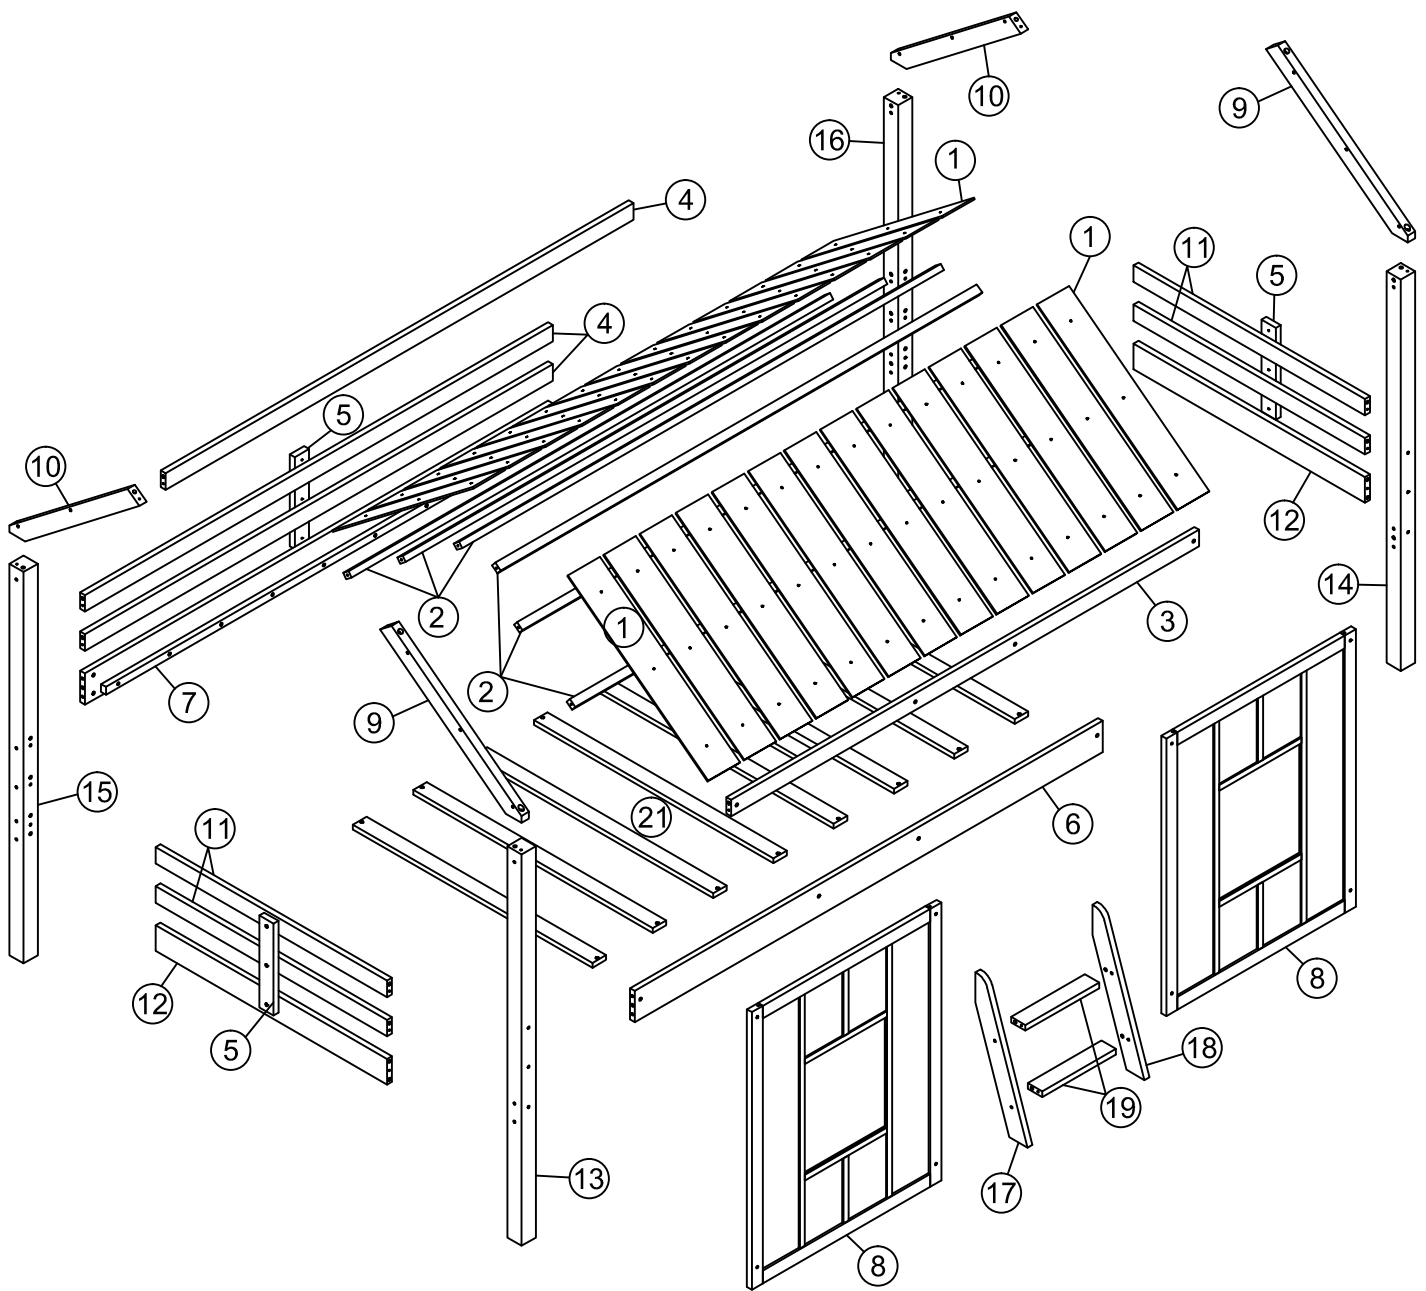
















WF281277

1	 Roof panels	28pcs	12	 Head board panels	2pcs
8	 Window frames	2pcs	21	 Slats	8pcs
11	 Head board panels	4pcs			














ASSEMBLY INSTRUCTIONS

PARTS LIST

WF281278 (Hardware in this SKU)


2	 Roof top support	6pcs	13	 Left front leg	1pc
3	 Roof front support	1pc	14	 Right front leg	1pc
4	 Back guard rails	3pcs	15	 Left back leg	1pc
5	 Guard rail support	3pcs	16	 Right back leg	1pc
6	 Upper front side rail	1pc	17	 Ladder - left leg	1pc
7	 Upper back side rail	1pc	18	 Ladder - right leg	1pc
9	 Roof - front support	2pcs	19	 Ladder steps	2pcs
10	 Roof - back support	2pcs			





HARDWARE LIST (WF281278)

A	Ø4x30		25PCS	G	1/4x110	 	8PCS
B	Ø4x25		84PCS	H	1/4x35	 	8PCS
C	Ø4x15		6PCS	I	Ø10x40		38PCS
D	6.5x100		20PCS	J	70x18x2		2PCS
E	6.5x80		14PCS	K	4x58		1PC
F	6.5x60		8PCS				

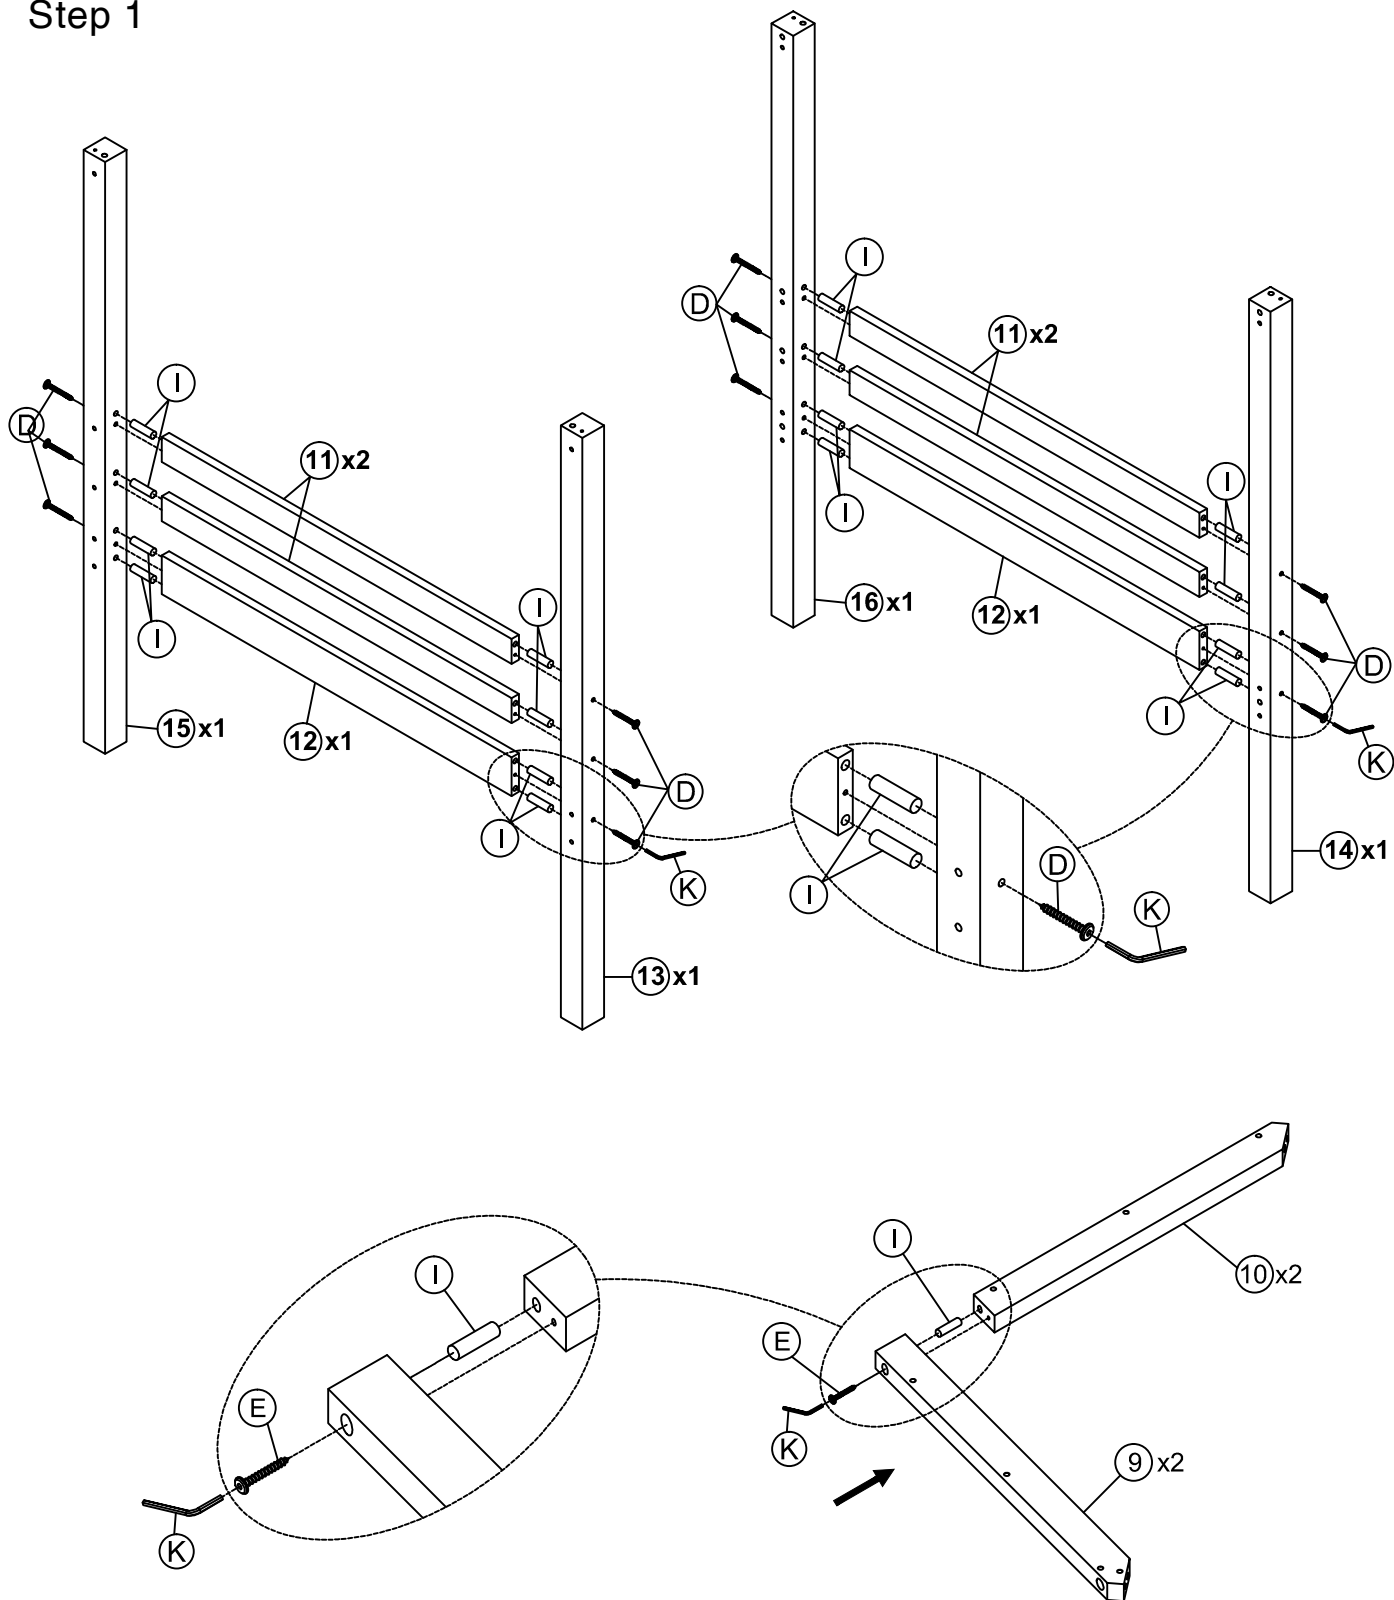ASSEMBLY INSTRUCTIONS


Step 1






K	4x58		1PC	E	6.5x80		2PCS
I	Ø10x40		18PCS	D	6.5x100		12PCS

ASSEMBLY INSTRUCTIONS

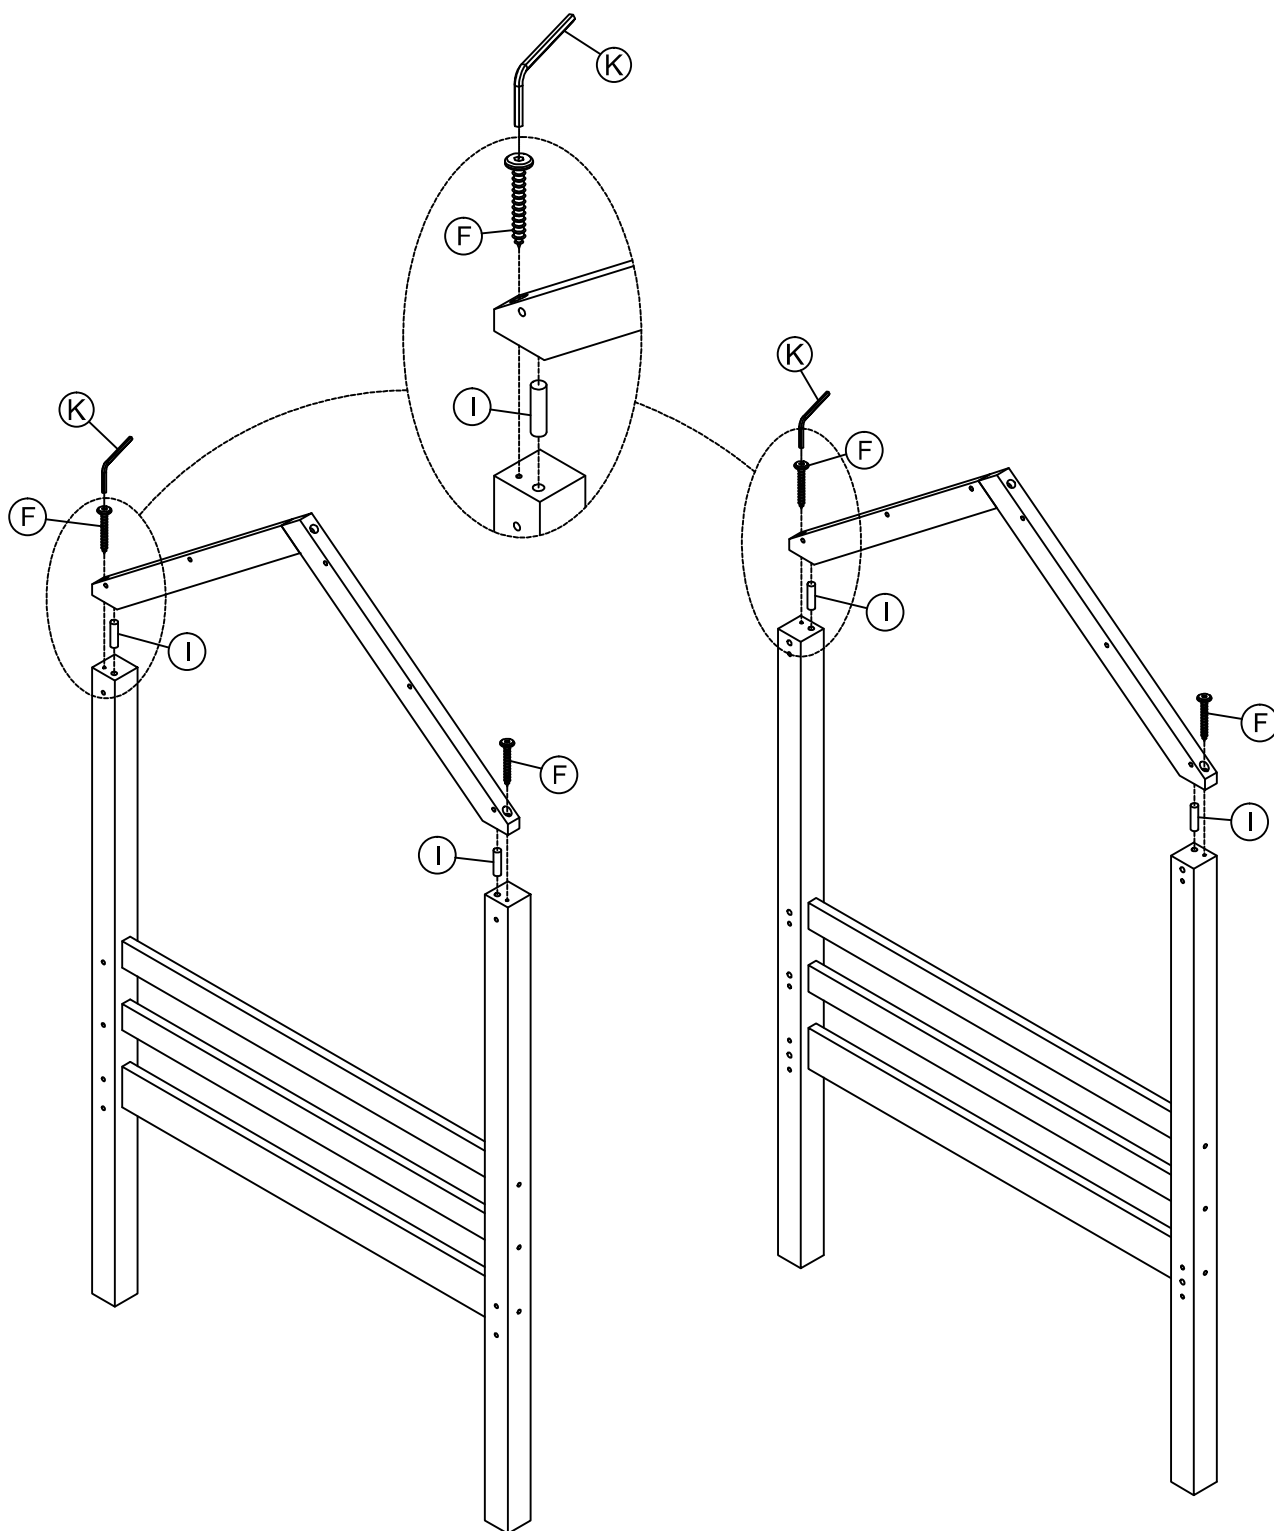
Step 2








				K	4x58		1PC
I	Ø10x40		4PCS	F	6.5x60		4PCS

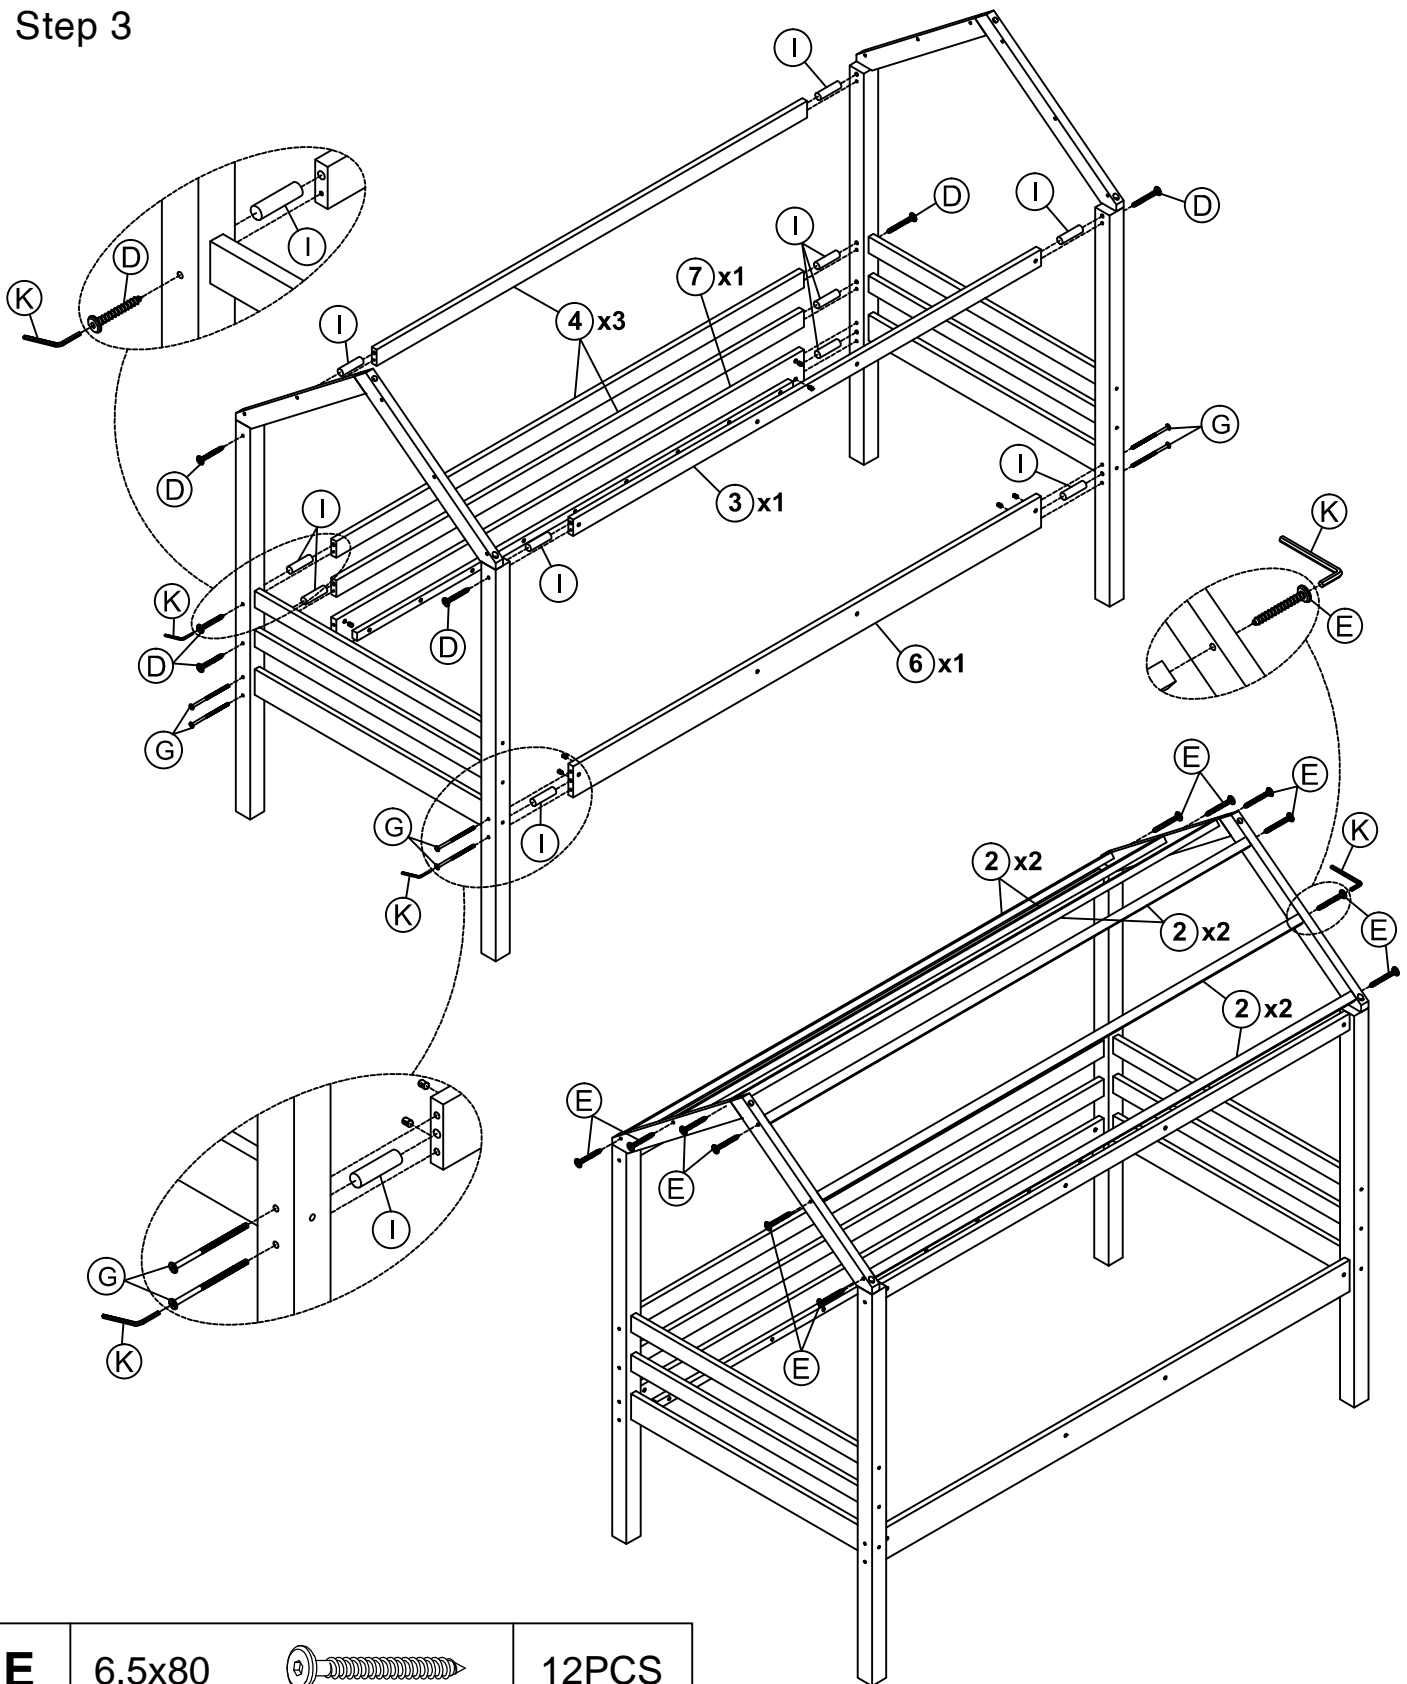ASSEMBLY INSTRUCTIONS

Step 3




E	6.5x80		12PCS			
D	6.5x100		8PCS	K	4x58	 1PC
I	Ø10x40		12PCS	G	1/4x110	 8PCS

ASSEMBLY INSTRUCTIONS

Step 4

First attach 2pcs part 21 to the front and end of the frame between headboard.
Then attach the remaining part 21 equidistantly between headboard

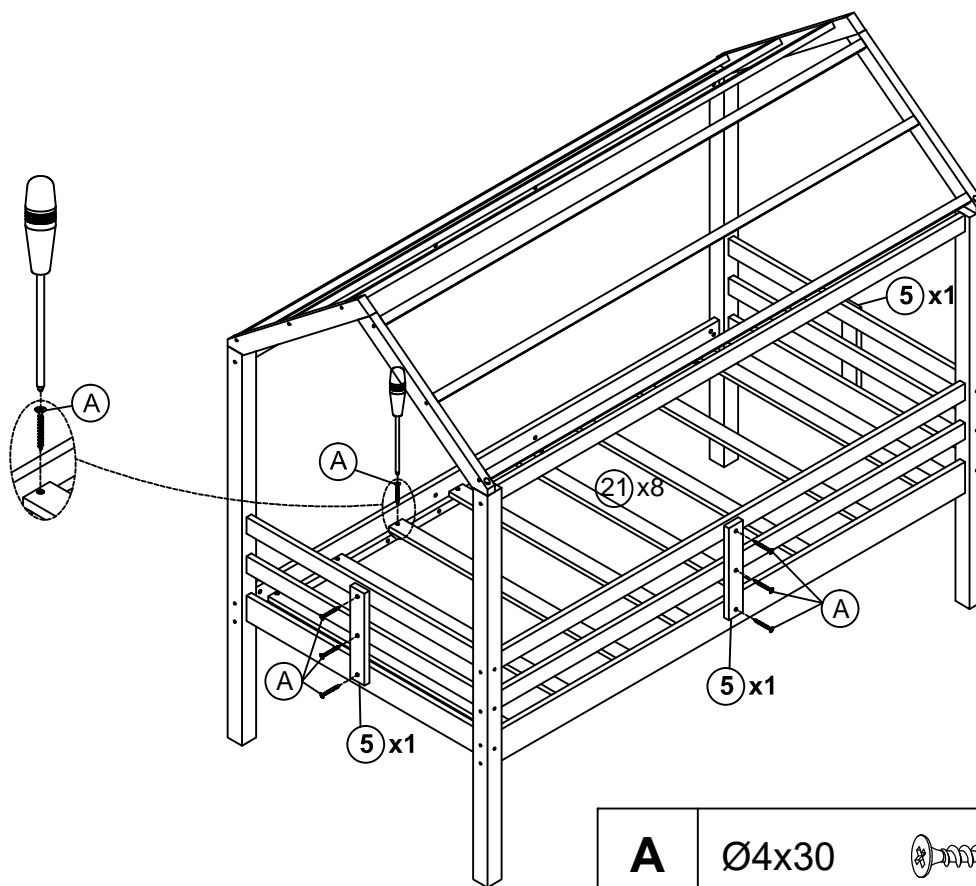


A

Ø4x30



25PCS

Step 5

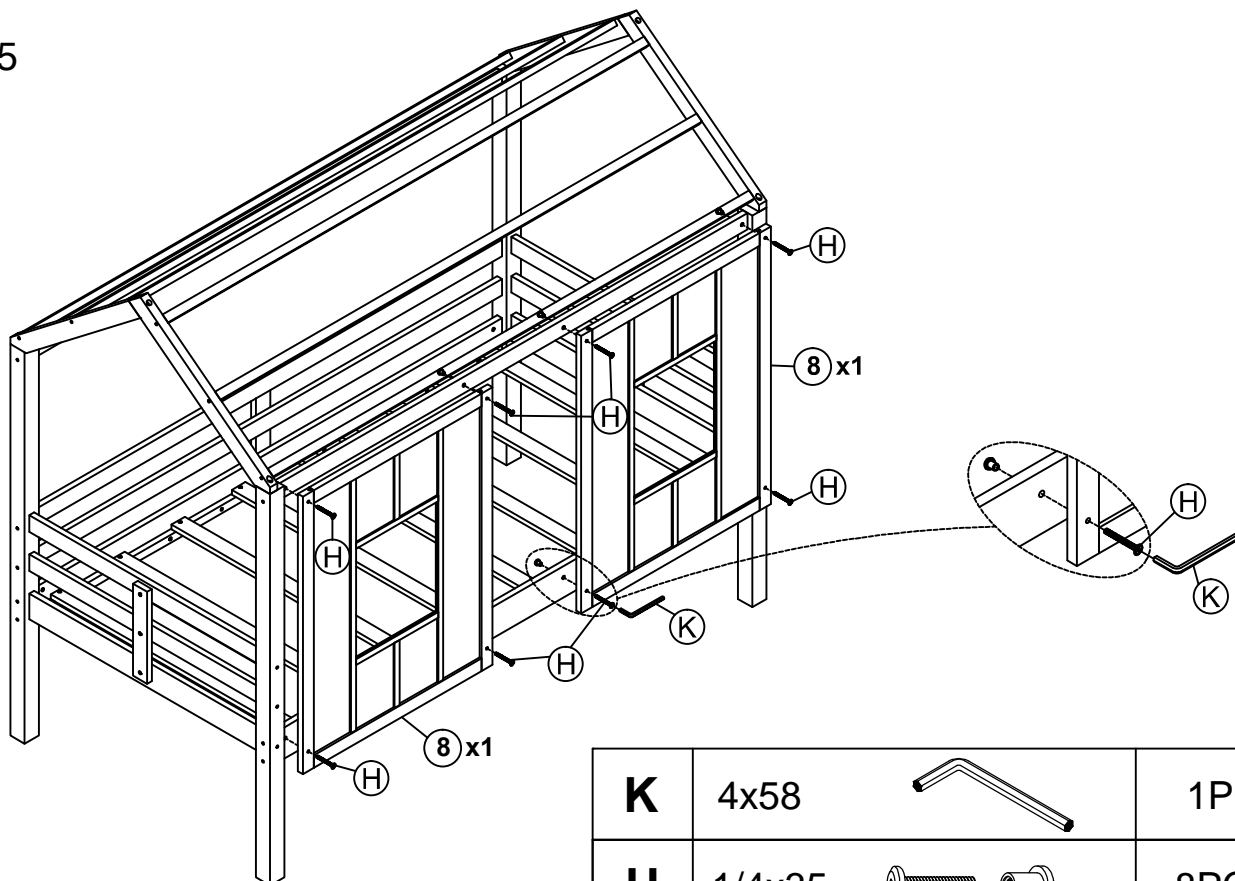

K

4x58



1PC

H


1/4x35








8PCS

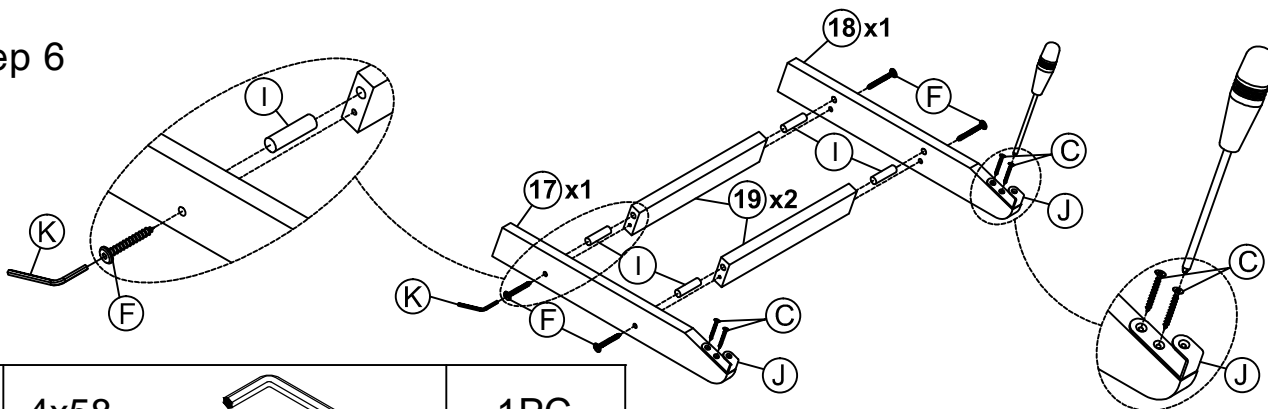ASSEMBLY INSTRUCTIONS


Step 6





K	4x58		1PC
F	6.5x60		4PCS
I	Ø10x40		4PCS

C	Ø4x15		4PCS
J	70x18x2		2PCS

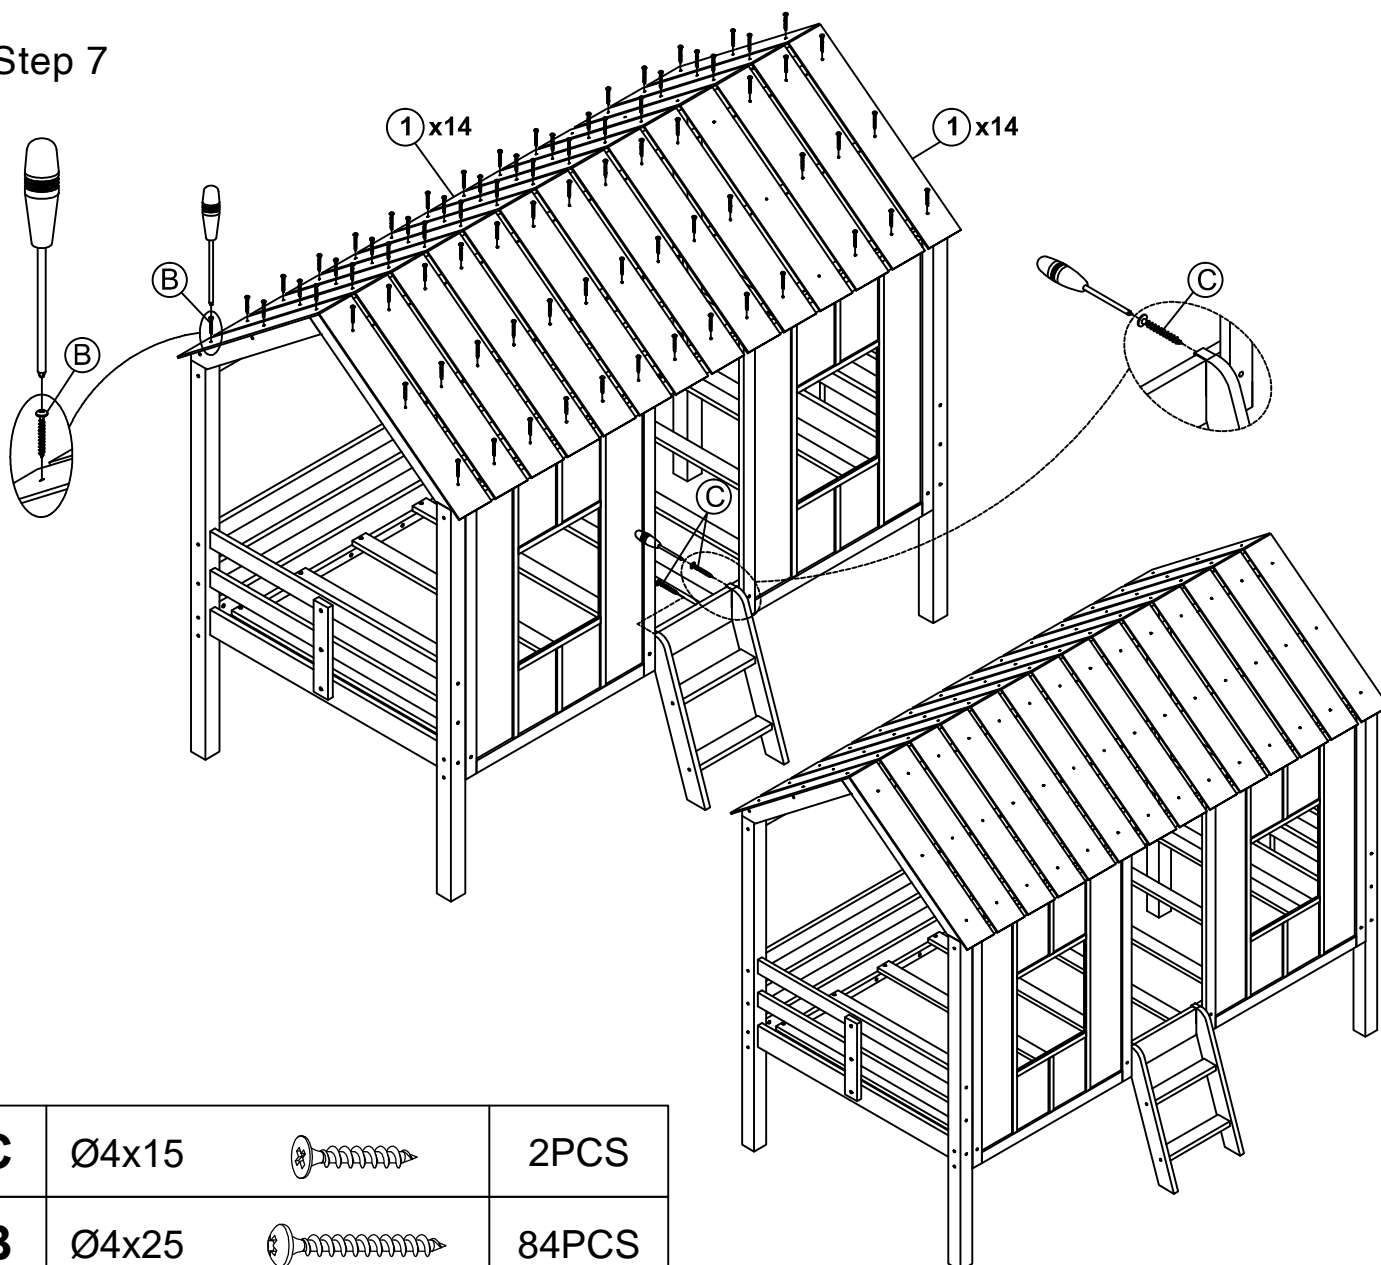Step 7



C	Ø4x15		2PCS
B	Ø4x25		84PCS