


ASSEMBLY INSTRUCTIONS

DAY BED WITH 2 DRAWER

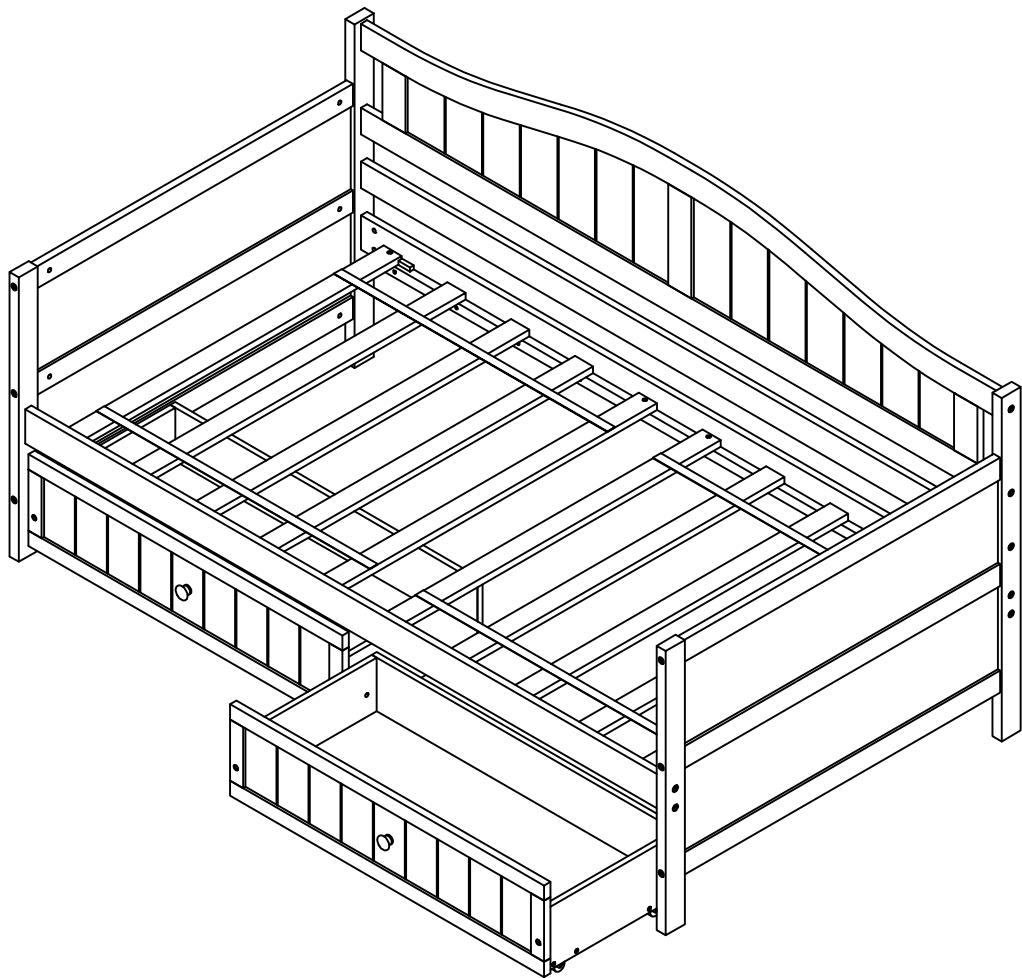


If you have any questions, please feel free to contact us.










Email: service@qualfurn.net

WF192860





Detail View

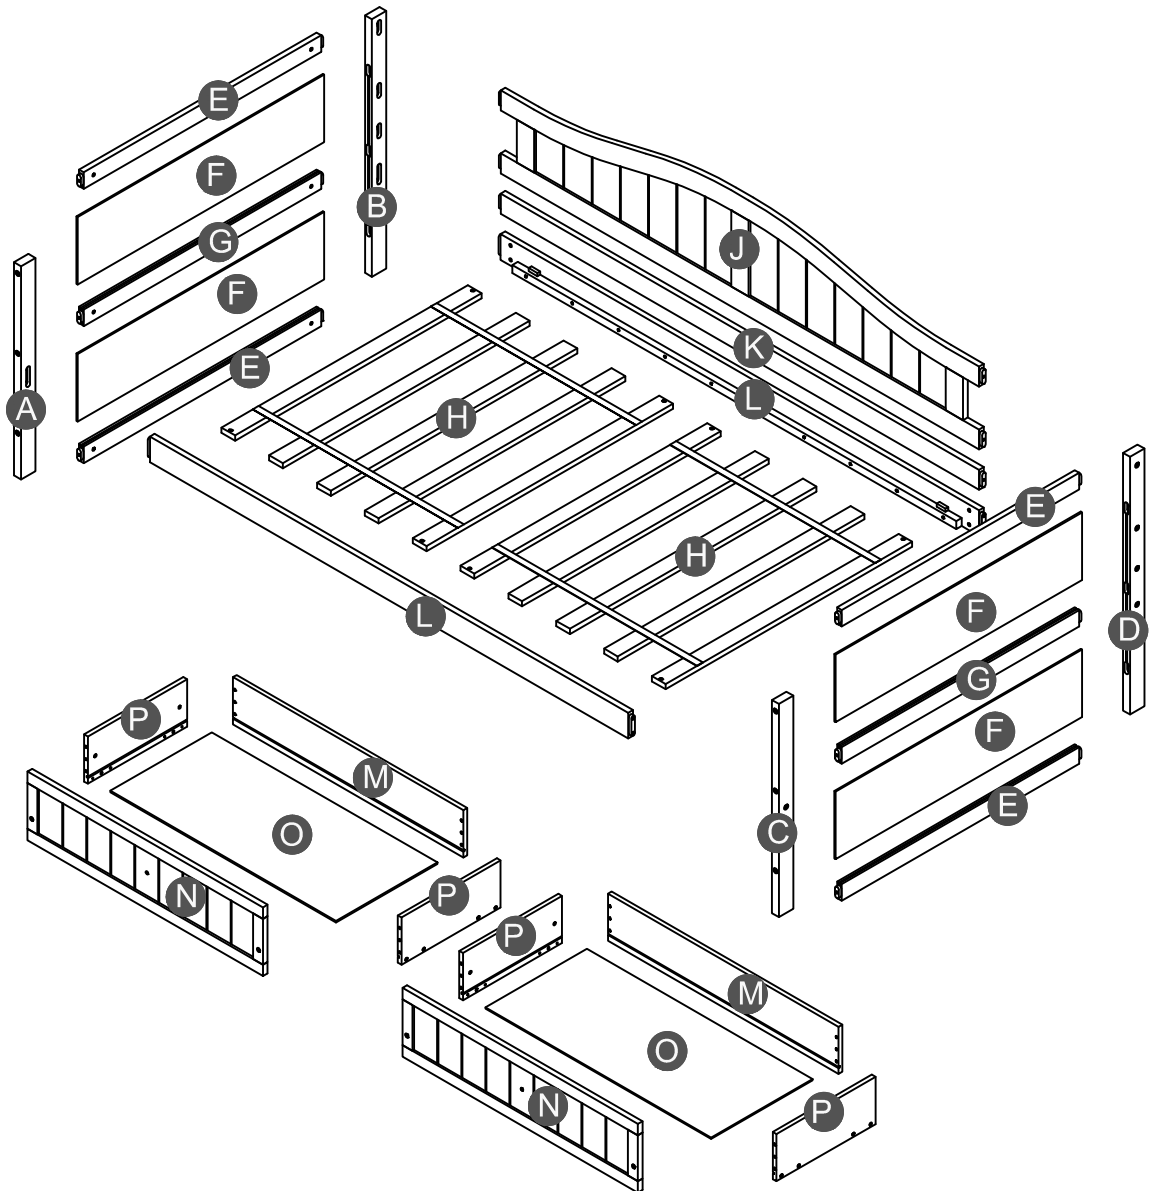



Part List

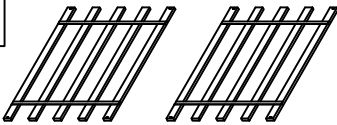A  Leg HB (Left)- 1pc	B  Leg HB (Right)- 1pc	C  Leg FB (Right)- 1pc
D  Leg FB (left)- 1pc	E  Horizontal bars HB&FB- 4pcs	F  Side panel (HB&FB) - 4pcs
G  Horizontal center HB&FB- 2pcs	H  Slat - 2set - (5pcs/set)	J  Guard rail (back)- 1pc
K  Horizontal(back)- 1pc	L  Side rail (Front & Back)- 2pcs	M  Drawer back panel - 2pcs
N  Drawer front - 2pcs	O  Drawer bottom - 2pcs	P  Drawer (Left/Right)- 4pcs

Hardware List


1  (Ø15)1/4"*100mm Hex-Head bolts (12pcs)	2  (Ø15)1/4"*80mm Hex-Head bolts (14pcs)	3  1/4"*15 (9.5mm) Horizontal-Hole bolts(34pcs)
4  Ø4*30mm Wood screws (24pcs)	5  100*54*20 mm Wheels (8pcs)	6  (1/4")4.5*58mm Allen key (1pc)
7  (Ø12)1/4"*60mm Hex-Head bolts (8pcs)	8  Ø8*30mm Wood dowel (16pcs)	9  Ø10*20mm Wood dowel (8pcs)
10  Ø38*31mm Pine Knob (2pcs)	11  3/16"*15mm Ph zinc(Knob) (2pcs)	

ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)

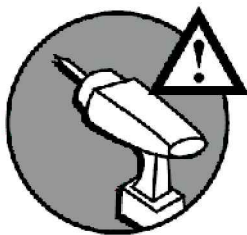


DO NOT USE POWER TOOLS TO ASSEMBLE THIS PRODUCT !

STEP 1:

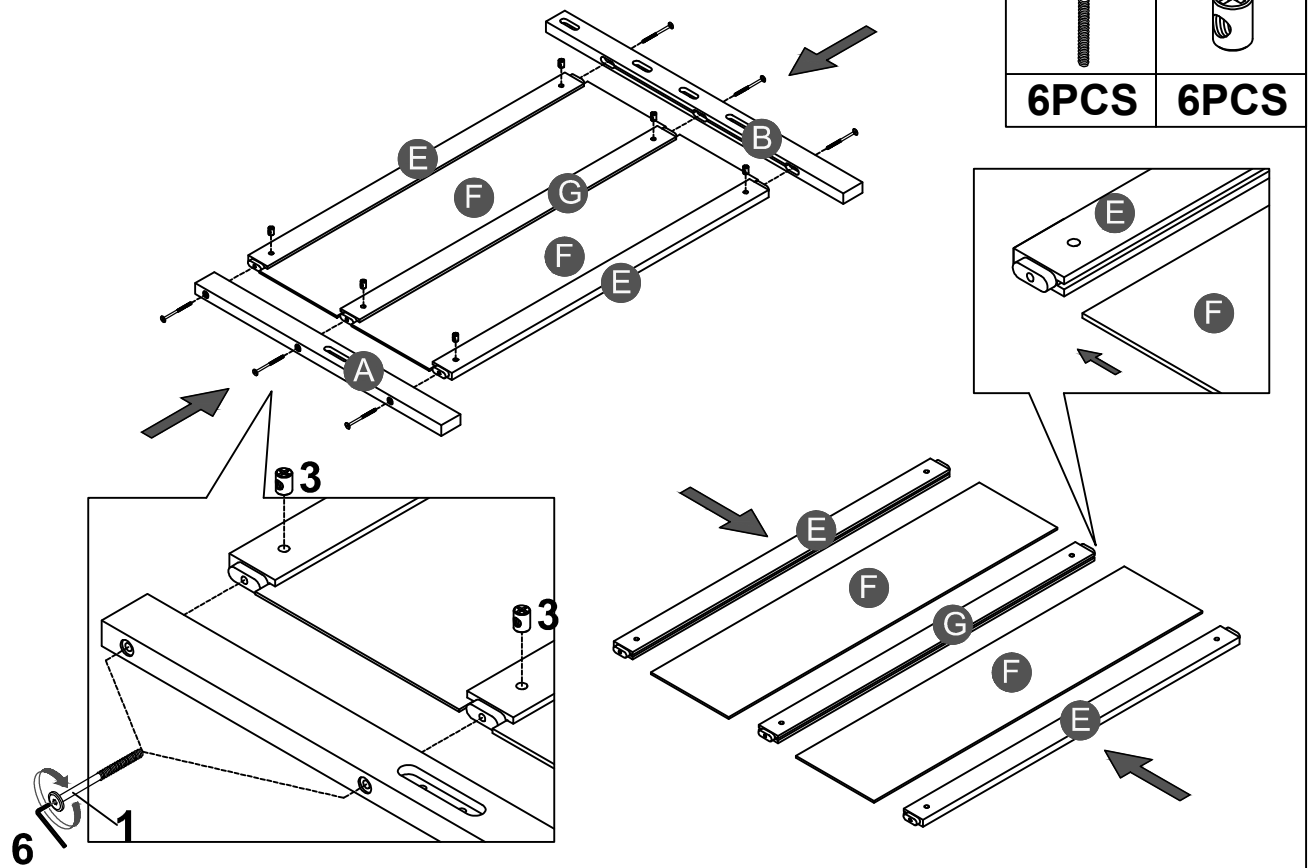


STEP 2:

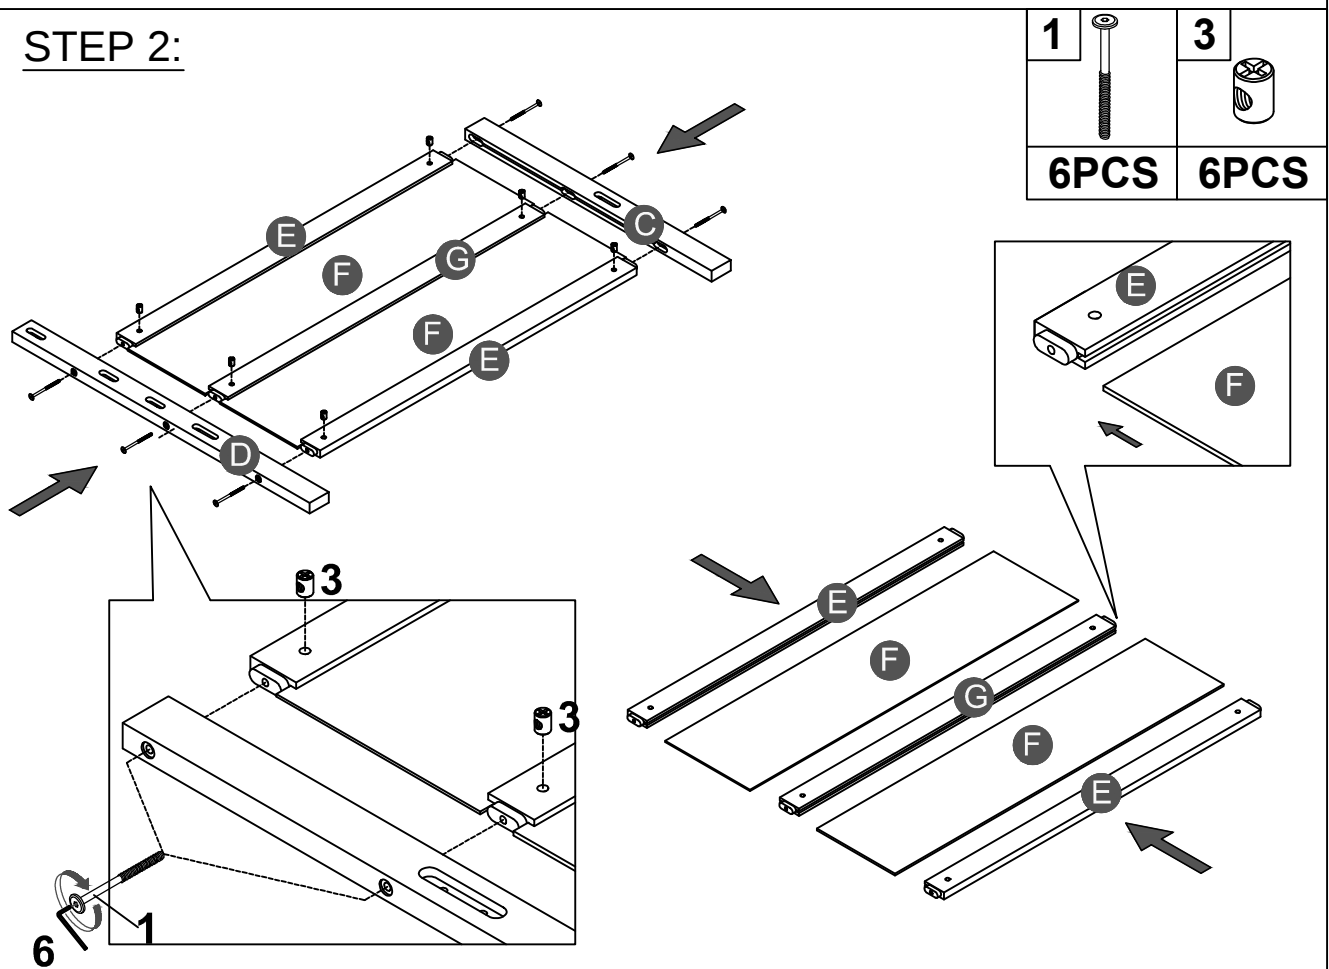

STEP 3:


2	3
	
14PCS	14PCS

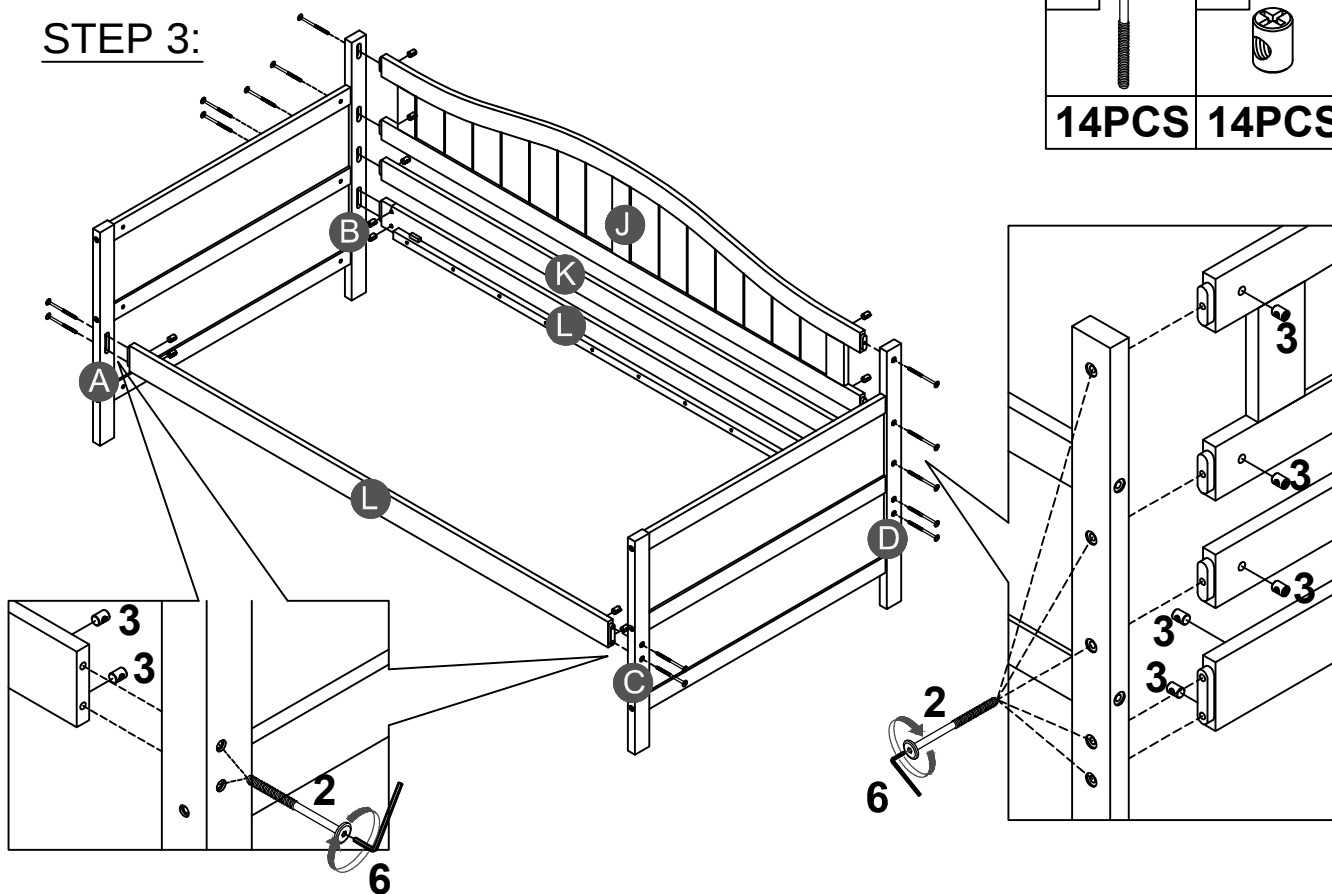


STEP 4:

4

8PCS

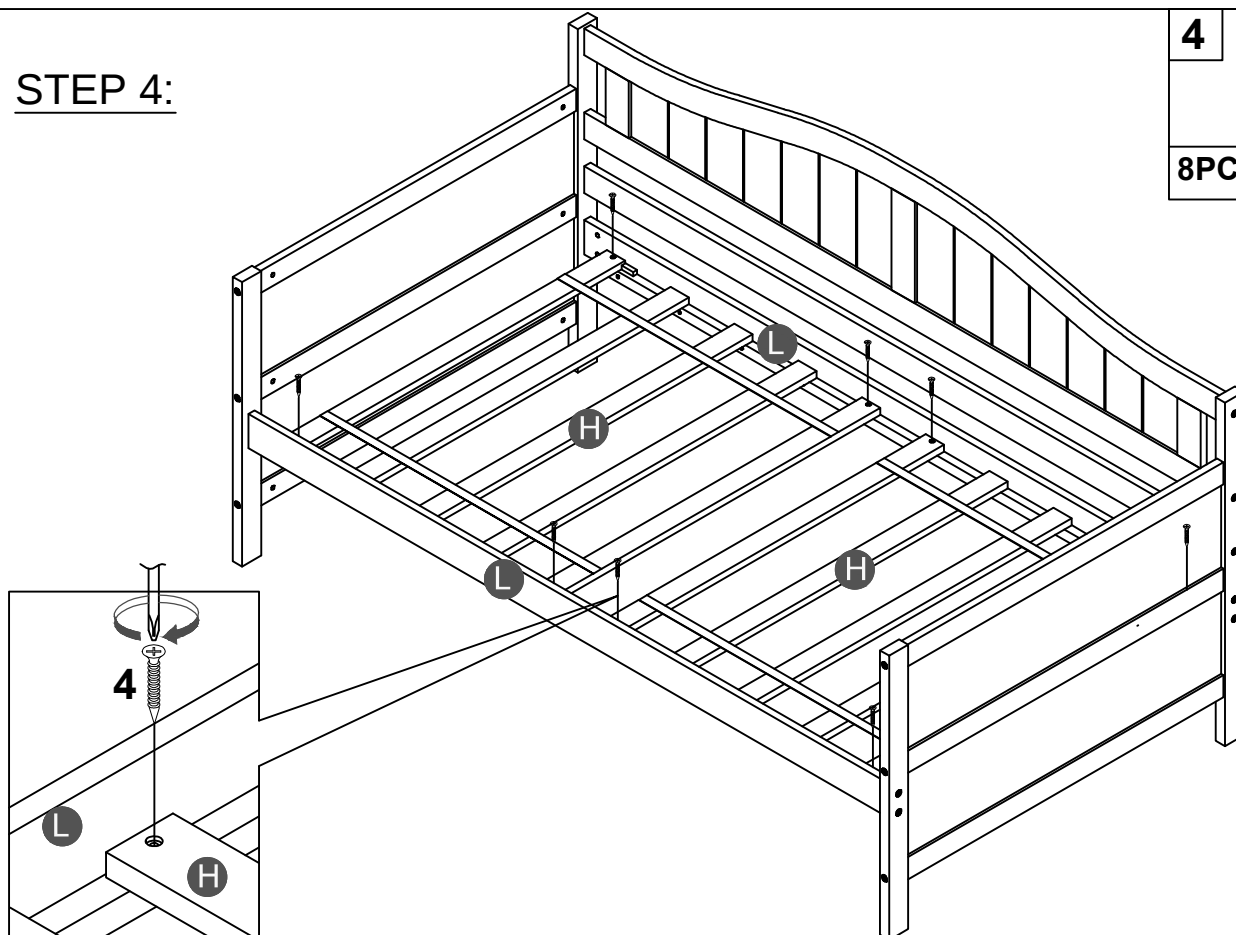


STEP 5:

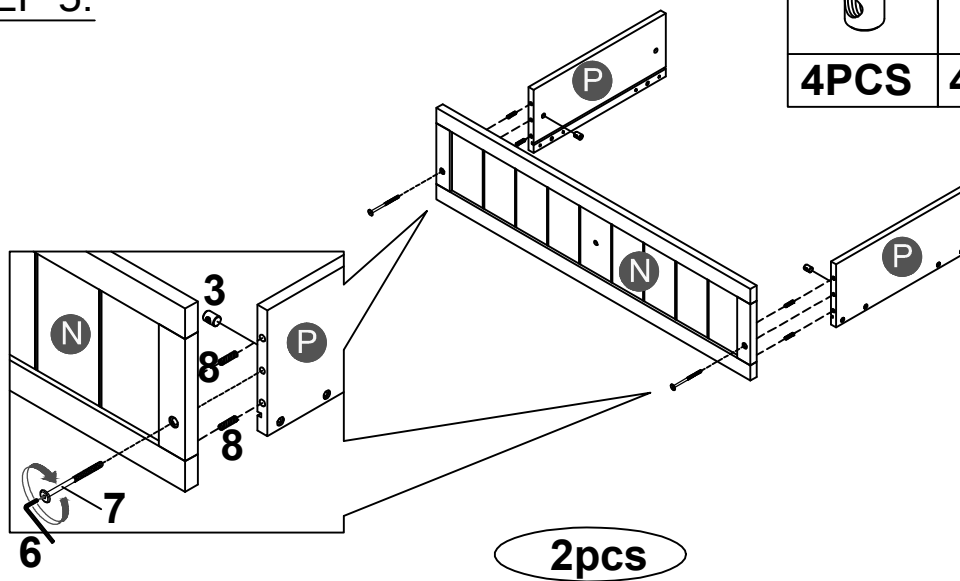

3	7	8
4PCS	4PCS	8PCS

2pcs


STEP 6:

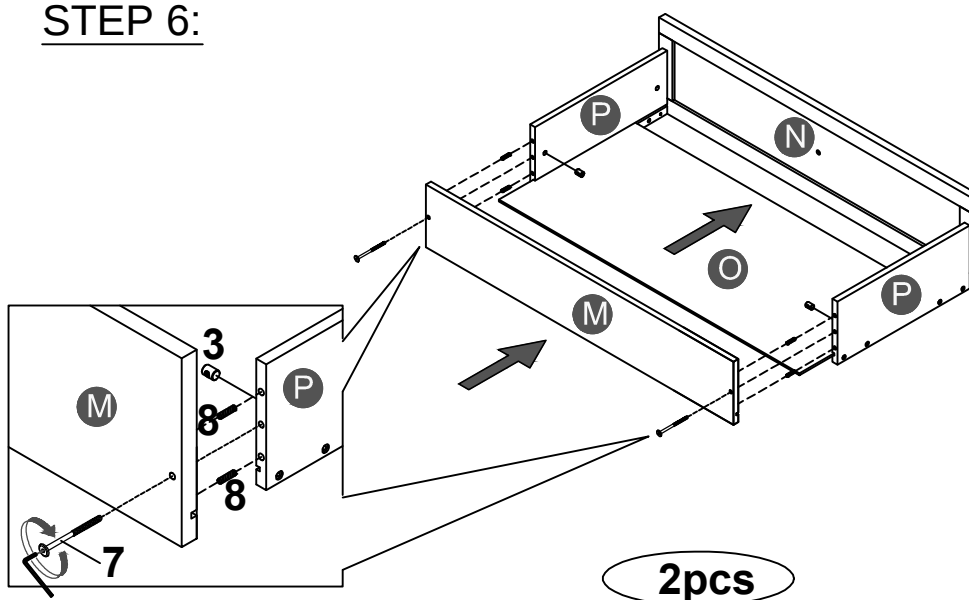

3	7	
4PCS	4PCS	
	8	
	8PCS	

2pcs


STEP 7:

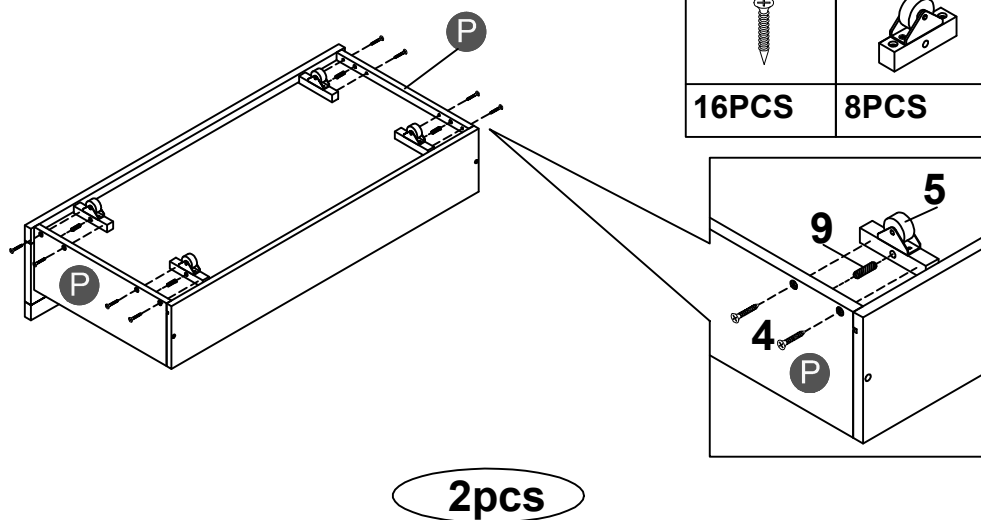

4	5	9
16PCS	8PCS	8PCS

2pcs


STEP 8:

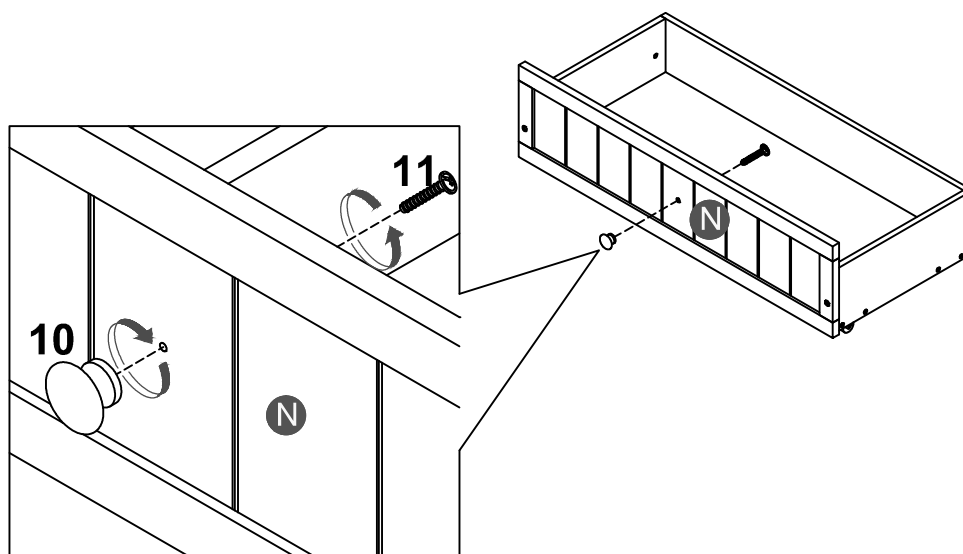

10	11
	
2PCS	2PCS

2pcs

STEP 9:

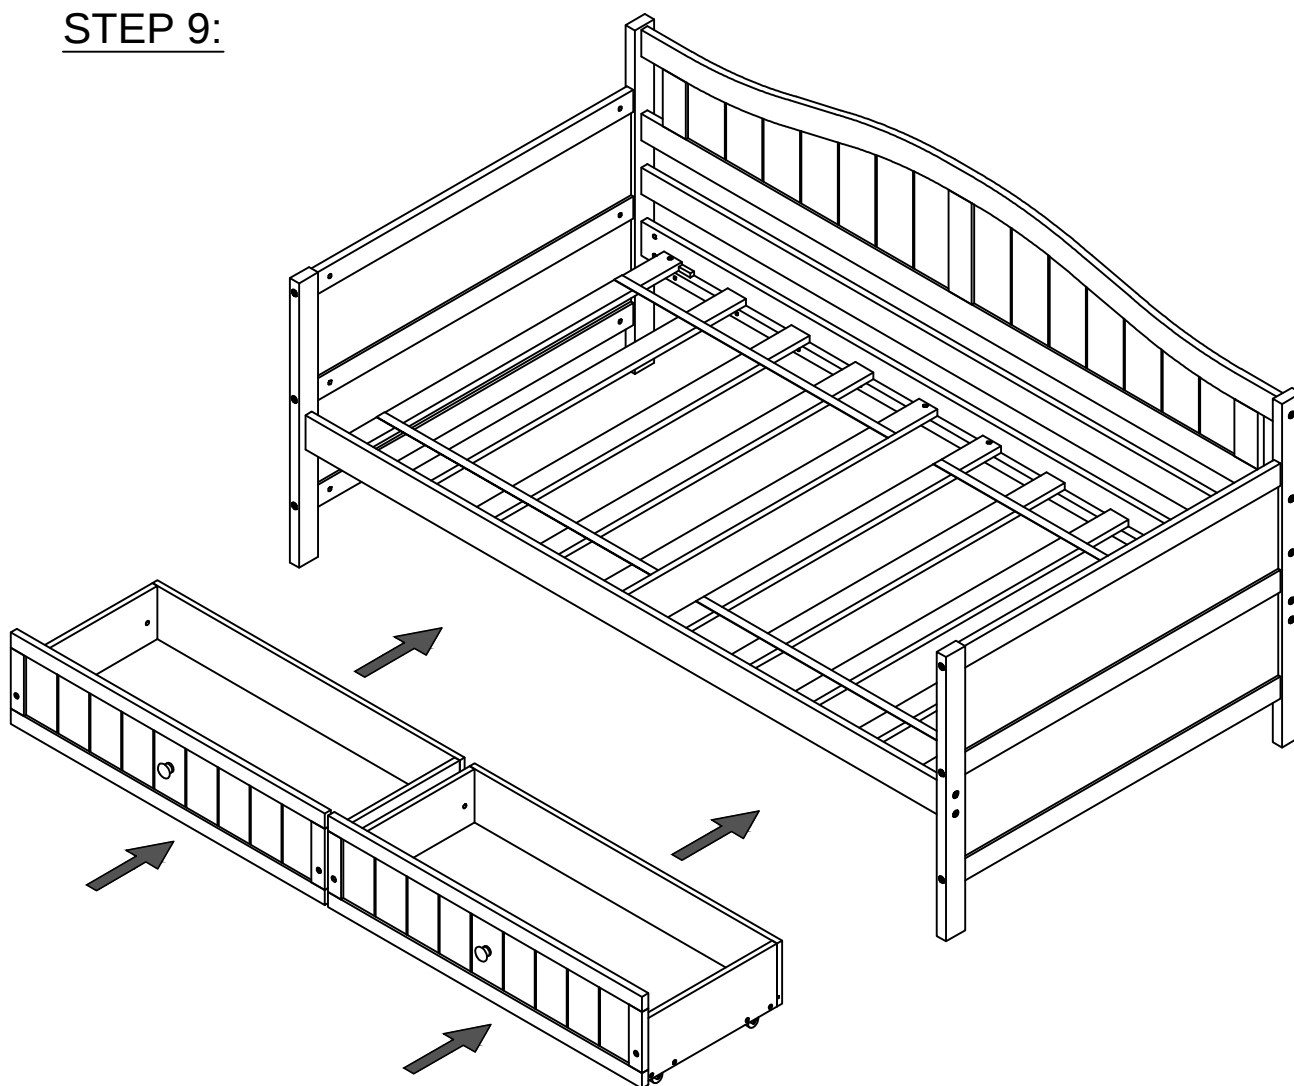

Push Drawer under the bottom of Day Bed.