












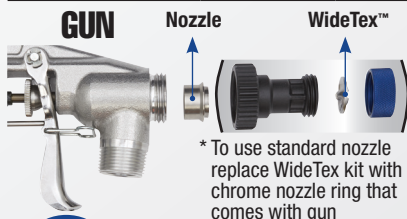
# QUICK START GUIDE

How to Get The Finish You Want

1

## SELECT FINISH & TIP SIZE

APPLICATION	Orange Peel Fog	Small: Splatter Knockdown Popcorn	Medium: Splatter Knockdown Popcorn	Large: Splatter Knockdown Popcorn	Extra Large: Splatter Knockdown Popcorn
MATERIAL THICKNESS	THIN  THICK				
NOZZLE SIZE					
WIDETEX™ TIP SIZE					
AIR VOLUME	HIGH		MEDIUM		LOW



2

## MIXING MATERIAL (PREMIX)

All premix Material must be thinned to spray. Use the Material Gauge Ball to help determine if material is thin enough for the sprayer to pump

1. Slowly add 2 to 4 qt. of water to a 5 gallon bucket of premix material
2. Test material thickness, gently set (dry/clean) Material Gauge Ball on surface of mixed thinned material
3. Material Gauge Ball should sink completely below surface in 10 seconds or less to ensure material is adequately thinned
4. If ball does not sink below surface, thin material and retest with (dry/clean) Material Gauge Ball

Material Gauge Ball should sink completely below surface in 10 seconds or less to ensure material is adequately thinned



3

## HELPFUL HINTS:

- Fine patterns such as orange peel require thin material, small nozzles and a higher volume of air
- Heavy and large pattern such as knockdown require thicker material, med to large nozzles and less air volume
- Point gun away from surface you are spraying when you first pull trigger
- Keep gun moving
- Remember, the larger the Nozzle, the heavier the pattern
- Hold gun 18 to 24 in. from surface. Use this spraying distance for most applications