


GE SB 48-IN NEON FLEX LED SOLDIER

ASSEMBLY INSTRUCTIONS

NHL Model No. 82004LO



Assembly Parts

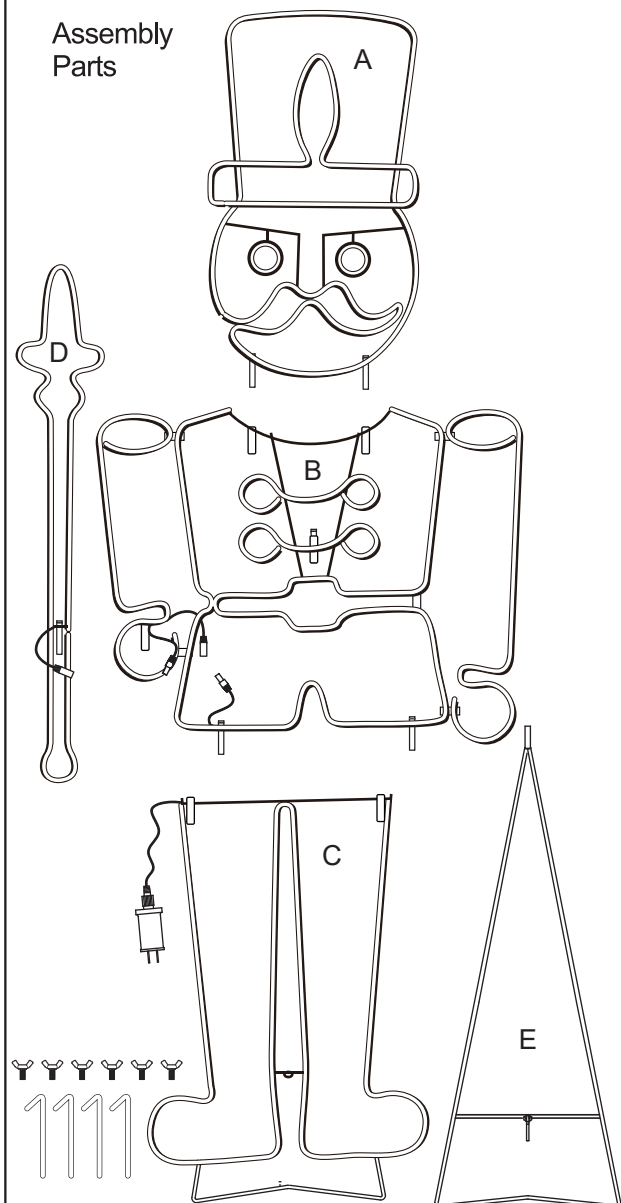


Step 1: Insert part B into C according to the figure, and tighten the screw to lock. Connect the male and female power cables.

Step 2: Insert B into part E according to the figure, and tighten the screw to lock. Insert the hook into the hole.


Step 3: Insert part A into B according to the figure, and tighten the screw to lock. Connect the male and female power cables.

Step 4: Insert part D into B according to the figure, and tighten the screw to lock. Connect the male and female power cables. Fix the four stakes at E and C according to the figure.


Step 1

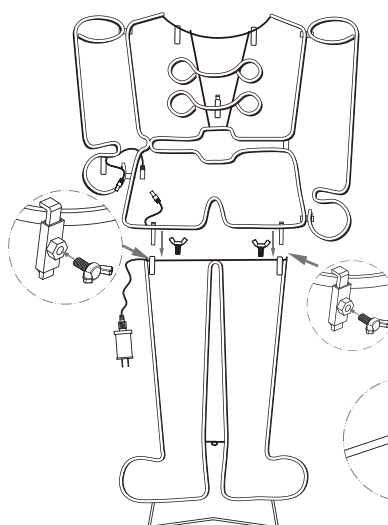


Step 2

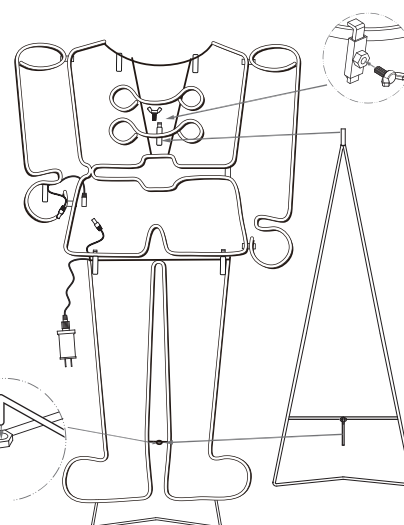


Step 3

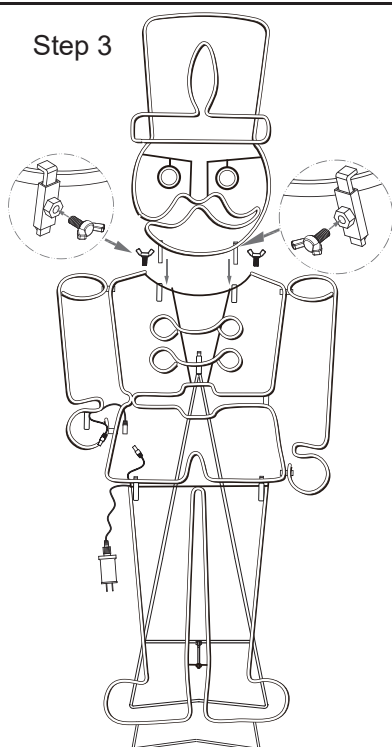

Step 4

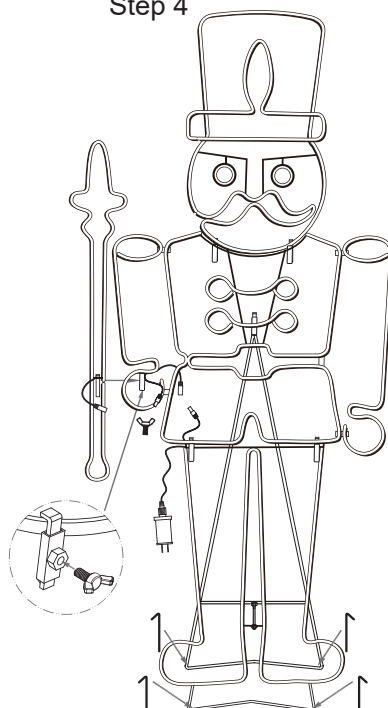

Assembly Complete

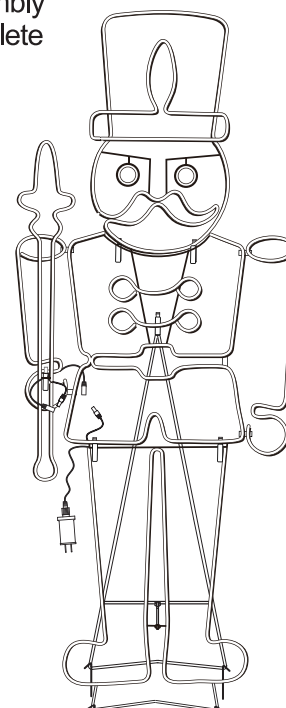


GE SB 48" SOLDADO DE NEÓN

INSTRUCCIONES DE ENSAMBLAJE

NHL Modelo No. 82004LO



Piezas de ensamblaje

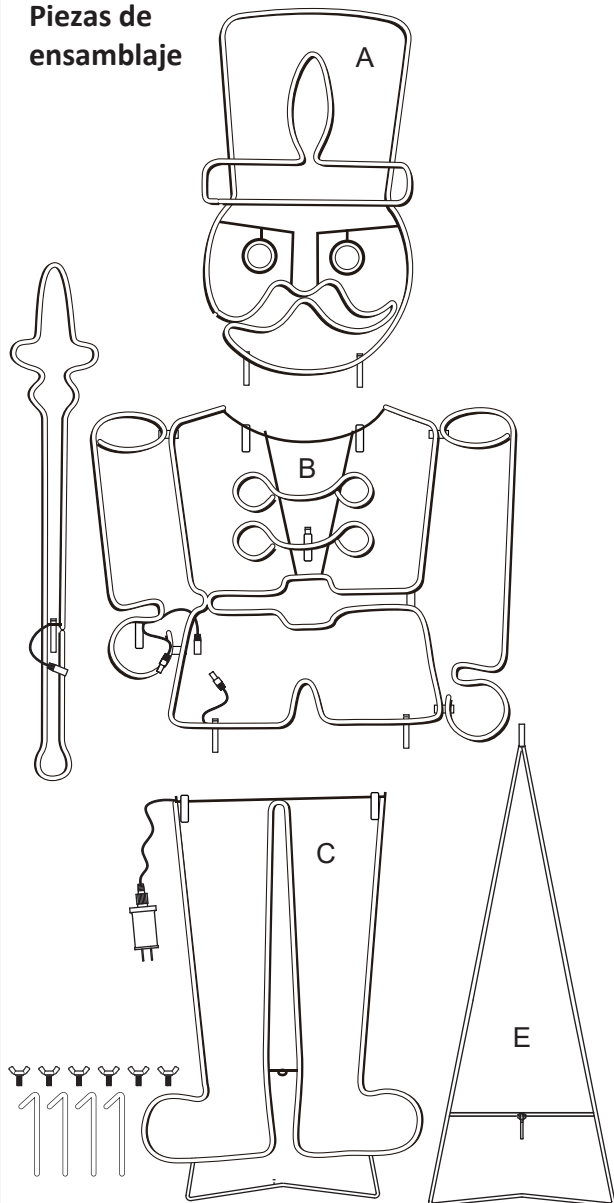


Paso 1: Insertar la parte B en C de acuerdo con la figura, y apre.
Tornillo a cerrar. Conecte los cables de alimentación macho
y hembra.

Paso 2: Insertar B en la parte E de acuerdo a la figura, y apre.
Tornillo a cerrar. Inserte el gancho en el agujero.


Paso 3: Insertar la parte A en B de acuerdo con la figura, y apretar el
Tornillo a cerrar. Conecte los cables de alimentación macho
y hembra.

Paso 4: Insertar la parte D en B de acuerdo con la figura, y apretar el
Tornillo a cerrar. Conecte los cables de alimentación macho
y hembra.
Fije las cuatro estacas en E y C según la figura.


Paso 1

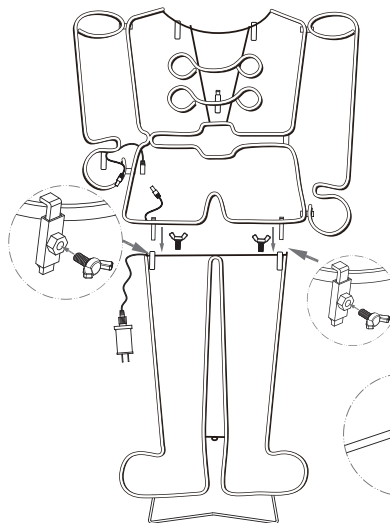


Paso 2

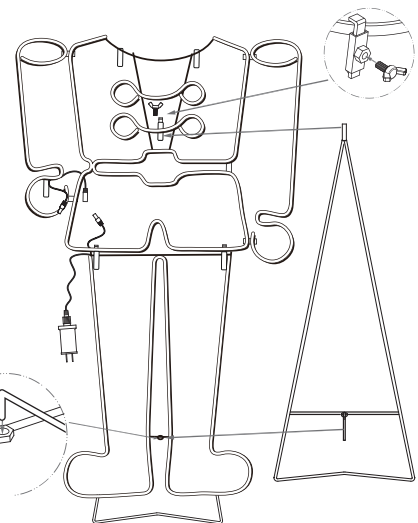

Paso 3

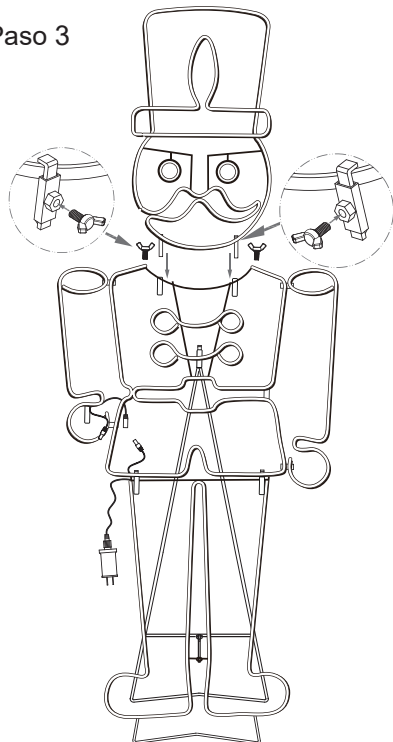

Paso 4

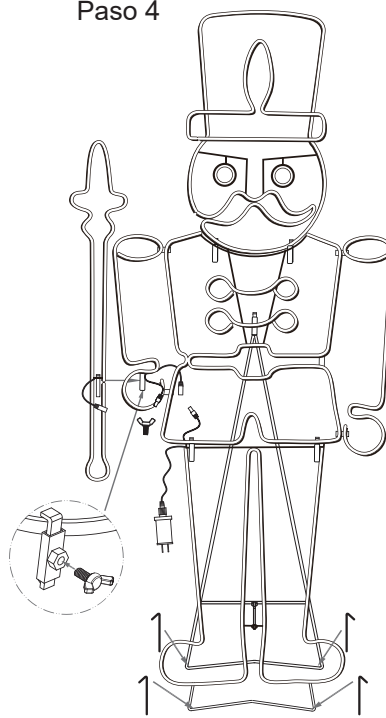

Ensamblaje
completado

