


COFFEE TABLE


Installation Instruction

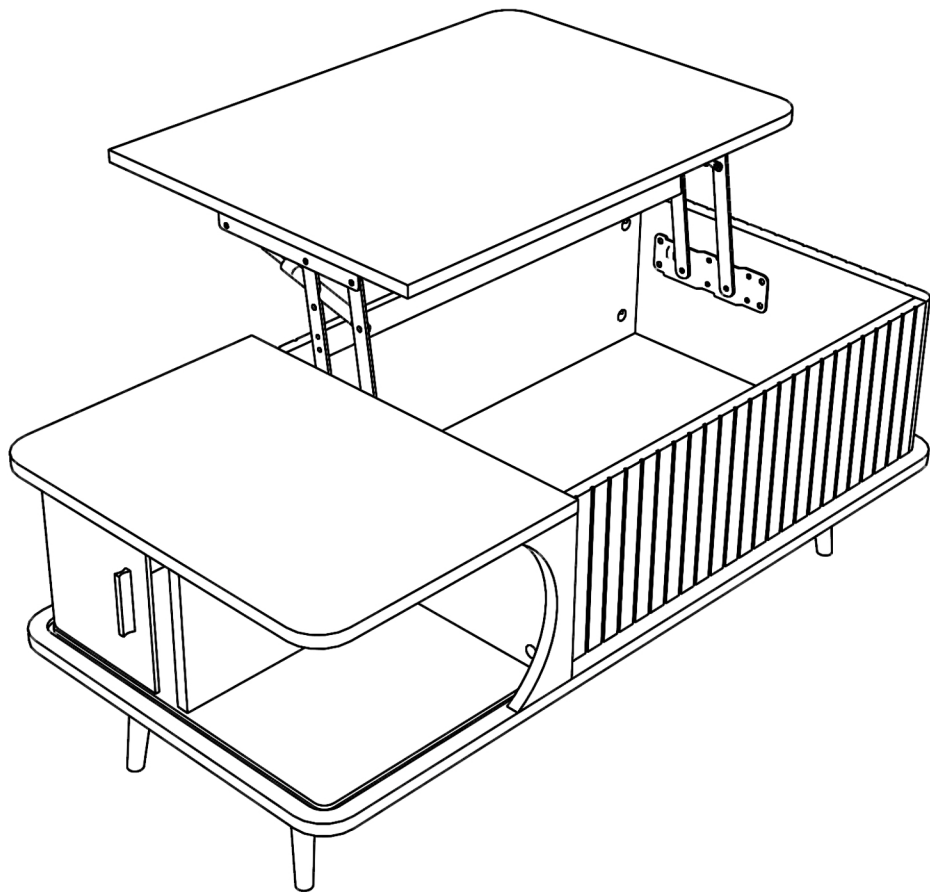

If you have any questions, please contact us
We will help you with in 24 hours



X2


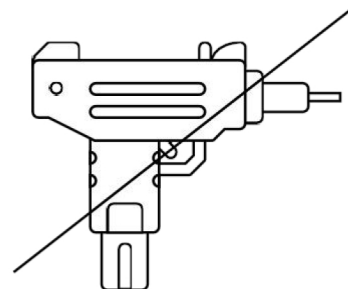


We recommend using hand tools for assembly.


If an electric screwdriver is used, reduce power and torque to avoid damage to the product.



?

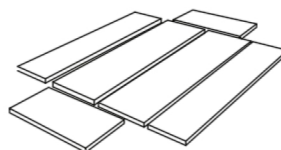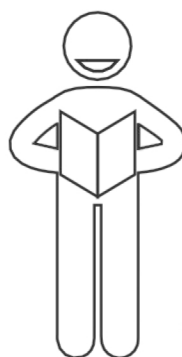

Instructions For Fastening CAM-BOLT and CAM-LOCK




CAM-BOLT




CAM-LOCK


Tools Required




INSERTING AND TIGHTENING CAM-BOLT

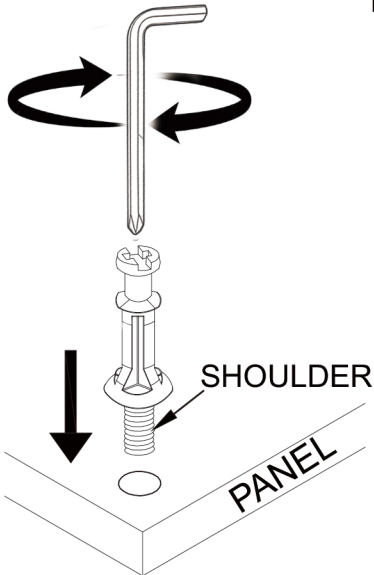

Place Cam-bolt on pre-drilled hole and screw in vertically

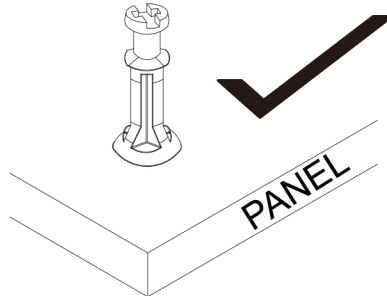


Shoulder is flushed (on the same level) with the panel.

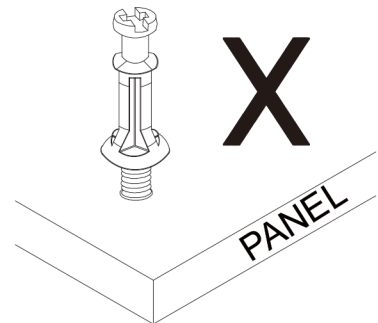


Shoulder is above the panel.

Place Cam-bolt on the designated pre-drilled holes on the panel. Use a Phillips Screwdriver to screw-in Cam-bolt vertically until shoulder is flushed (on the same level) with panel.

INSERTING CAM-LOCK

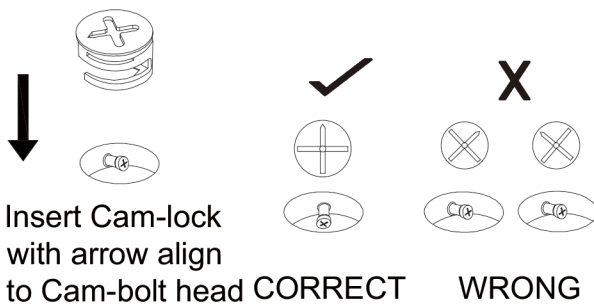


Insert Cam-lock with arrow align to Cam-bolt head

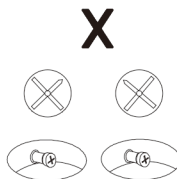







Align the arrow on the Cam-lock to the Cam-bolt head and insert the Cam-lock. Ensure Cam-lock is fully inserted.

TIGHTENING CAM-LOCK

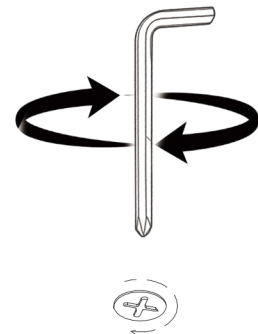




Use a Flat-head Screwdriver to turn Camlock clockwise so it locks onto the head of the Cam-bolt. Turn until it is snug (about 3/4ths of a turn) -- over-tightening could damage Cam-lock or/and Cam-bolt.


The Hardware

A  M6x35mm	X16+1	B 	X16+1	C  M3.5x12mm	X16+1	D  3mm	X1	E  4mm	X1
F  M5x40mm	X10+1	G  M6X12mm	X12+1	H  M6X16mm	X4	I 	X4	J 	X2
K 	X4								

Notice:












- 1. Follow the installation instructions. Please confirm all accessories are preset before installation.
- 2. Do not fully tighten the screws during initial assembly. Fully tighten screws only once all pieces which are correctly assembled.
- 3. If you encounter any problems during installation, please contact our customer service.
- 4. Please unbox the item from the side with an open-label and put a carpet on the floor to avoid scratching it.

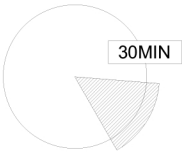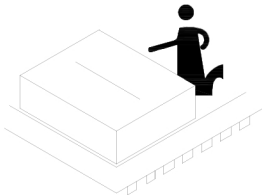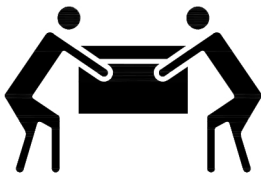

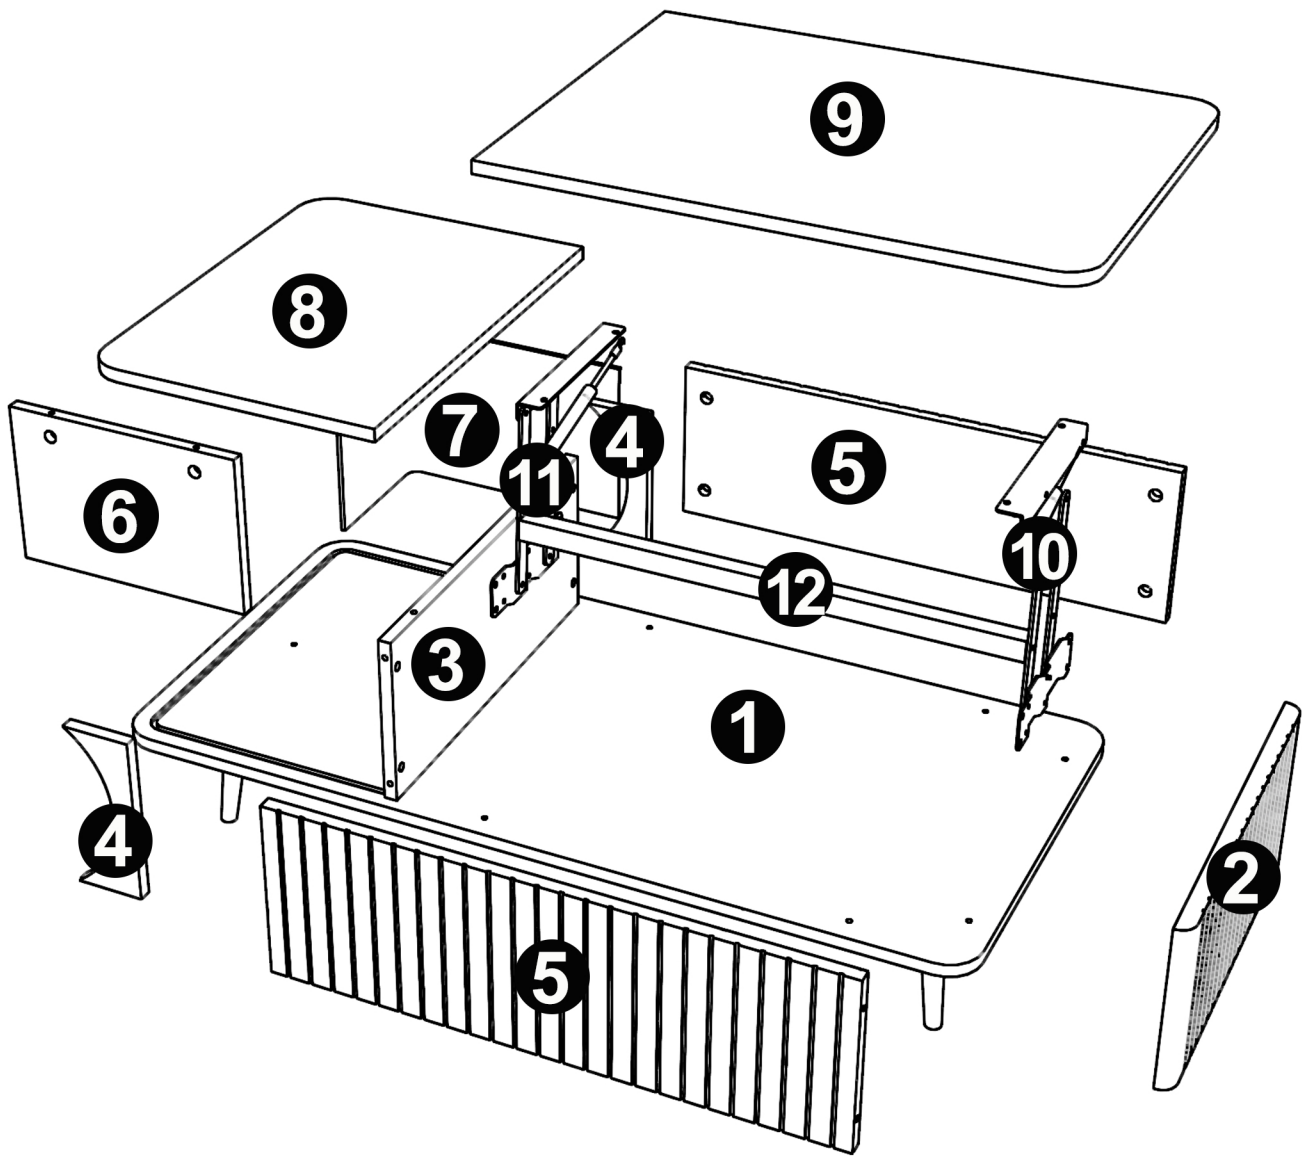


⚠ Caution

Make sure all parts are included. Most board parts are labeled or stamped on the raw edge. Contact us for free replacement if having damaged or missing parts.

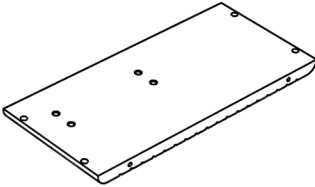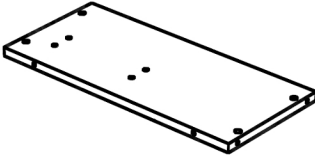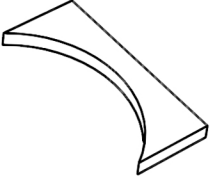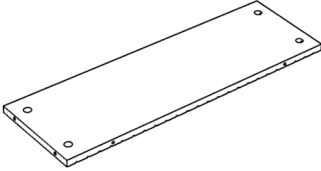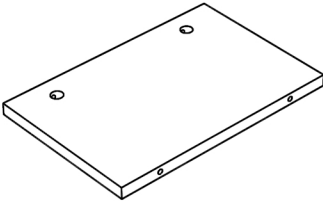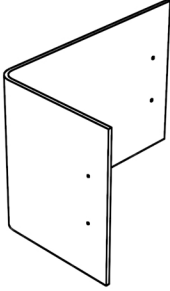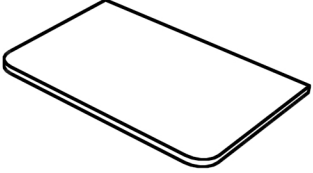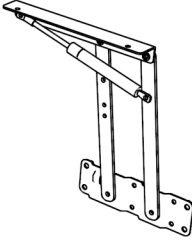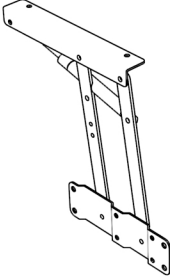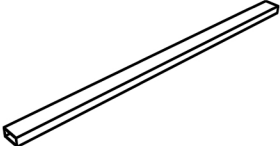1 	2 	3 	4 	1PC	1PC	1PC	2PCS
5 	6 	7 	8 	2PCS	1PC	1PC	1PC
9 	10 	11 	12 	1PC	1PC	1PC	1PC


1

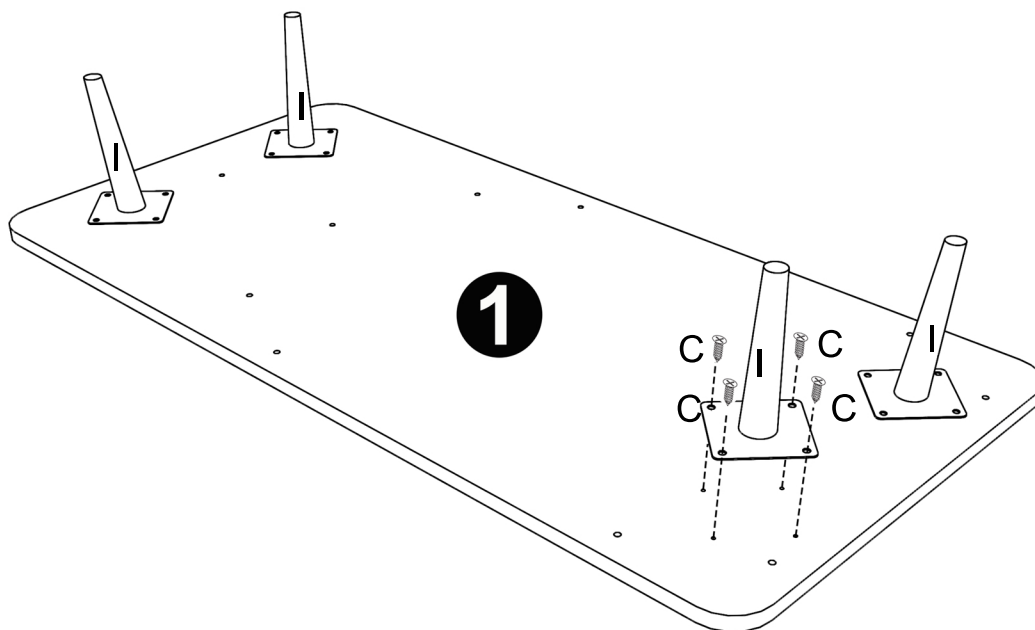

C	X16
	
M3.5x12mm	



I	X4
	

2

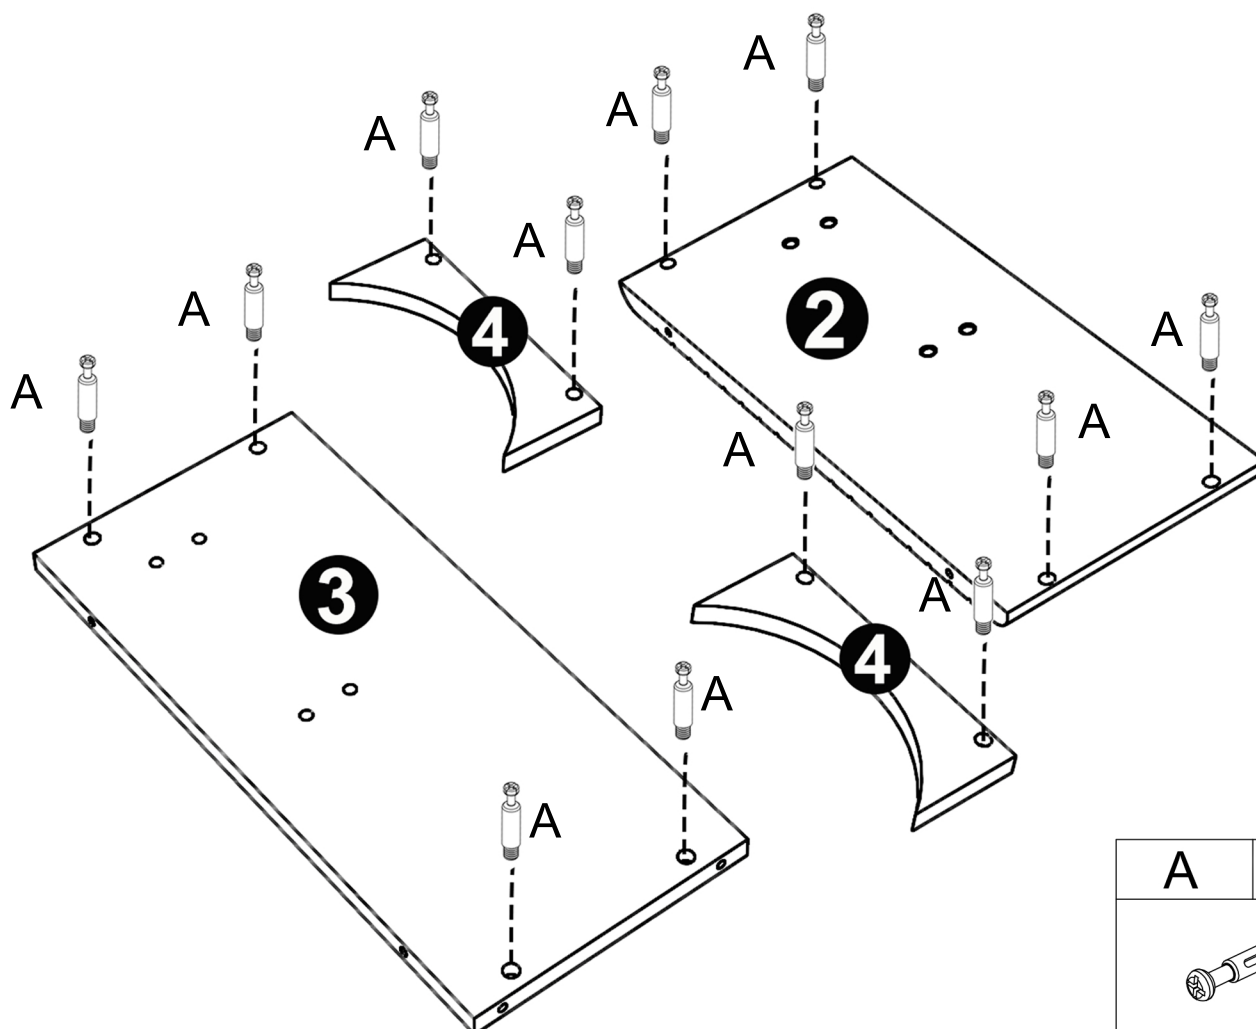



A	X12
	
M6x35mm	

3

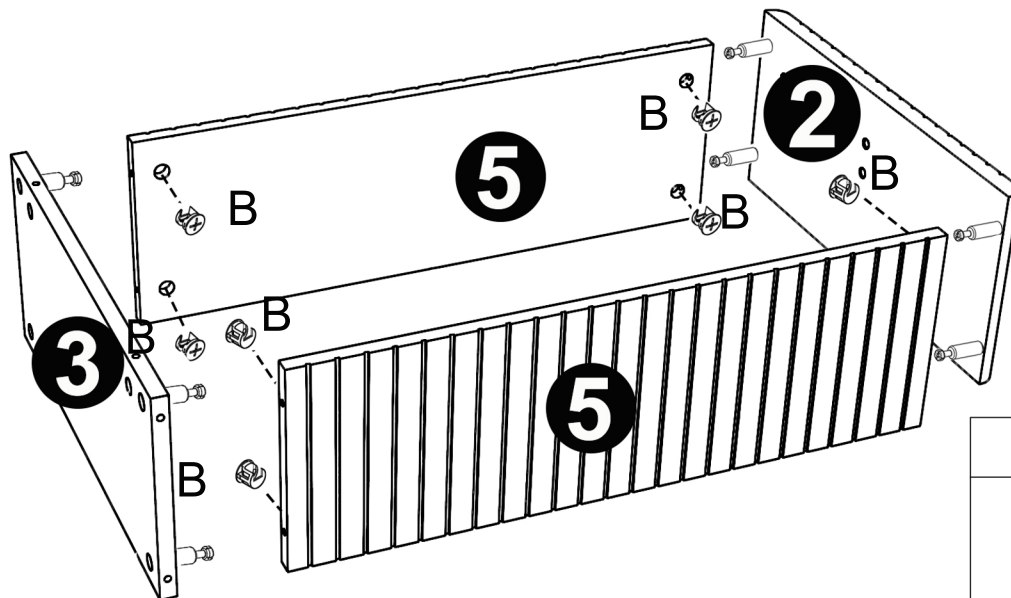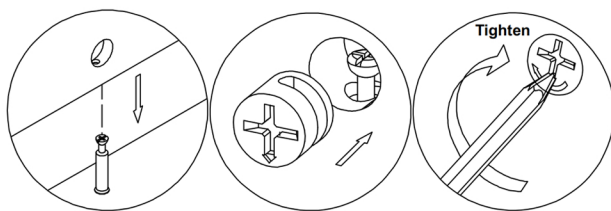


B	X8
	

4

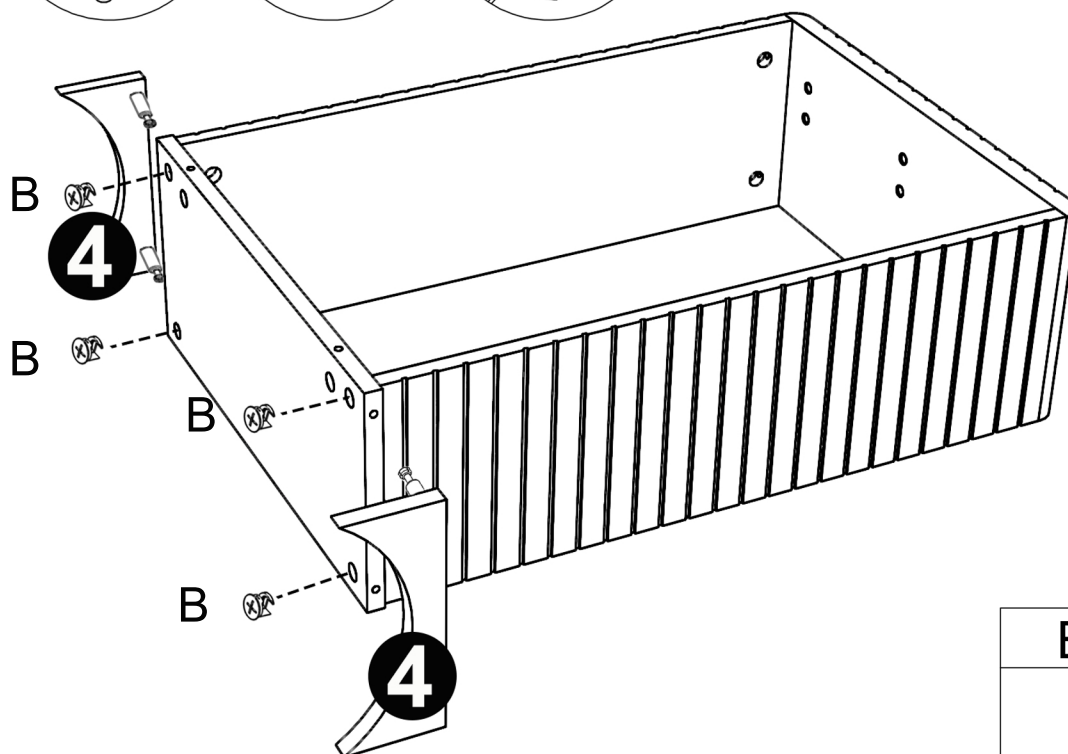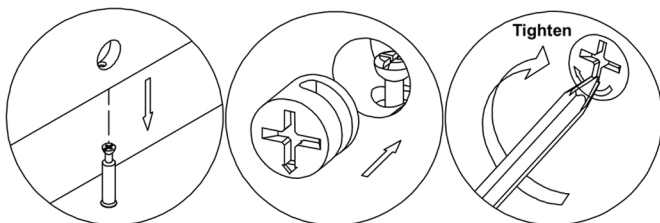

B	X4
	

5

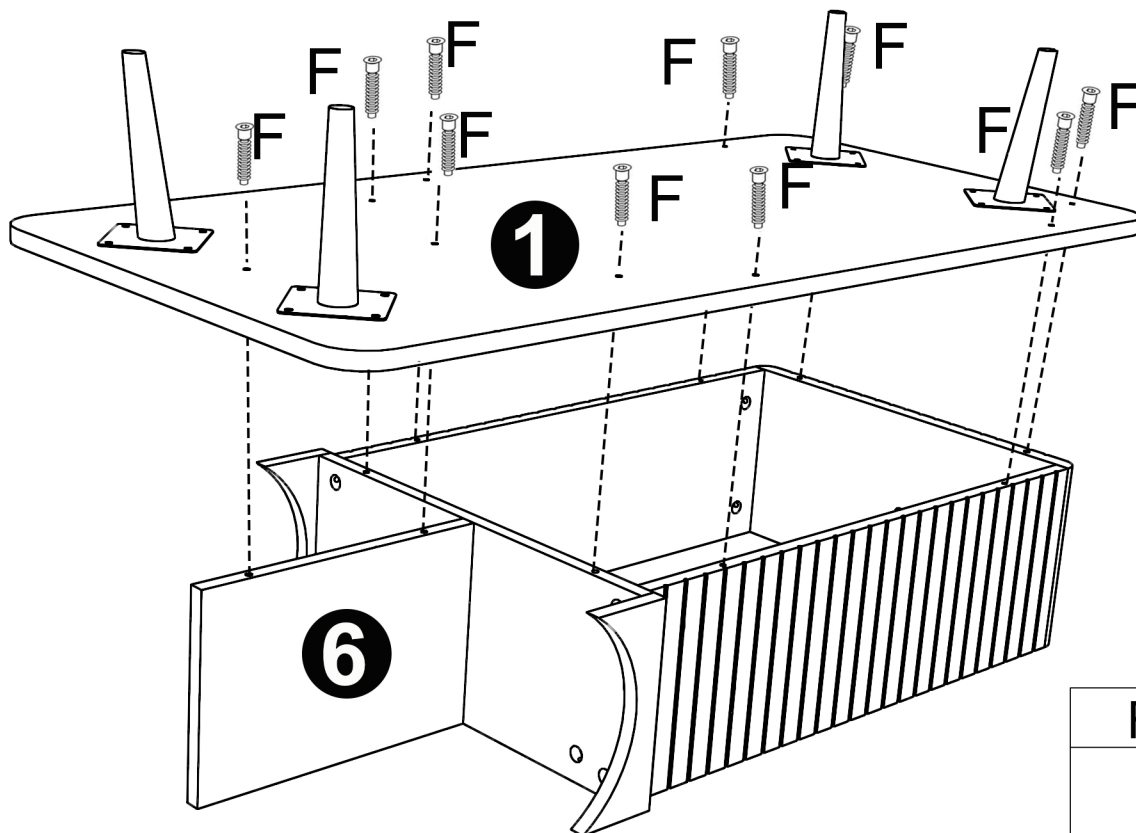


F

X10




M5x40mm

6

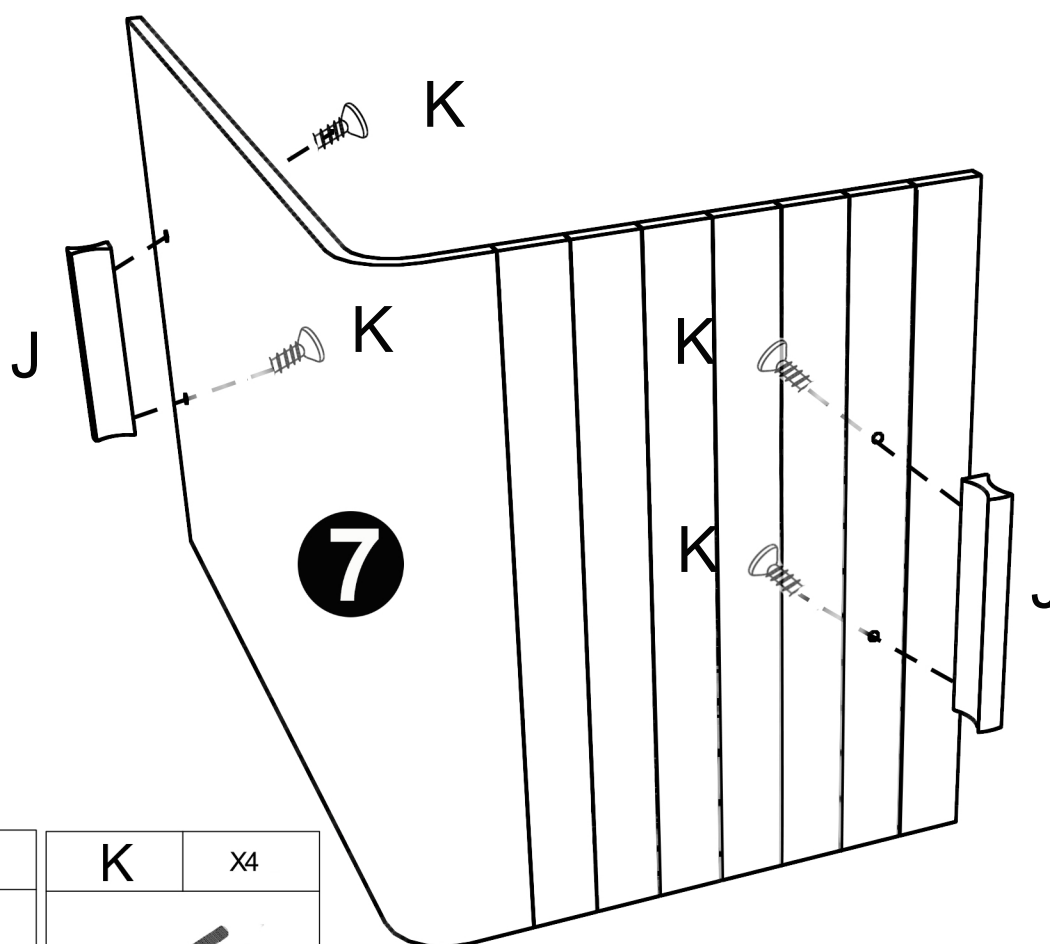

J

X2




K


X4



7

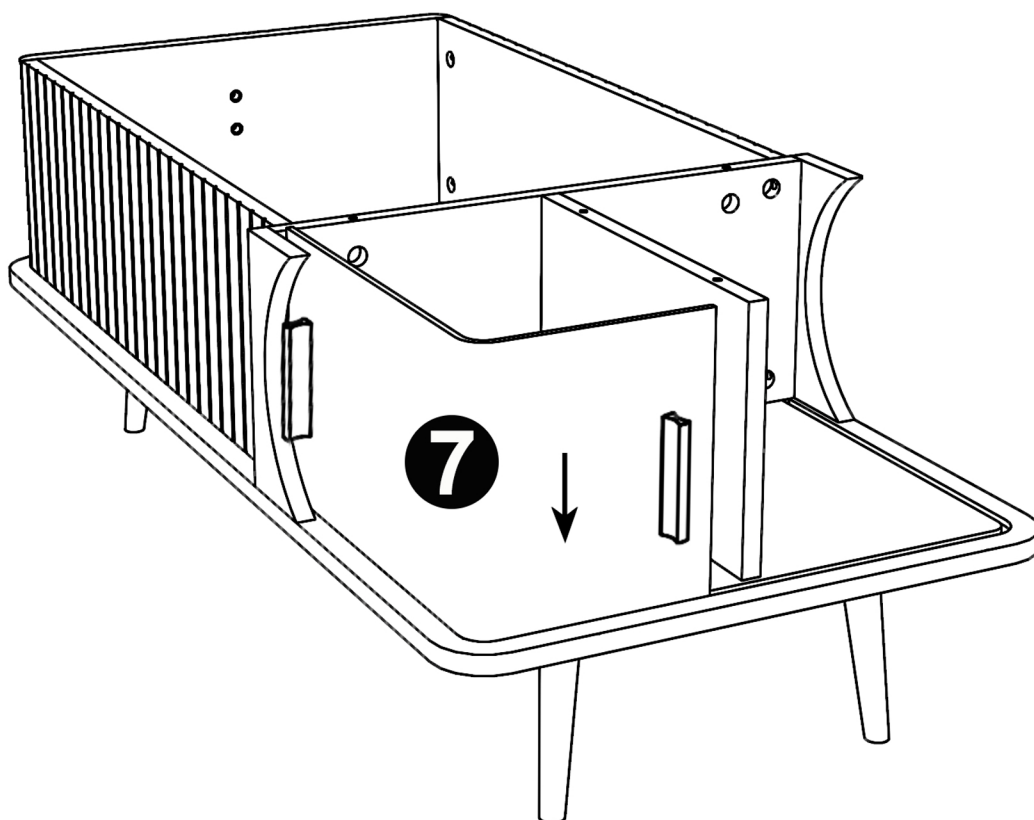


8

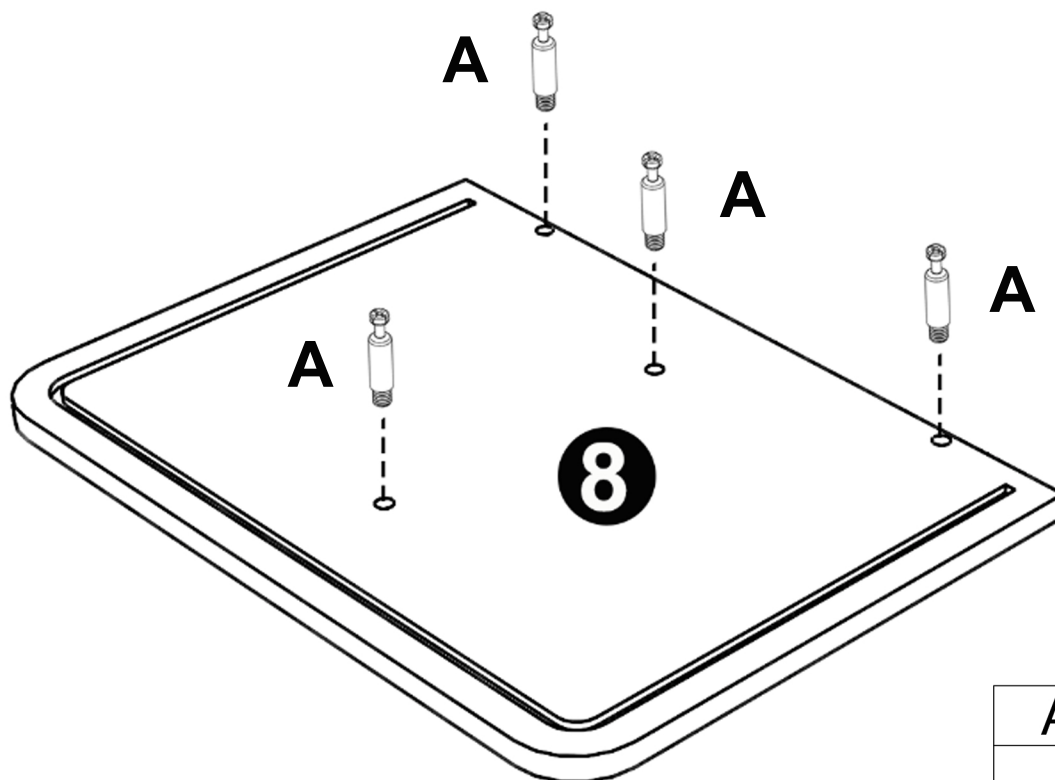


A

X4




M6x35mm

9

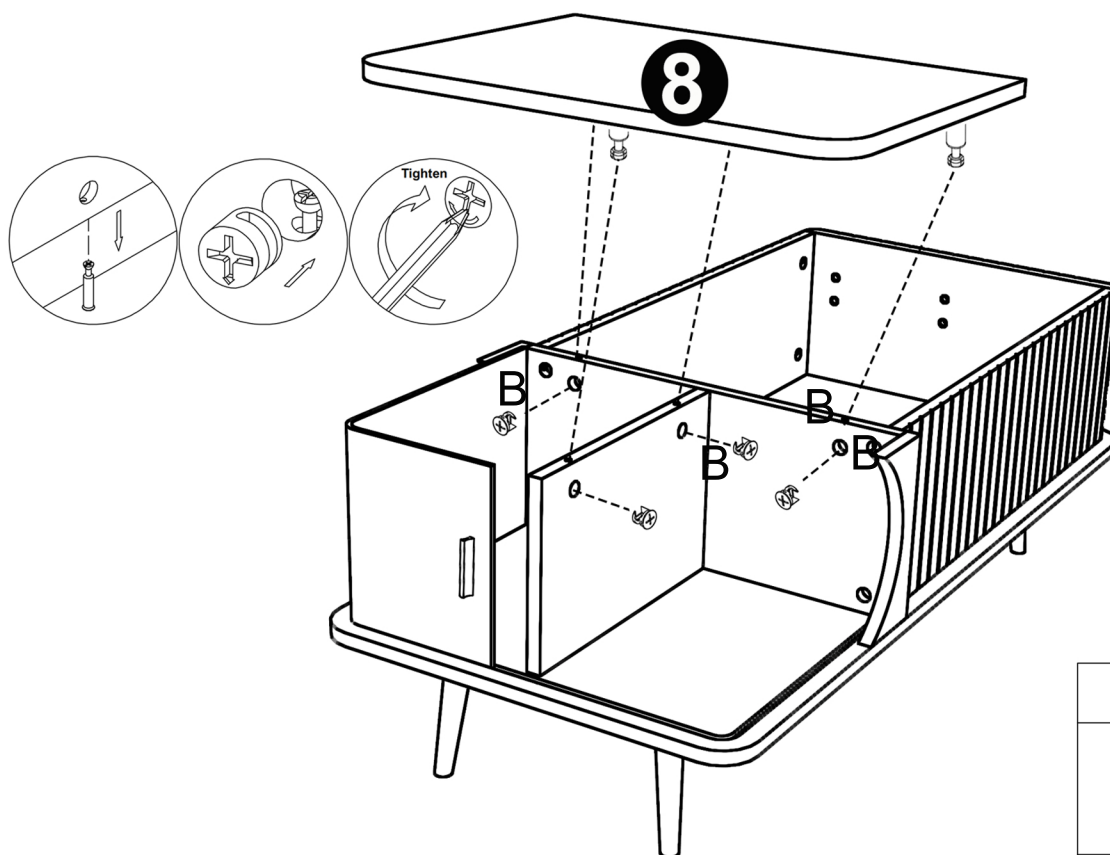


B	X4
	

10

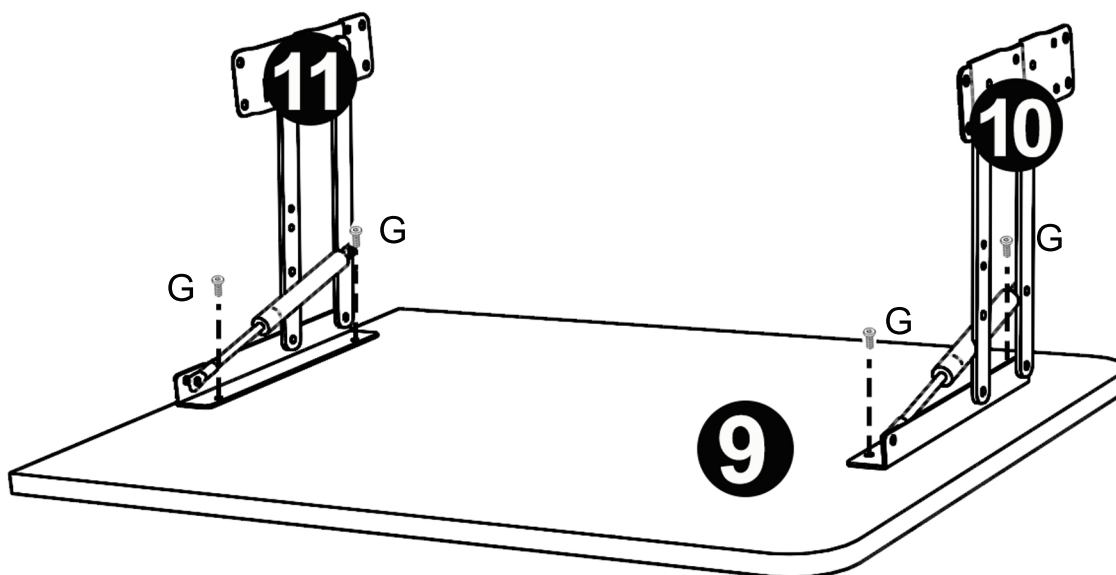


G	X4
	
M6X12mm	

11

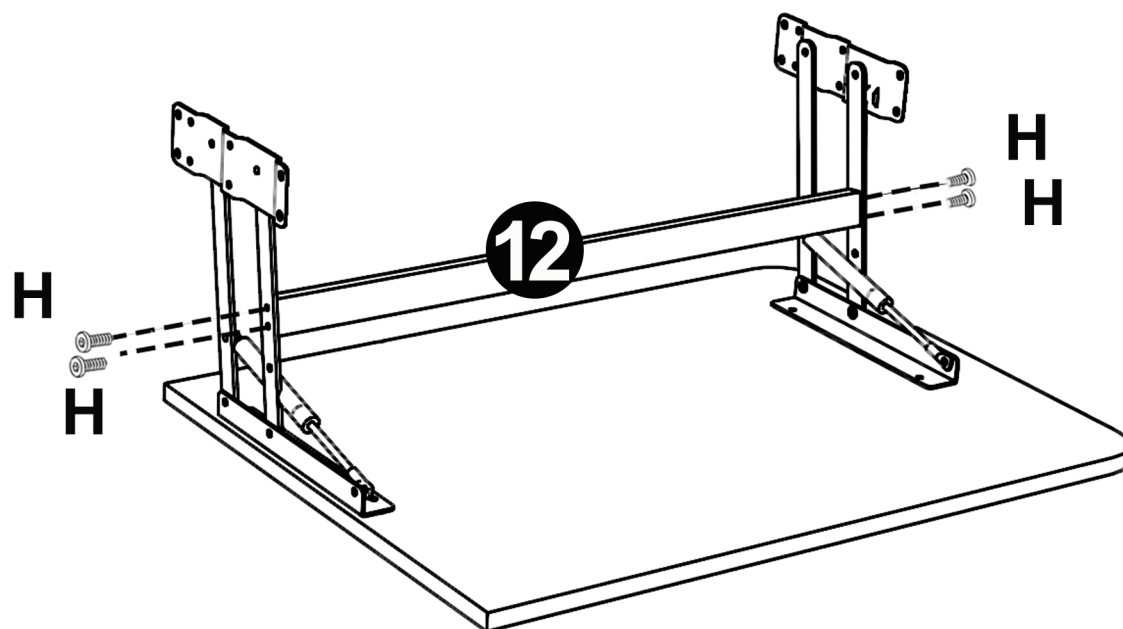

H	X4
	
M6X16mm	

12

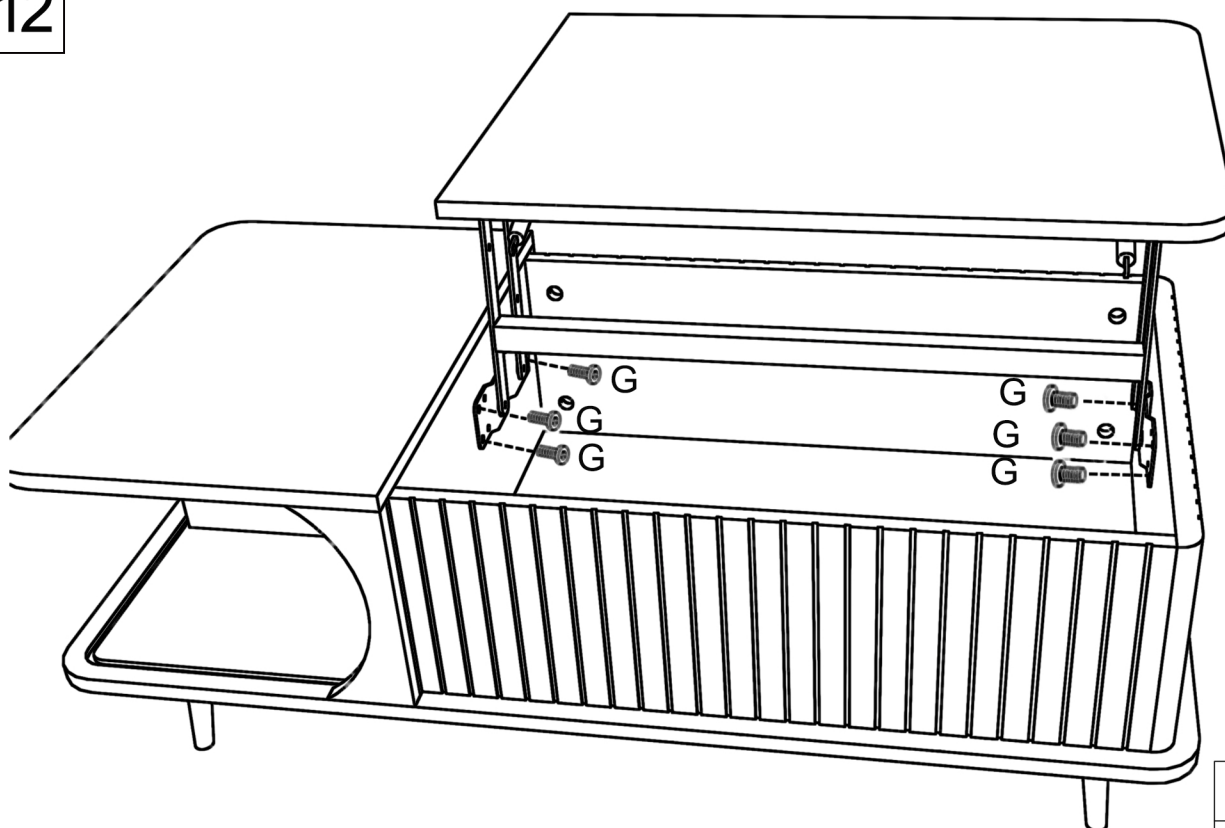

G	X8
	
M6X12mm	