



ASSEMBLY INSTRUCTIONS

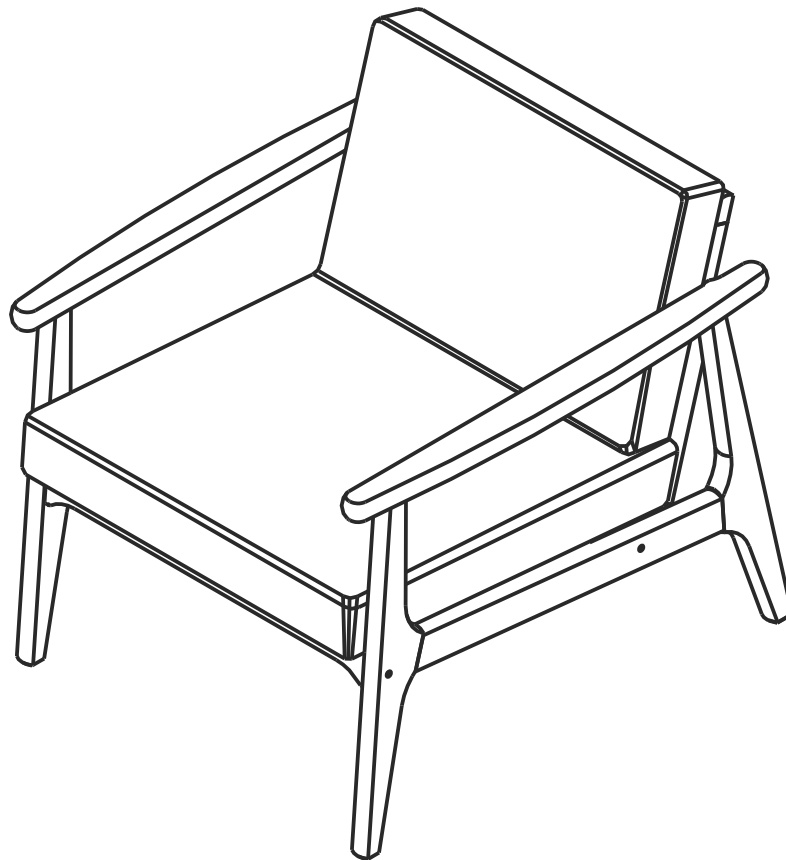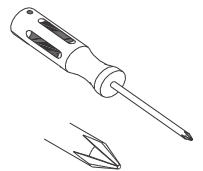


00:30 Hs

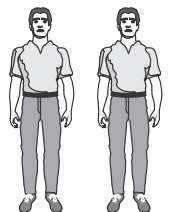


Mid-Century Modern Chair

HARDWARE INCLUDED




A - 12,0x50 Wood Dowel
Qty. 6




B - 4,0x45 Screw
Qty. 4




C - 4,0x35 Screw
Qty. 4



D - 7x60 Screw
Qty. 04



E - 7x80 Screw
Qty. 02

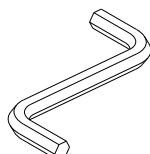


G - Allen Key
Qty. 01





**H - Wood Hole
Cover - Qty. 04**

PARTS INCLUDED


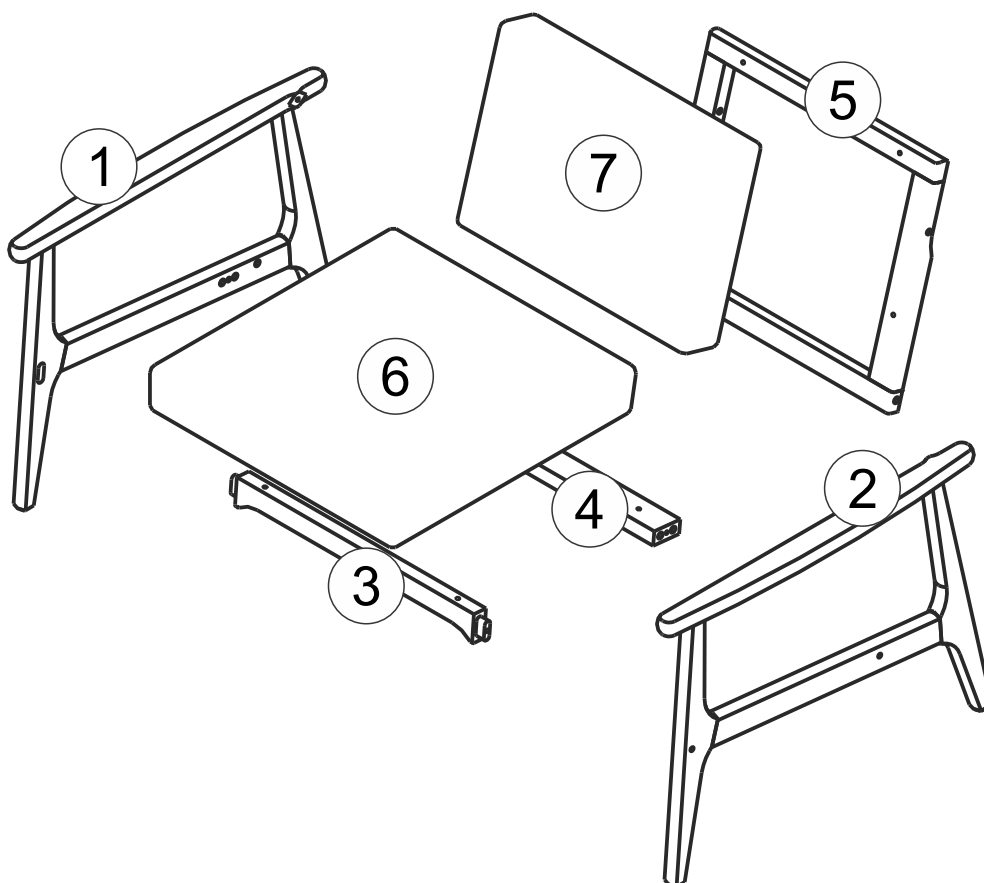


STEP 1

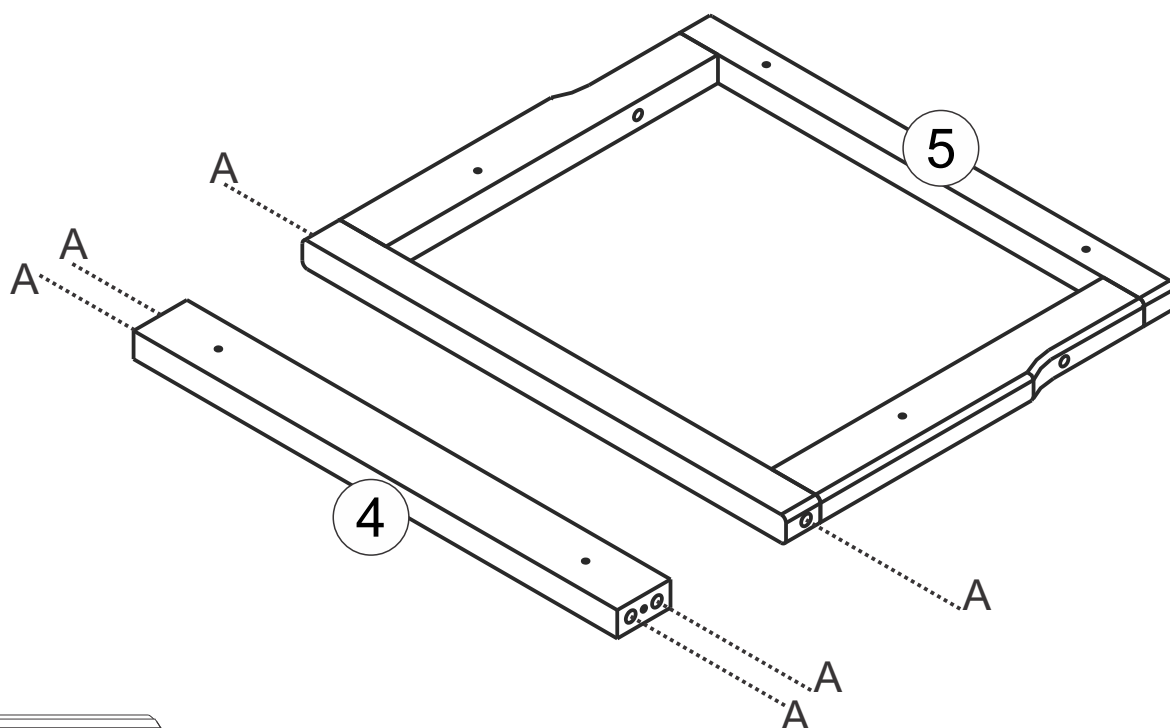


A -12,0x50 Wood Dowel
Qty. 6

STEP 2

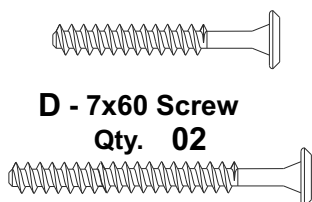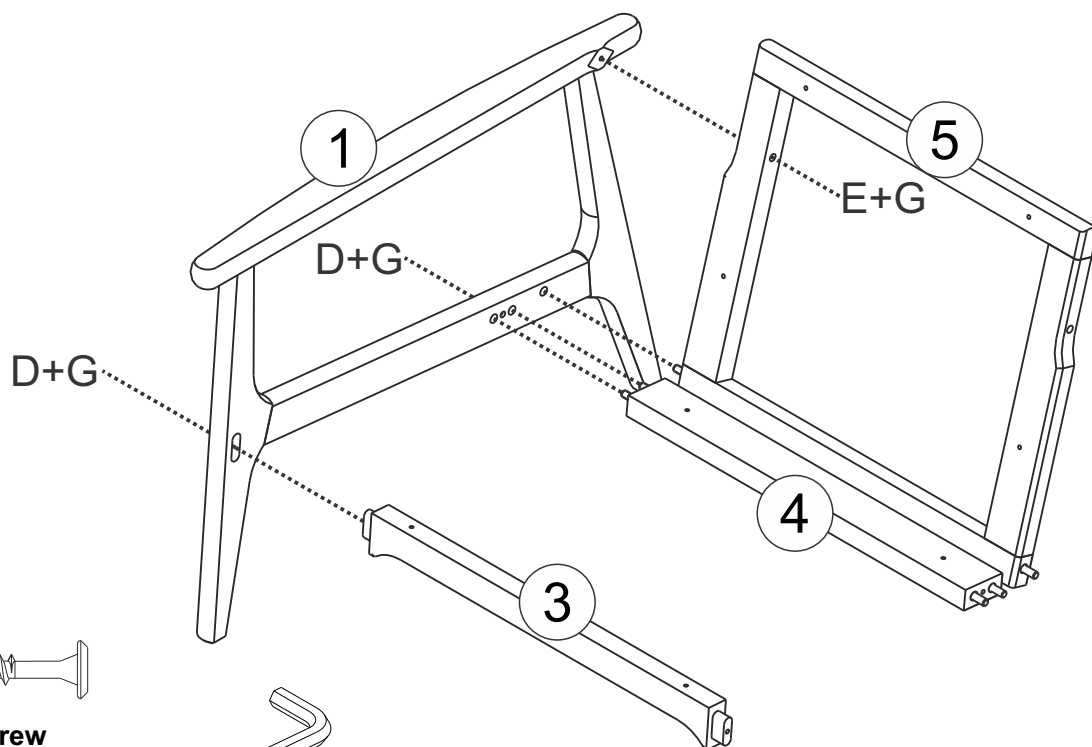



D - 7x60 Screw
Qty. 02

E - 7x80 Screw
Qty. 01

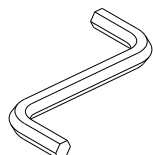


G - Allen Key
Qty. 01

STEP 3

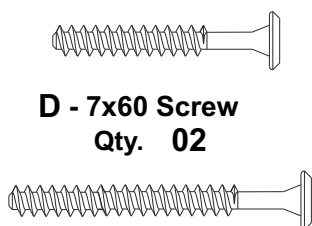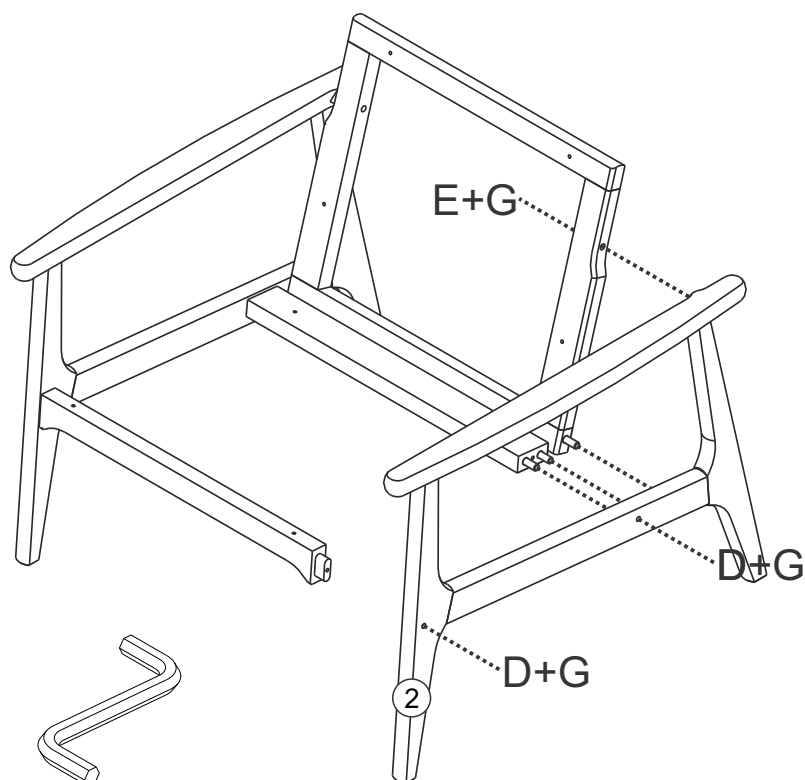


D - 7x60 Screw
Qty. 02

E - 7x80 Screw
Qty. 01

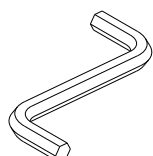


G - Allen Key
Qty. 01

STEP 4

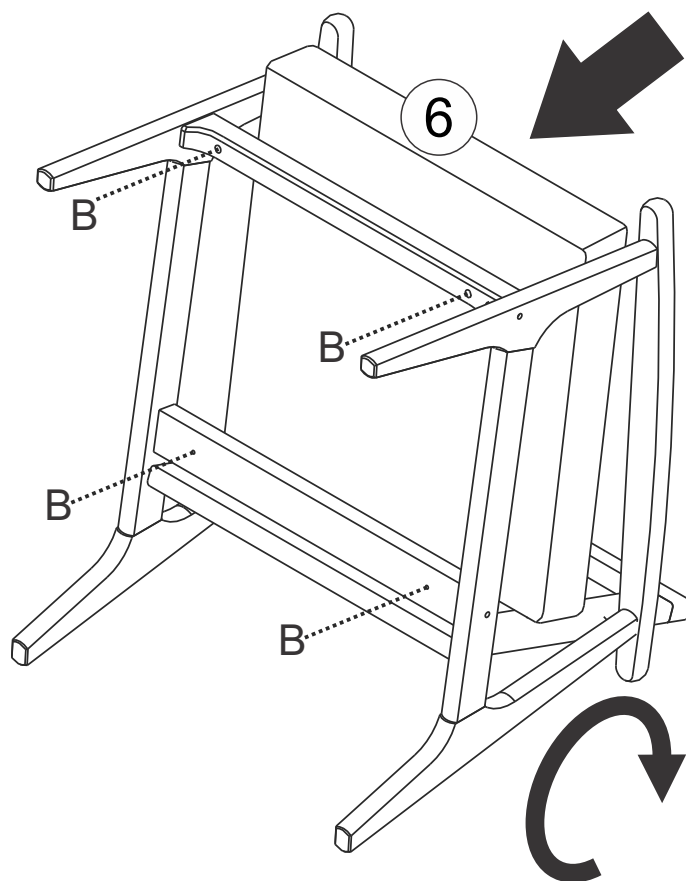

B -4,0x45 Screw
Qty. 4

STEP 5

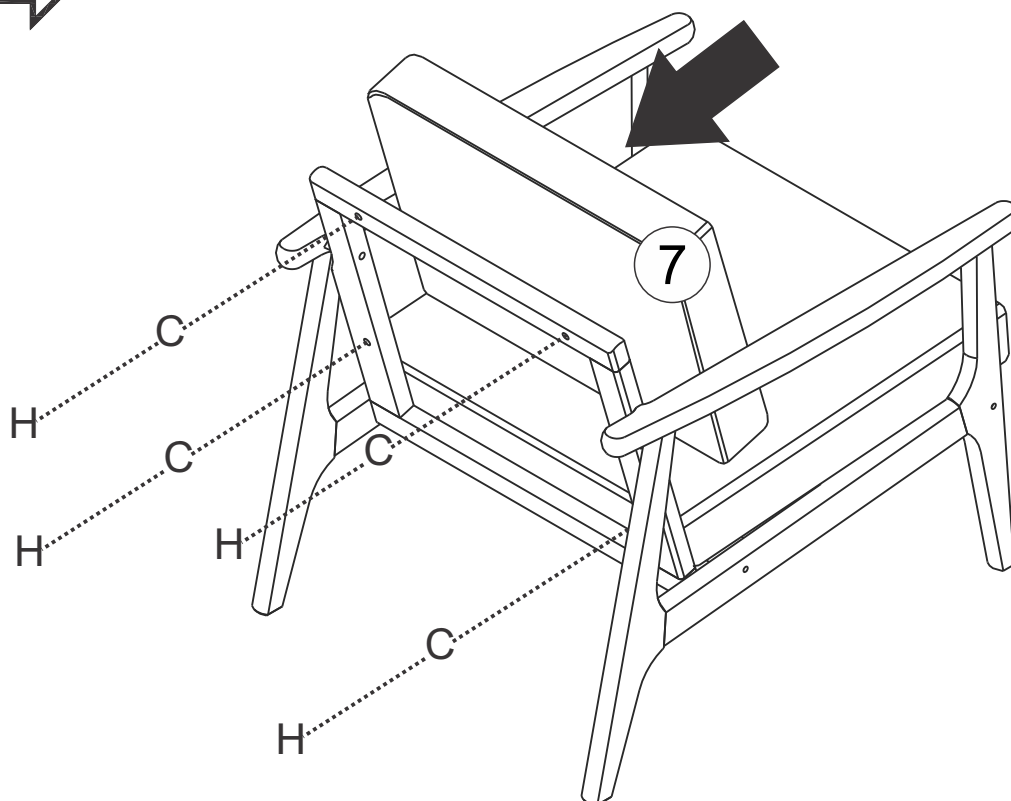

H - Wood Hole
Cover - Qty. 04



C -4,0x35 Screw
Qty. 4