200 US GAL
DECK BOX
ASSEMBLY MANUAL

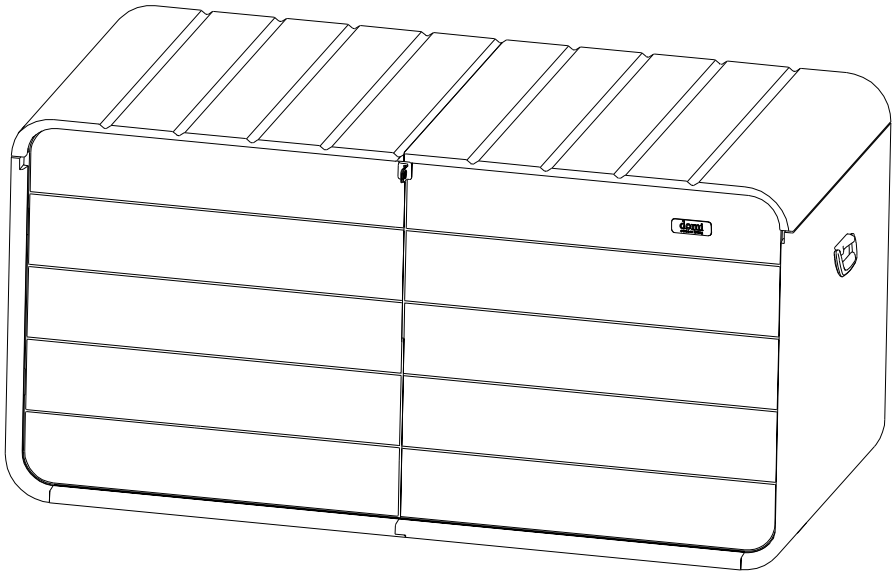

MODEL#: **LNCZ0620**

Missing part? Damaged? Contact us via email at

service@domioutdoorliving.com

www.domioutdoorliving.com

© Copyright 2023–2025 domi LLC. All Rights Reserved.

BEFORE STARTING ASSEMBLY

① Please check all parts and components to ensure that there are no damages or missing items BEFORE starting the construction of the product.

② For ease of construction, you may need a Power Drill (Cordless, Variable Speed).

③ It would be much easier to assemble the product with two or more people.

④ Some parts have metal edges. Please be careful when handling components.

IMPORTANT: Please contact Customer Service if you have any problems or discover any missing parts.

USA & Canada:
1-833-807-3550

	A  Base Panels 2X B 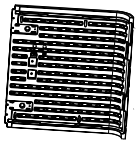 Side Panels 2X C1  Side Panels 2X C2 Side Panels 2X D1 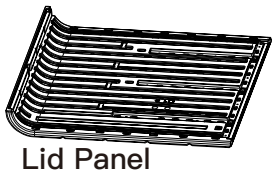 Lid Panel 1X D2 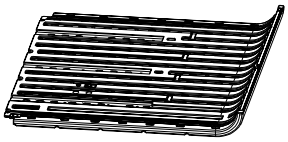 Lid Panel 1X E Support Tubes 10X E1 Support Tubes 2X E2  Support Tube 1X F 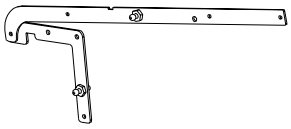 Right Rocker Arm 1X G 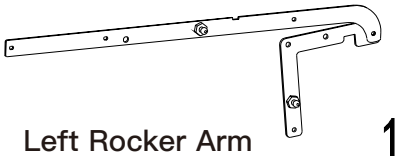 Left Rocker Arm 1X H  Hydraulic Rods 2X J 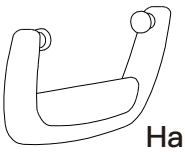 Handles 2X K  Handle Brackets 2X L  Stainless Steel Small Lock Plate 1X L1 Label 1X M 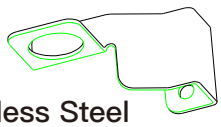 Stainless Steel Lock Bracket 1X N ST5*15 30X
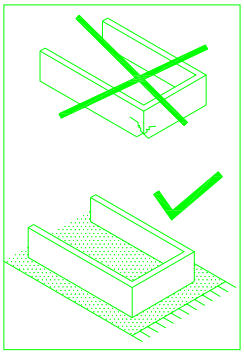	Note: Don't tighten the screws during assembly. Tighten them all at once after all screws are in place.

	N1  ST5*20 40X S  ST5*25 8X P M6 4X Q ST6*16 8X R M6*16 18X R1 M6*30 4X U M5 washers 4X V Hex wrench 1X T Allen Key 1X W 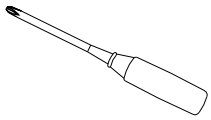 Screwdriver 1X
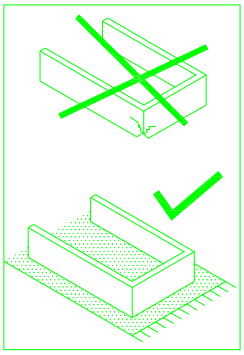	Note: Don’t tighten the screws during assembly. Tighten them all at once after all screws are in place.



A 2X



ST5*15

N 6X



N1 ST5*20 8X

E 2X

Base Panels Assembly

Step 1:

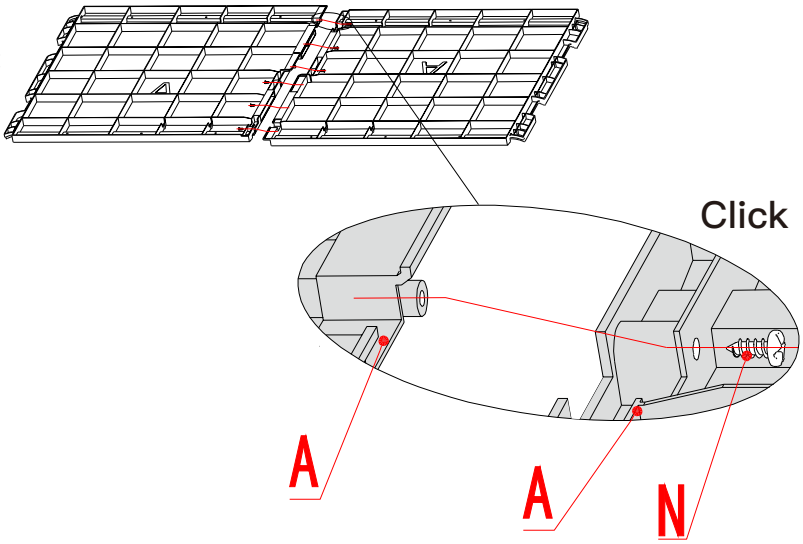

Step 2:

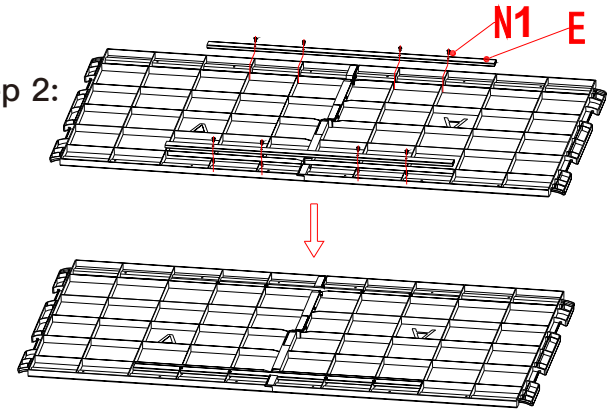

Step 1:
Attach the 2 Base Panels #A together. Secure them with 6 screws #N(ST5*15).

Step 2:
Insert the 2 Support Tubes #E into the grooves on the base panel. Secure each #E with 4 screws #N1(ST5*20).

C1 2X

C2 2X

E 6X



M6*16

R 8X



ST5*20

N1 24X

Front and rear Panels Assembly

Step 3:

Step 4:

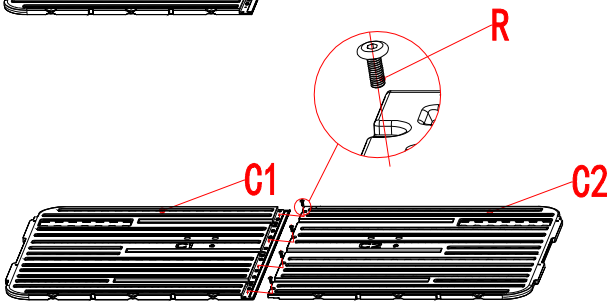

Step 5:

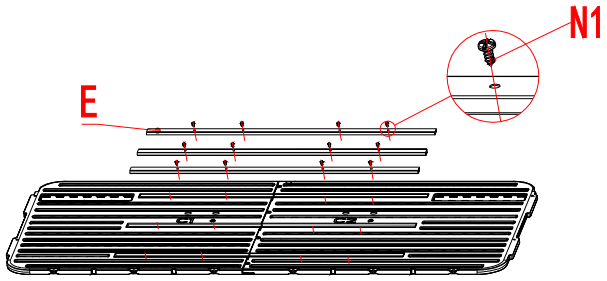

Step 6:



Step 3:
Peel off the adhesive strip from the Side Panel #C1.
Step 4:
Attach the Side Panel #C1 and #C2 together. Secure them with 4 bolts #R(M6*16).
Step 5:
Insert the 3 Support Tubes #E into the grooves on the side panels. Secure each #E with 4 screws #N1(ST5*20).
Step 6:
Repeat above procedures to install another set of #C1 and #C2 with #E.

D1 1X

D2 1X

E 2X

E1 2X

E2 1X

R M6*16 4X

N ST5*15 2X

N1 ST5*20 8X

R1 M6*30 4X

L 1X

Lid Panels Assembly

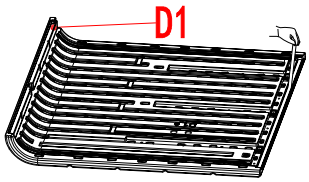

Step 7:

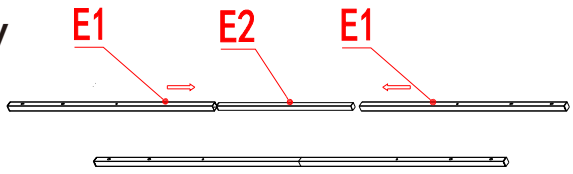

Step 8:

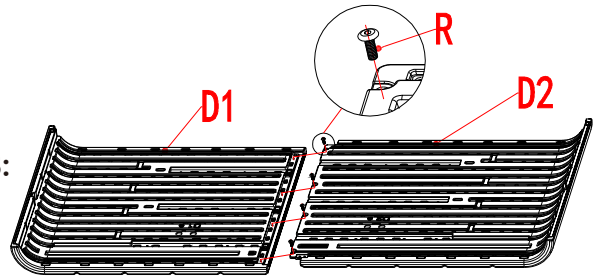

Step 9:

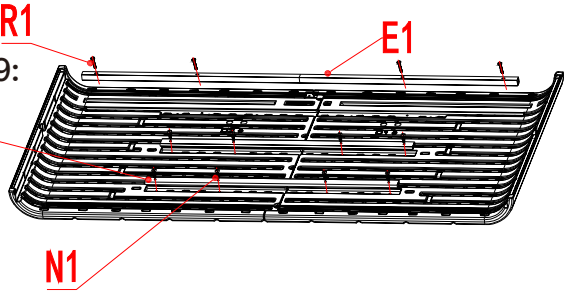

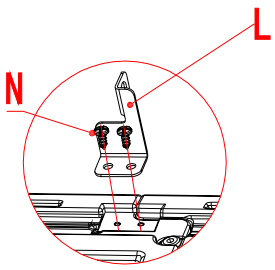

Step 10:

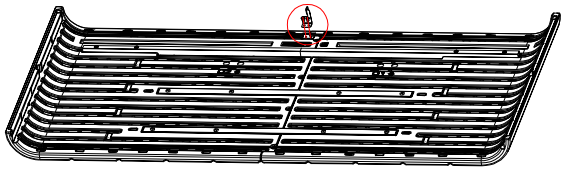

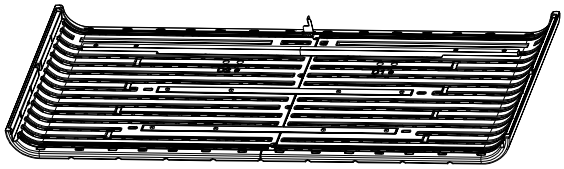

Step7:
Peel off the adhesive strip from the Lid Panels #D1 .
Step 8:
Attach the Lid Panels #D1 and #D2 together. Secure them with 4 bolts#R (M6*16).
Step 9:
(1) Insert support tube #E2 into 2 part #E1,Use 4 bolts #R1 to secure the assembled support tube into the grooves as shown.
(2) Insert the 2 Support Tubes #E into the grooves on the Lid Panels. Secure each #E with 4 screws #N1 (ST5*20).
Step 10:
Install the Stainless Steel Small Lock Plate #L onto the Lid Panels as shown. Secure it with 2 screws #N (ST5*15).



F 1X



G 1X



ST6*16

Q 8X

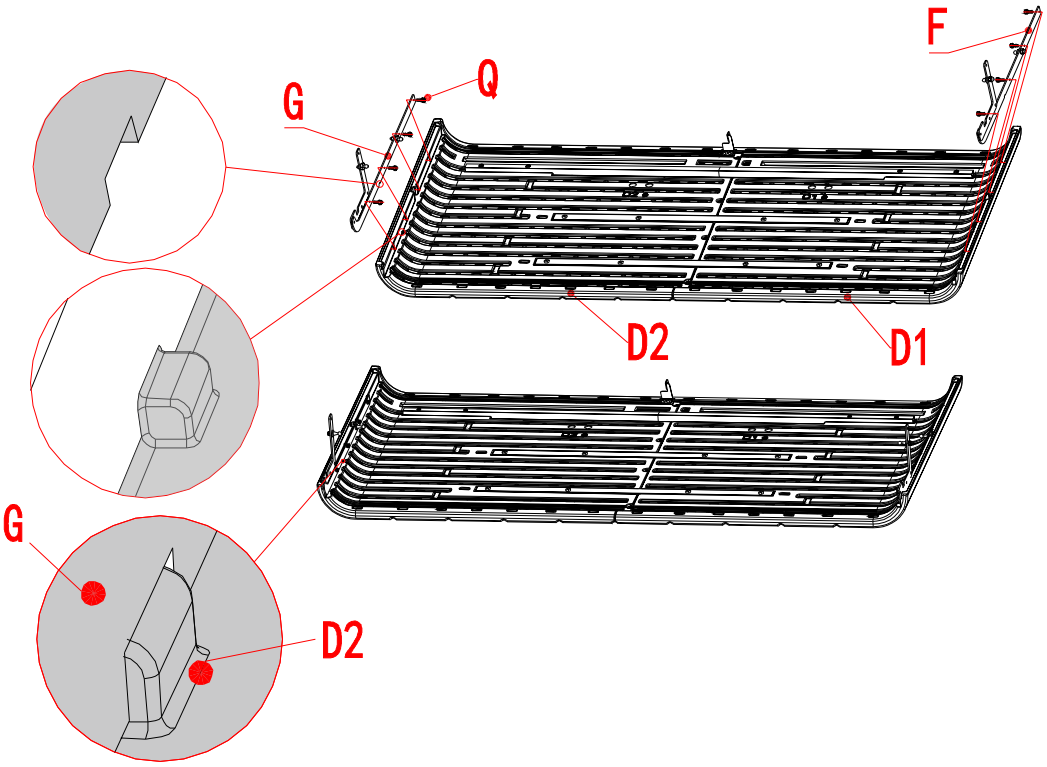

Step 11:
Install the Right Rocker Arm #F onto the Lid Panel #D1;
Install the Left Rocker Arm #G onto the Lid Panel #D2.

Please ensure the notch on the rocker's arm aligns carefully with the corresponding protrusion on the Lid Panels.It is important to make sure they fit together correctly! Also, please look at the image for the correct alignment of Stainless Steel Small Lock Plate #L and the Rocker Arms at their respective positions.

B 2X

J 2X

K 2X

S ST5*25 4X

U M5 4X

Side Panels Assembly

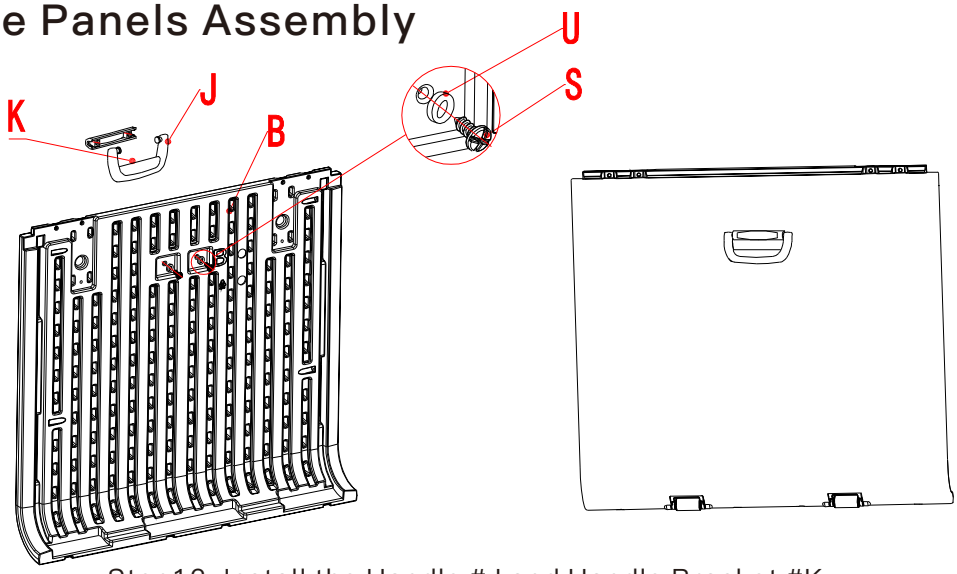

Step12: Install the Handle #J and Handle Bracket #K .
Use 2 Washers #U and 2 screws #S(ST5*25) to secure the Handle #J and Handle Bracket #K to the Side Panel #B as shown.

Step 13: Attach the assembled Side Panels to the Base Panel #A.
Please note: Ensure that the side panels snap into place at their corresponding positions on the bottom panel.

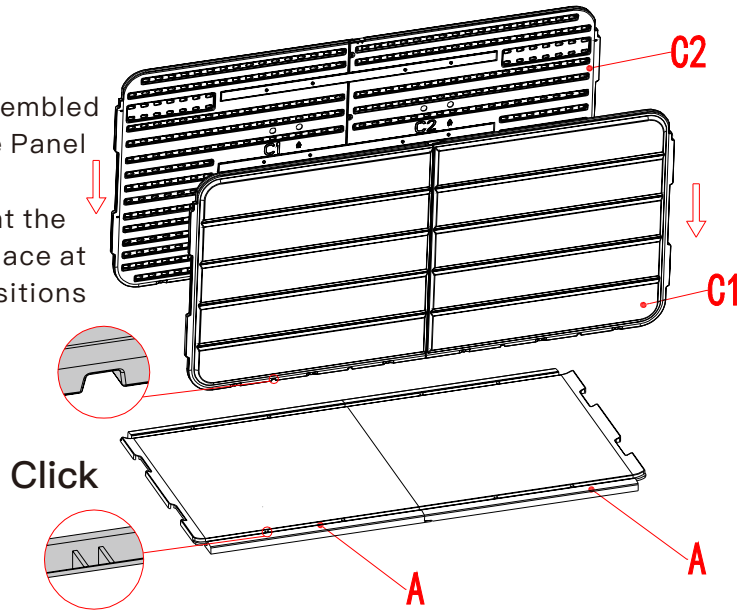

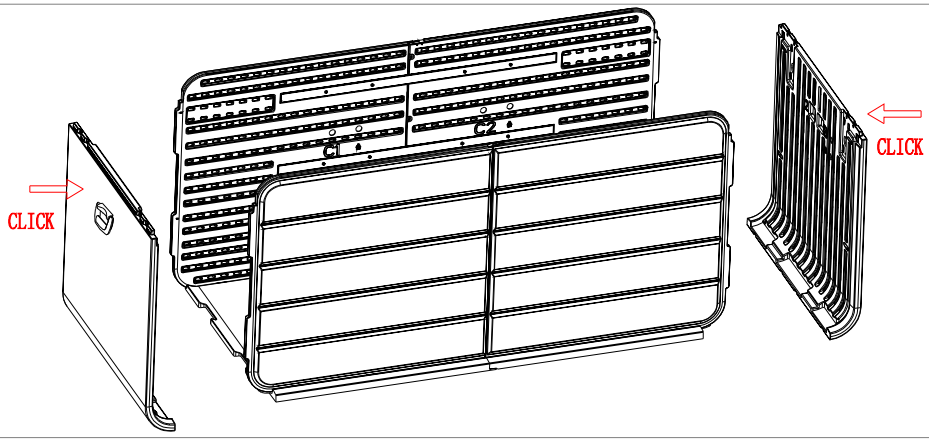



ST5*25

S 4X

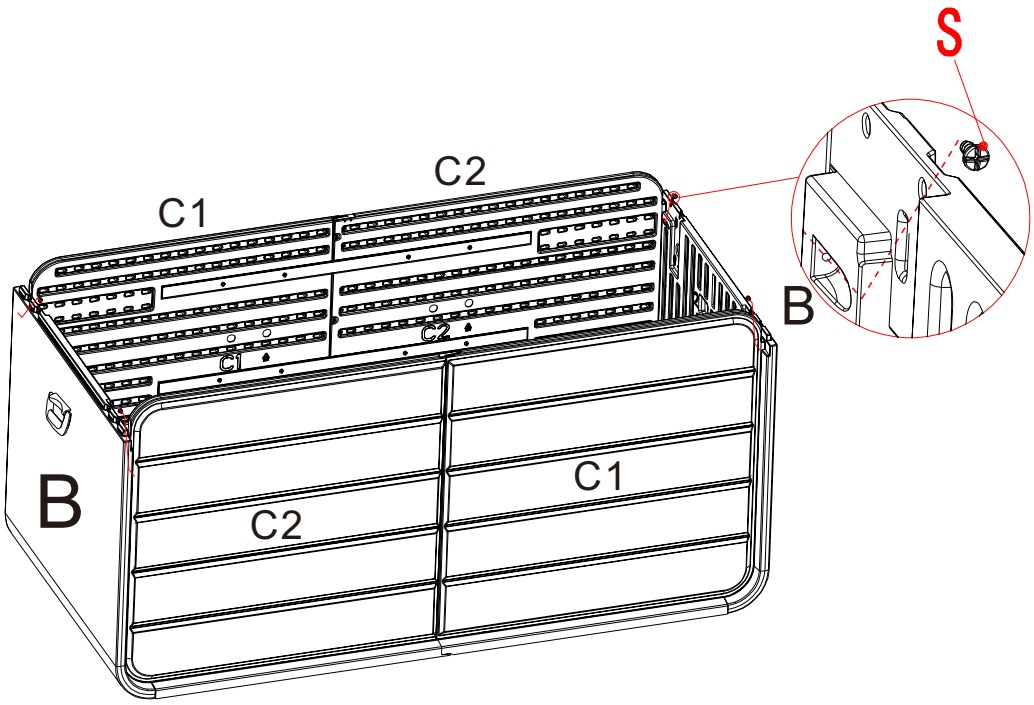

Step 14:
Insert 4 screws #S(ST5*25) into the holes in the panel #B , then tighten to secure panel #B to panel #C2 and #C1.



ST5*15

N 20X

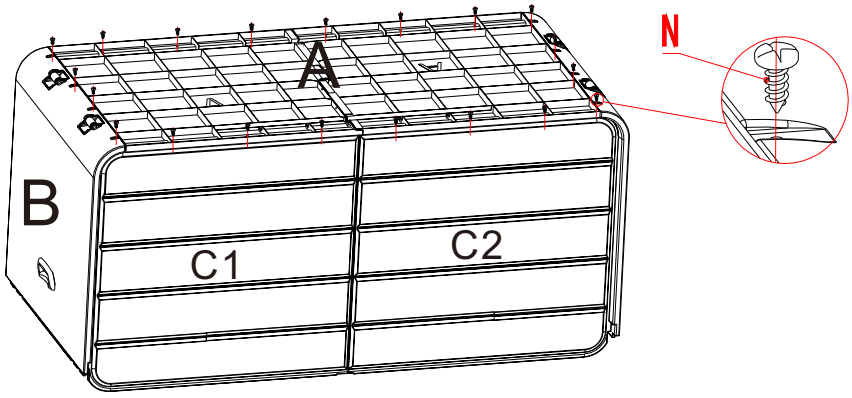

Step 15:
Flip the deck box with the Base Panel #A facing up.
Use 20 screws #N(ST5*15) to secure the bottom panel with side panels.

M6

P 4X



M6*16

R 6X

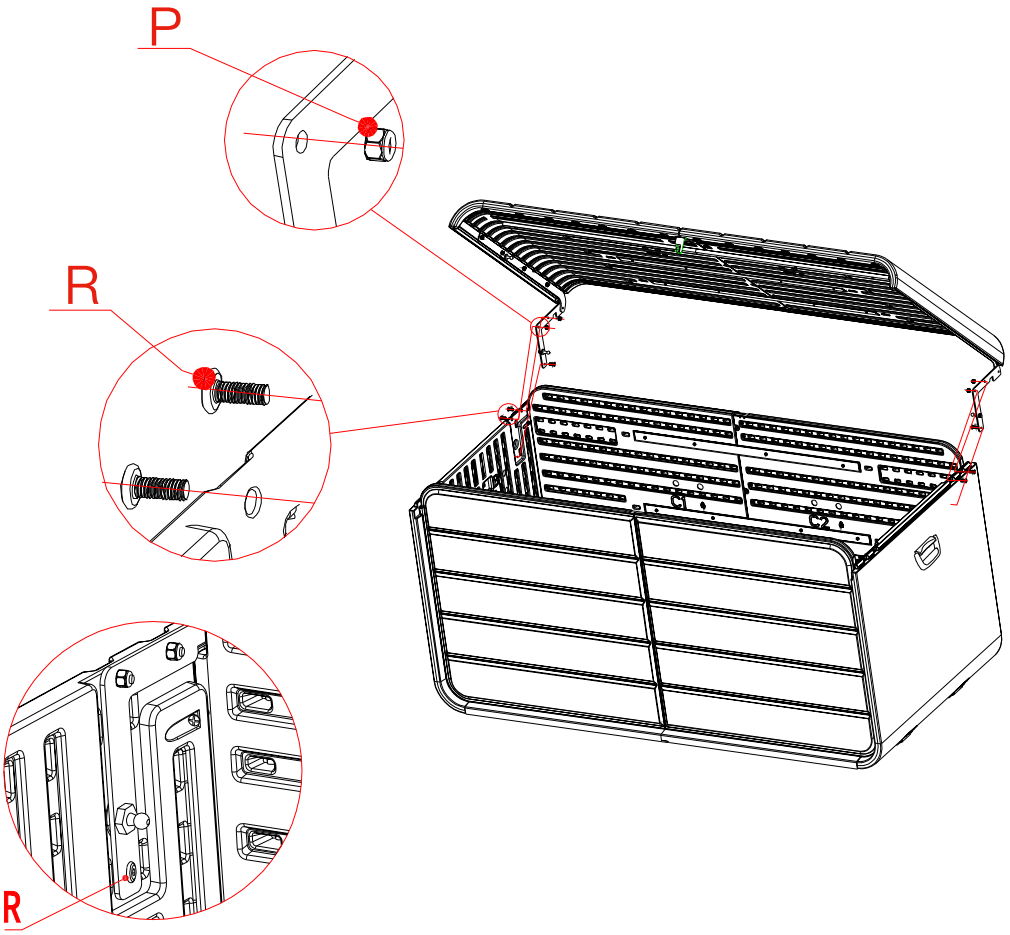

Step 16:
Use bolt #R(M6*16) and nut #P to connect part #G and #F under the lid to the side panel #B as shown. (you can install the lid on either side)



H 2X

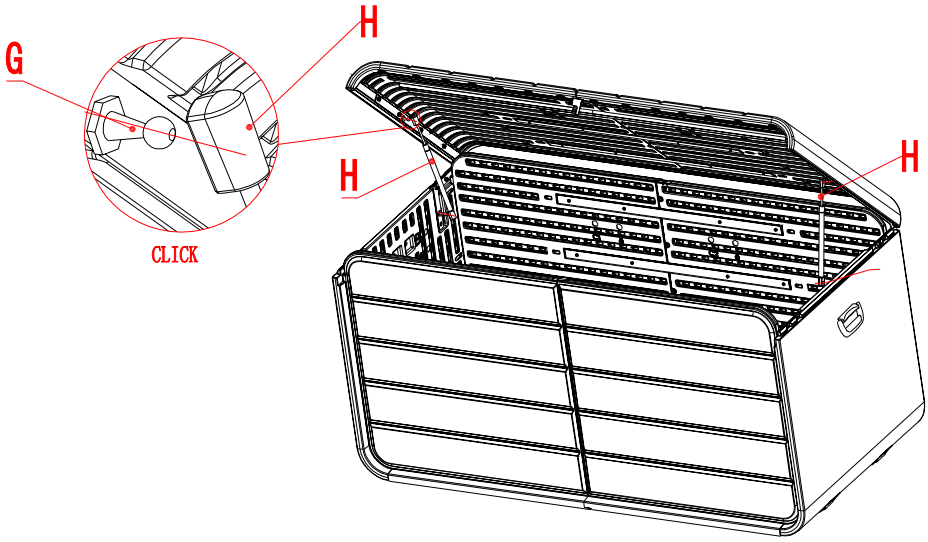

Step 17:
Click the Hydraulic Rods #H into the rocker arm #F and #G as shown.



M 1X

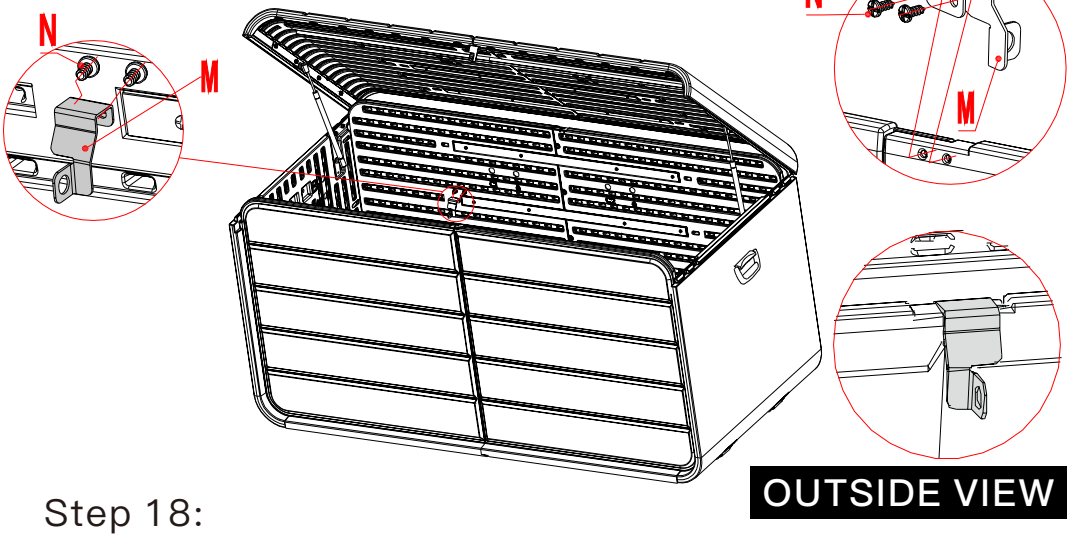



ST5*15
N 2X

Step 18:
Use screws #N(ST5*15) to fix Stainless Steel Lock Bracket #M to the front panel(from inside to outside).

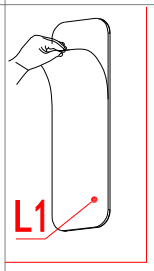

L1 1X

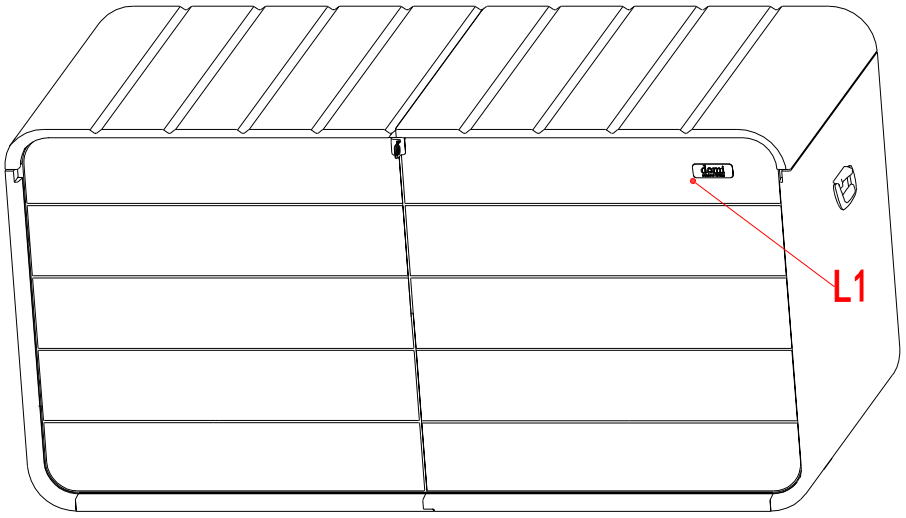

Step 19:
(1) Remove the backing strip from Label #L1.
(2) Stick Label #L1 onto the outer side of the deck box.