

Tools Needed:
Implementos
necesarios:




For warranty info visit
mdbuildingproducts.com

Para obtener información sobre la garantía,
visite mdbuildingproducts.com


BYPASS MIRROR BOTTOM GUIDE ASSEMBLY

1. Open door. Lift door up and tilt outward to remove from track.
2. Push down locking tab on assembly with screwdriver, and remove assembly from back of door.
3. Attach new assembly to door and press locking tab.
4. Adjust height of guide as necessary.

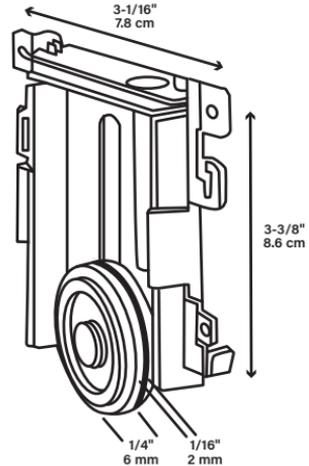

FONDO DEL ESPEJO DE DERIVACIÓN MONTAJE DE GUÍA

1. Abra la puerta. Levante la puerta e inclínela hacia afuera para retirarla del riel.
2. Empuje hacia abajo la pestaña de bloqueo del conjunto con un destornillador y retire el conjunto de la parte posterior de la puerta.
3. Conecte el nuevo conjunto a la puerta y presione la pestaña de bloqueo.
4. Ajuste la altura de la guía según sea necesario.

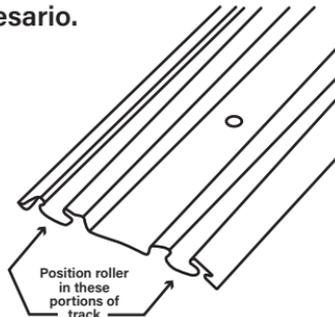

Made in China. Hecho en China.
M-D Building Products, Inc.
Oklahoma City, OK 73118
Rev 07/24 mdteam.com

⚠️WARNING: Cancer and Reproductive Harm
- www.P65Warnings.ca.gov

ADVERTENCIA: Cáncer y Daño
Reproductivo - www.P65Warnings.ca.gov



QUESTIONS? | PREGUNTAS?
800.654.8454
MDBUILDINGPRODUCTS.COM

