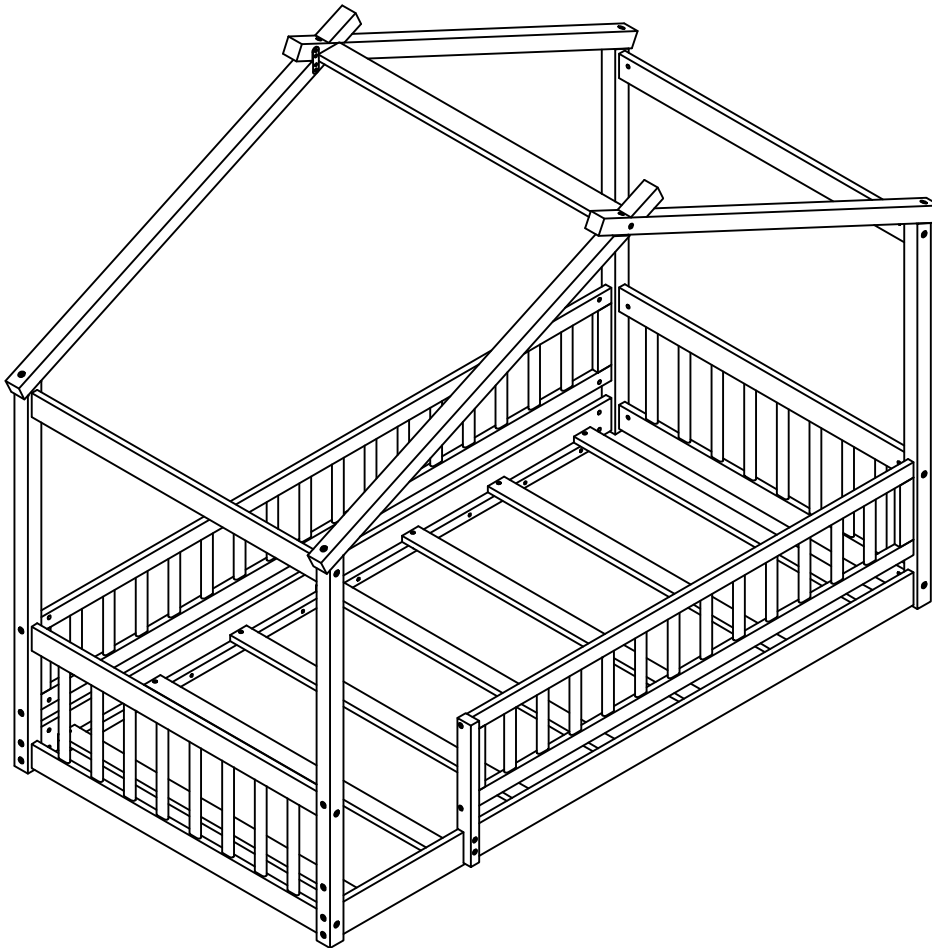



ASSEMBLY INSTRUCTIONS

TWIN HOUSE BED


















WF302176



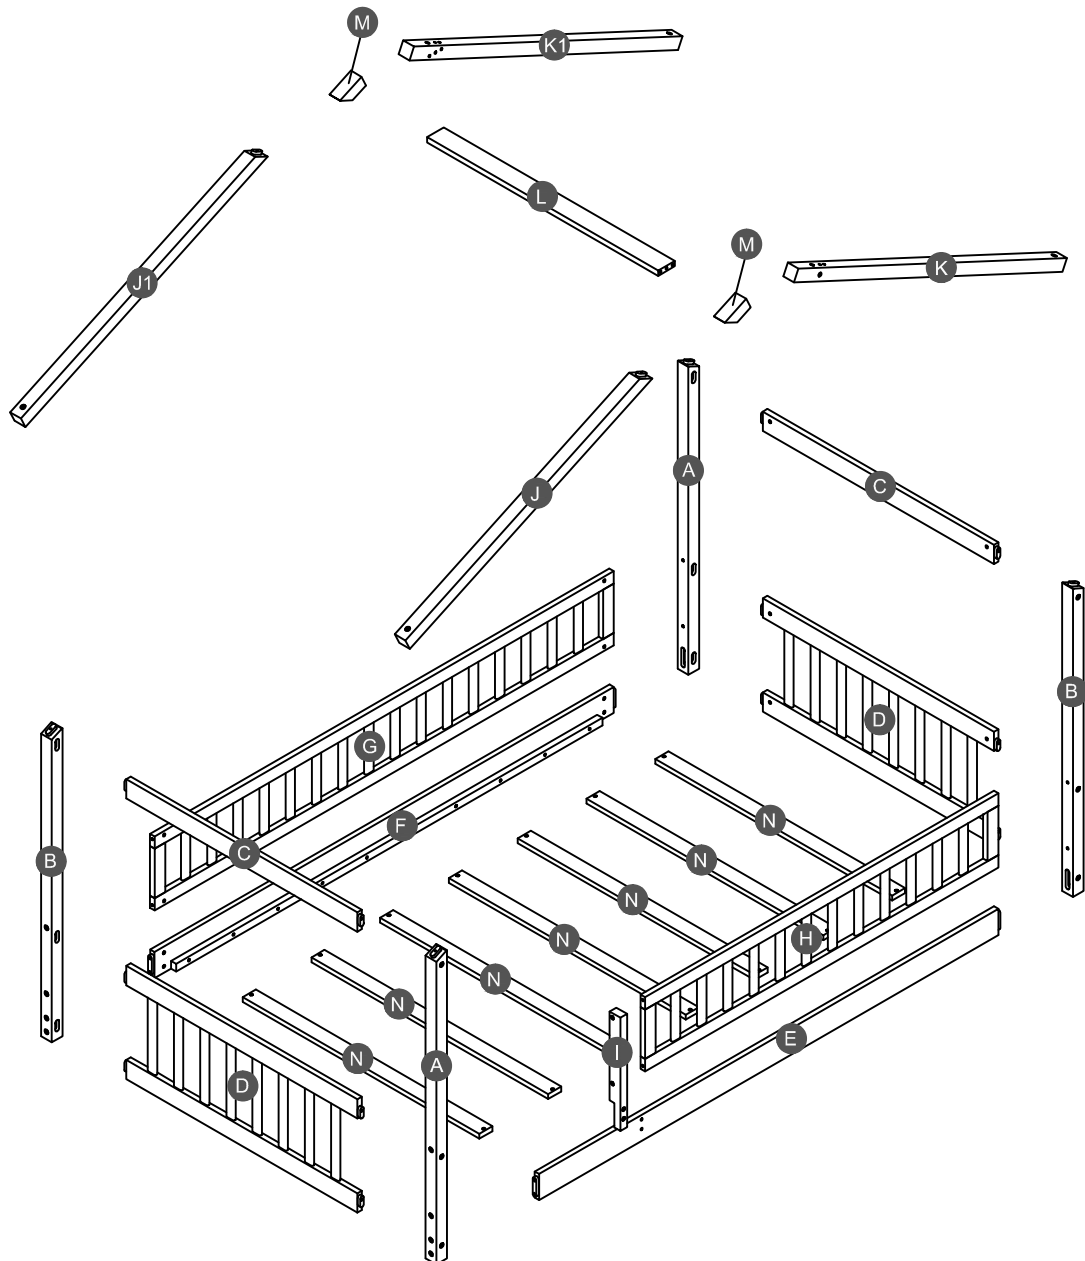
Detail View




Part List

A  Leg (Left Front/Right Back) - 2pcs	B  Leg (Left Back/Right Front) - 2pcs	C  Horizontal bar HB/FB - 2pcs
D  Frame HB/FB - 2pcs	E  Side rail (Front) - 1pc	F  Side rail (Back) - 1pc
G  Long guard rail (Back) - 1pc	H  Short guard rail (Front) - 1pc	I  Support guard rail(Left) - 1pc
J  Upper (Left Front) - 1pc	J1  Upper (Left Back) - 1pc	K  Upper (Right Front) - 1pc
K1  Upper (Right Back) - 1pc	L  Upper horizontal bar - 1pc	M  Block - 2pcs
N  Slats - 7pcs		

Hardware List


1  $\varnothing 8 \times 30 \text{mm}$ Wood dowel (6pcs)	2  $(\varnothing 15) 1/4" \times 100 \text{mm}$ Hex-Head bolts (14pcs)	3  $(\varnothing 15) 1/4" \times 80 \text{mm}$ Hex-Head bolts (16pcs)
4  $(\varnothing 12) 1/4" \times 35 \text{mm}$ Hex-Head bolts (2pcs)	5  $(\varnothing 12) 1/4" \times 65 \text{mm}$ Hex-Head bolts (8pcs)	6  $1/4" \times 15 (9.5 \text{mm})$ Horizontal-Hole bolts (30pcs)
7  $(1/4") 4.5 \times 58 \text{mm}$ Allen key (1pc)	8  $\varnothing 4 \times 30 \text{mm}$ Wood screws (14pcs)	9  $\varnothing 3.5 \times 19 \text{mm}$ Wood screws (8pcs)
10  $75 \times 20 \times 2 \text{ mm}$ Metal bracket (2pcs)		

ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)




PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS !

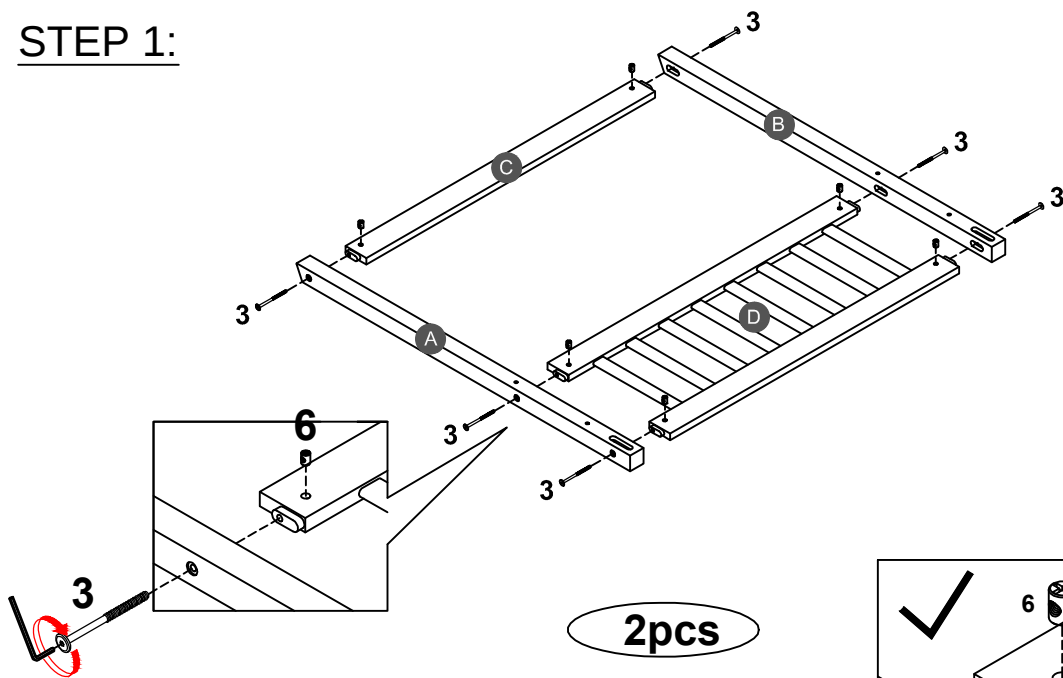STEP 1:




3	
12PCS	
6	
12PCS	

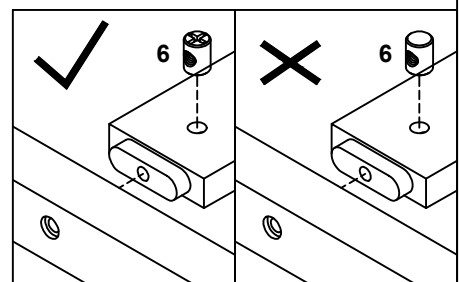Note: Part 6 will face up with the "x" mark on it, otherwise it cannot be tightened



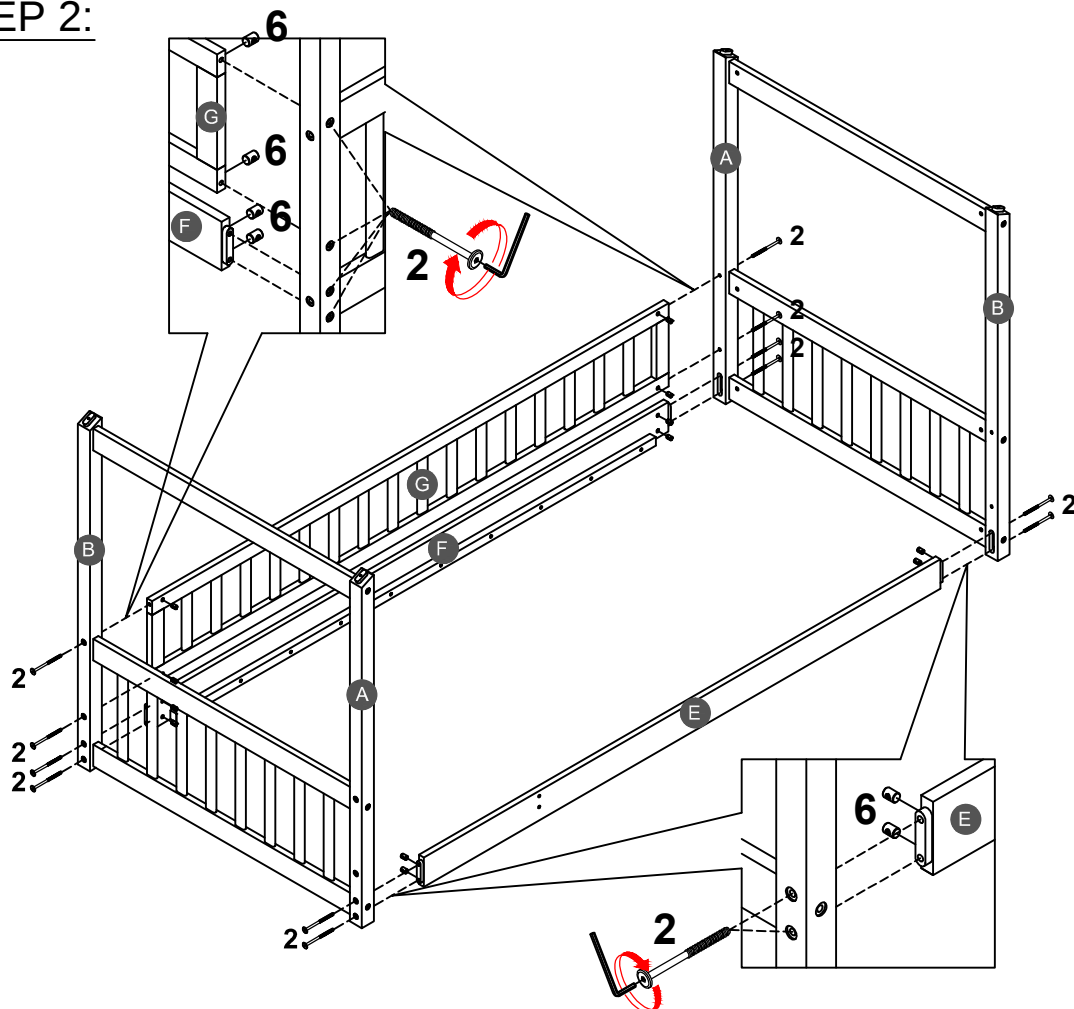
STEP 2:




2	
12PCS	
6	
12PCS	

STEP 3:


2		3		4		6	
2PCS		2PCS		2PCS		4PCS	

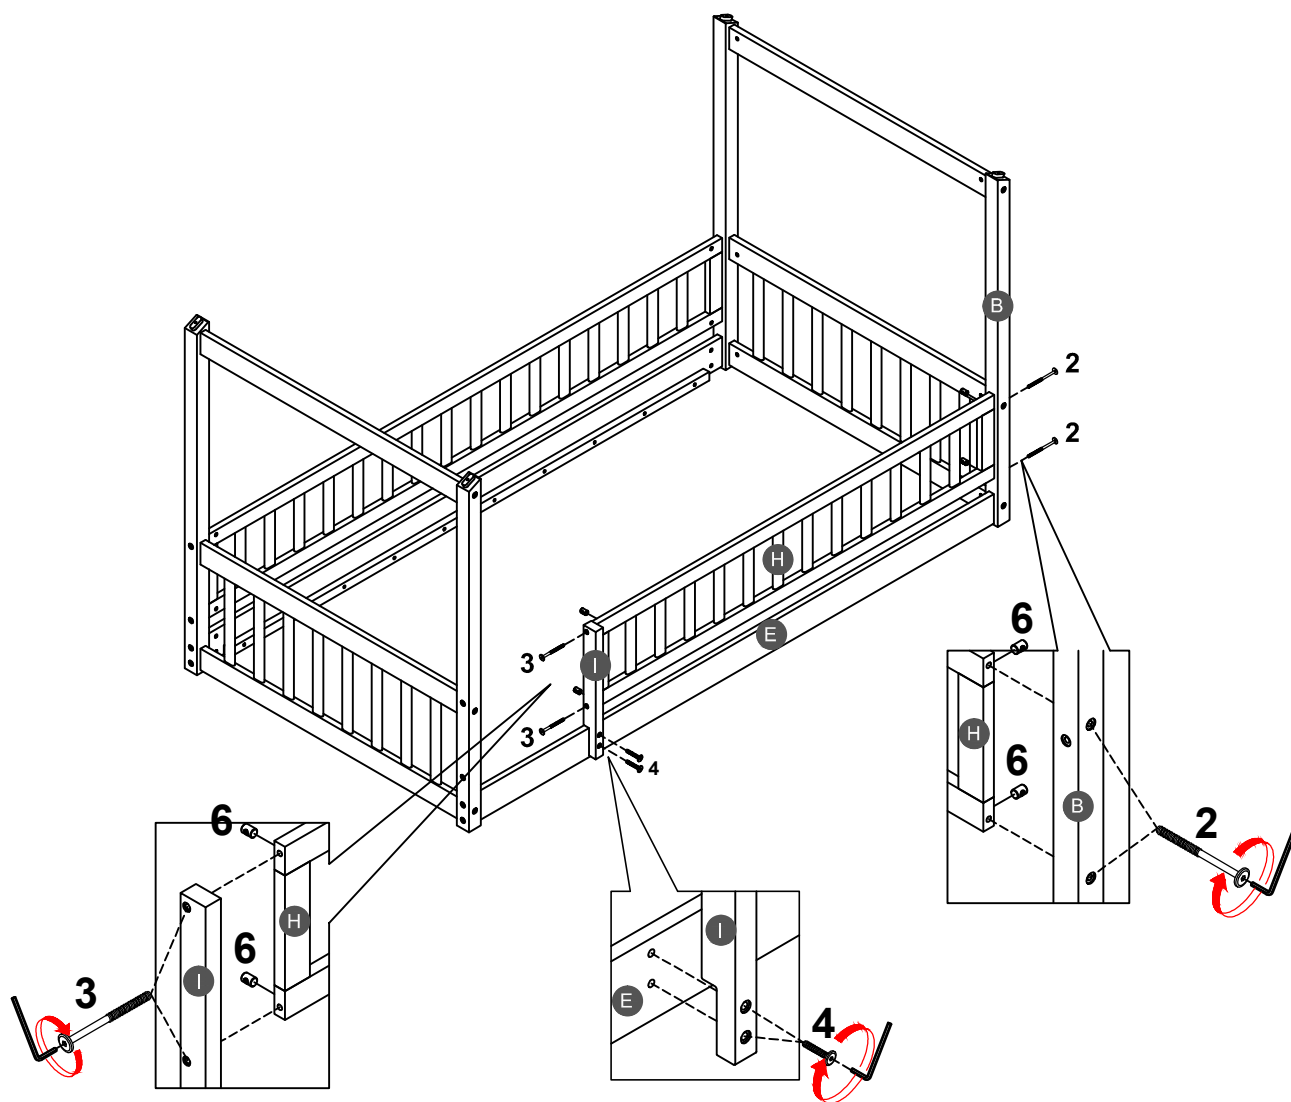


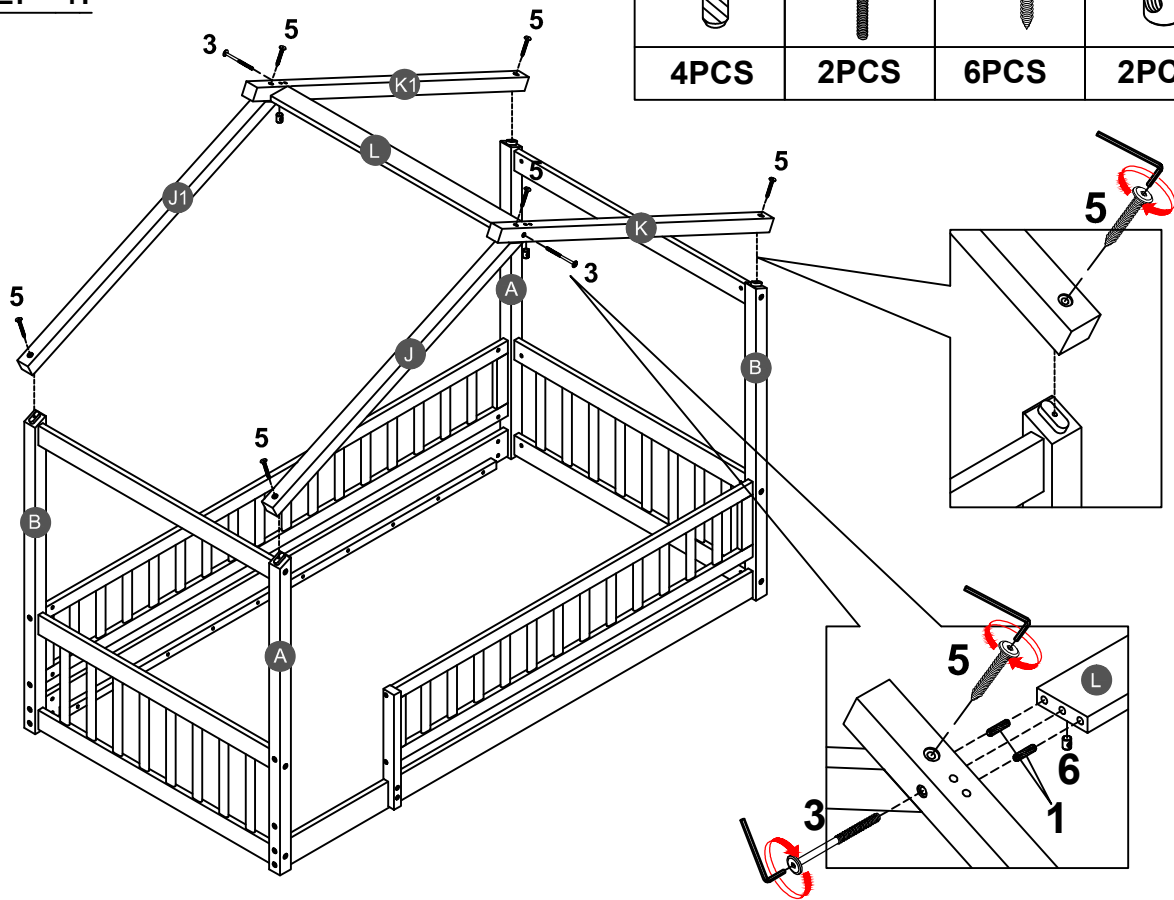
STEP 4:



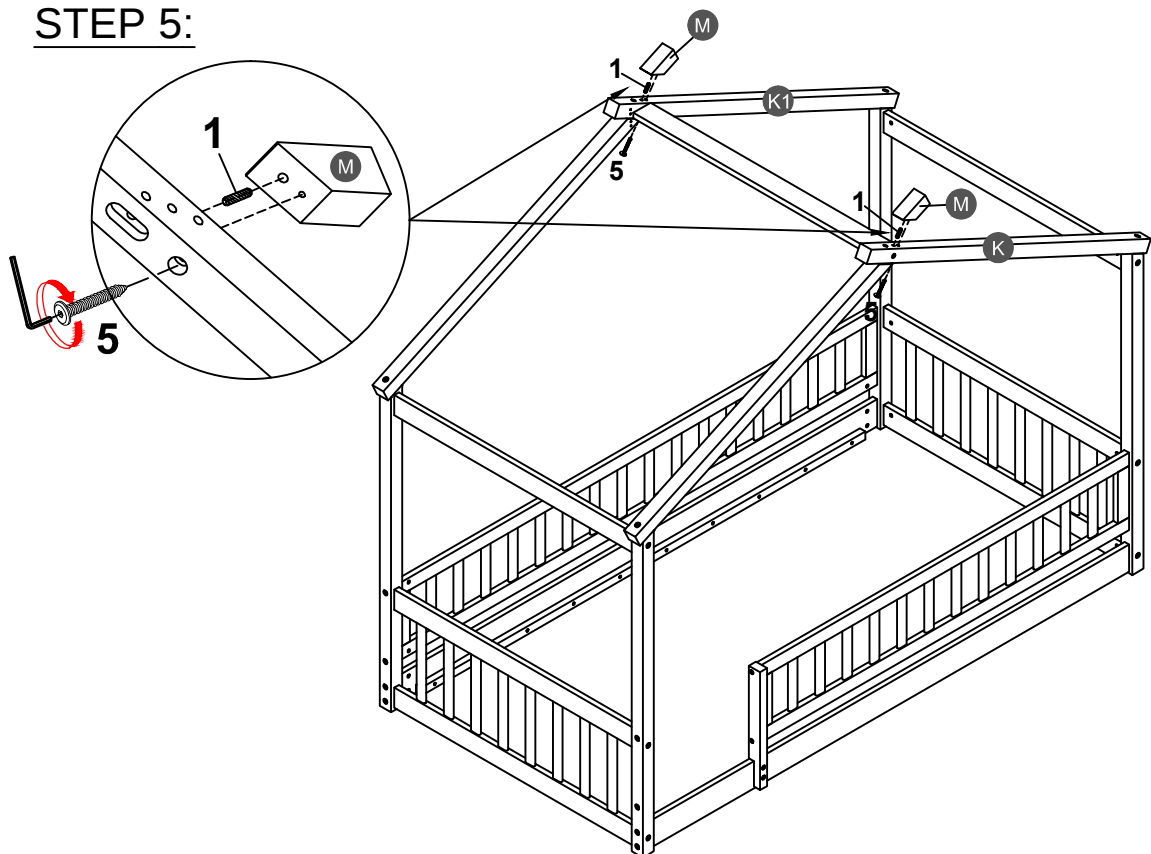STEP 5:



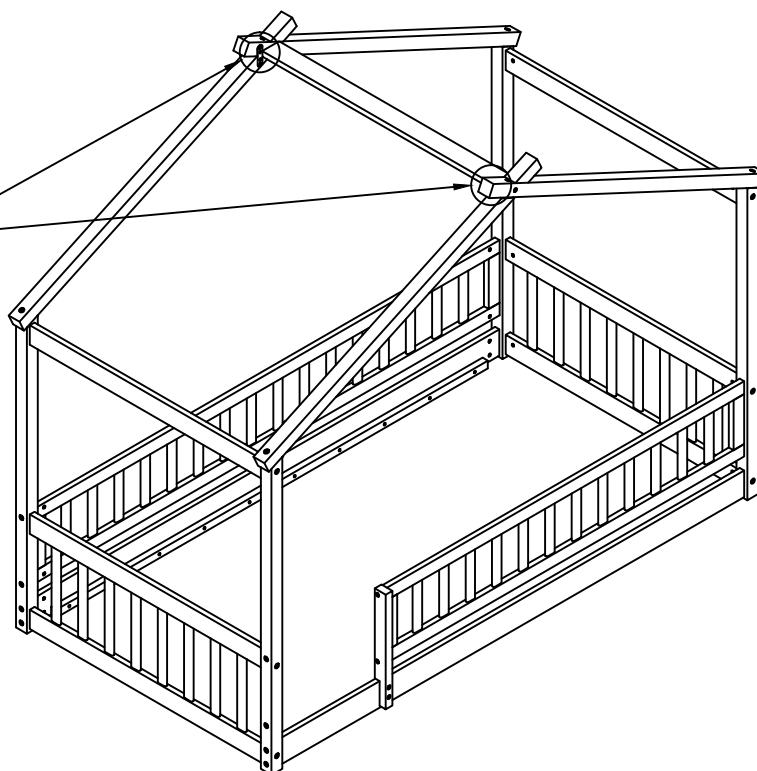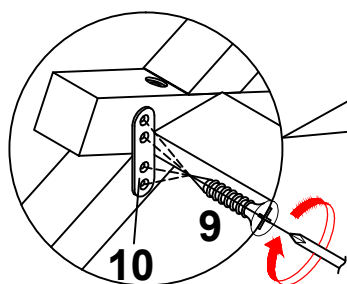STEP 6:



9



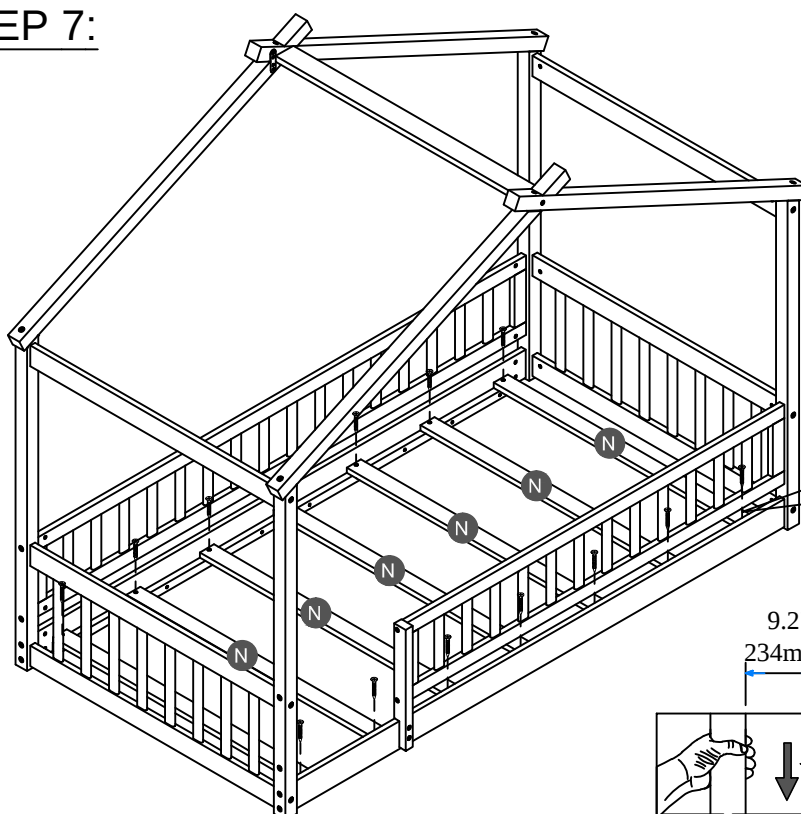
8PCS

10



2PCS



STEP 7:



8



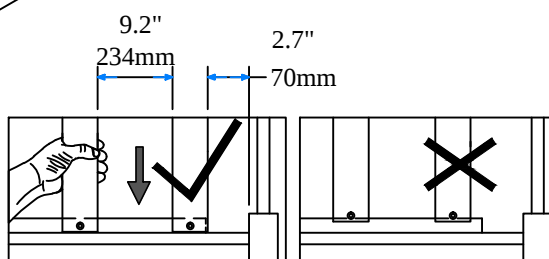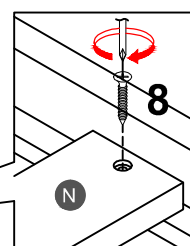14PCS



Note: Do not lock the screws of the bed slats to the outermost edge of the bed slats, you need to leave a certain space at the edges, otherwise it will cause the board to break. Do not lock the bed slats on the edge of the wood, please hold firmly before screwing, hold it in place with one hand, then lock the screw.