


Tribesigns

LITTLE TREE

Assembly Instructions

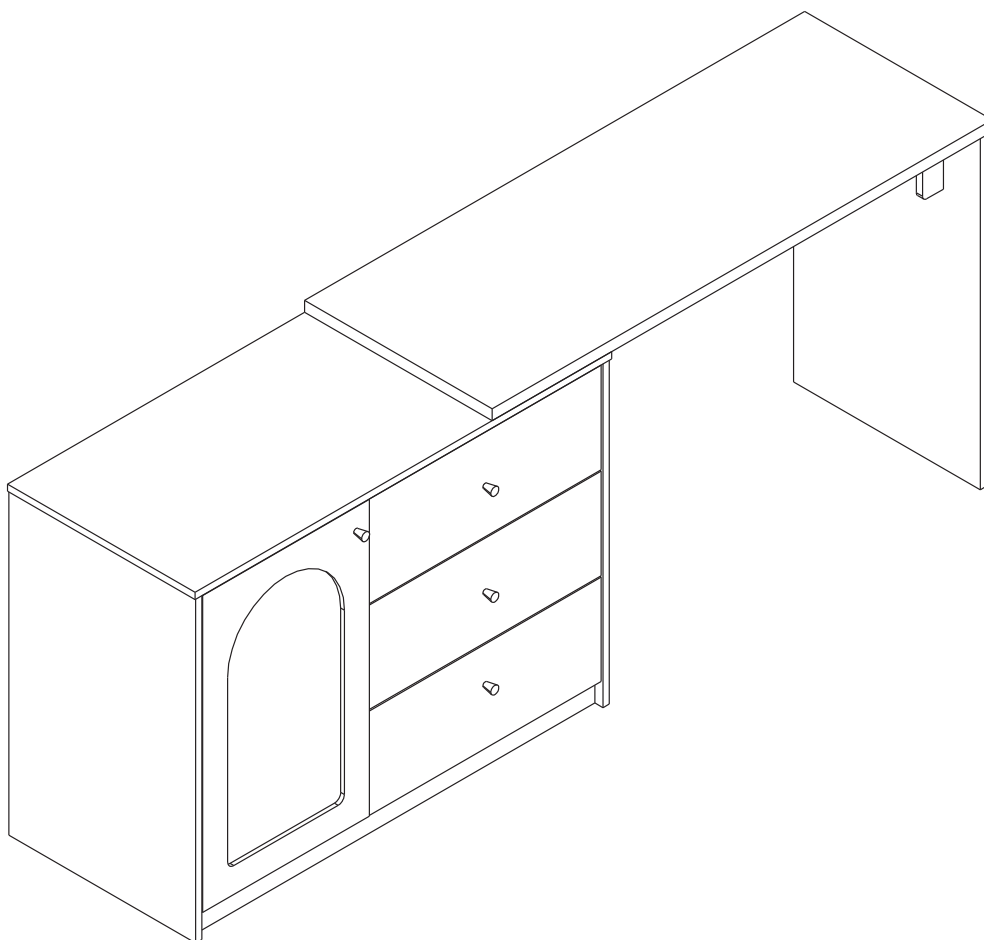

Model No. HOGA-YS0181

Multifunctional Computer Desk

Call us!

We're here to help!

If you have any issues with this product, please contact our customer service team **before returning** it.



We want you to be completely satisfied with your purchase! If anything is missing, damaged, incorrect, or not what you expected, don't worry. Please keep the outer packaging and take photos of both the packaging and products, and then reach out to us at **support@tribesigns.com** or call us at **1-424-220-6888**. We'll take care of everything and send you a free replacement, so you can enjoy your purchase as soon as possible without any hassle.

Assembly Instructions:

1. Carefully read these instructions and keep them for future reference.
2. Refer to the parts list for guidance and ensure that you have all the pieces before starting the assembly process, if anything is missing, damaged, incorrect, contact us **FIRSTLY BEFORE** assembling.
3. When assembling, place all parts on a soft, clean, and flat surface, such as a carpet, to prevent any scratches.
4. To avoid misalignment of the holes, Please don't full tighten the screws until you ensure all parts in place.

Follow Tribesign:



Facebook



Twitter




Pinterest





YouTube






Instagram

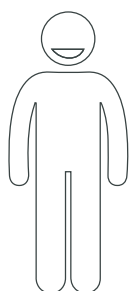


X2

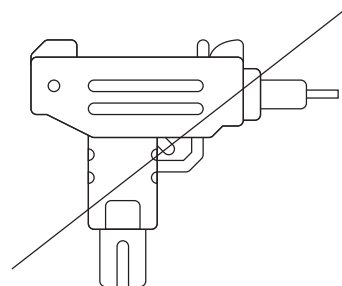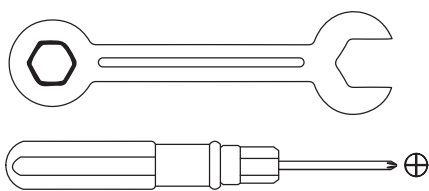






When using the electric screwdriver ,
Reduce the power and torque to avoid damaging the furniture

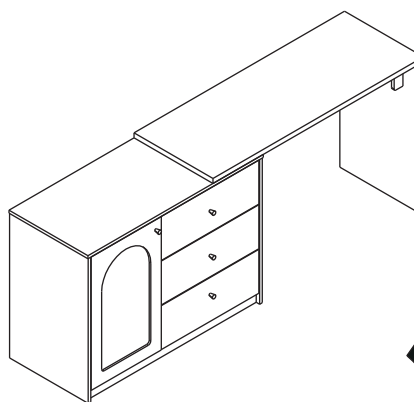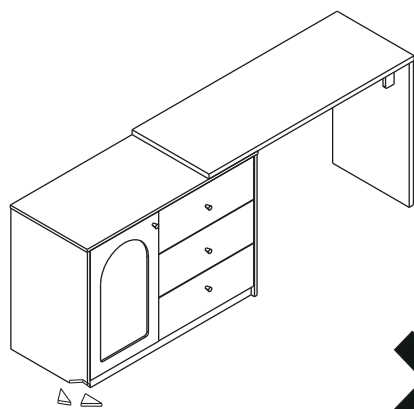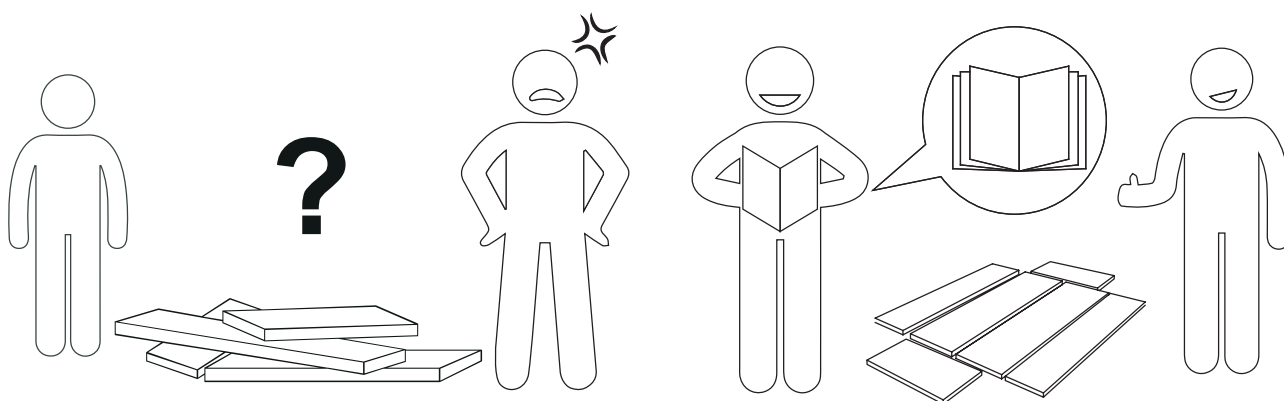

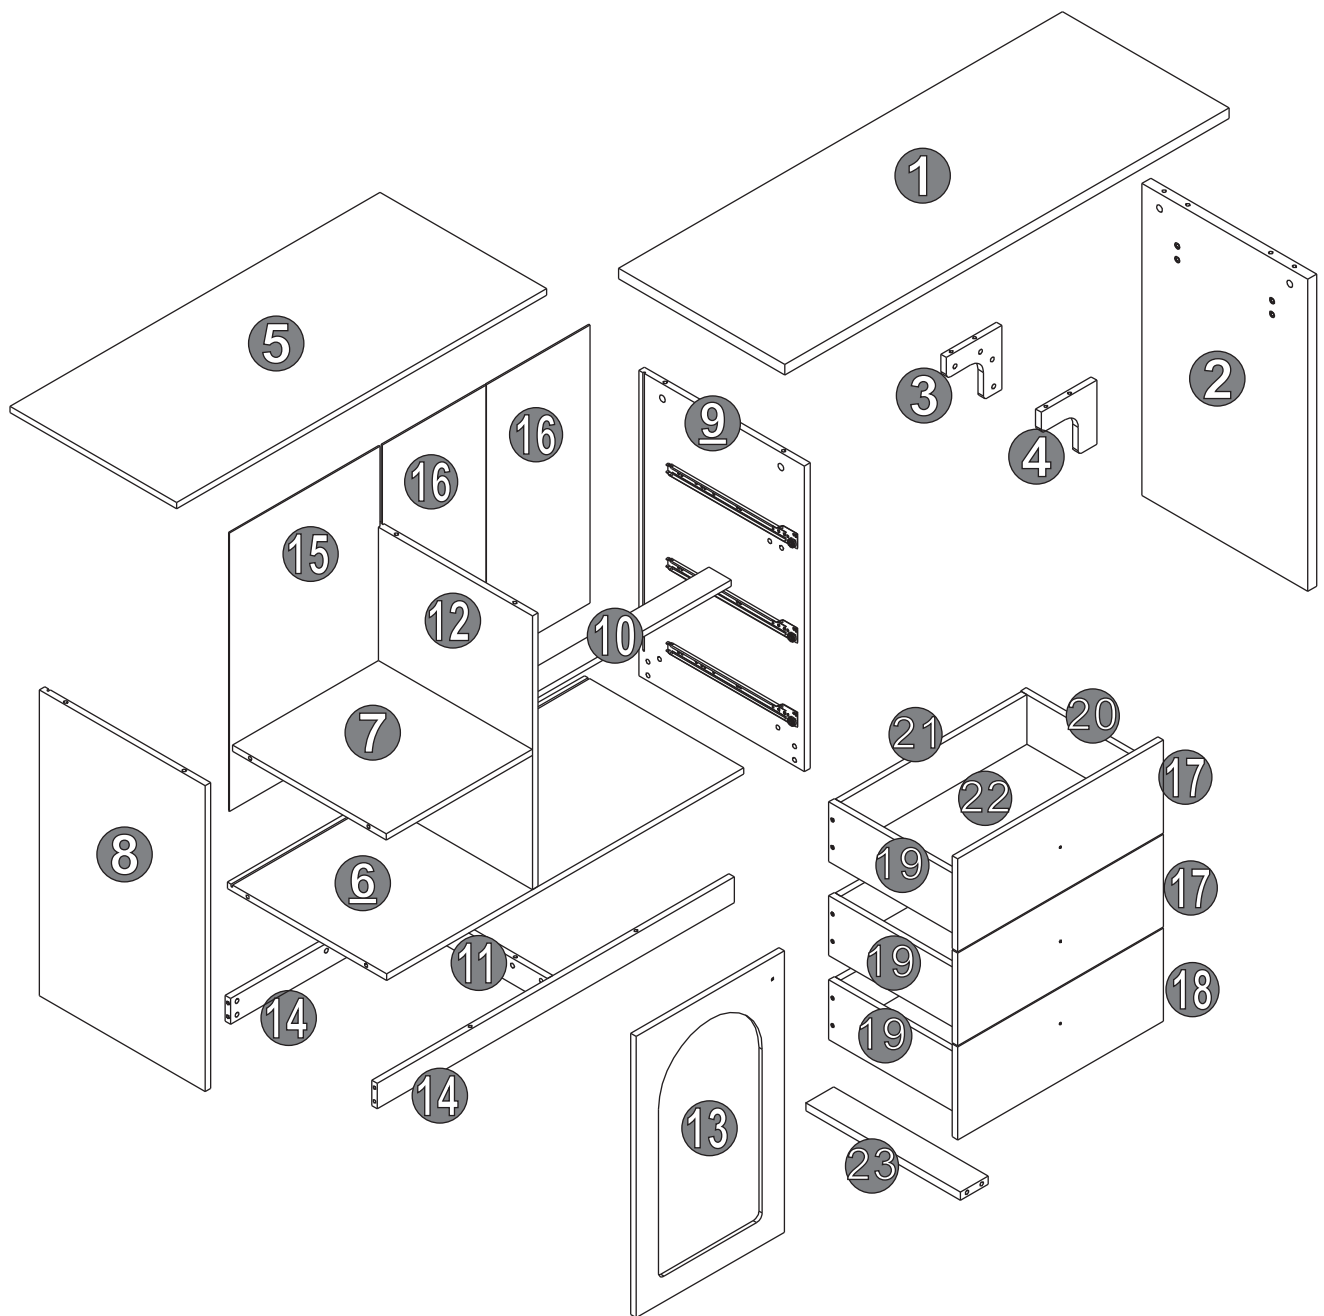**⚠ Caution**

Make sure all parts are included. Most board parts are labeled or stamped on the raw edge. Contact us for free replacement if having damaged or missing parts.

Parts & Hardware List


					
1 1pc	2 1pc	3 1pc	4 1pc	5 1pc	6 1pc
					
7 1pc	8 1pc	9 1pc	10 1pc	11 1pc	12 1pc
					
13 1pc	14 2pc	15 1pc	16 2pc	17 2pcs	18 1pc
					
19 3pc	20 3pc	21 3pc	22 3pc	23 3pc	24 3pc
					
25 1pc					

Hardware List



 M6X40MM	 M4X35MM	 M6X40MM	 M6X25MM		 Ø6X30MM	 M3.5X14MM
A	B	C	D	E	F	G
2PCS	12PCS	36PCS	34PCS	36PCS	2PCS	60PCS
 M4X18MM			 Ø25X12MM	 Ø19X23MM		
H	I	J	K	L	M	
4PCS	12PCS	2PCS	3PCS	4PCS	1PCS	

Installation of Cams and Pins



Screw the pin into the hole. To set the cams correctly, ensure that the arrow on the cam is opening to the hole of the pin it is locking. Lock the cam by turning the cam head with a screwdriver until it is tightened. Please do not use an electric screwdriver to assemble the unit.

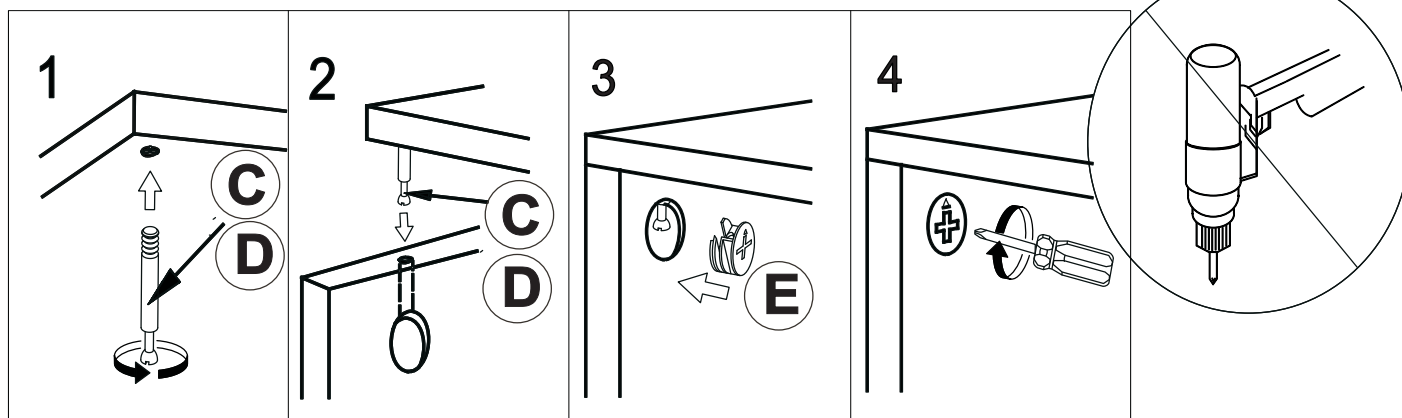


Read each step carefully before starting. It is very important that each step of instruction is performed in the correct order. If these steps are not followed in sequence, assembly difficulties will occur.

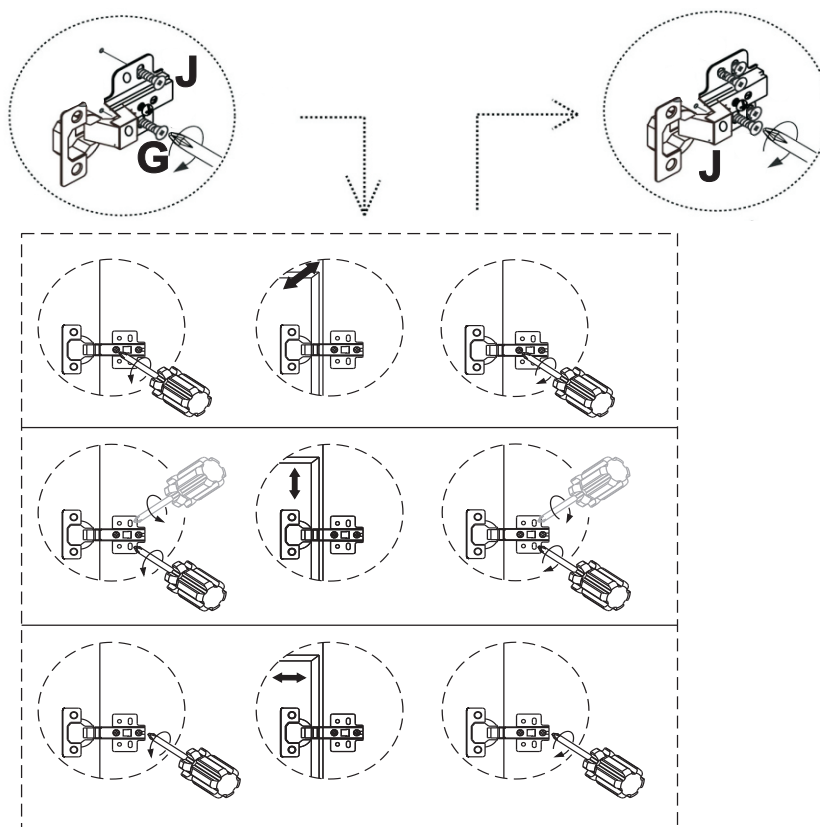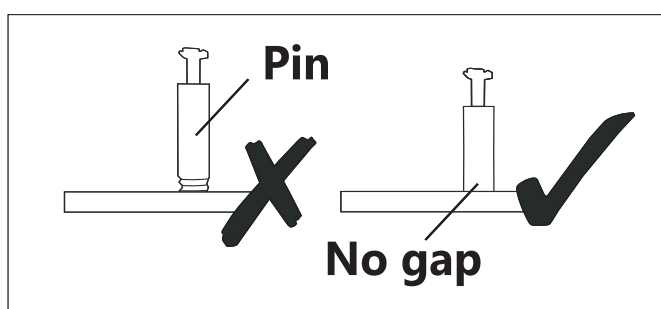




1

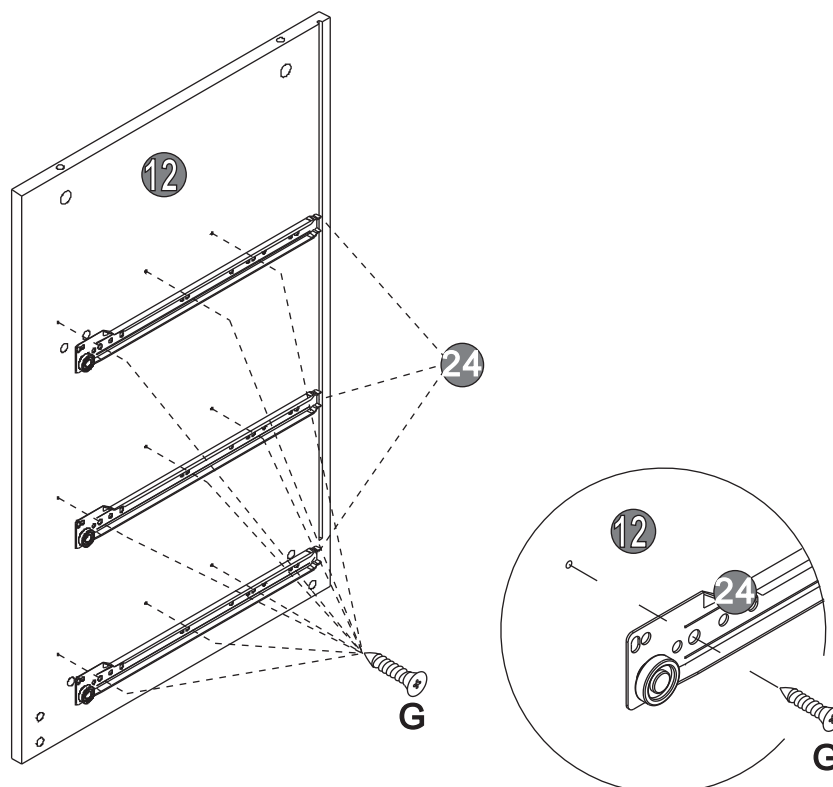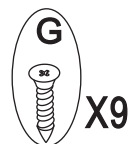




2


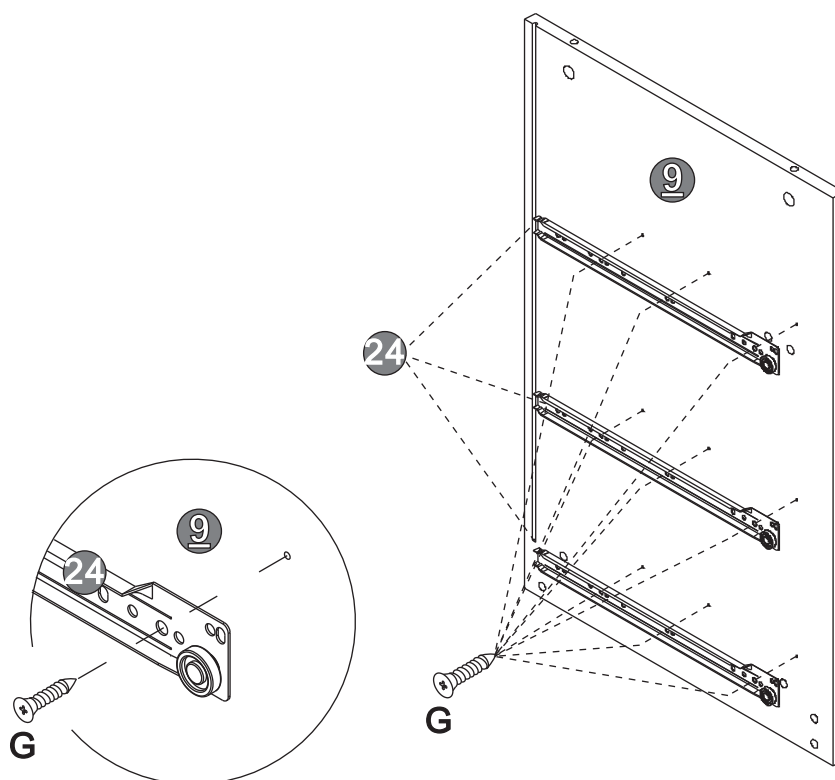


3

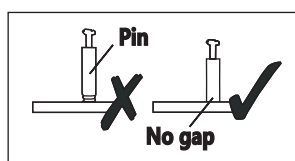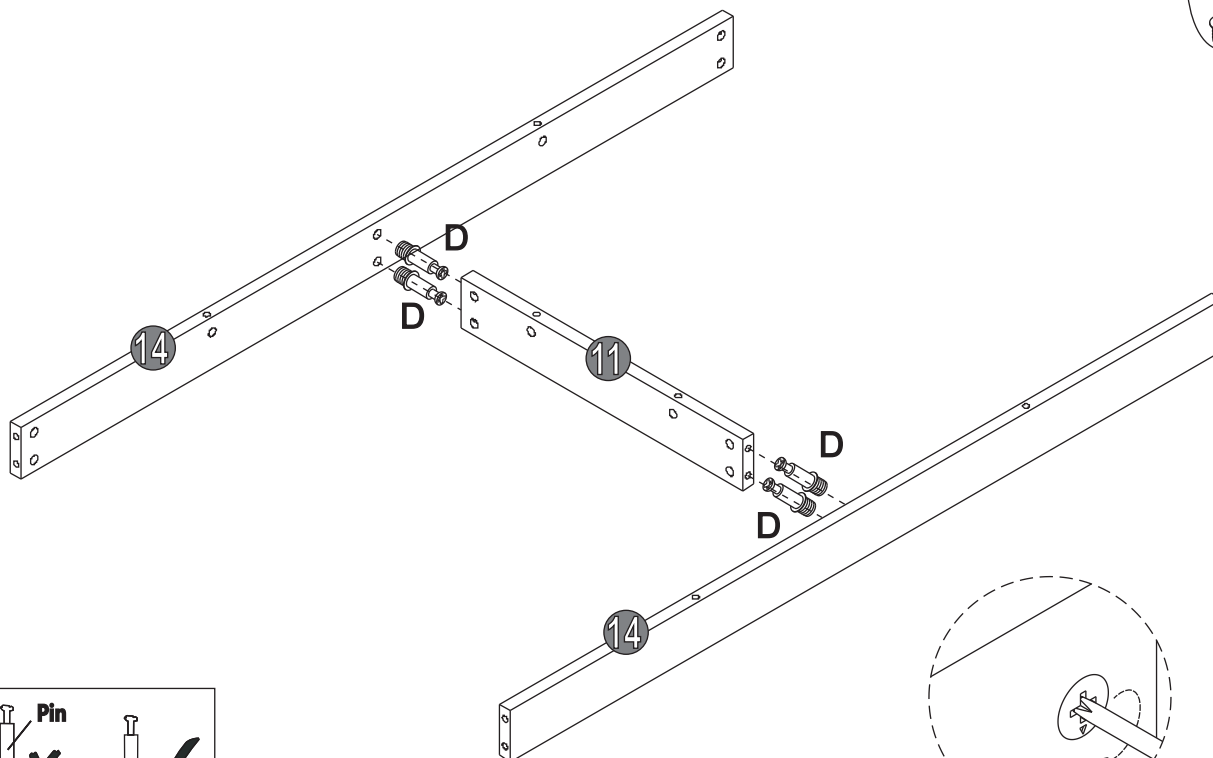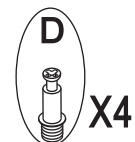

4

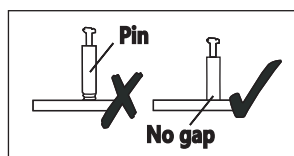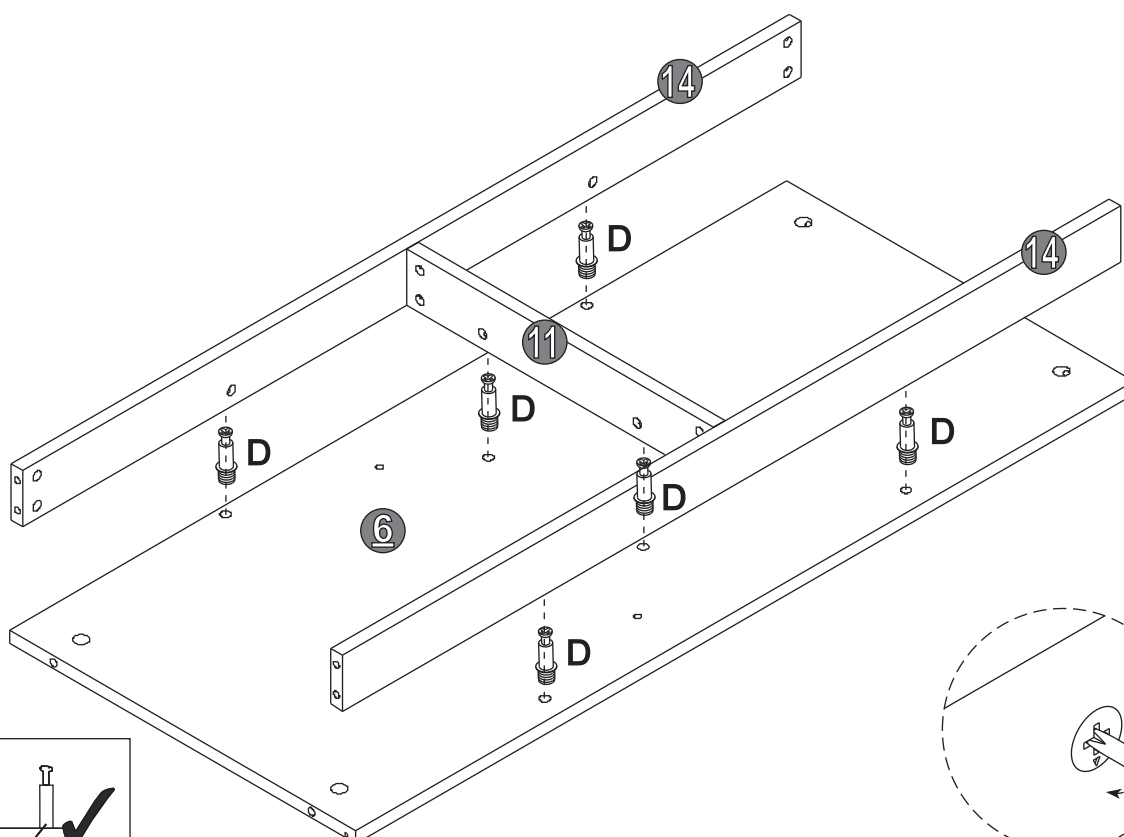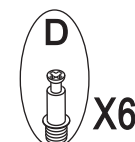

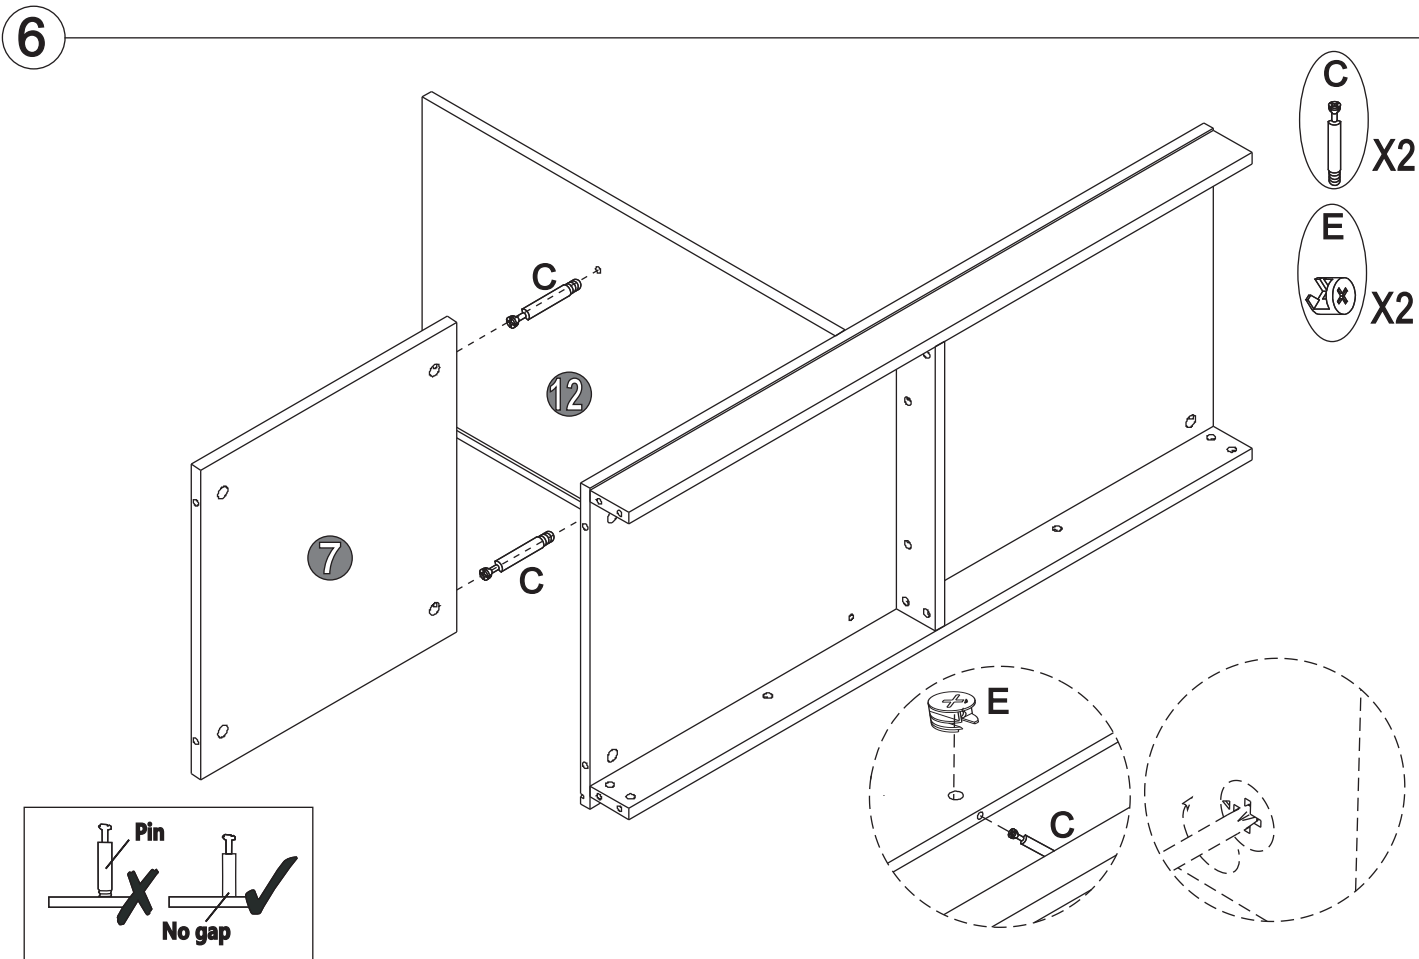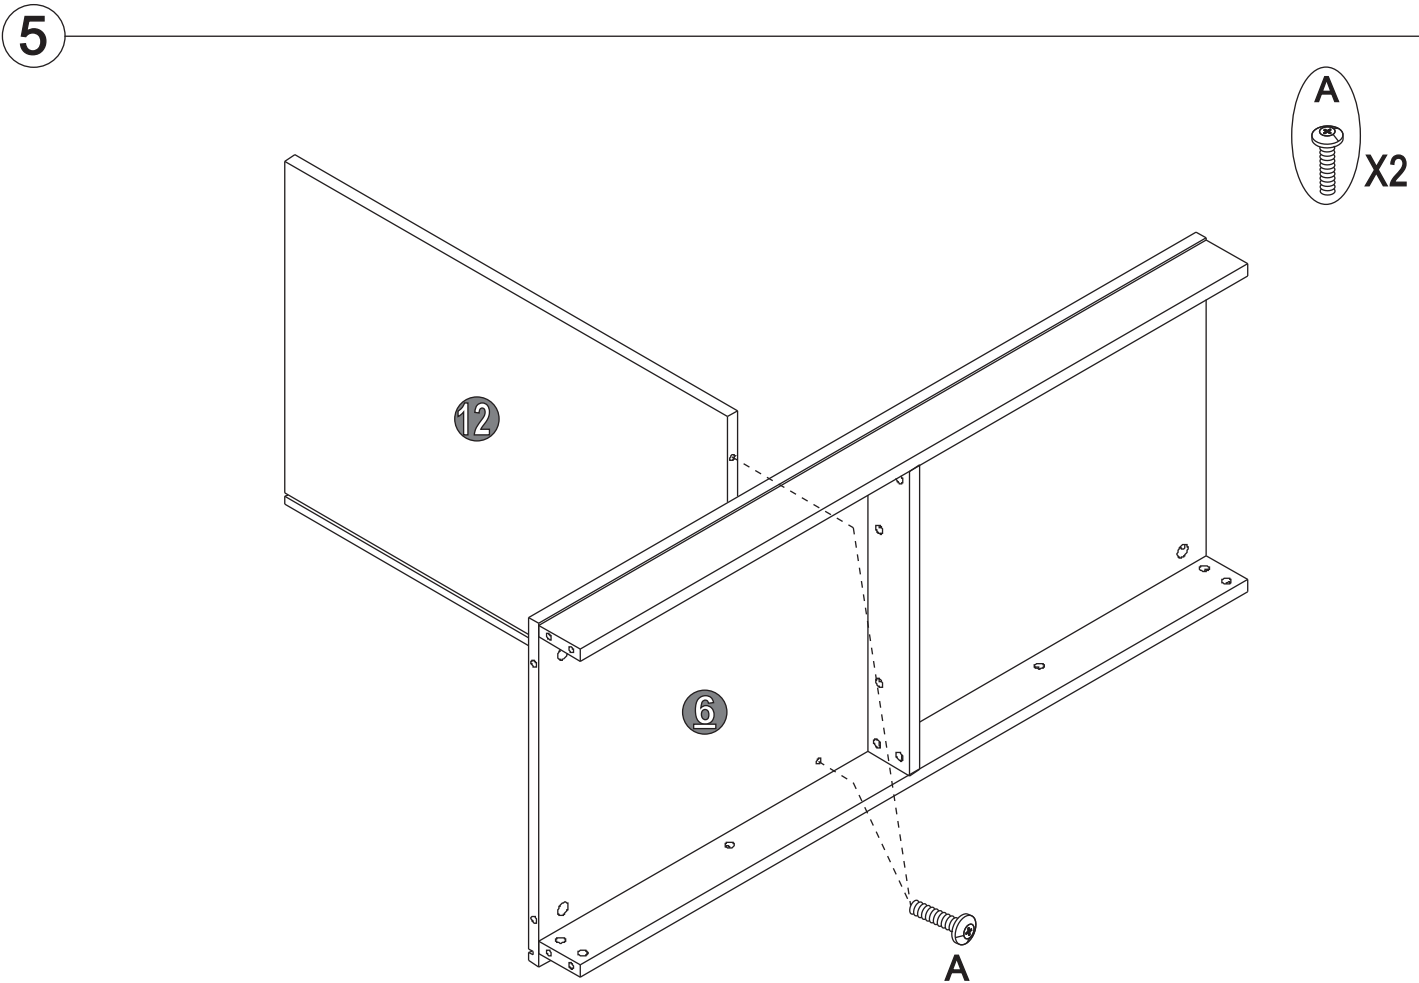

7



A diagram showing a rectangular panel (labeled 8) being attached to a side rail. Four pins, labeled C, are shown being inserted into the rail to secure it to the panel. Dashed lines indicate the alignment of the rail with the panel's edges. A callout shows a pin C with the quantity X4.

A small inset diagram showing two ways to insert a pin into a rail. The first way, marked with a large 'X', shows the pin being inserted at an angle, creating a gap. The second way, marked with a checkmark, shows the pin being inserted straight in, ensuring there is 'No gap'.

8



A diagram showing the same rectangular panel (labeled 8) with a bottom rail being attached. Four pins, labeled D, are shown being inserted into the rail to secure it to the panel. Dashed lines indicate the alignment of the rail with the panel's edges. A callout shows a pin D with the quantity X4.

A small inset diagram showing two ways to insert a pin into a rail. The first way, marked with a large 'X', shows the pin being inserted at an angle, creating a gap. The second way, marked with a checkmark, shows the pin being inserted straight in, ensuring there is 'No gap'.

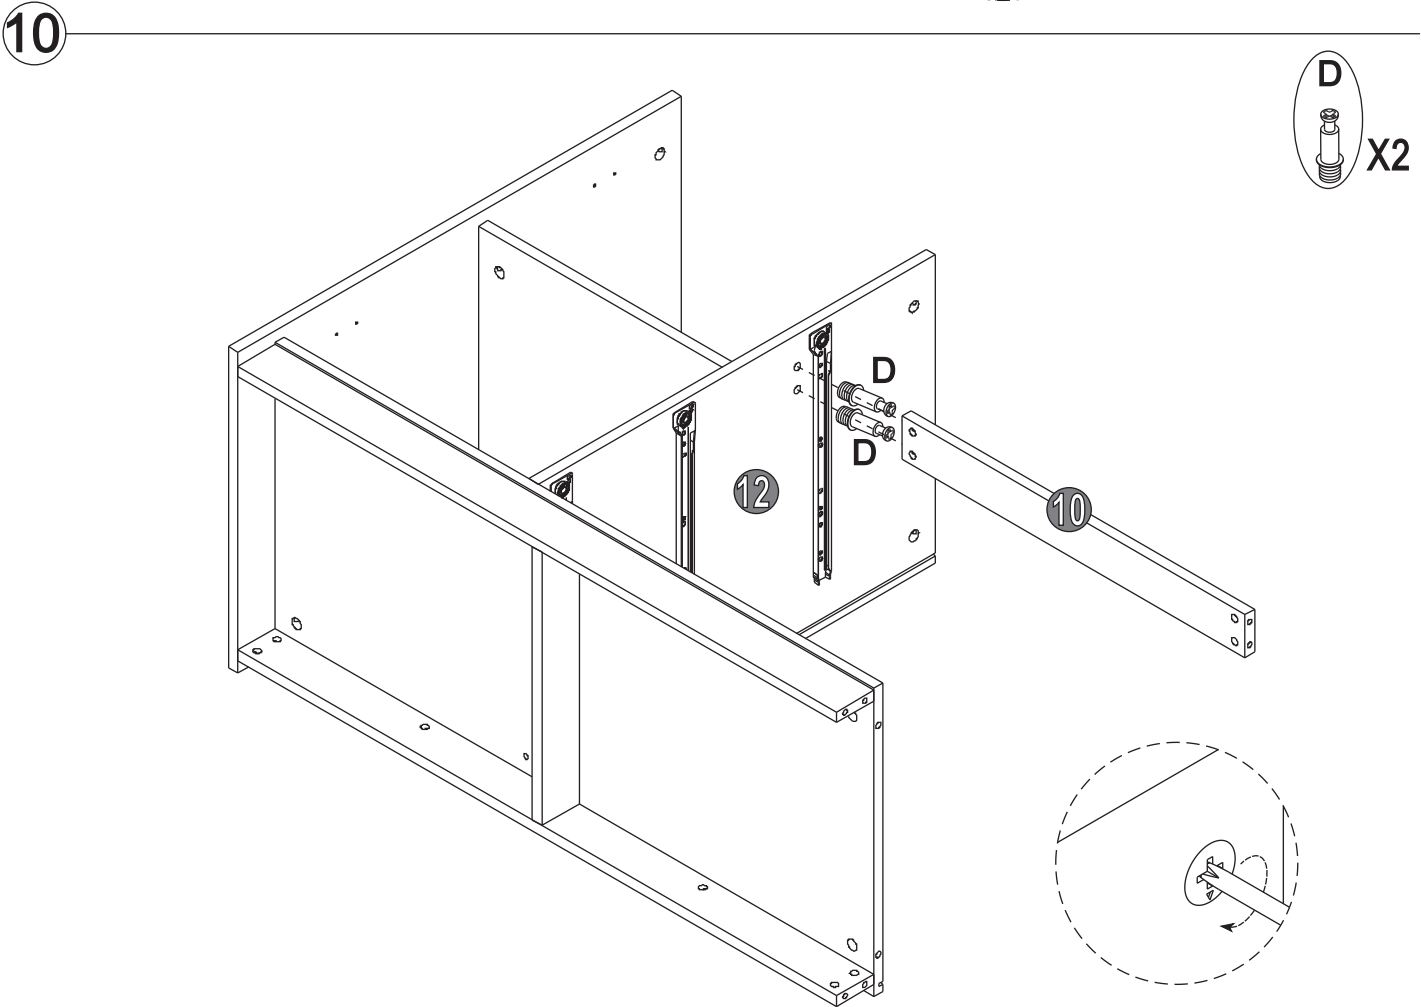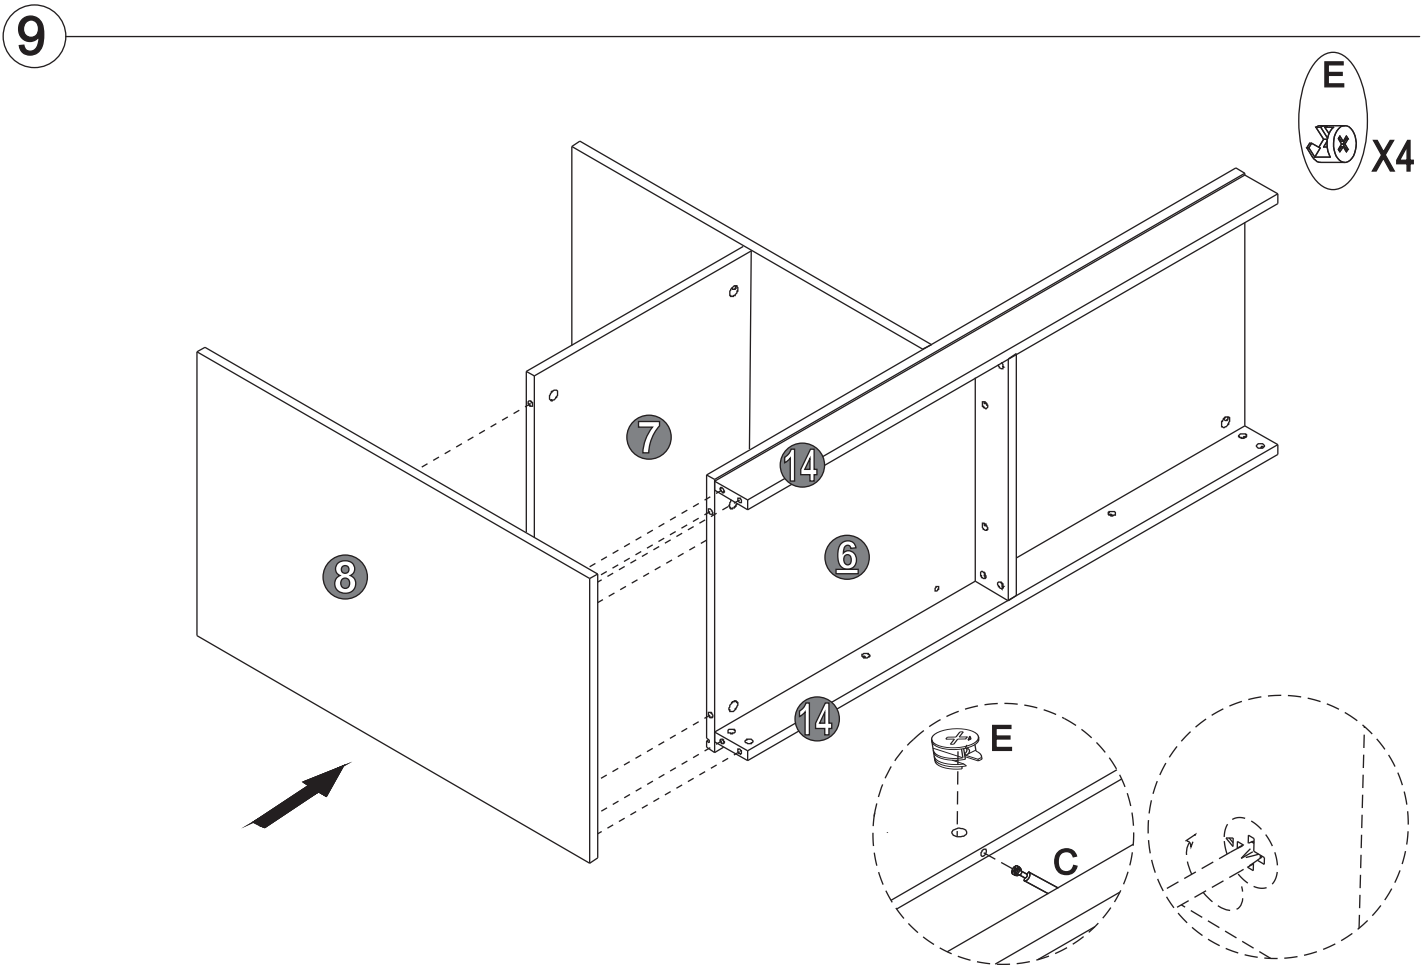



11

C X2

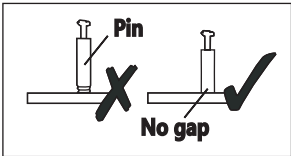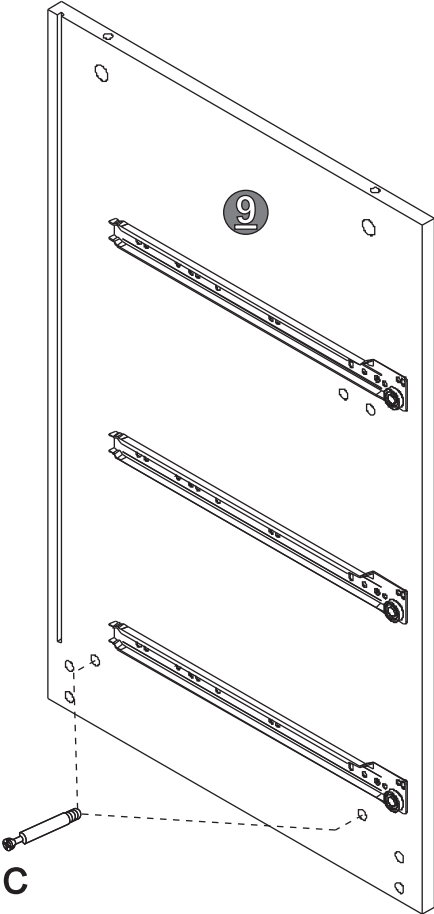


12


D X6

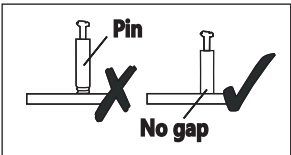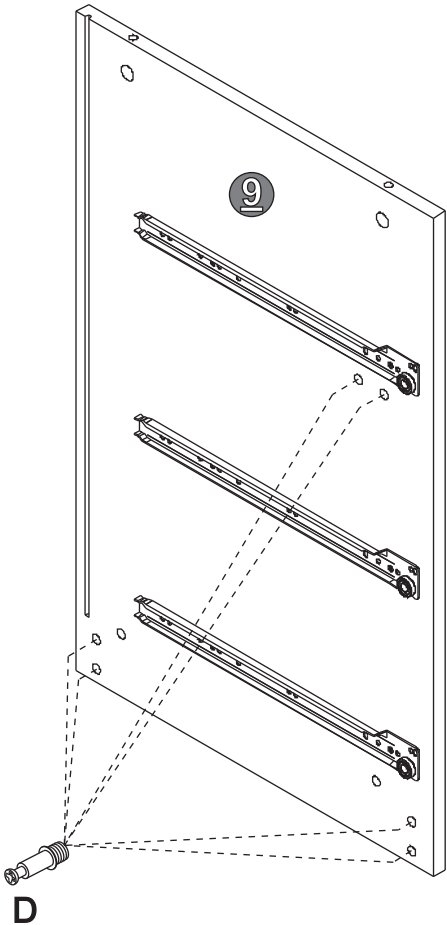


13

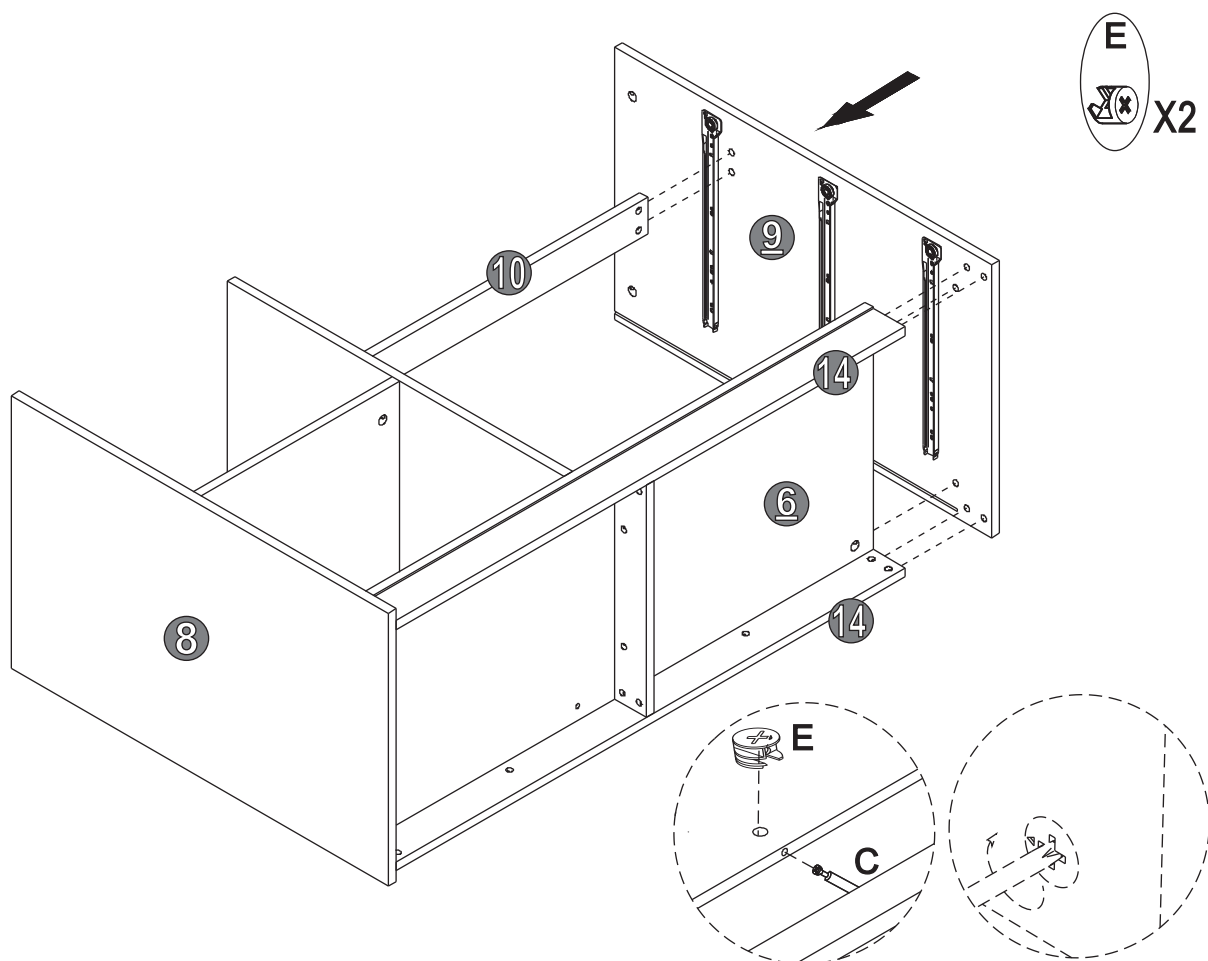


14

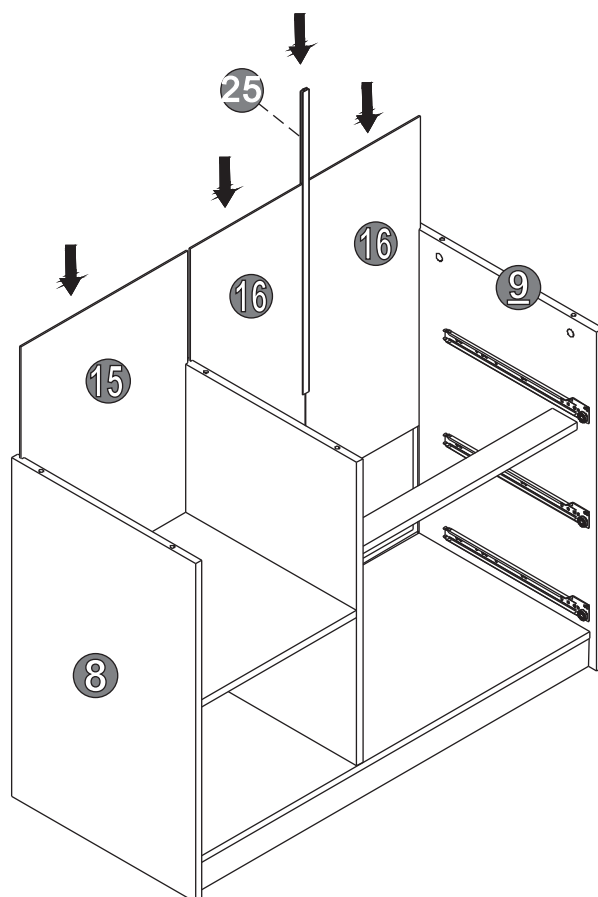


15

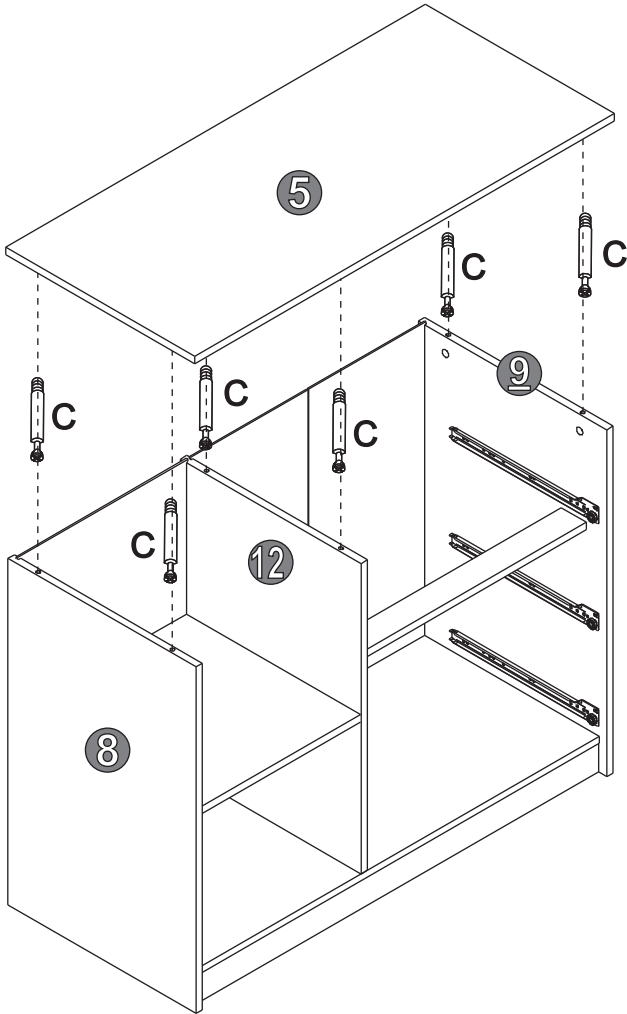

E X6 C X6

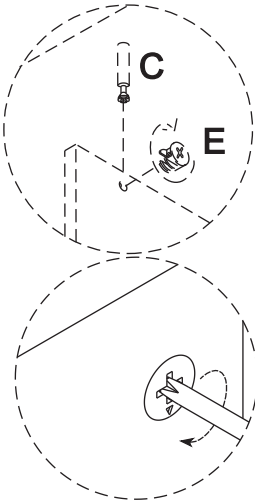


16



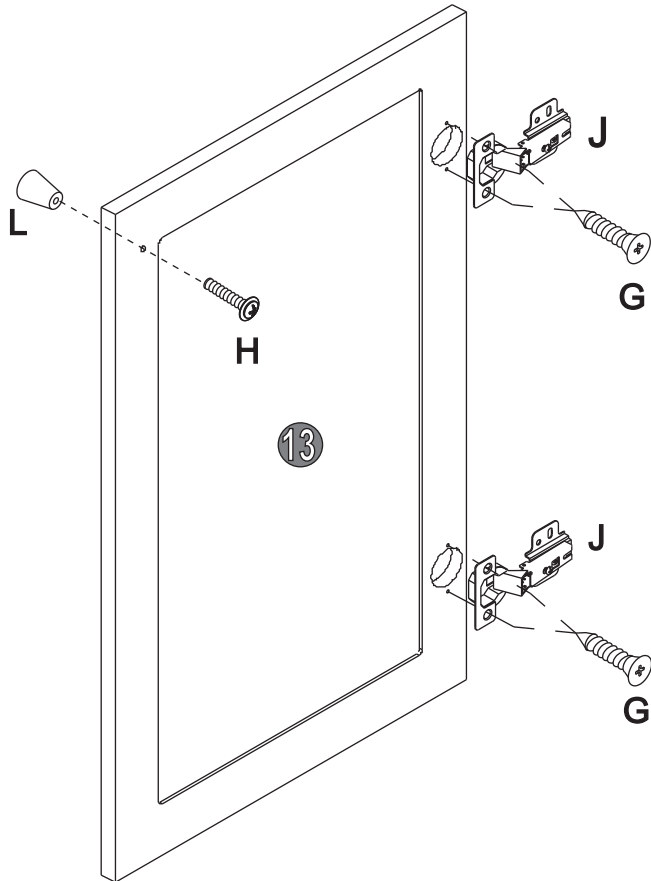


H X1 G X4

17

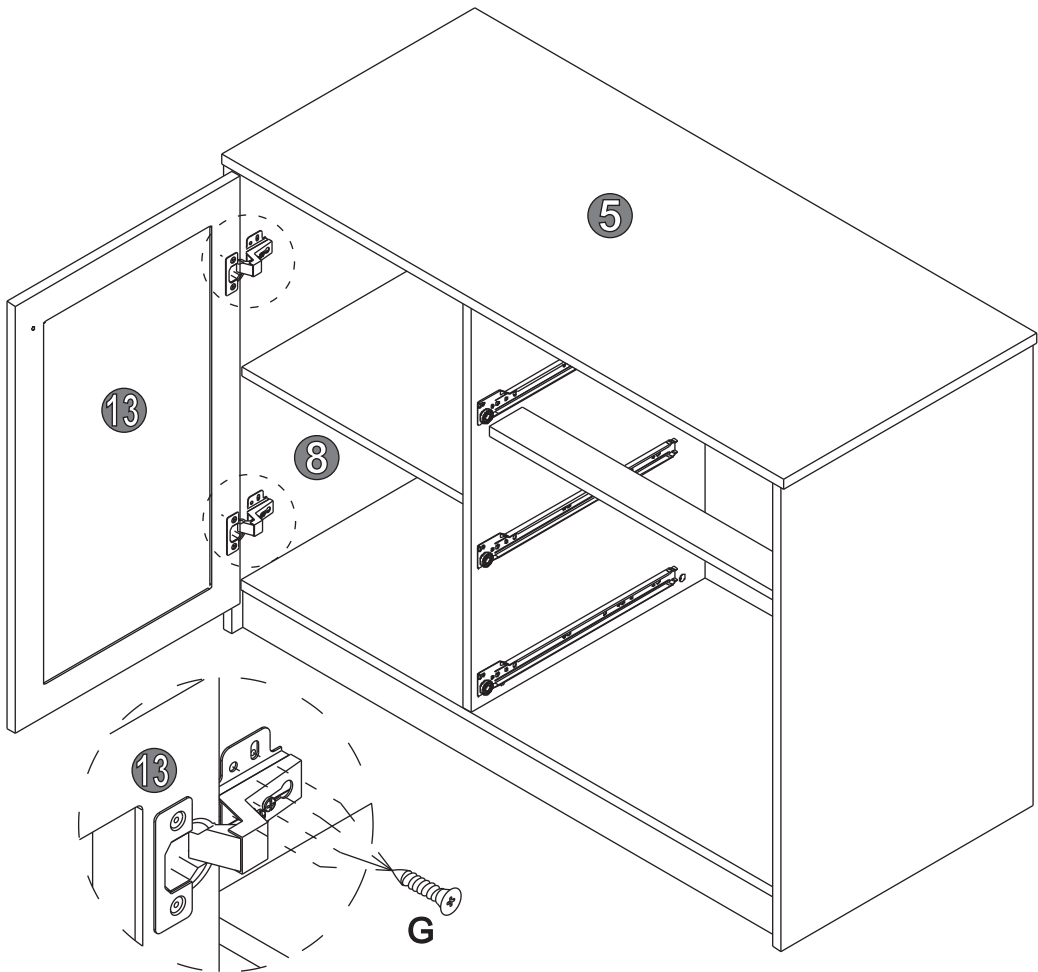

18

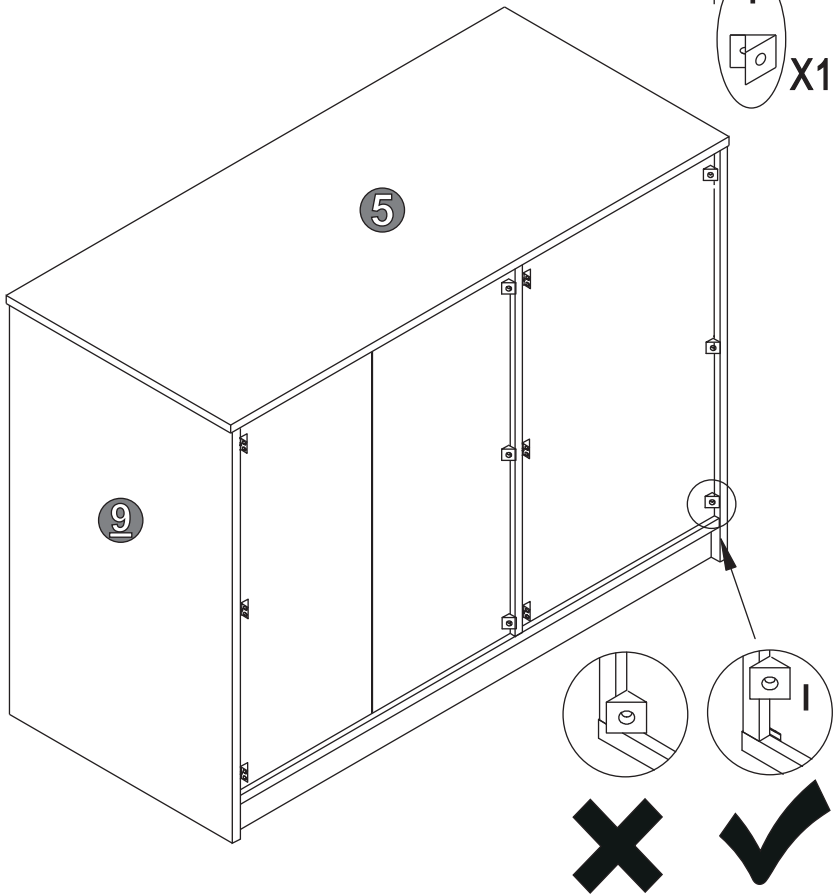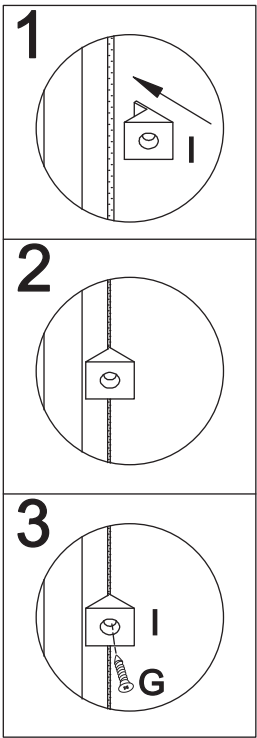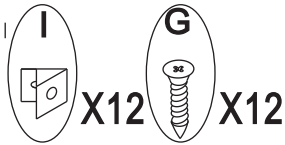

19



- E



X4
- C



X4

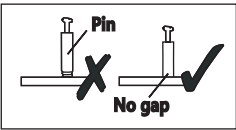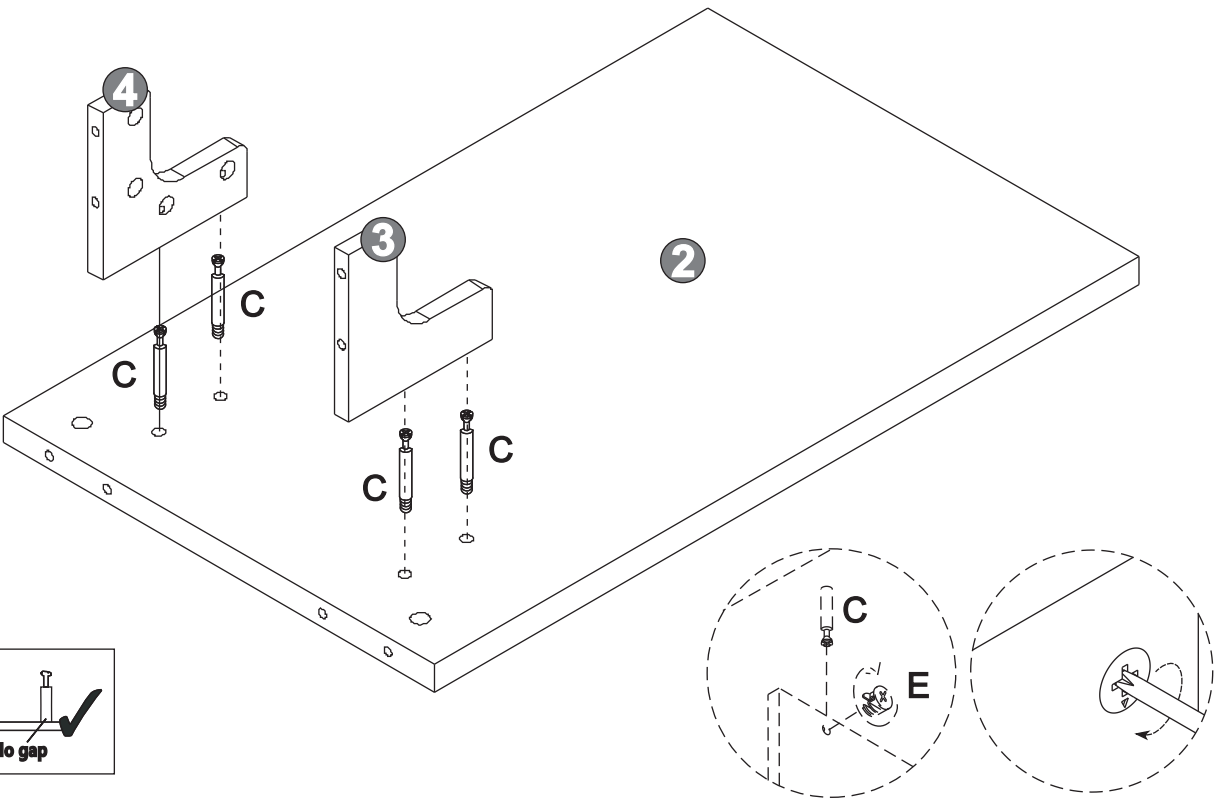

20

- E



X6
- F





X2
- C





X6
- K




X3

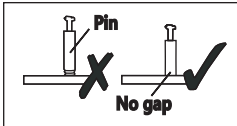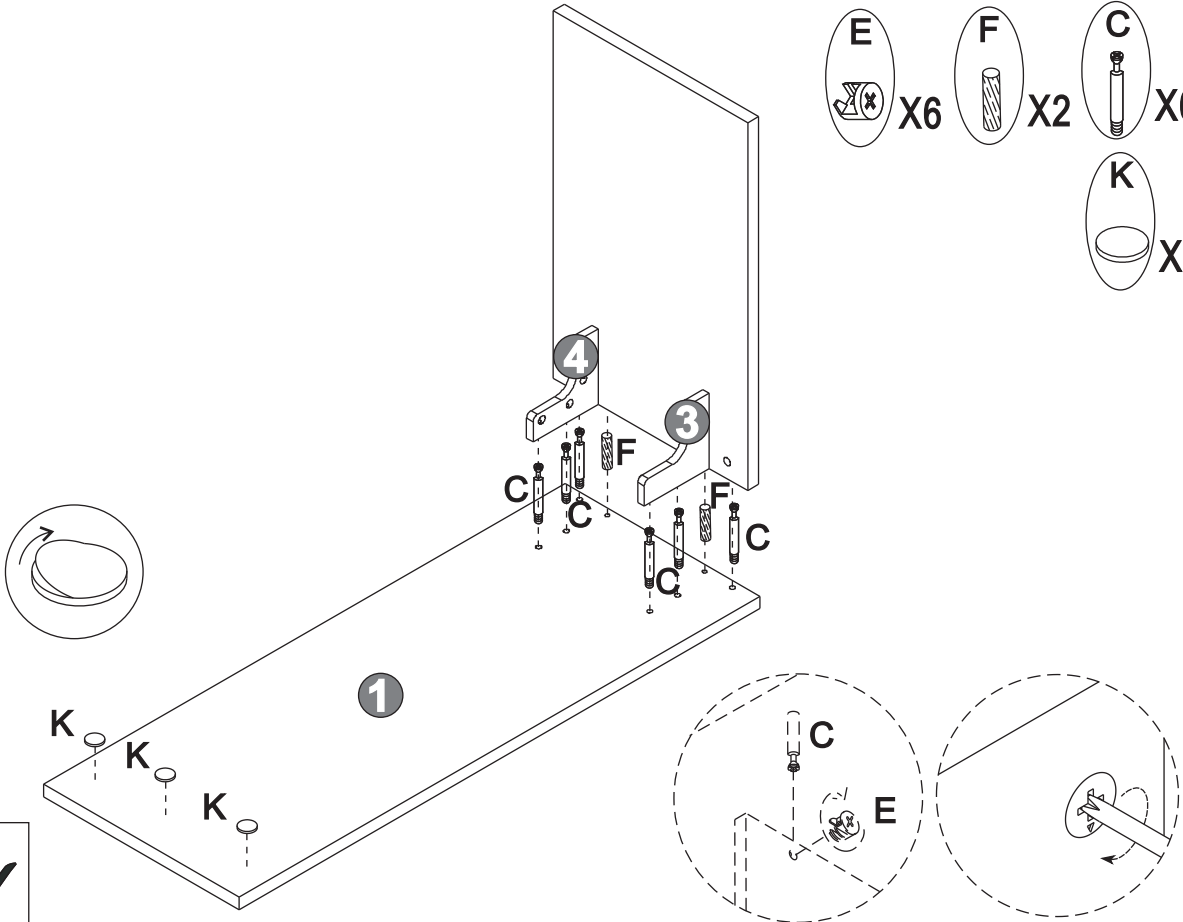

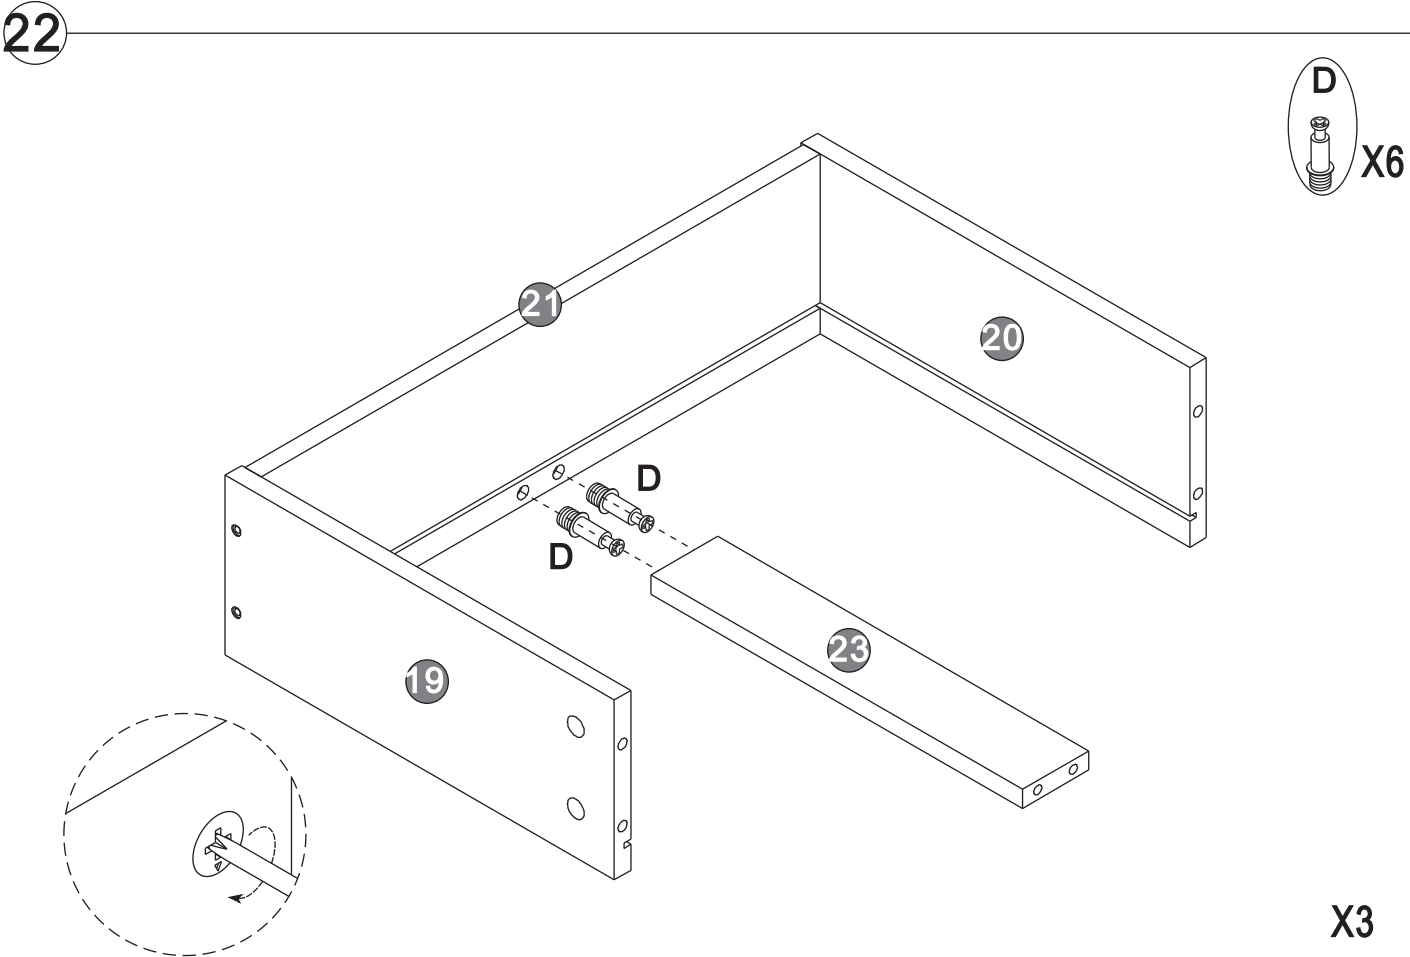
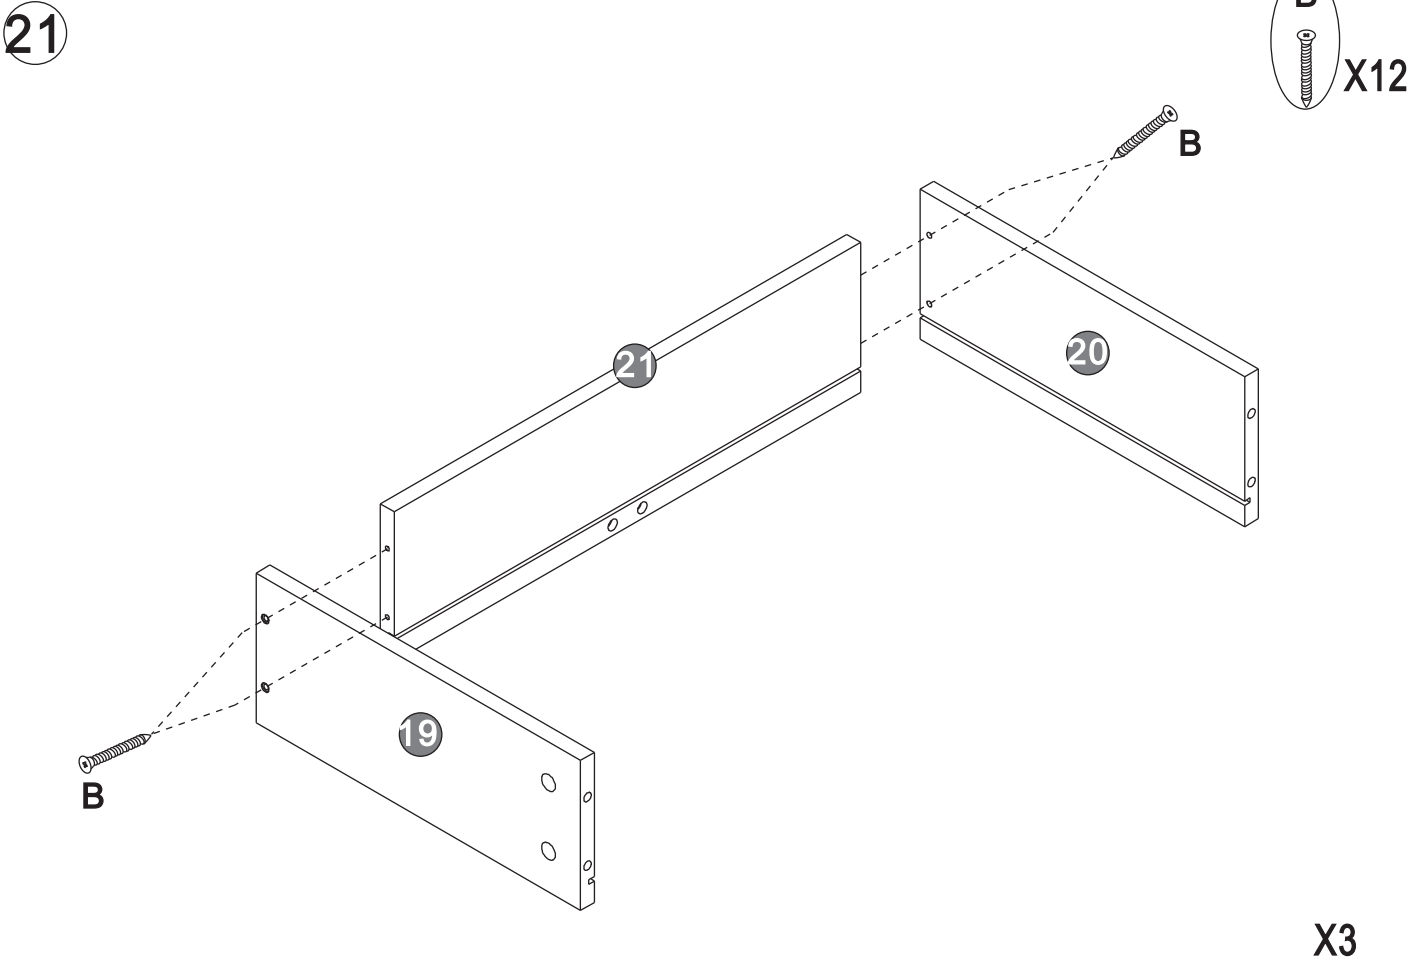


23

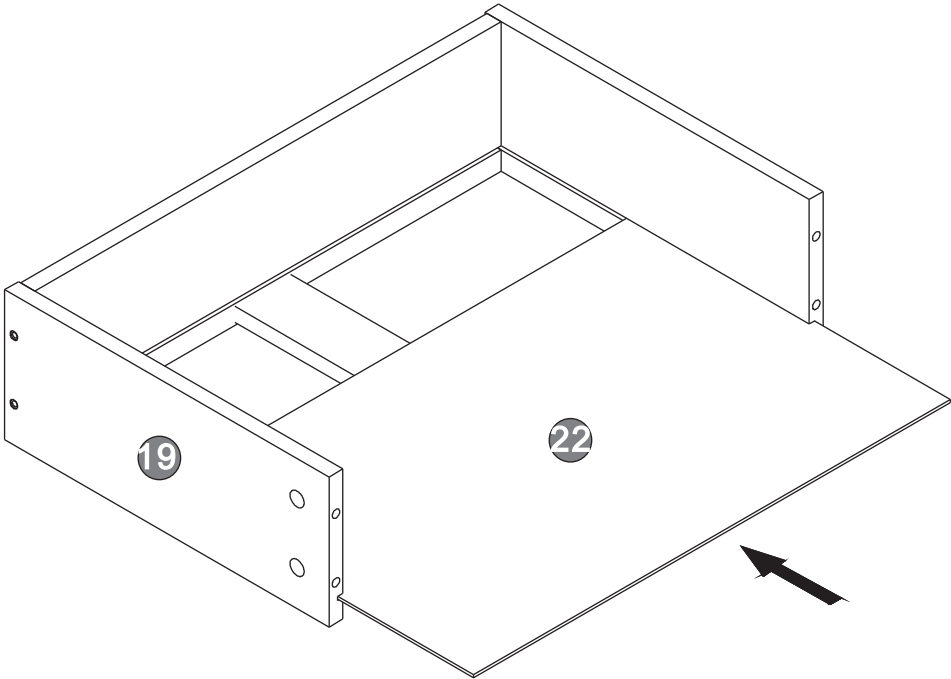


X3


24

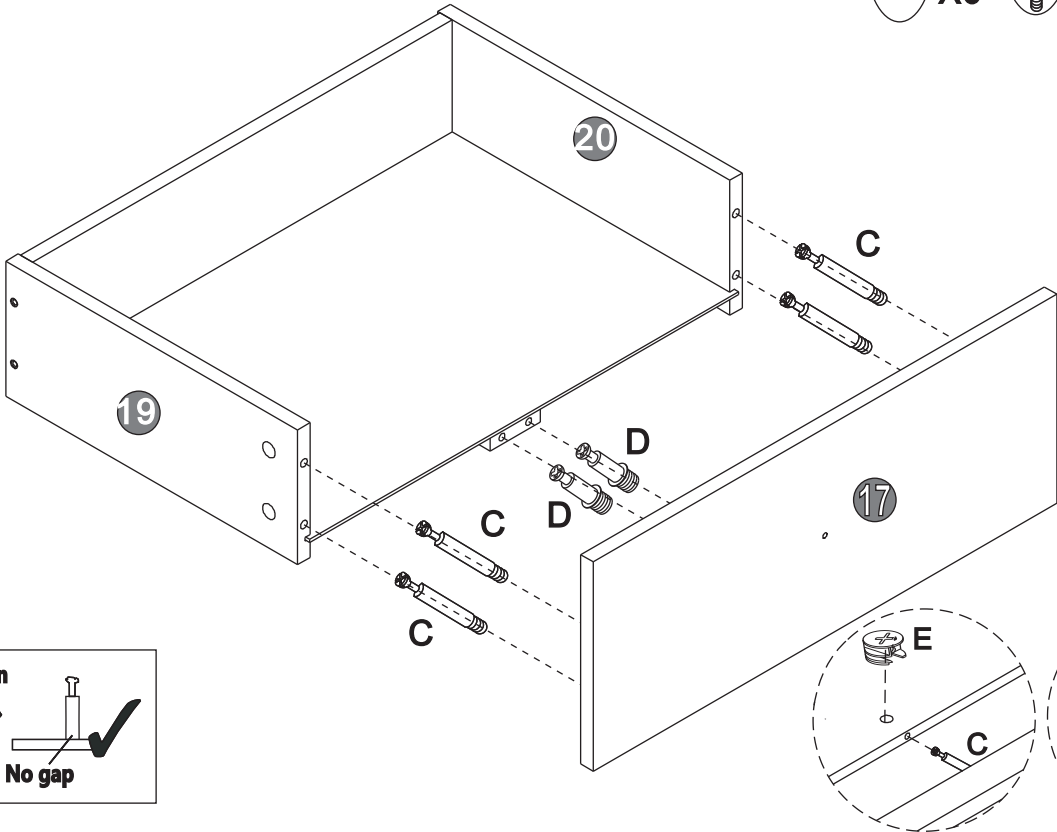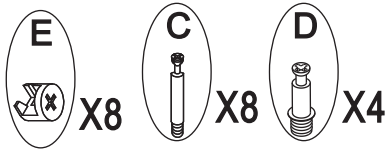

X2

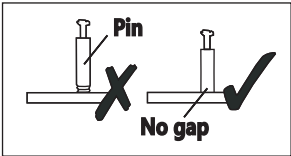


25


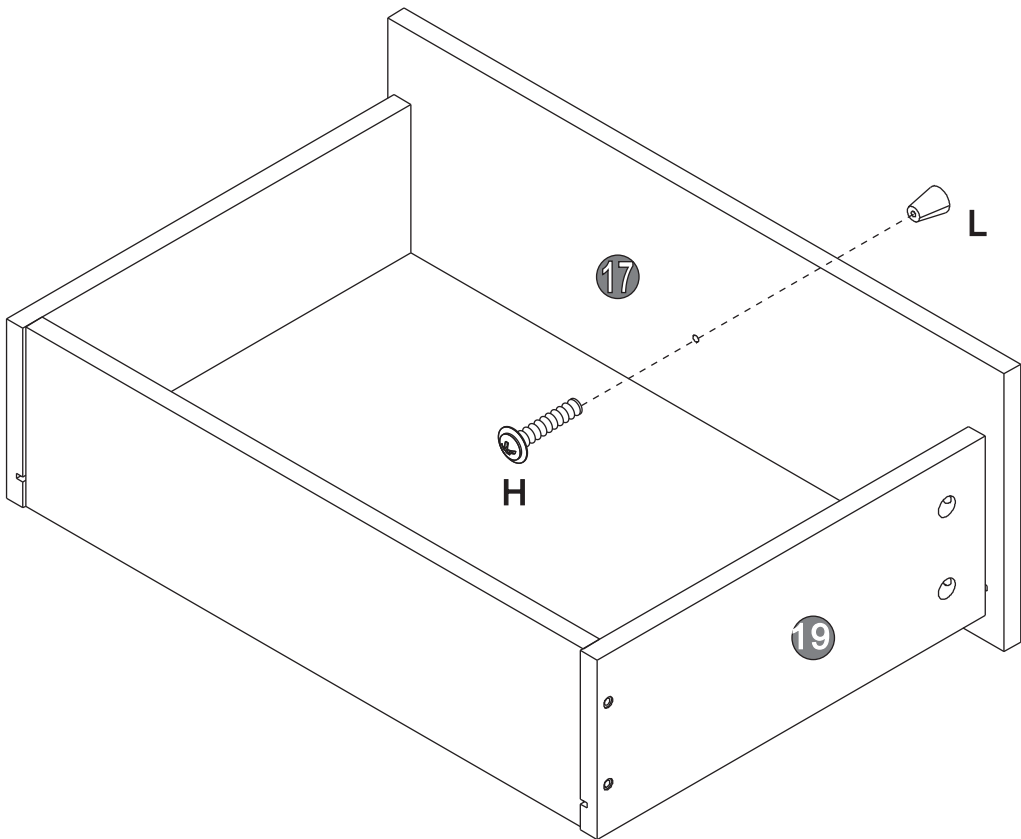


X2


26

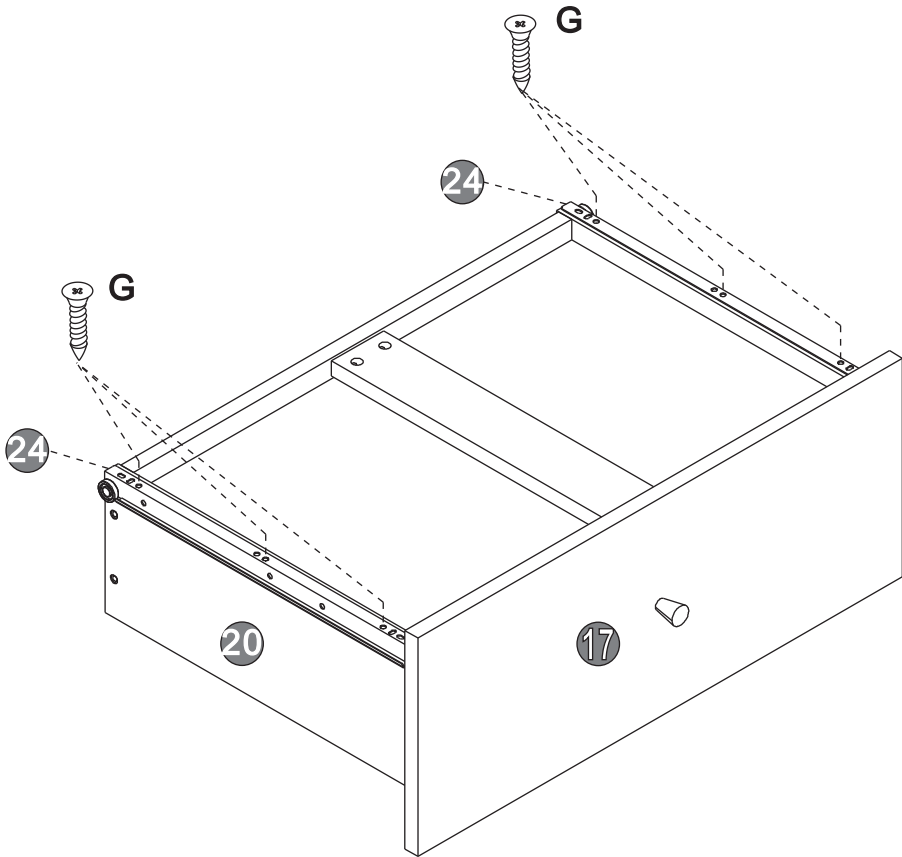


X2

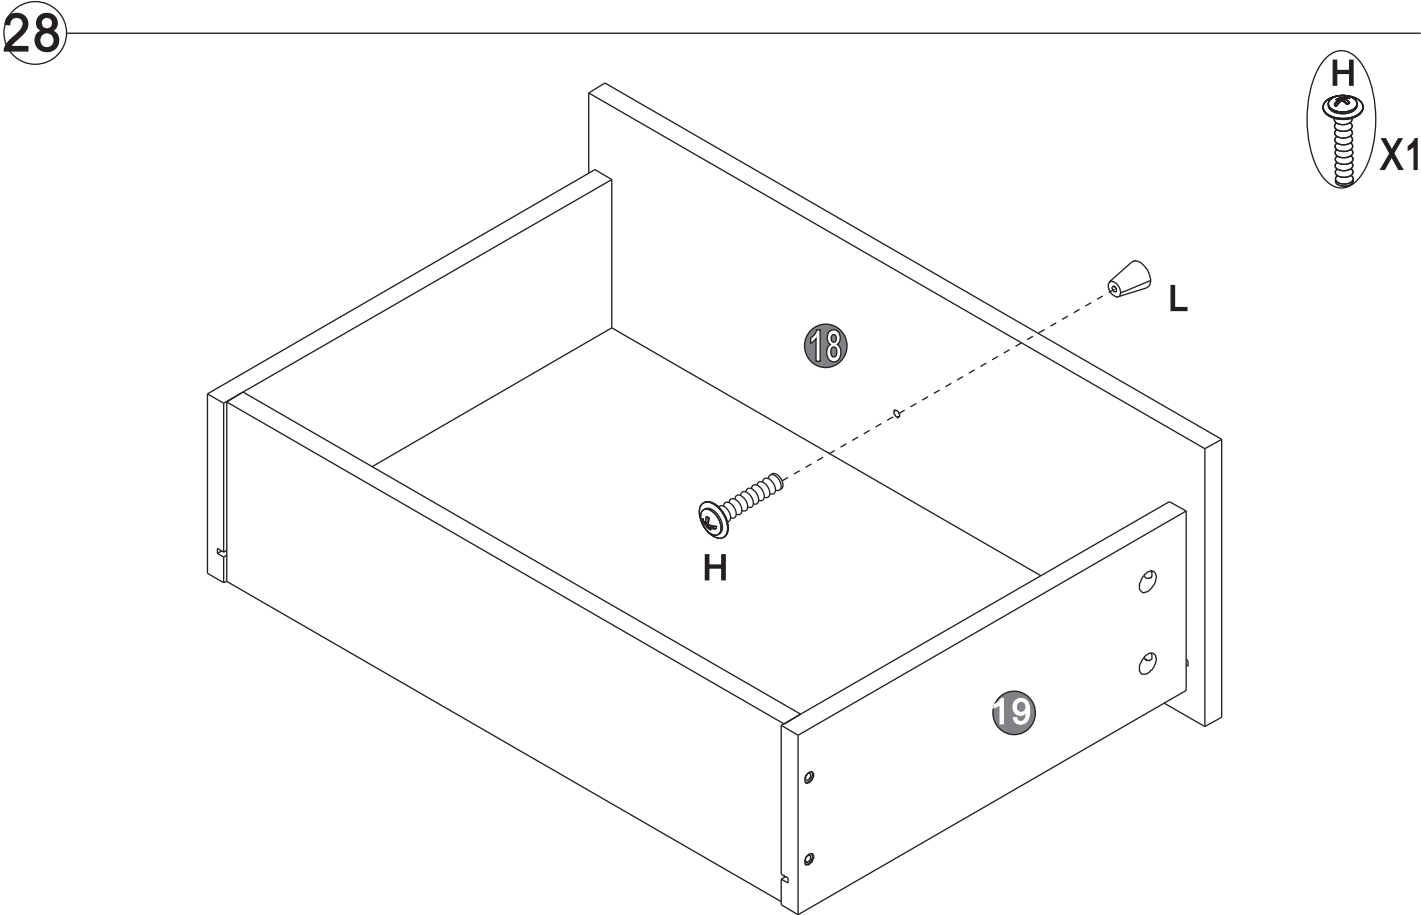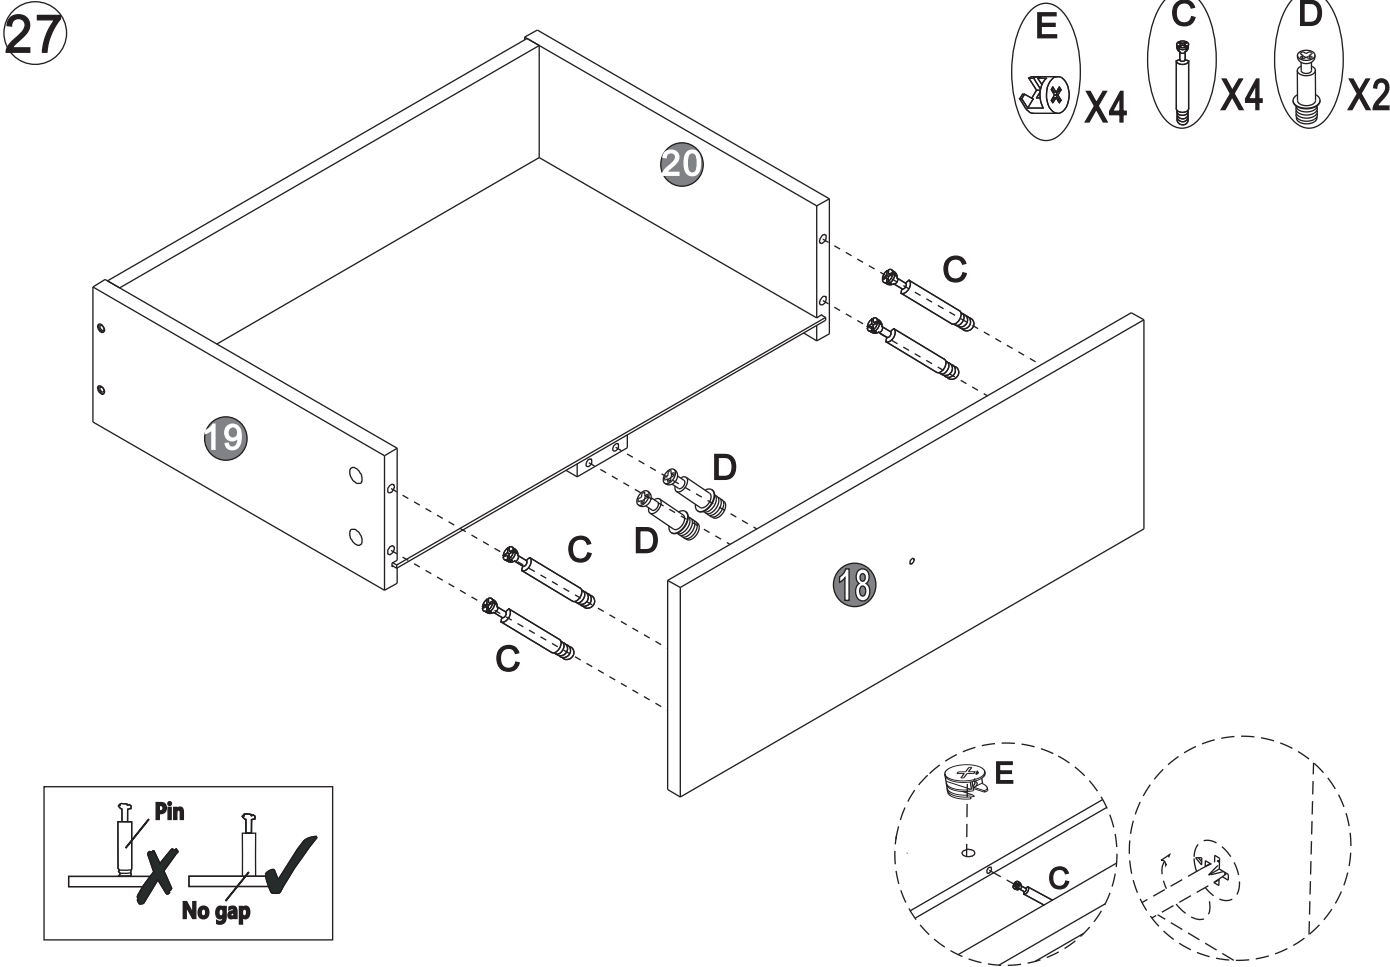


29

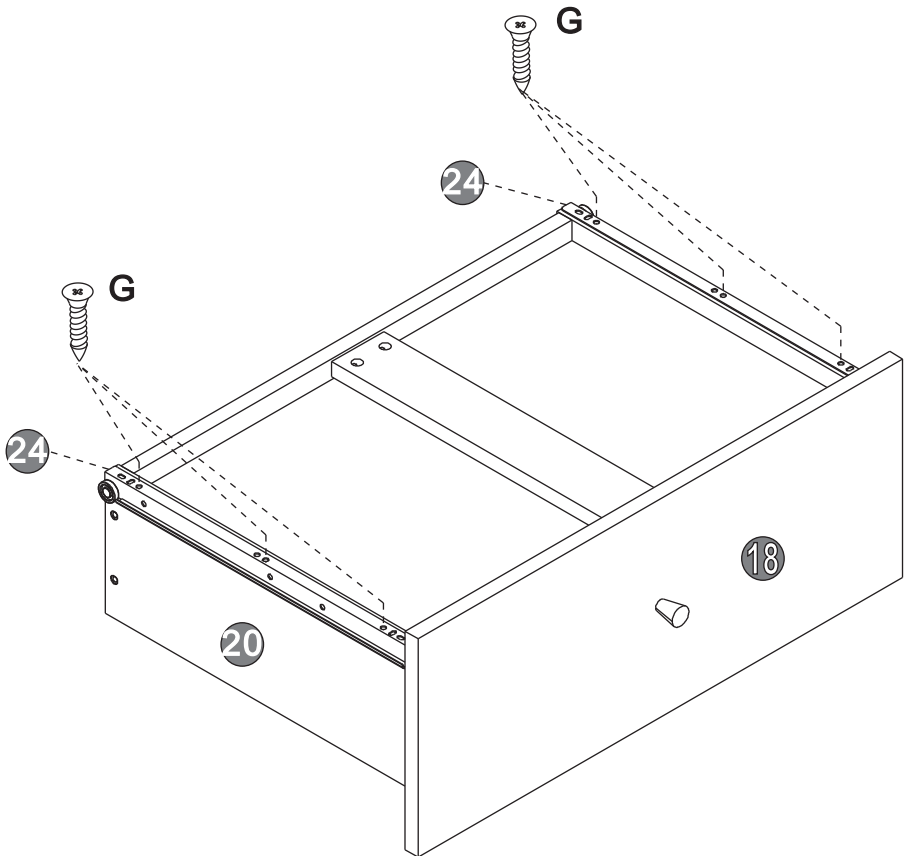

30

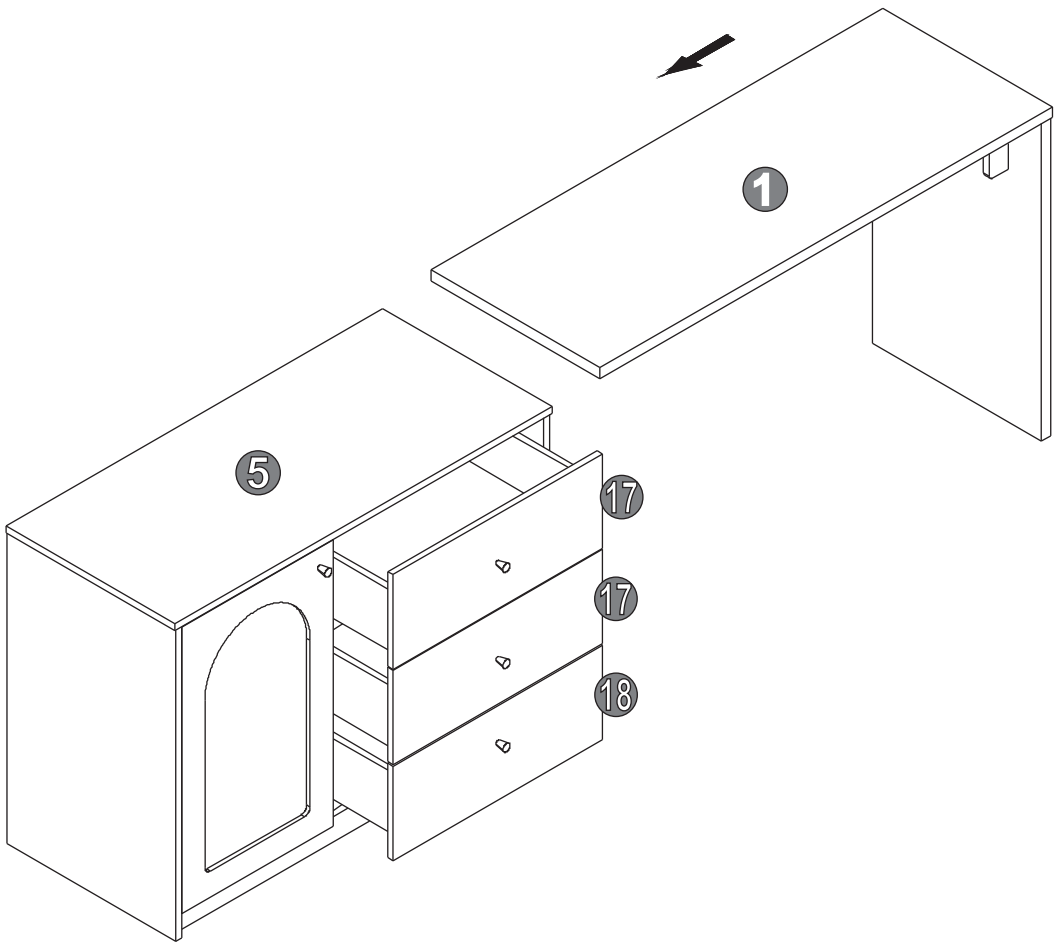

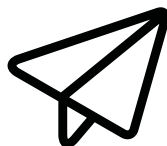

No heartburn,
when we handle
the return

Our way



support@tribesigns.com



Replacement/Refund



You

Their way



Re-package item



Schedule pick-up



Track package



Replacement



You

Contact our customer service team



support@tribesigns.com
www.tribesigns.com



1-424-220-6888