

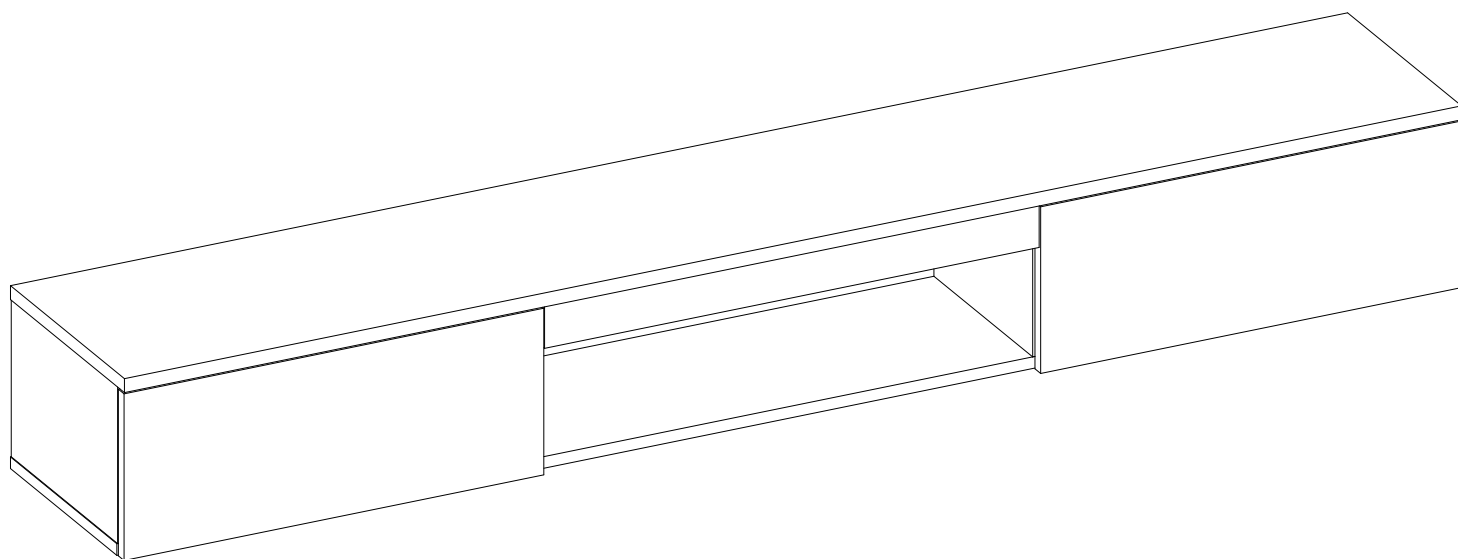
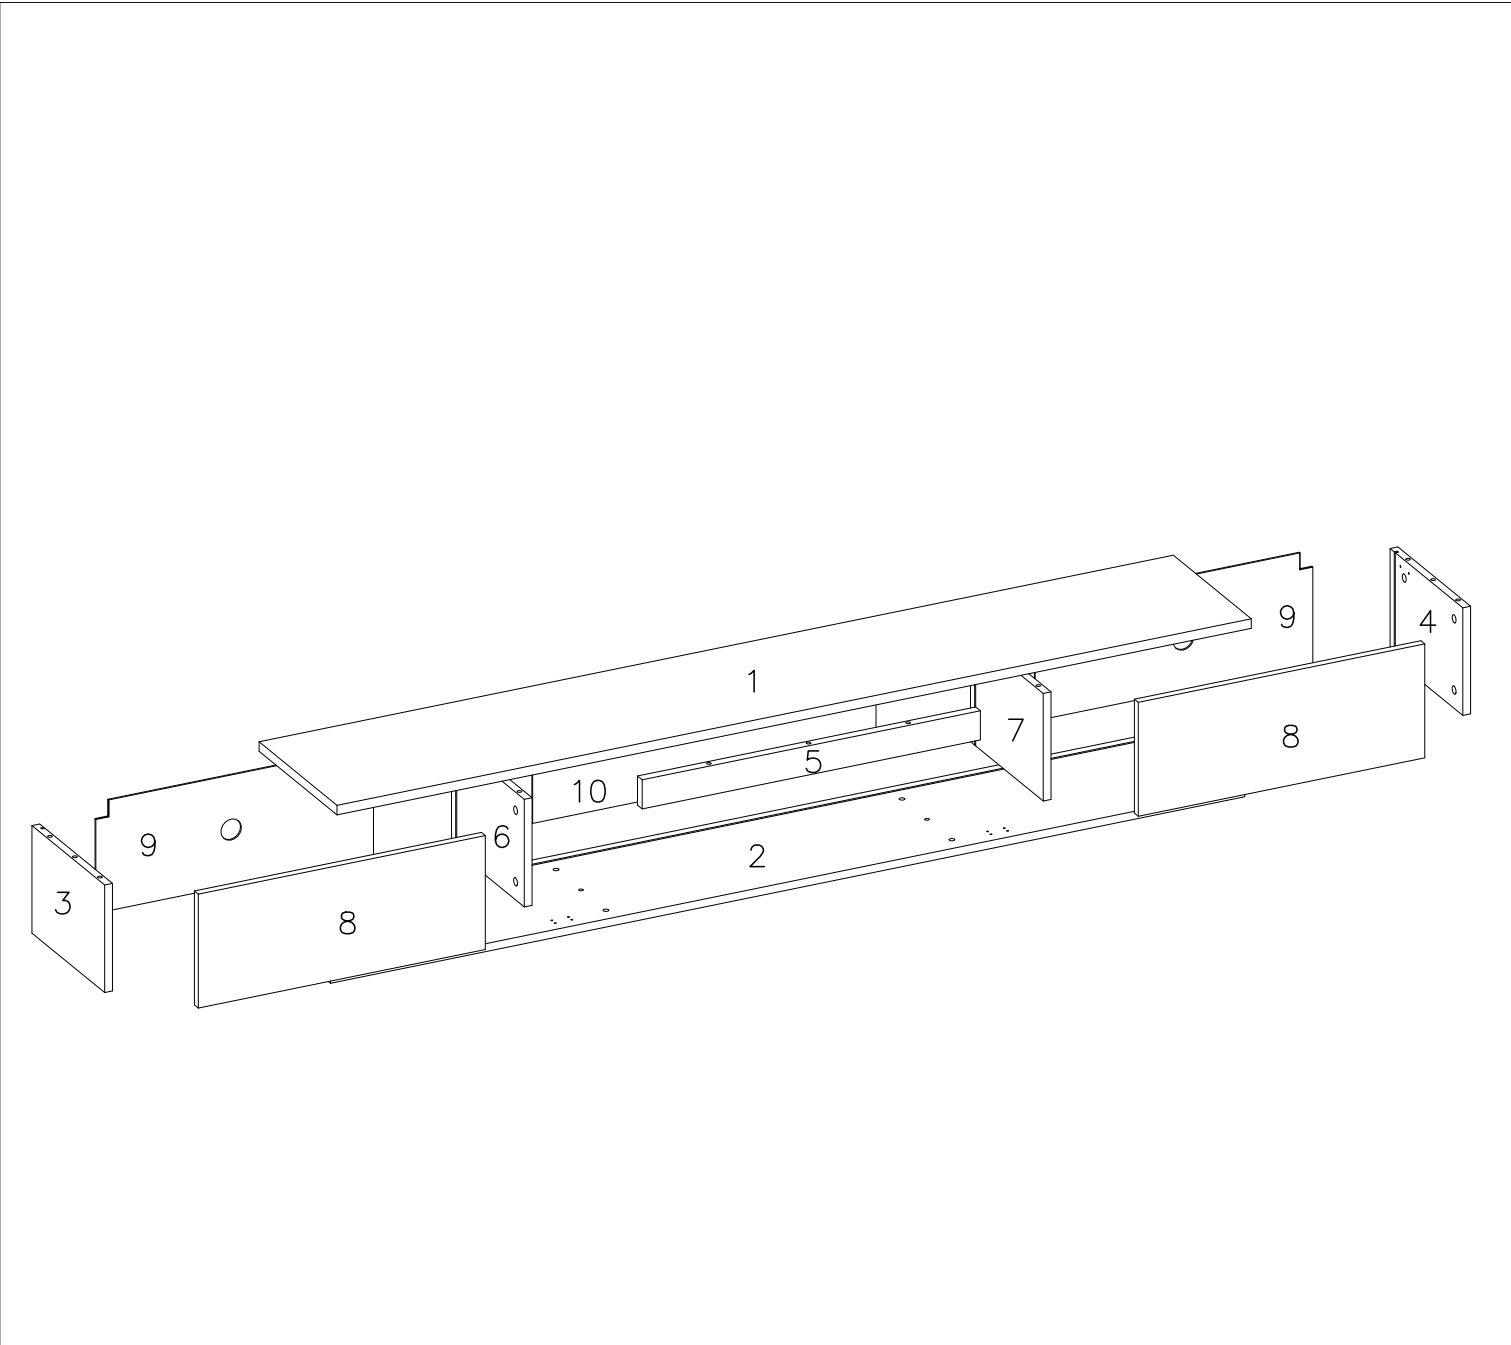

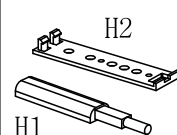
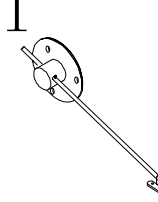
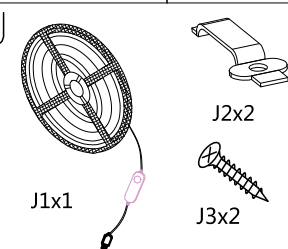



DS-TS002B-3

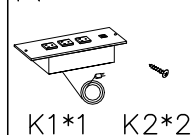

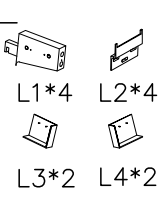

A  A1 A2 18pcs	B  φ8*30mm 9pcs	C  φ3.5*14mm 50pcs	D  φ3.5*40mm 8pcs	E  φ3.5*30mm 8pcs	F  8*40mm 8pcs	G  4pcs	H  H1 H2 2pcs
I  2pcs	J  J1x1 J2x2 1pc	K  K1*1 K2*2 1pc	L  L1*4 L2*4 L3*2 L4*2 1pc	M  12pcs	N  18pcs		


1

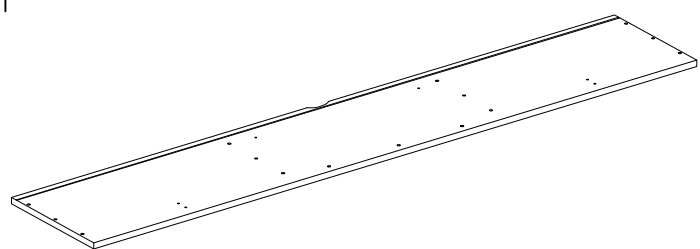

1760*300*15mm

1pc


2

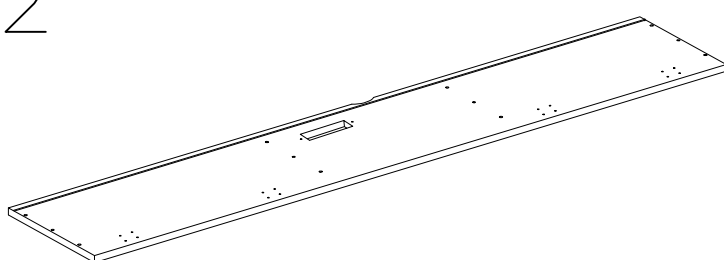

1760*282*15mm

1pc


3

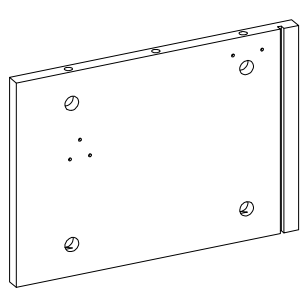

203*280*15mm

1pc


4

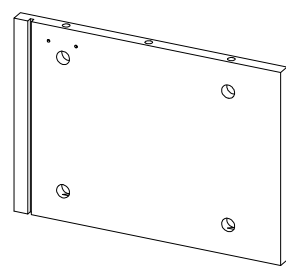

203*280*15mm

1pc


5

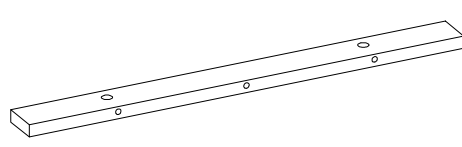

648*55*15mm

1pc


6

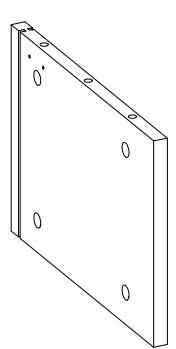

203*280*15mm

1pc


7

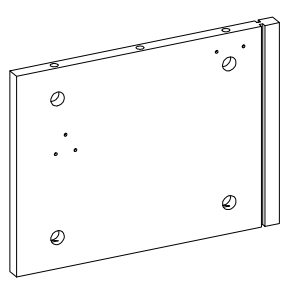

203*280*15mm

1pc


8

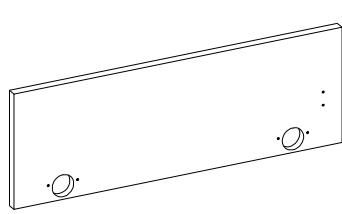

552.5*214*15mm

2pcs


9

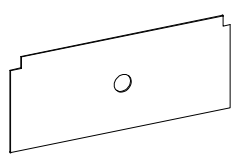

532.5*213*3mm

2pcs

10

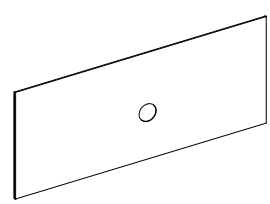


659*213*3mm

1pc


Hardware installation demonstration

NOTE: Please make sure
"A1" hardware tightened
and can't be pulled out!


I

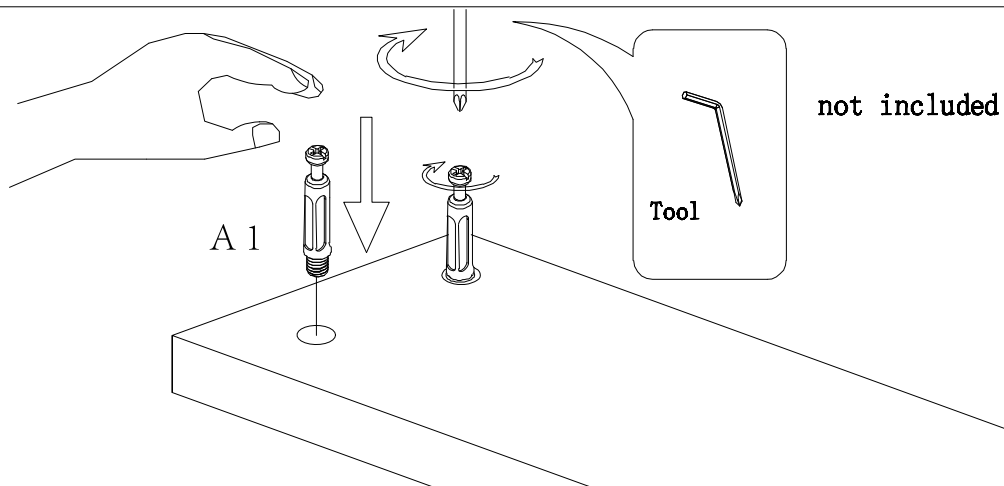


II

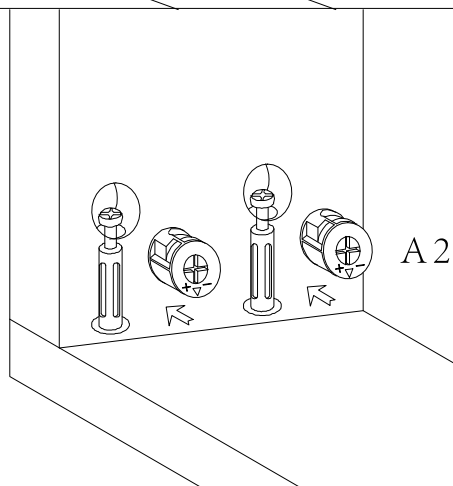


III

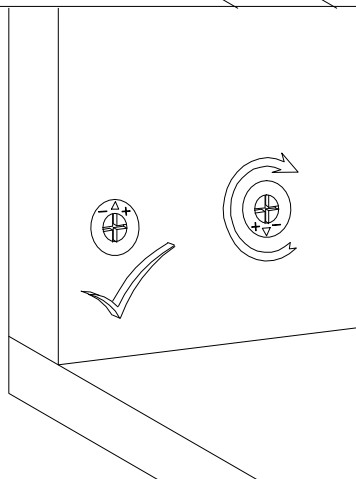


STEP 1

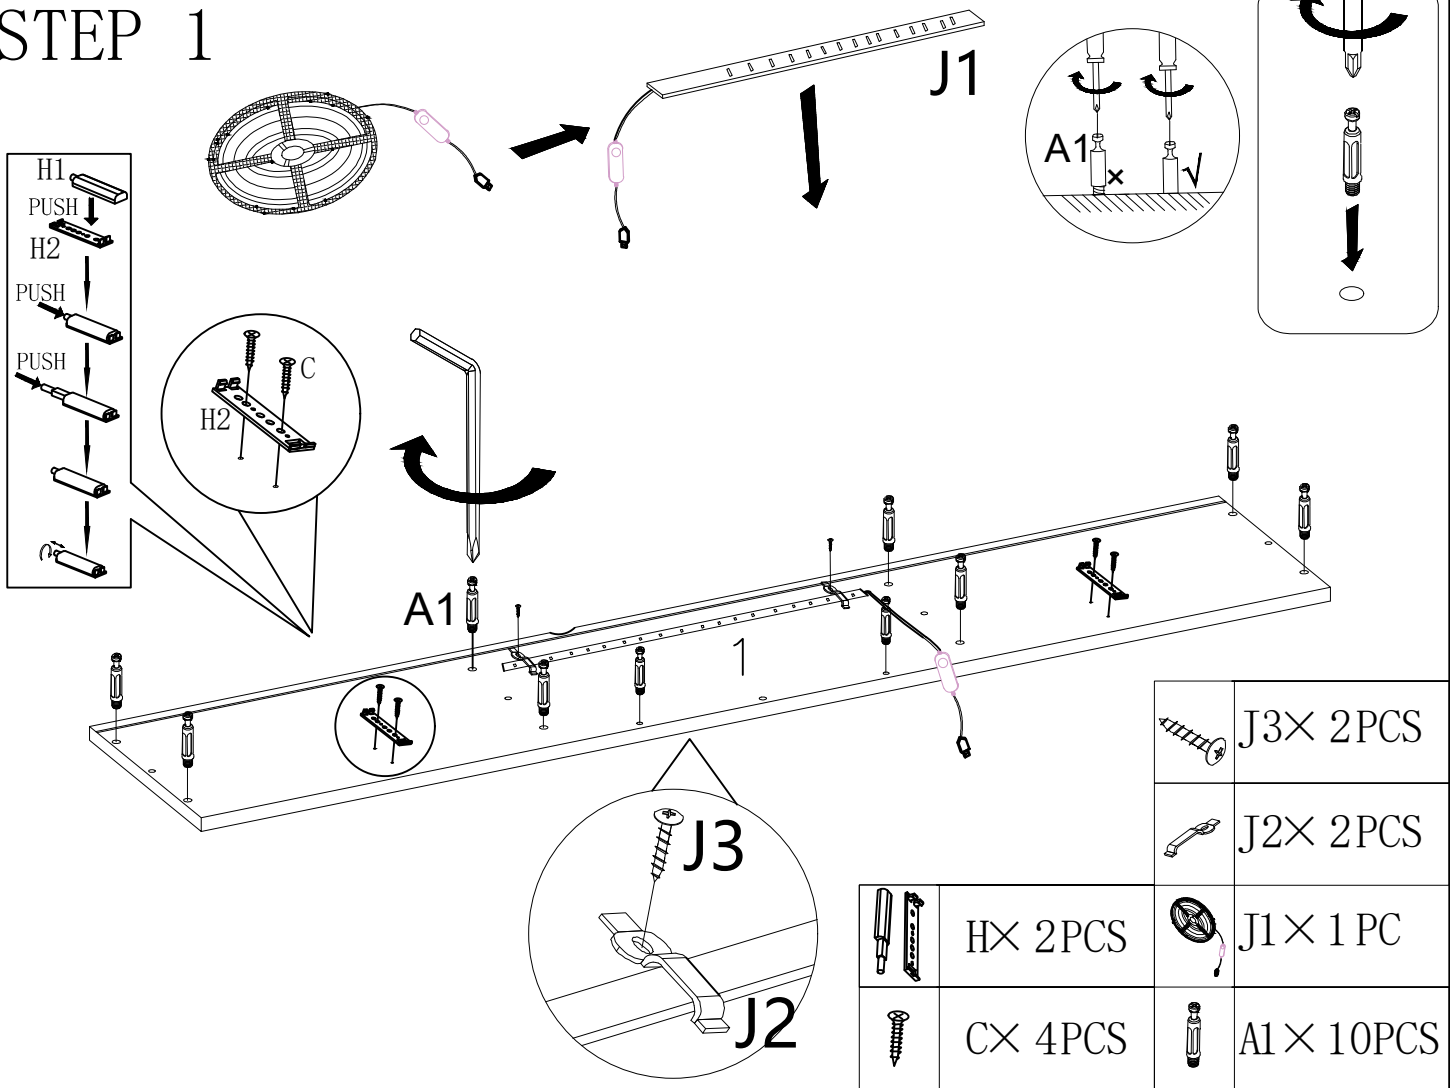

STEP 2

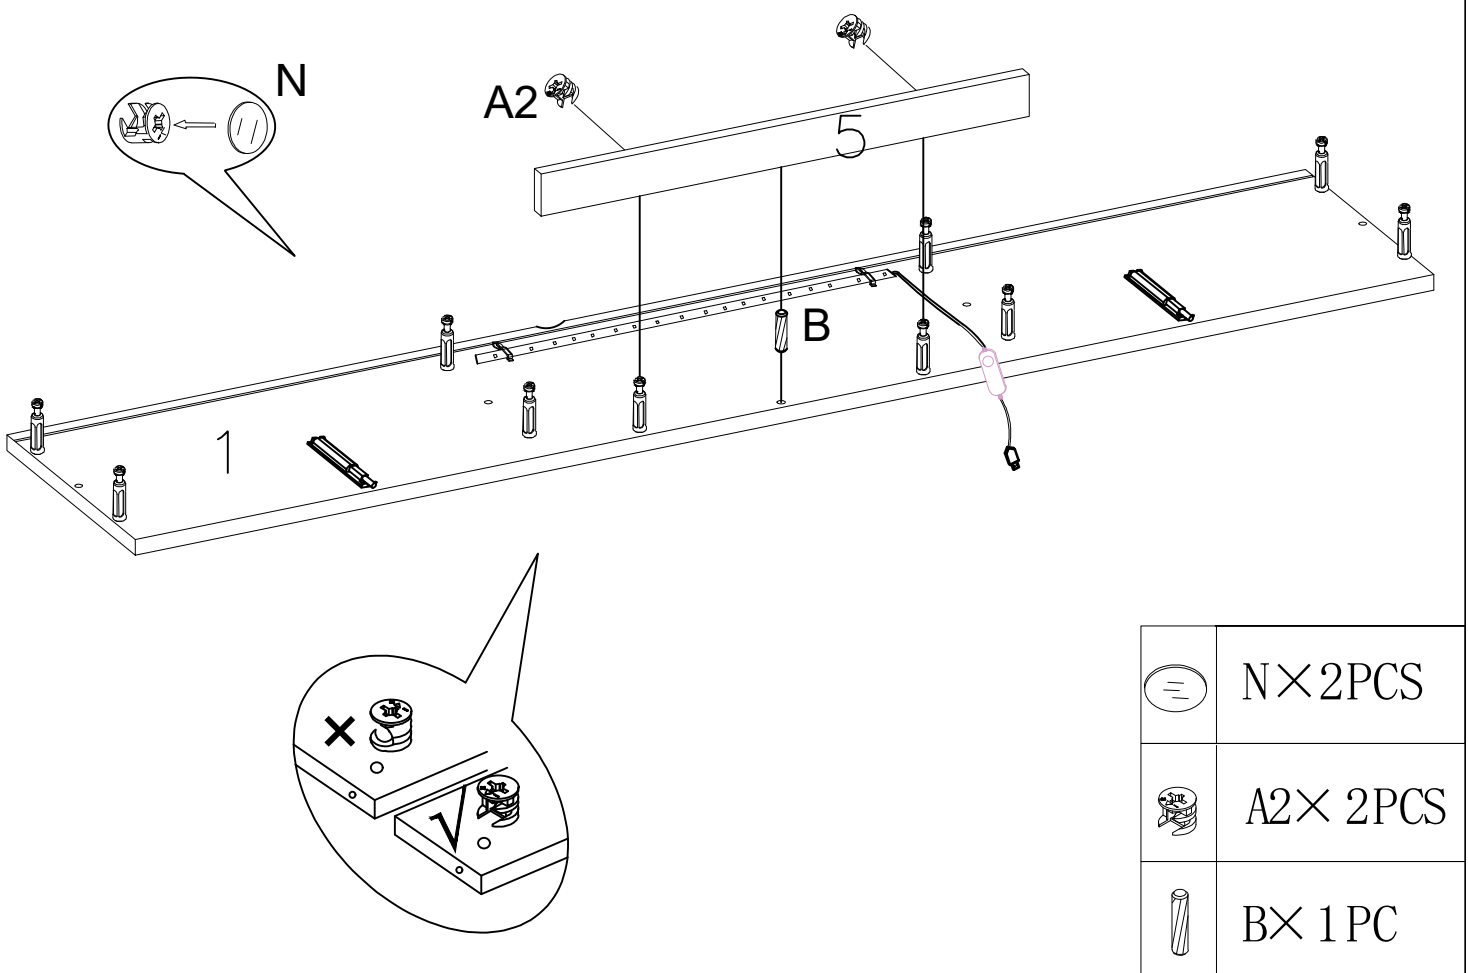


STEP 3

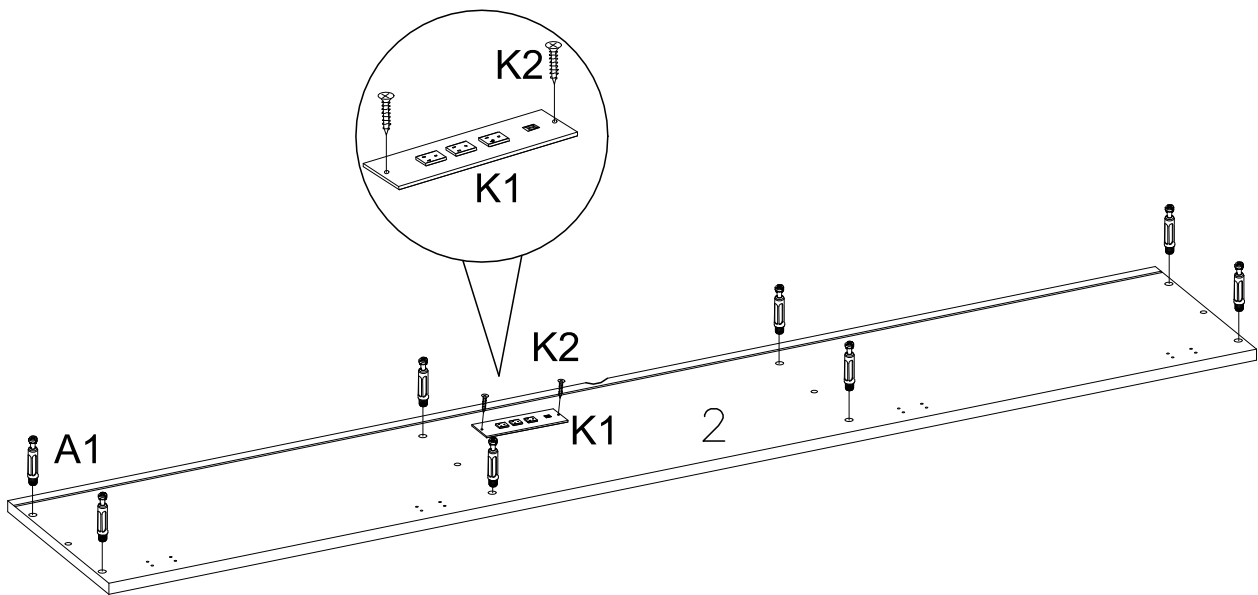


		K1× 1 PC
	K2× 2PCS	 A1× 8PCS

STEP 4

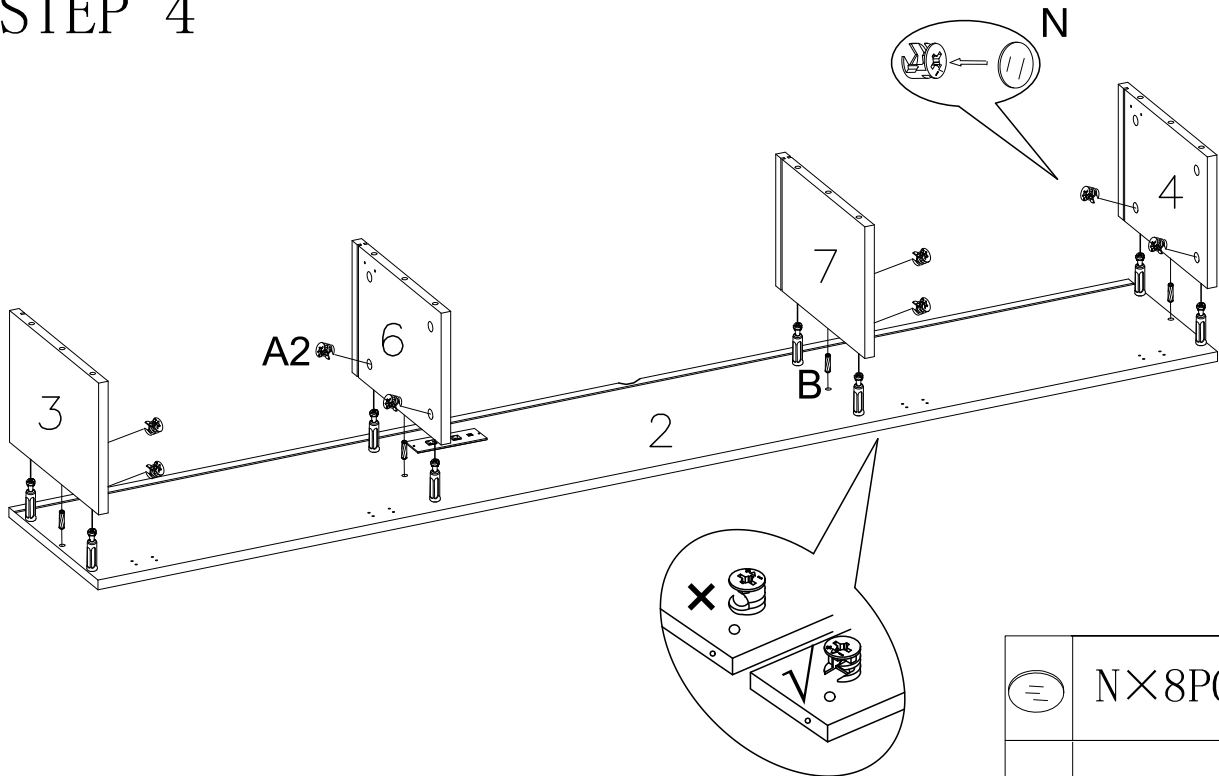


	N× 8PCS
	A2× 8PCS
	B× 4PCS

STEP 5

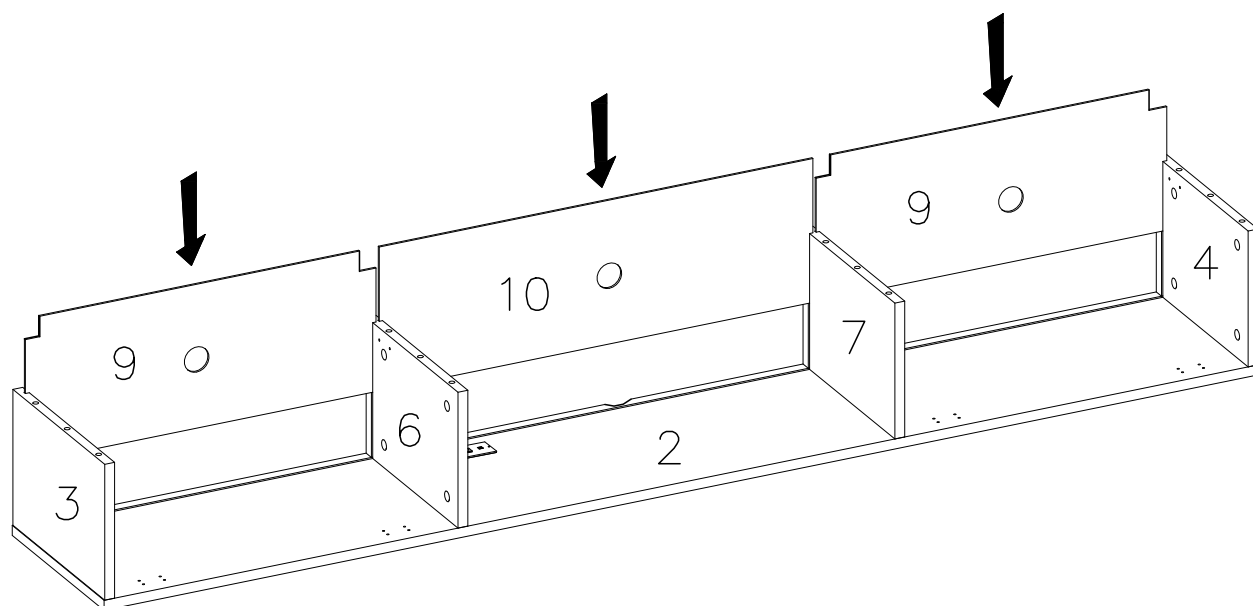


STEP 6

X2

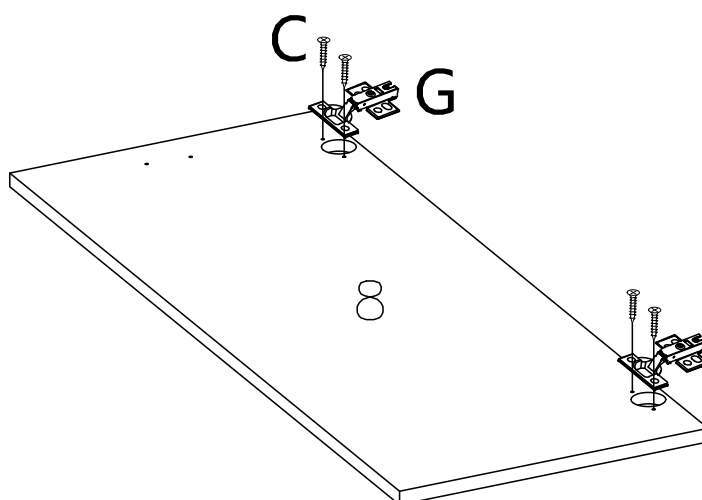


	C × 8PCS
	G × 4PCS

STEP 7

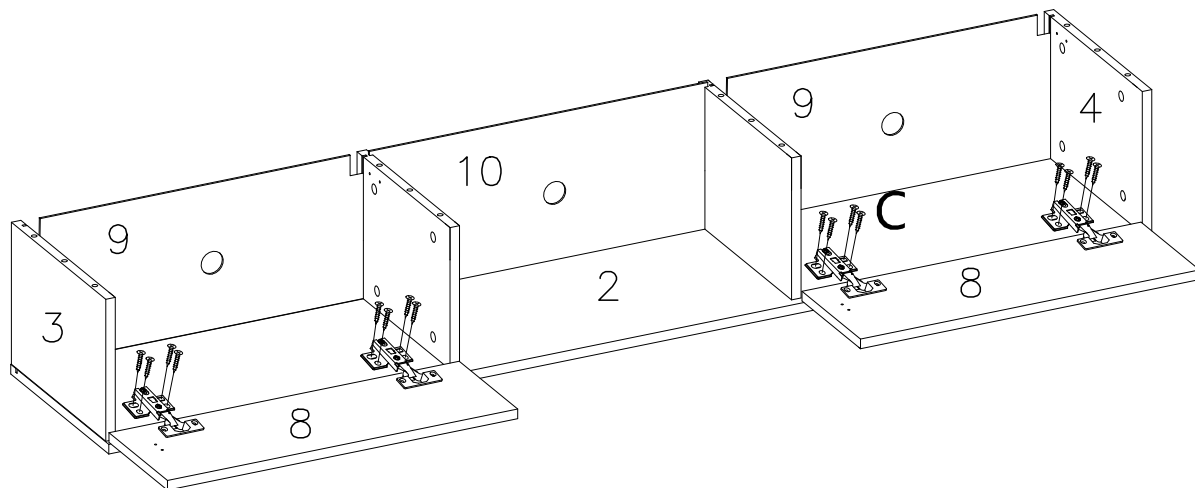



	C × 16PCS
---	-----------

STEP 8

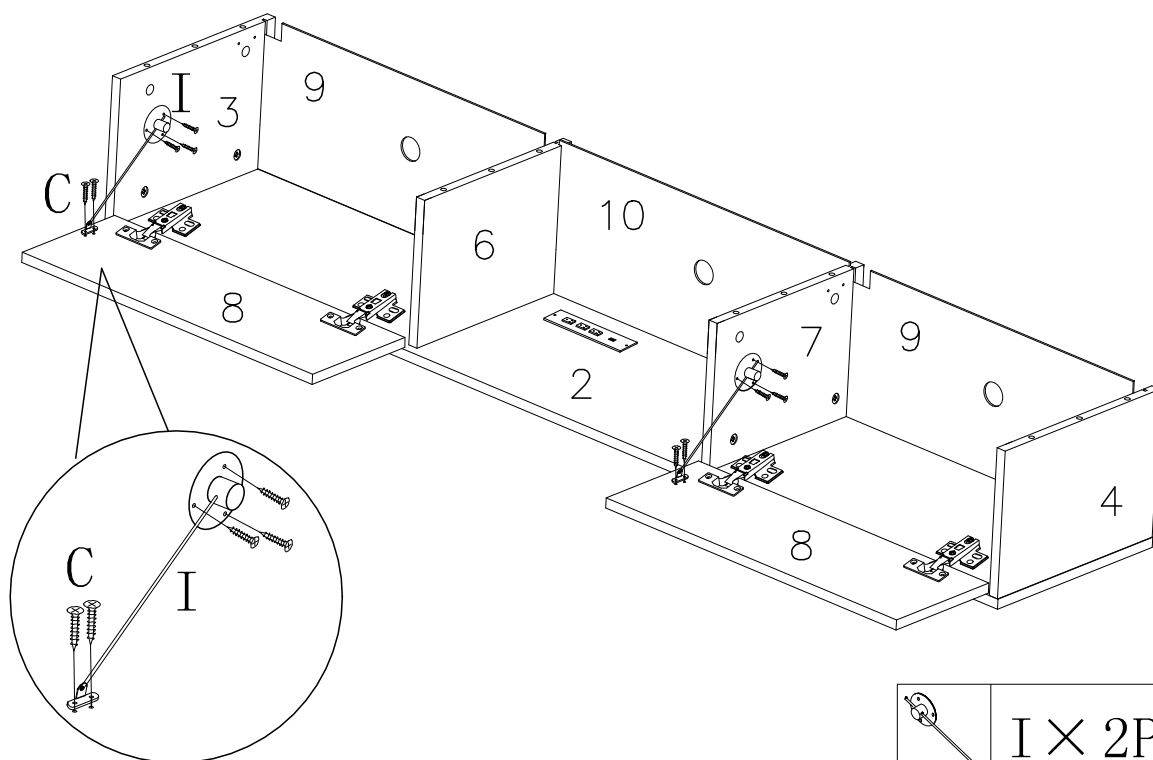





	I × 2PCS
	C × 10PCS

STEP 9


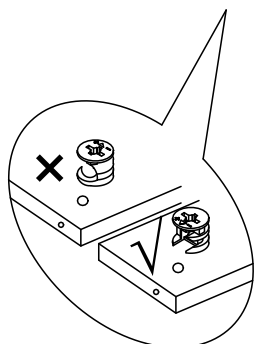
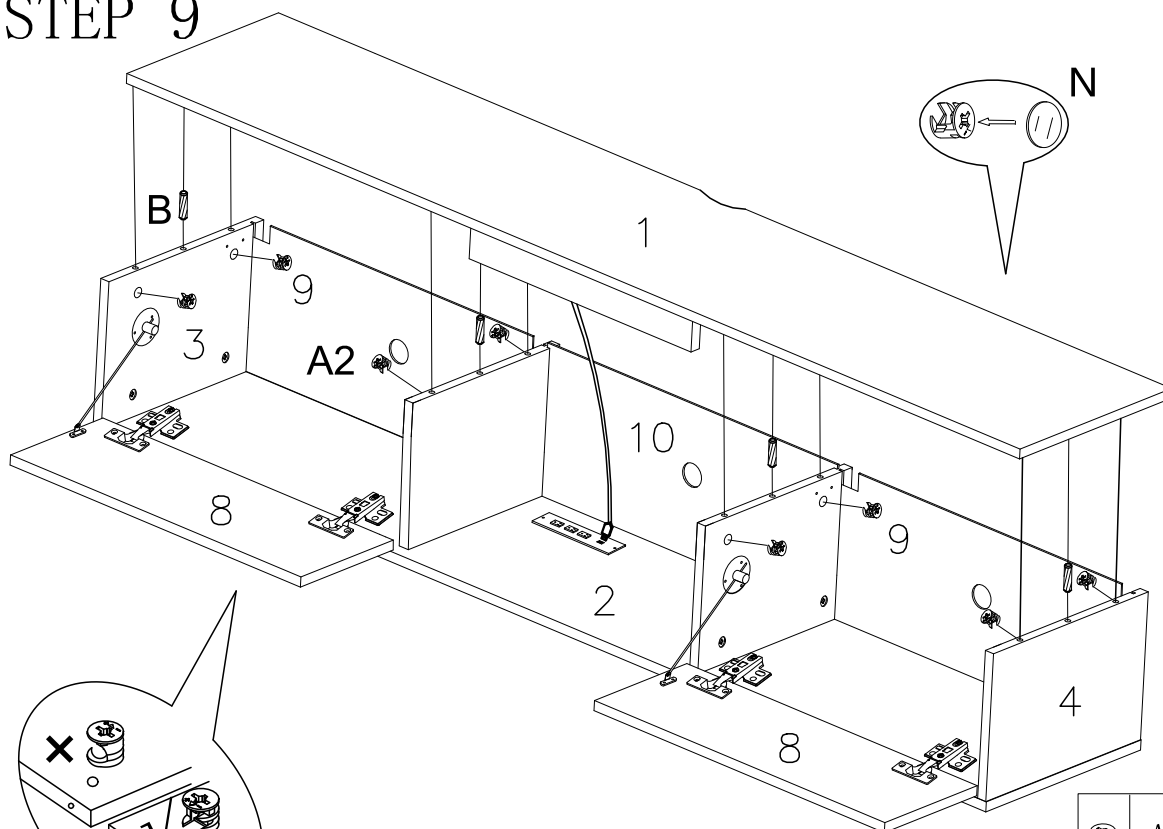


	A2× 8PCS
	N×8PCS
	B× 4PCS




STEP 10

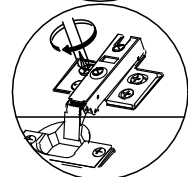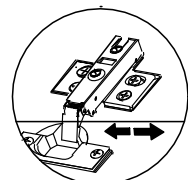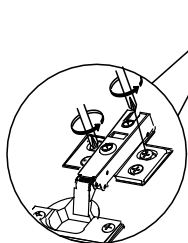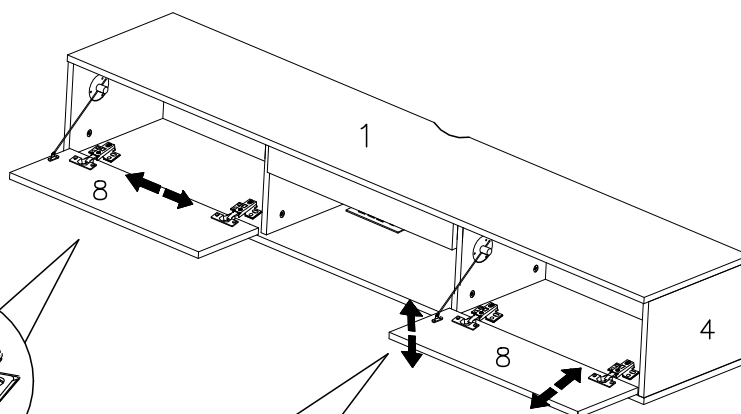

Cabinet door left
and right fine
adjustment

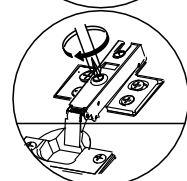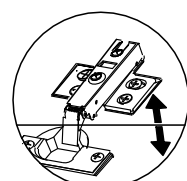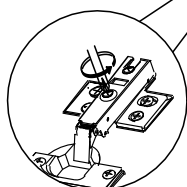


Cabinet door up
and down fine
adjustment

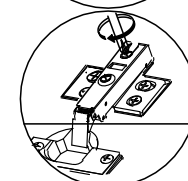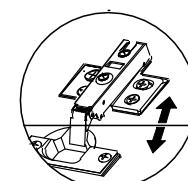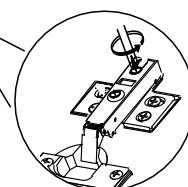





Fine-tune the
gap after
the cabinet
door is closed

STEP 11

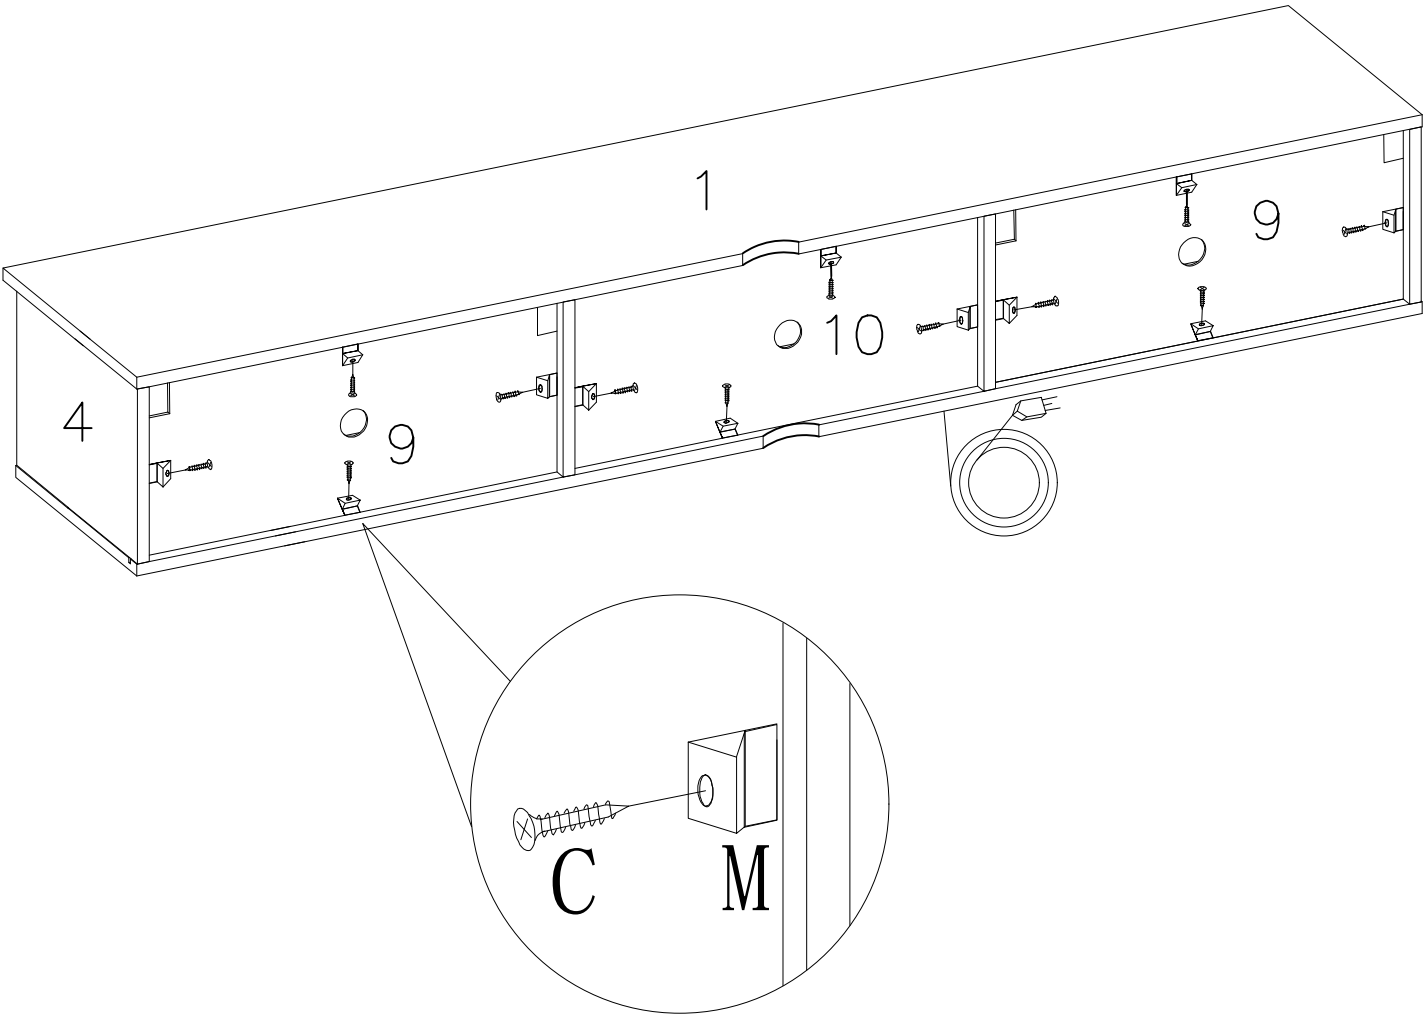


	C× 12PCS
	M× 12PCS

STEP 12

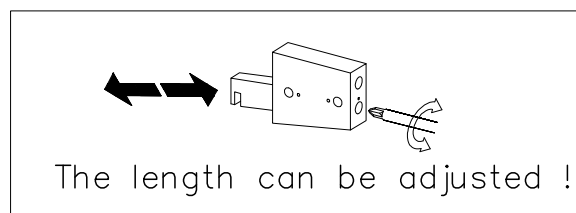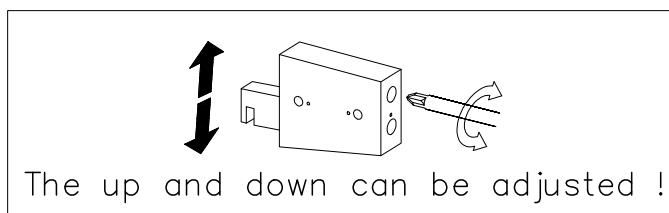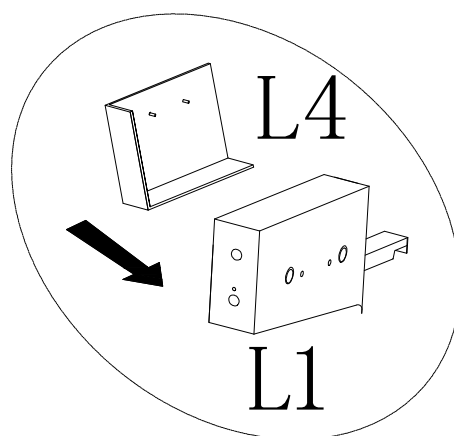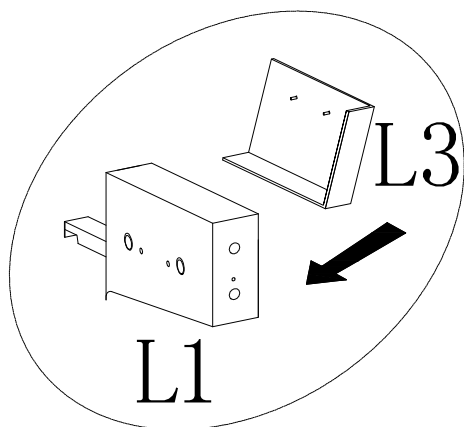


STEP 13

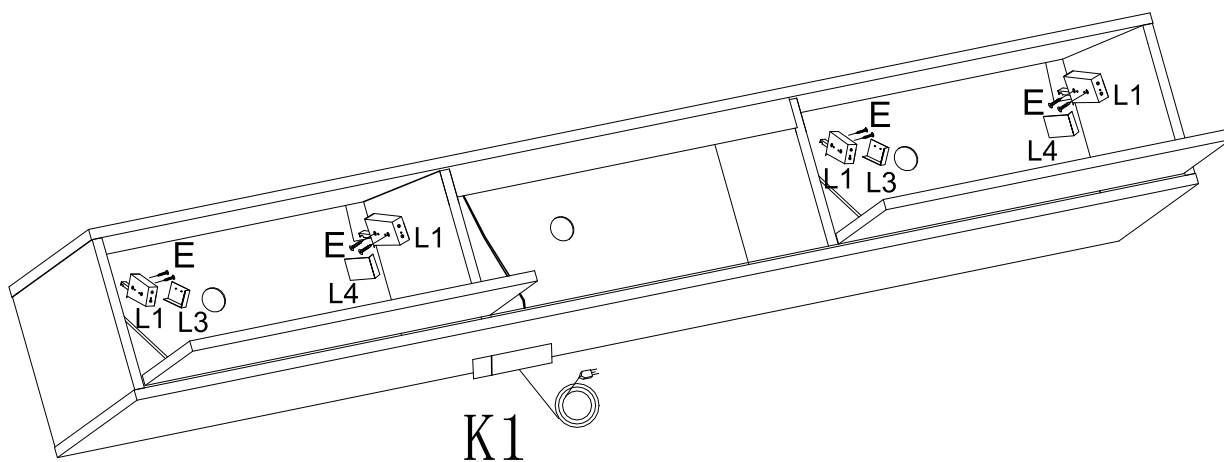

	E × 8PCS		L3 × 2PCS
	L1 × 4PCS		L4 × 2PCS

STEP 14



NOTE : dimension distance must be right !

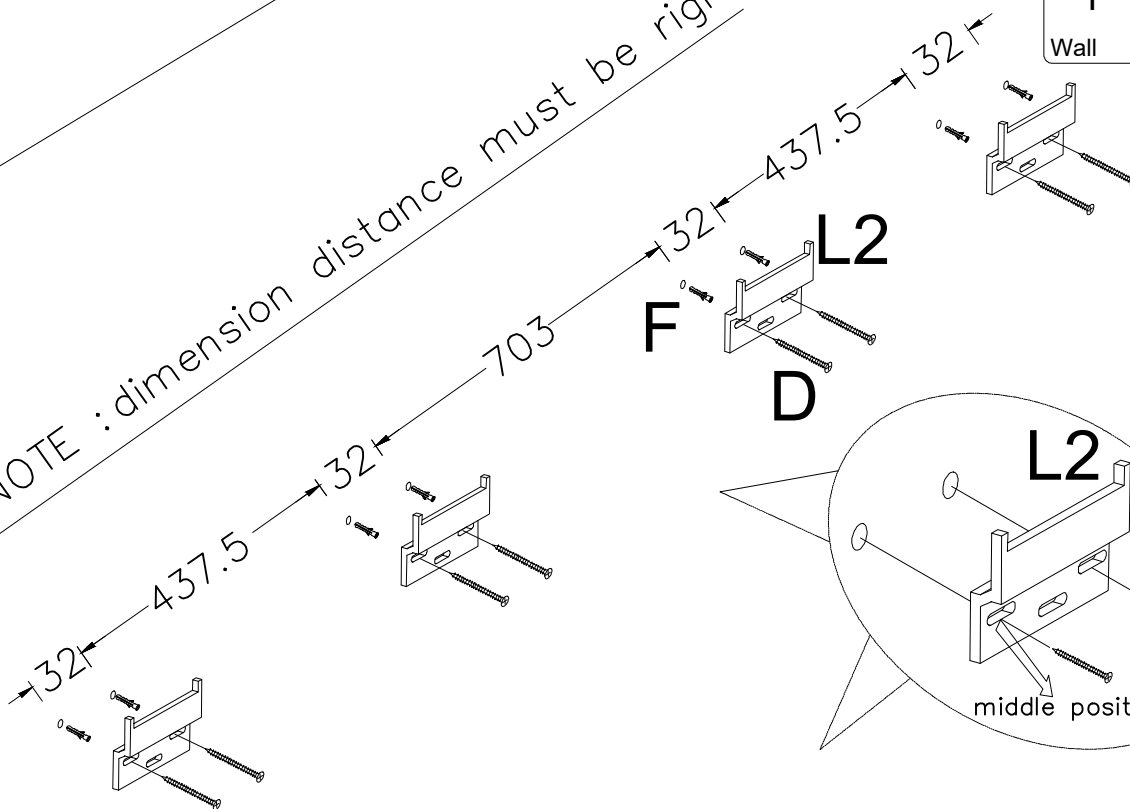

	D× 8PCS		F× 8PCS		L2× 4PCS
---	---------	---	---------	---	----------

STEP 15

NOTE : same horizontal position

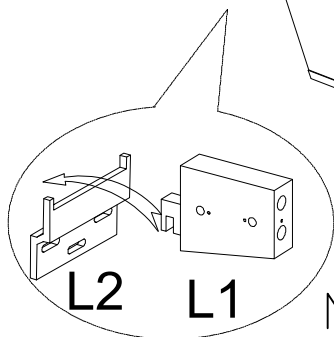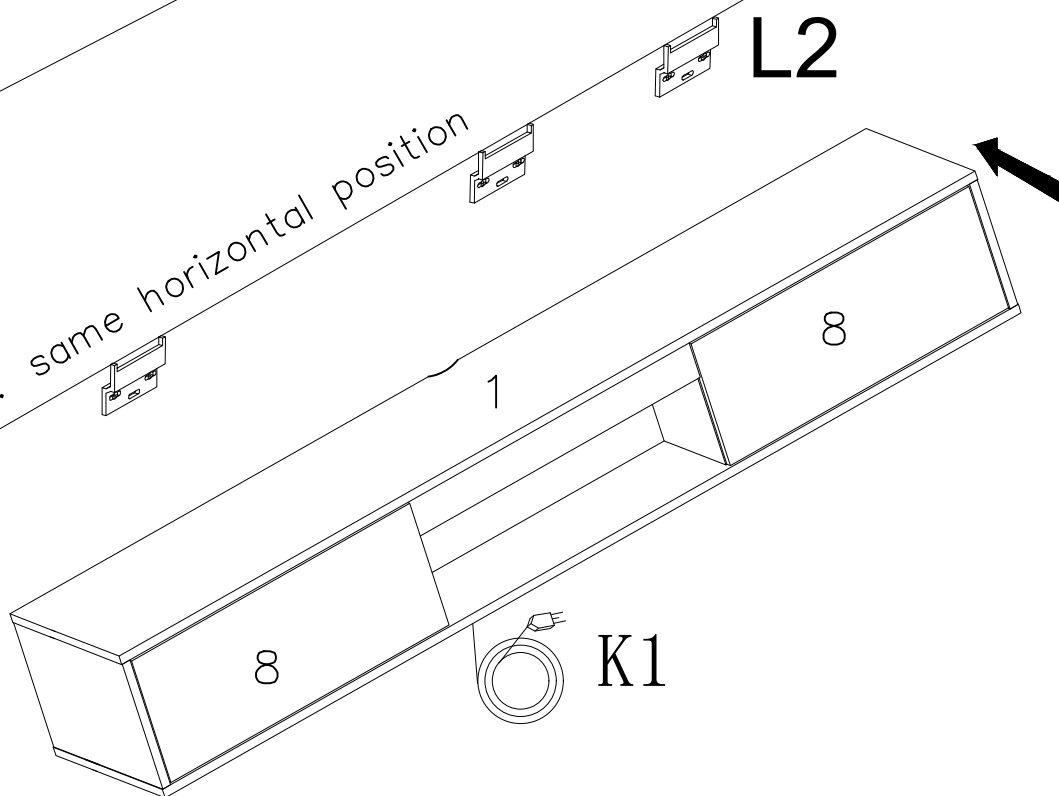

NOTE : install the cabinet on the L2 !