




AN **ORIGINAL** GRANITE BRACKET[™] PRODUCT

THE ORIGINAL[™] REGULAR SHELF BRACKET




1. Locate wall studs and mark locations;
Install blocking if necessary.

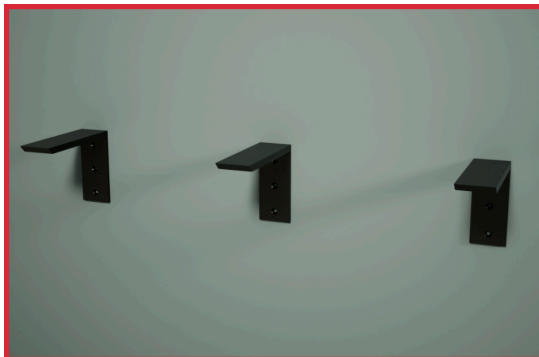

2. Select desired height for your bracket
and ensure they are level.



3. Once your brackets are in place and
level, using the holes on the bracket as a
guide, drill pilot holes into your wall studs.
With your pilot holes now made, fasten
your brackets with by screwing them to
the wall.

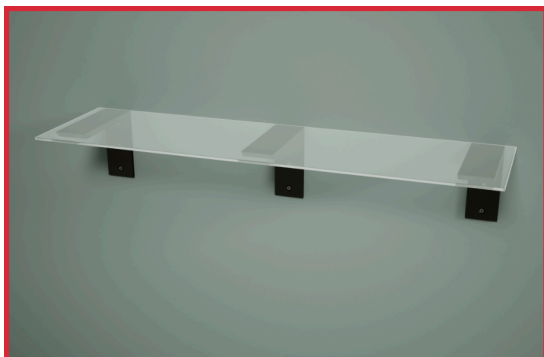

4. Now that your brackets are properly
secured and in place, place the
countertop of your choosing on top of the
brackets.



5. With your countertop now resting upon
your brackets, we recommend applying a
bead of clear silicone adhesive around
the brackets.



SCAN FOR
MORE PRODUCTS

ORIGINALGRANITEBRACKET.COM | 888-584-1112

*AVAILABLE
IN MULTIPLE SIZES