


Rolling Door Hardware Kits

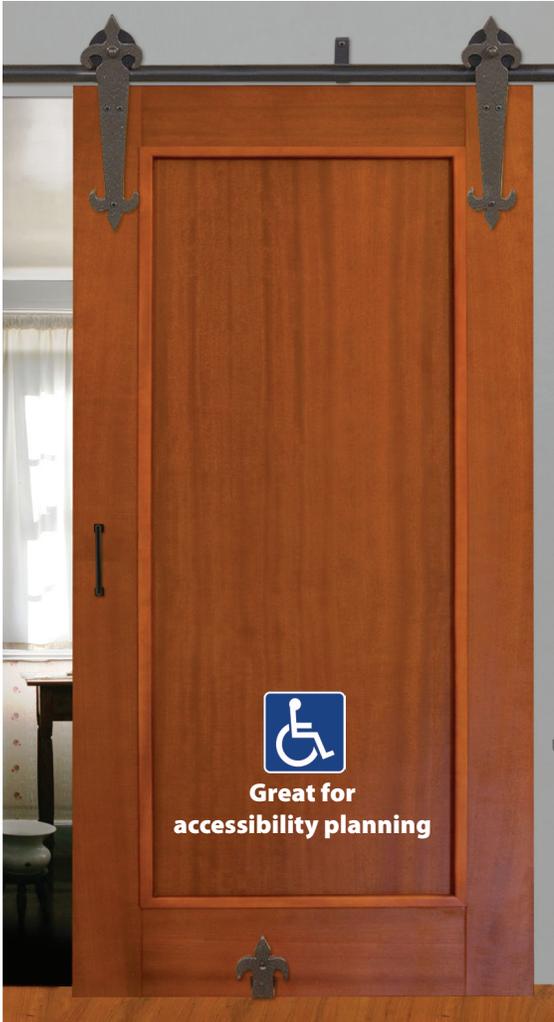

Quiet Glide Barn Door



Complete Rolling Door Kit

This kit comes with all the parts needed to hang a standard 36" door including a 6' rail, five wall mounting brackets, two roller straps, one center guide, stops.
Choose short or long wall mount brackets.

Hand Forged Kits

Spade & Fleur-de-Lis are hand forged, hammered finish, custom made hardware exclusively for QuietGlide.



Spade
10.5" H
x
3" W



Fleur-de-Lis
11.75" H
x
3.25" W

Part#

- QG110007
- QG110008
- QG120007
- QG120008
- QG1300BR02
- QG1300BR07
- QG1300BR08
- QG1300C02
- QG1300C07
- QG1300C08
- QG1300C202
- QG1300C207
- QG1300C208
- QG1300CS02
- QG1300CS07
- QG1300CS08
- QG1300DH02
- QG1300DH07
- QG1300DH08
- QG1300GB02
- QG1300GB07
- QG1300GB08
- QG1300GB11
- QG1300HK02
- QG1300HK07
- QG1300HK08
- QG1300HS02
- QG1300HS07
- QG1300HS08
- QG1300IC02
- QG1300IC07
- QG1300IC08
- QG1300IC11
- QG1300NK02
- QG1300NK07
- QG1300NK08
- QG1300NR02
- QG1300NR07
- QG1300NR08
- QG1300PL02
- QG1300PL07
- QG1300PL08
- QG1300PL11
- QG1300RS02
- QG1300RS07
- QG1300RS08
- QG1300ST02
- QG1300ST07
- QG1300ST08
- QG1300T02
- QG1300T07
- QG1300T08
- QG1300TM02
- QG1300TM07
- QG1300TM08

- Complete Rolling Door Kit (with Long Brackets)**
- Spade Hardware Long Bracket Kit Oil Rubbed Bronze
 - Spade Hardware Long Bracket Kit Black
 - Fleur-de-Lis Hardware Long Bracket Kit Oil Rubbed Bronze
 - Fleur-de-Lis Hardware Long Bracket Kit Black
 - Basic Rectangle Hardware Long Bracket Kit Satin Nickel
 - Basic Rectangle Hardware Long Bracket Kit Oil Rubbed Bronze
 - Basic Rectangle Hardware Long Bracket Kit Black
 - Circles Hardware Long Bracket Kit Satin Nickel
 - Circles Hardware Long Bracket Kit Oil Rubbed Bronze
 - Circles Hardware Long Bracket Kit Black
 - Castle 2 Hardware Long Bracket Kit Satin Nickel
 - Castle 2 Hardware Long Bracket Kit Oil Rubbed Bronze
 - Castle 2 Hardware Long Bracket Kit Black
 - Cube Stick Hardware Long Bracket Kit Satin Nickel
 - Cube Stick Hardware Long Bracket Kit Oil Rubbed Bronze
 - Cube Stick Hardware Long Bracket Kit Black
 - Double Horse Hardware Long Bracket Kit Satin Nickel
 - Double Horse Hardware Long Bracket Kit Oil Rubbed Bronze
 - Double Horse Hardware Long Bracket Kit Black
 - GingerBread Hardware Long Bracket Kit Satin Nickel
 - GingerBread Long Bracket Kit Oil Rubbed Bronze
 - GingerBread Hardware Long Bracket Kit Black
 - GingerBread Hardware Long Bracket Kit Barn Red
 - Hook Hardware Long Bracket Kit Satin Nickel
 - Hook Hardware Long Bracket Kit Oil Rubbed Bronze
 - Hook Hardware Long Bracket Kit Black
 - Horseshoe Hardware Long Bracket Kit Satin Nickel
 - Horseshoe Hardware Long Bracket Kit Oil Rubbed Bronze
 - Horseshoe Hardware Long Bracket Kit Black
 - Ice Cream Cone Hardware Long Bracket Kit Satin Nickel
 - Ice Cream Cone Long Bracket Kit Oil Rubbed Bronze
 - Ice Cream Cone Hardware Long Bracket Kit Black
 - Ice Cream Cone Hardware Long Bracket Kit Barn Red
 - Kaminski Wolf Hardware Long Bracket Kit Satin Nickel
 - Kaminski Wolf Long Bracket Kit Oil Rubbed Bronze
 - Kaminski Wolf Hardware Long Bracket Kit Black
 - Notched Rectangle Hardware Long Bracket Kit Satin Nickel
 - Notched Rectangle Hardware Long Bracket Kit Oil Rubbed Bronze
 - Notched Rectangle Hardware Long Bracket Kit Black
 - Palm-Leis Hardware Long Bracket Kit Satin Nickel
 - Palm-Leis Long Bracket Kit Oil Rubbed Bronze
 - Palm-Leis Hardware Long Bracket Kit Black
 - Palm-Leis Hardware Long Bracket Kit Barn Red
 - Round Stick Hardware Long Bracket Kit Satin Nickel
 - Round Stick Hardware Long Bracket Kit Oil Rubbed Bronze
 - Round Stick Hardware Long Bracket Kit Black
 - Stick Hardware Long Bracket Kit Satin Nickel
 - Stick Hardware Long Bracket Kit Oil Rubbed Bronze
 - Stick Hardware Long Bracket Kit Black
 - Triangle Hardware Long Bracket Kit Satin Nickel
 - Triangle Hardware Long Bracket Kit Oil Rubbed Bronze
 - Triangle Hardware Long Bracket Kit Black
 - Top Mount Hardware Long Bracket Kit Satin Nickel
 - Top Mount Long Bracket Kit Oil Rubbed Bronze
 - Top Mount Hardware Long Bracket Kit Black

Contemporary Roller Straps



Triangle
5.36" W x 4.93" H



Circles
2" W x 4.86" H



Round Stick
2.75" W x 6.67" H



Castle 2
3" W x 6.5" H



Basic Rectangle
2.62" W x 5" H



Cube Stick
2.9" W x 6.8" H



Notched Rectangle
3" W x 6" H



Horseshoe
4.12" W x 6.17" H



Quiet Glide Barn Door



Vista
2.5"W x 6.25"H



Kaminski Wolf
4.875"W x 8.625"H



Top Mount
4.5"W x 3.5"H



Tri-Star
4.5"W x 5.5"H



Palm-Leis
2.625"W x 8.625"H



Double Horse
4.625"W x 8.625"H



GingerBread
3.625"W x 8.25"H



Wright
2.25"W x 7.625"H



Ice Cream Cone
4.875"W x 8.625"H

- QG1300TS02
- QG1300TS07
- QG1300TS08
- QG1300V02
- QG1300V07
- QG1300V08
- QG1300WR02
- QG1300WR07
- QG1300WR08
- QG1300WR11

- Tri-Star Hardware Long Bracket Kit Satin Nickel
- Tri-Star Long Bracket Kit Oil Rubbed Bronze
- Tri-Star Hardware Long Bracket Kit Black
- Vista Hardware Long Bracket Kit Satin Nickel
- Vista Hardware Long Bracket Kit Bronze
- Vista Hardware Long Bracket Kit Black
- Wright Hardware Long Bracket Kit Satin Nickel
- Wright Long Bracket Kit Oil Rubbed Bronze
- Wright Hardware Long Bracket Kit Black
- Wright Hardware Long Bracket Kit Barn Red

Complete Rolling Door Kit (with Short Brackets)

- QG111007
- QG111008
- QG121007
- QG121008
- QG1310BR02
- QG1310BR07
- QG1310BR08
- QG1310C02
- QG1310C07
- QG1310C08
- QG1310C0202
- QG1310C0207
- QG1310C0208
- QG1310CS02
- QG1310CS07
- QG1310CS08
- QG1310DH02
- QG1310DH07
- QG1310DH08
- QG1310GB02
- QG1310GB07
- QG1310GB08
- QG1310GB11
- QG1310HK02
- QG1310HK07
- QG1310HK08
- QG1310HS02
- QG1310HS07
- QG1310HS08
- QG1310IC02
- QG1310IC07
- QG1310IC08
- QG1310IC11
- QG1310NK02
- QG1310NK07
- QG1310NK08
- QG1310NR02
- QG1310NR07
- QG1310NR08
- QG1310PL02
- QG1310PL07
- QG1310PL08
- QG1310PL11
- QG1310RS02

- Spade Hardware Short Bracket Kit Oil Rubbed Bronze
- Spade Hardware Short Bracket Kit Black
- Fleur-de-Lis Hardware Short Bracket Kit Oil Rubbed Bronze
- Fleur-de-Lis Hardware Short Bracket Kit Black
- Basic Rectangle Hardware Short Bracket Kit Satin Nickel
- Basic Rectangle Hardware Short Bracket Kit Oil Rubbed Bronze
- Basic Rectangle Hardware Short Bracket Kit Black
- Circles Hardware Short Bracket Kit Satin Nickel
- Circles Hardware Short Bracket Kit Oil Rubbed Bronze
- Circles Hardware Short Bracket Kit Black
- Castle 2 Hardware Short Bracket Kit Satin Nickel
- Castle 2 Hardware Short Bracket Kit Oil Rubbed Bronze
- Castle 2 Hardware Short Bracket Kit Black
- Cube Stick Hardware Short Bracket Kit Satin Nickel
- Cube Stick Hardware Short Bracket Kit Oil Rubbed Bronze
- Cube Stick Hardware Short Bracket Kit Black
- Double Horse Hardware Short Bracket Kit Satin Nickel
- Double Horse Hardware Short Bracket Kit Oil Rubbed Bronze
- Double Horse Hardware Short Bracket Kit Black
- GingerBread Hardware Short Bracket Kit Satin Nickel
- GingerBread Short Bracket Kit Oil Rubbed Bronze
- GingerBread Hardware Short Bracket Kit Black
- GingerBread Hardware Short Bracket Kit Barn Red
- Hook Hardware Short Bracket Kit Satin Nickel
- Hook Hardware Short Bracket Kit Oil Rubbed Bronze
- Hook Hardware Short Bracket Kit Black
- Horseshoe Hardware Short Bracket Kit Satin Nickel
- Horseshoe Hardware Short Bracket Kit Oil Rubbed Bronze
- Horseshoe Hardware Short Bracket Kit Black
- Ice Cream Cone Hardware Short Bracket Kit Satin Nickel
- Ice Cream Cone Short Bracket Kit Oil Rubbed Bronze
- Ice Cream Cone Hardware Short Bracket Kit Black
- Ice Cream Cone Hardware Short Bracket Kit Barn Red
- Kaminski Wolf Hardware Short Bracket Kit Satin Nickel
- Kaminski Wolf Short Bracket Kit Oil Rubbed Bronze
- Kaminski Wolf Hardware Short Bracket Kit Black
- Notched Rectangle Hardware Short Bracket Kit Satin Nickel
- Notched Rectangle Hardware Short Bracket Kit Oil Rubbed Bronze
- Notched Rectangle Hardware Short Bracket Kit Black
- Palm-Leis Hardware Short Bracket Kit Satin Nickel
- Palm-Leis Short Bracket Kit Oil Rubbed Bronze
- Palm-Leis Hardware Short Bracket Kit Black
- Palm-Leis Hardware Short Bracket Kit Barn Red
- Round Stick Hardware Short Bracket Kit Satin Nickel

- QG1310RS07
- QG1310RS08
- QG1310ST02
- QG1310ST07
- QG1310ST08
- QG1310T02
- QG1310T07
- QG1310T08
- QG1310TM02
- QG1310TM07
- QG1310TM08
- QG1310TS02
- QG1310TS07
- QG1310TS08
- QG1310V02
- QG1310V07
- QG1310V08
- QG1310WR02
- QG1310WR07
- QG1310WR08
- QG1310WR11

- Round Stick Hardware Short Bracket Kit Oil Rubbed Bronze
- Round Stick Hardware Short Bracket Kit Black
- Stick Hardware Short Bracket Kit Satin Nickel
- Stick Hardware Short Bracket Kit Oil Rubbed Bronze
- Stick Hardware Short Bracket Kit Black
- Triangle Hardware Short Bracket Kit Satin Nickel
- Triangle Hardware Short Bracket Kit Oil Rubbed Bronze
- Triangle Hardware Short Bracket Kit Black
- Top Mount Hardware Short Bracket Kit Satin Nickel
- Top Mount Short Bracket Kit Oil Rubbed Bronze
- Top Mount Hardware Short Bracket Kit Black
- Tri-Star Hardware Short Bracket Kit Satin Nickel
- Tri-Star Hardware Short Bracket Kit Oil Rubbed Bronze
- Tri-Star Hardware Short Bracket Kit Black
- Vista Hardware Short Bracket Kit Satin Nickel
- Vista Hardware Short Bracket Kit Bronze
- Vista Hardware Short Bracket Kit Black
- Wright Hardware Short Bracket Kit Satin Nickel
- Wright Short Bracket Kit Oil Rubbed Bronze
- Wright Hardware Short Bracket Kit Black
- Wright Hardware Short Bracket Kit Barn Red

- QG40202
- QG40207
- QG40208

- Bi-Parting Center Door Stop
- Bi-Parting Center Door Stop Satin Nickel
- Bi-Parting Center Door Stop Oil Rubbed Bronze
- Bi-Parting Center Door Stop Black

Latches

- QG13070102
- QG13070107
- QG13070108

- QG Sliding Door Latch & Strike Satin Nickel
- QG Sliding Door Latch & Strike Oil Rubbed Bronze
- QG Sliding Door Latch & Strike Black



Bi-parting stop



Hook
2.5"W x 7.75"H



Stick
2.5"W x 9.75"H



Door Latch



QG41 Splice is used to join two rails together



Satin Nickel



Oil Rubbed Bronze




Barn Red



Black

Roller Strap Installation

1. Install the roller straps onto the top edge of the door. The location of these straps is critical for the proper, safe use of the rolling door.
2. The distance between the top of the door and the outer diameter of the back of the wheel (measured from the back of the door) should be $13/16" - 7/8"$ (this will achieve approximately $3/32"$ gap between the top of the door and the rail when these measurements are achieved).
3. Using the screws provided attach the strap to the door. It is very important that the screws are installed into solid wood, not hollow-core doors with thin veneer skins. It is also recommended that you predrill the screw holes. Make sure that proper vertical alignment of the strap is achieved before fastening the strap to the door.

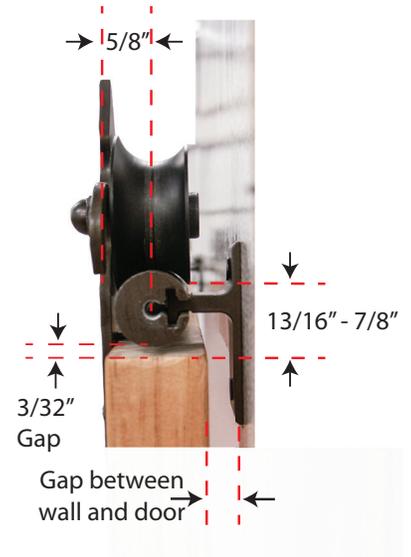


Rail Installation


1. The location of the rail is dependent on the height of the door, desired gap between the floor and bottom of door and desired overlay of top of the door to door opening.
2. Recommended spacing for the wall mounted brackets is 16"
3. The **Short Bracket** will accommodate doors up to 1-1/2" thick, the **Long Bracket** will accommodate doors up to 2-1/4" thick.
4. Wall brackets must be mounted securely into the studs behind the sheetrock. If the brackets are to be mounted to the moulding surrounding the opening, the moulding must be firmly secured to the wall framework.

End Stops and Center Guide (floor mounted & wall mounted)

1. After installing the door onto the rail, slide the door to the desired opened position.
2. Install the End Stop bracket to the floor or wall so that the door stops in the desired opened position.
3. Install the Center Guide bracket so that the door will always be captured by this bracket in the fully opened and fully closed position.
4. Repeat step #2 for installation of the other End Stop bracket when the door is in the closed position.

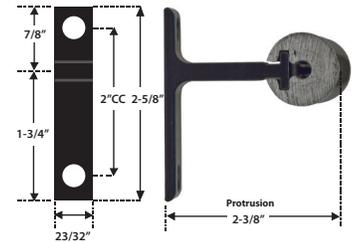

Long Bracket

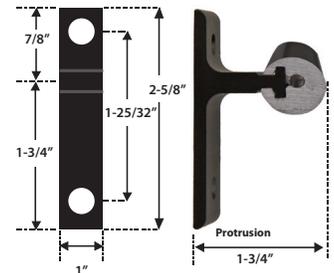

Short Bracket

Dimensional Specifications

Gap between the wall and the door

Using the Short Bracket: Door thickness minus $1-7/8" = \text{gap}$

Using the Long Bracket: Door Thickness minus $2-1/2" = \text{gap}$

Door width recommendation: 4" wider than the opening (2" on each side)

Door height recommendation: The height will depend on location of the bracket, but in applications where the brackets are not above the door opening (narrower door openings where the brackets can be on either side of the opening) 1" above the opening would be sufficient.

