


# MR. GOODBAR®

## The Original Home Security Bars

### WINDOW BAR INSTALL INSTRUCTIONS

**TOOLS REQUIRED:** 5/32" drill bit, Robertson (square head) screw driver #2 & 3, Pencil, Tape Measure, Level (optional)

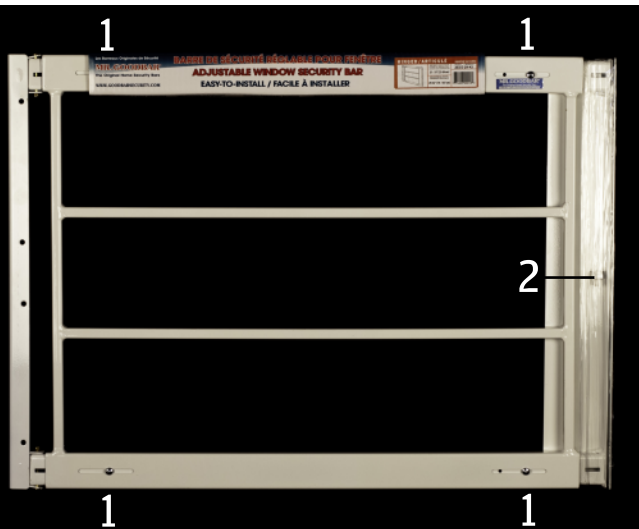

1. Remove 1/2" adjustment screws (2 or 4 depending on model) from face of grille before proceeding.
2. **HINGED MODELS ONLY:** Remove nylon shipping plugs.

### HELPFUL HINTS

*The following tips will help ensure trouble-free installation of your Mr. Goodbar® security bars:*

- **BARS MAY BE MOUNTED WITH LOCK ON EITHER LEFT OR RIGHT SIDE.** IF MOUNTING LOCK ON LEFT SIDE, REVERSE RIGHT AND LEFT WHEN FOLLOWING INSTALLATION INSTRUCTIONS.
- **HINGED MODELS ONLY:** Nylon shipping plug should be removed and replaced with either a Keyless Quick Release unit or a padlock (not included).
- **IMPORTANT:** If you are planning on using the Keyless Quick Release Locking System the security bars must be mounted no deeper than 1 inch from the wall surface.
- **FINISHING:** Small steel inserts are provided with your mounting hardware to make the screws tamper resistant. After the bars are installed, tap the inserts into the screw heads. Place insert on clear tape, affix over the head of the screw and tap in with a hammer.



3. Centre **LEFT GUIDE RAIL** on the left side of window and mark position of screws.
  - Pre-Drill screw holes with a 5/32" bit.
  - Fasten with 1 3/4" screws.



4. Slide **GRILLE** onto **LEFT GUIDE RAIL**.

### EMERGENCY EXIT WINDOWS

Typically, windows in sleeping rooms and basements with habitable space are used as a secondary means of escape and should be secured with our Keyless Quick Release Locking System (sold separately). Consult your local building and fire codes or ask your local fire department to recommend secondary escapes.

# MR. GOODBAR<sup>®</sup>

## The Original Home Security Bars



**05.** Slide **RIGHT GUIDE RAIL** onto **GRILLE**.

(NOTE: For HINGED MODELS use RIGHT GUIDE RAIL plus LOCK END BRACKET)



**06.** Position **RIGHT GUIDE RAIL** on right side of window and check level.

(NOTE: For HINGED MODELS position RIGHT GUIDE RAIL plus LOCK END BRACKET)



**07.** With window bar level, mark position of screws.



**08.** Pre-drill the holes for the screw and fasten with 1 3/4" screws.

**09.** Ensure all screws are securely fastened and penetrate the framing studs. Screws provided are adequate for most applications.



**10.** Position **GRILLE** and fasten with adjustment screws. Screws can be used to make minor corrections to ensure grille operates smoothly.

**11.** Insert extra (1/2") screws into 2nd set of holes in the adjustment slot (see step 1).

**12.** Tap **STEEL INSERTS** into all screw heads (not pictured).