


ASSEMBLY INSTRUCTIONS

ROSEWELL WALL SCONCE

3010833MB

1. Carefully remove all lamp parts from the box and spread on a flat clean surface.
2. Decide on sconce placement. Ideal placement will depend on the function of your light and the room placement.
3. Mark drill holes for the mounting plate (B).
4. Drill into wall and screw securely. Insert socket arm (C) and (A) with mounting screws (G).
5. Slip shade (F) onto socket cup (H) and attached firmly with socket ring (E).
6. Insert bulb (D), not included (suggested: E26, A15, 6W, 2700K, 90+ CRI).
7. Plug it in to a 100v outlet and enjoy!

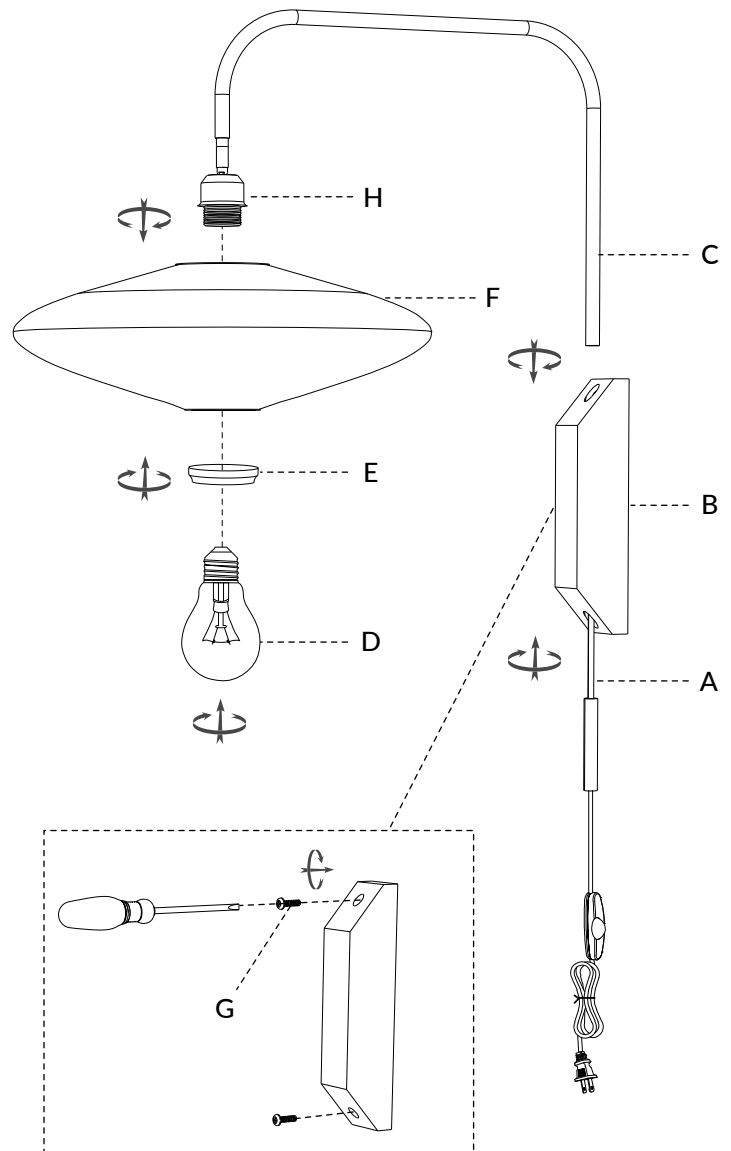

IMPORTANT SAFETY INSTRUCTIONS

This lamp has a polarized plug (one blade is wider than the other) as a safety feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless the plug can be fully inserted. Do not alter the plug.

IMPORTANTES INSTRUCCIONES DE SEGURIDAD

Esta lampara tiene un enchufe polarizado (una navaja es mas ancha que la otra) como forma de seguridad para reducir el riesgo de un shock electrico. Este enchufe polarizado entrara en una conexi3n solo de un lado. Si el enchufe no entra en la conexi3n trate al reverso. Si aun asi no entra, contacte a un electricista calificado. Nunca use una extension a menos que el enchufe pueda ser conectado completamente. No altere el enchufe.



WWW.NOVAOFCALIFORNIA.COM