




ASSEMBLY INSTRUCTIONS

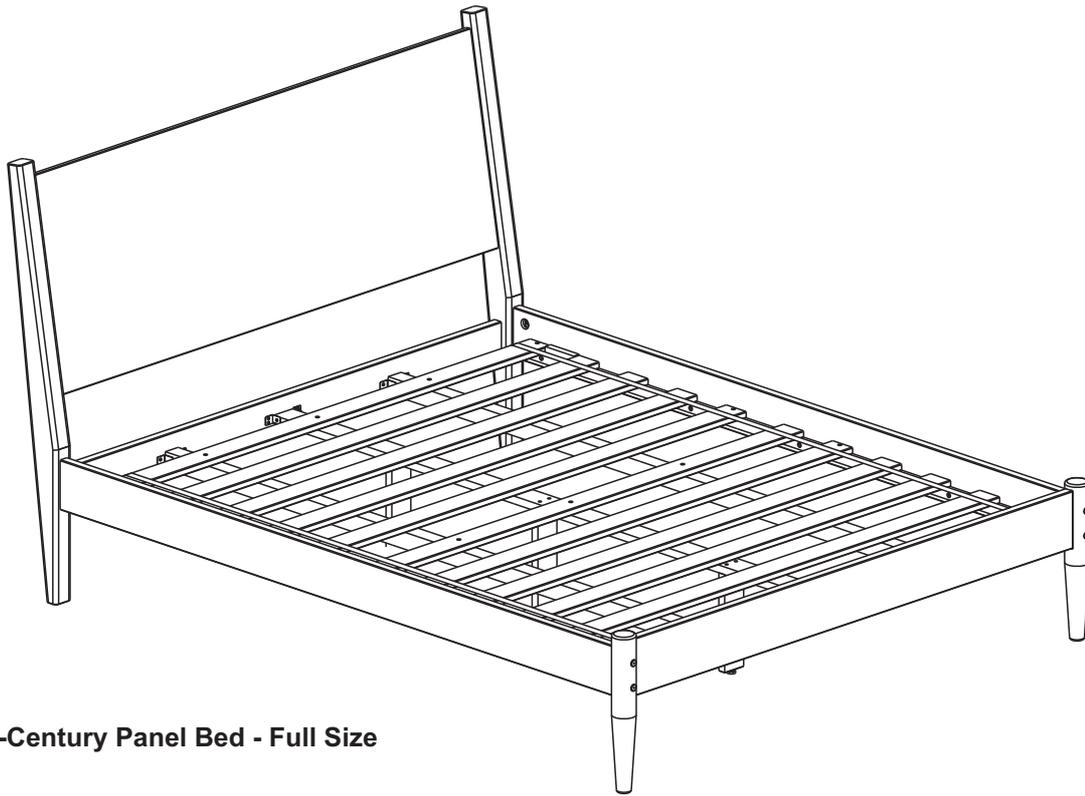

Mid-Century Panel Bed - Full Size

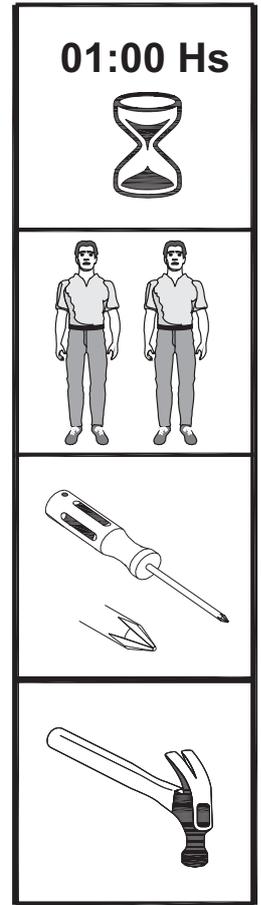

HARDWARE INCLUDED



A - 10,0x50 Wood Dowel
Qty. 20



B - 4,0x40 Screw
Qty. 16




C - 3,5x16 Screw
Qty. 40




D - 3,5x30 Screw
Qty. 20



E - Screw Nut
Qty. 08




F - Allen Key
Qty. 01




G - Support Bar
Qty. 02



H - 1/4x100 Screw
Qty. 08



I - 7,0x50 Screw
Qty. 06

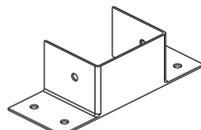


K - Support Bar
Qty. 04




L - Wood Hole Cover
Qty. 04


PARTS INCLUDED

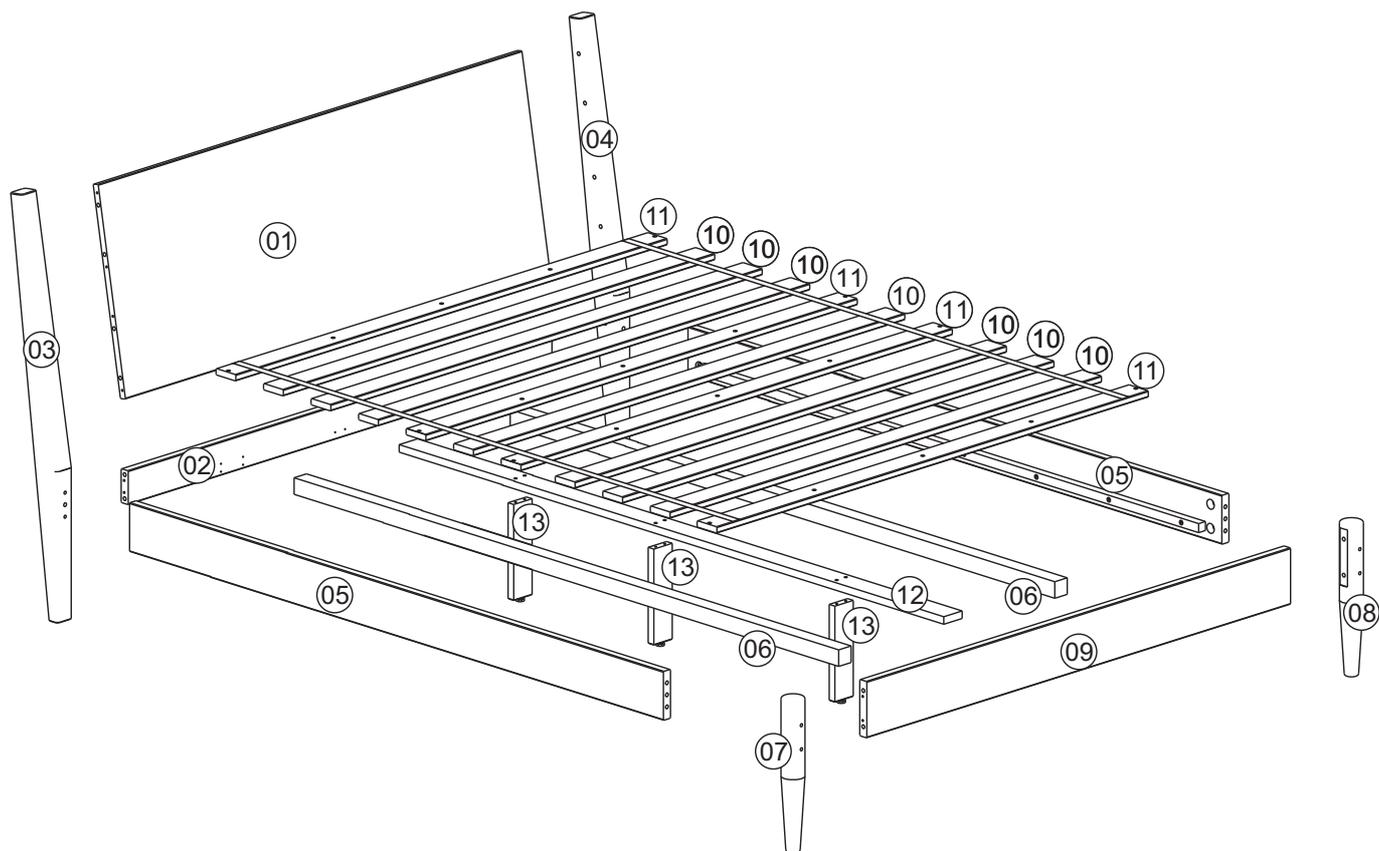


STEP 1

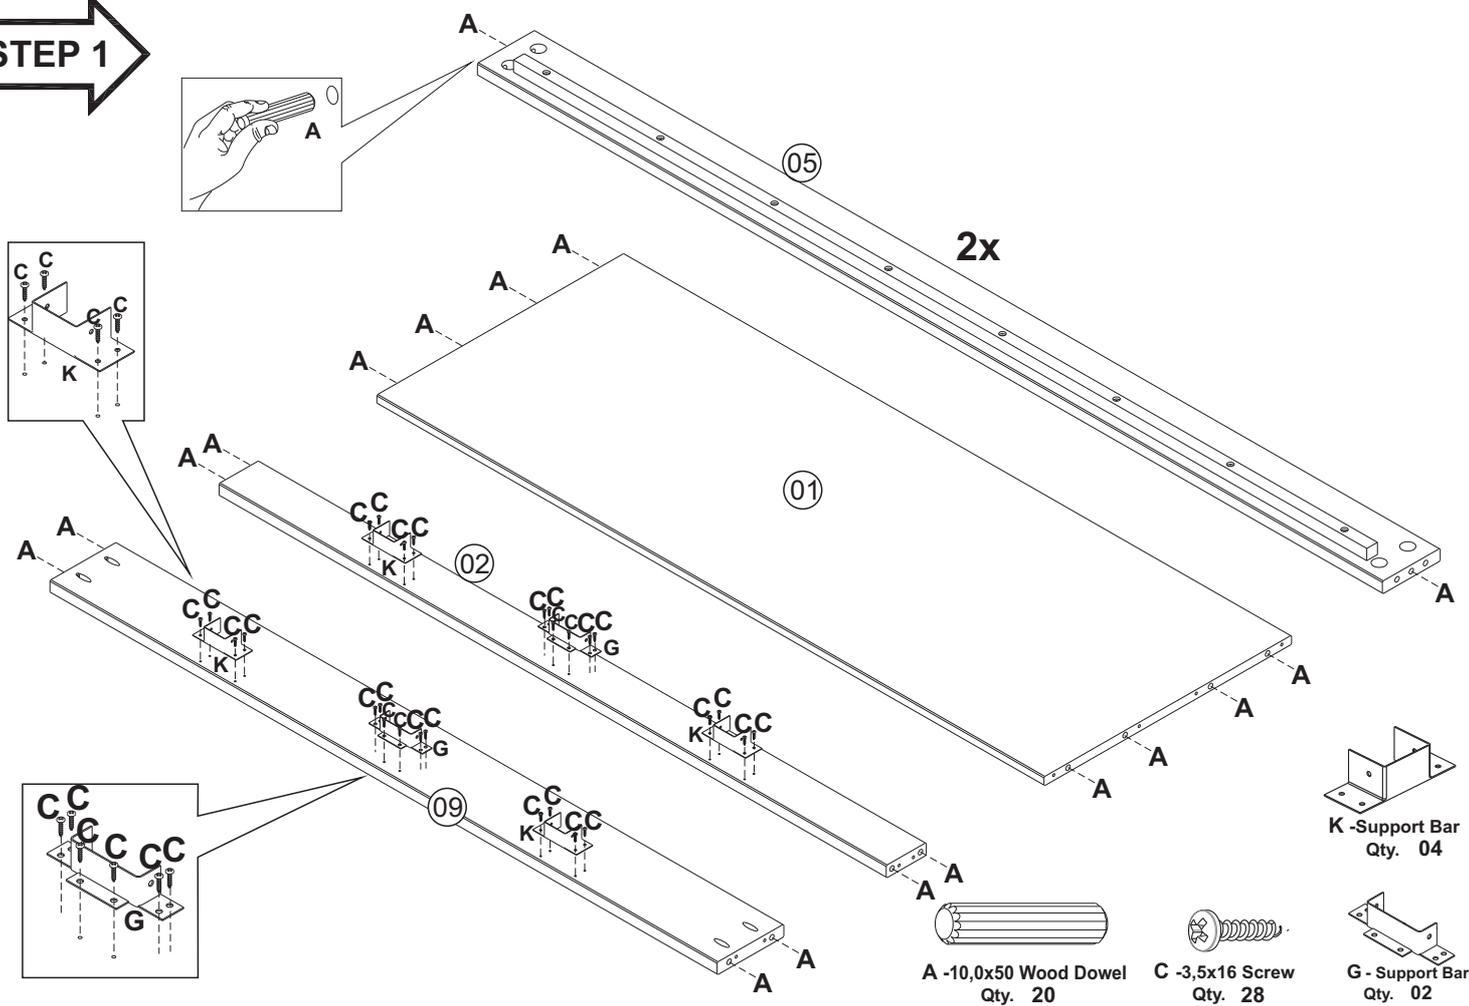


STEP 2

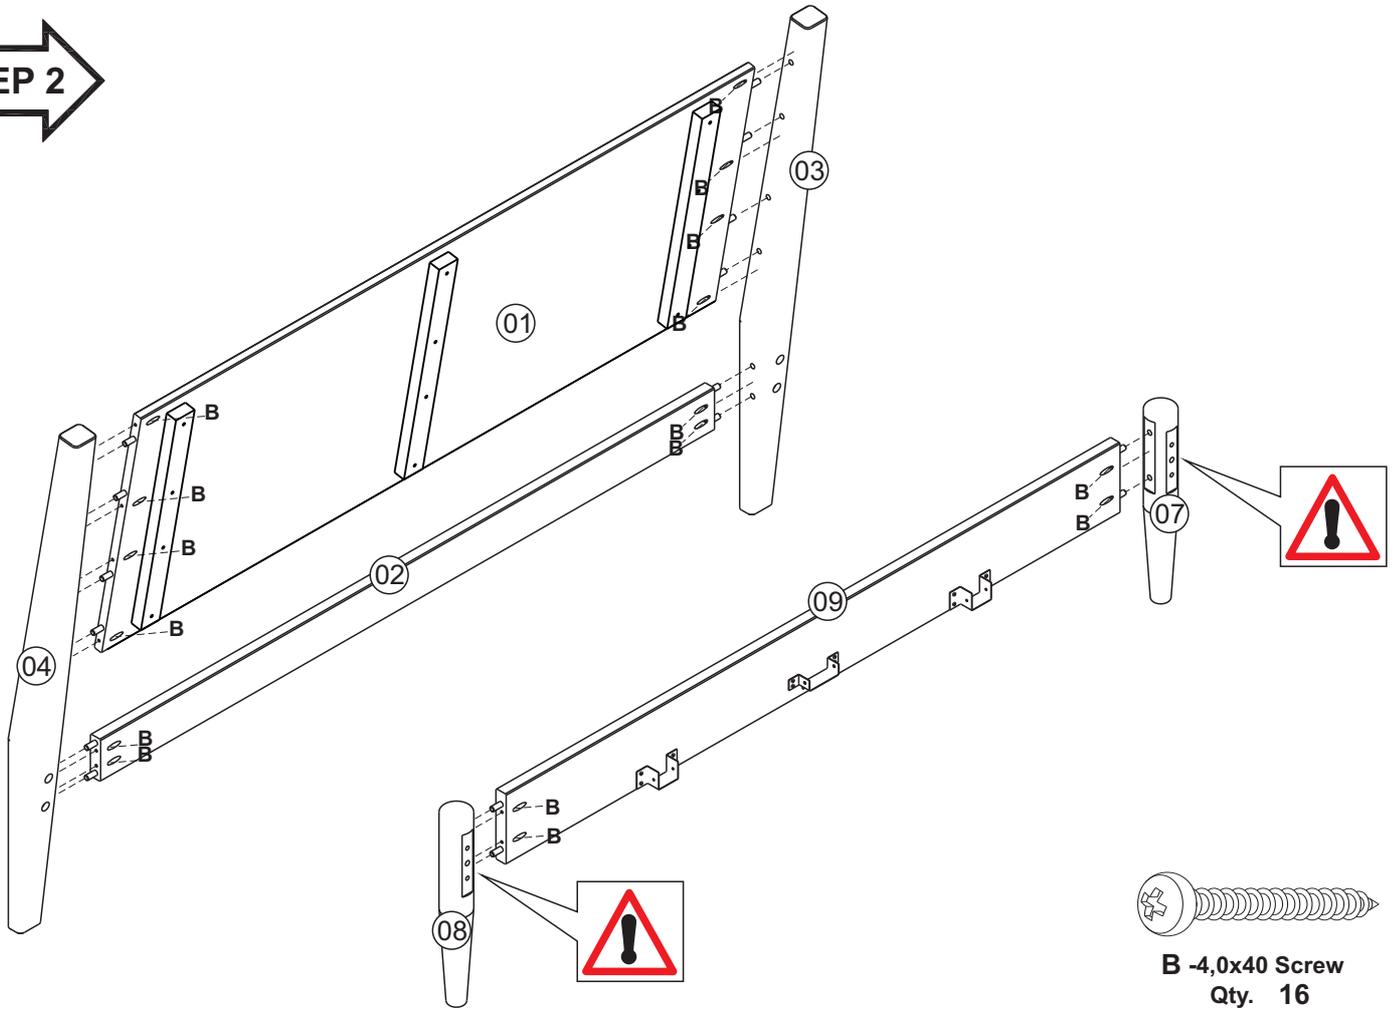

STEP 3

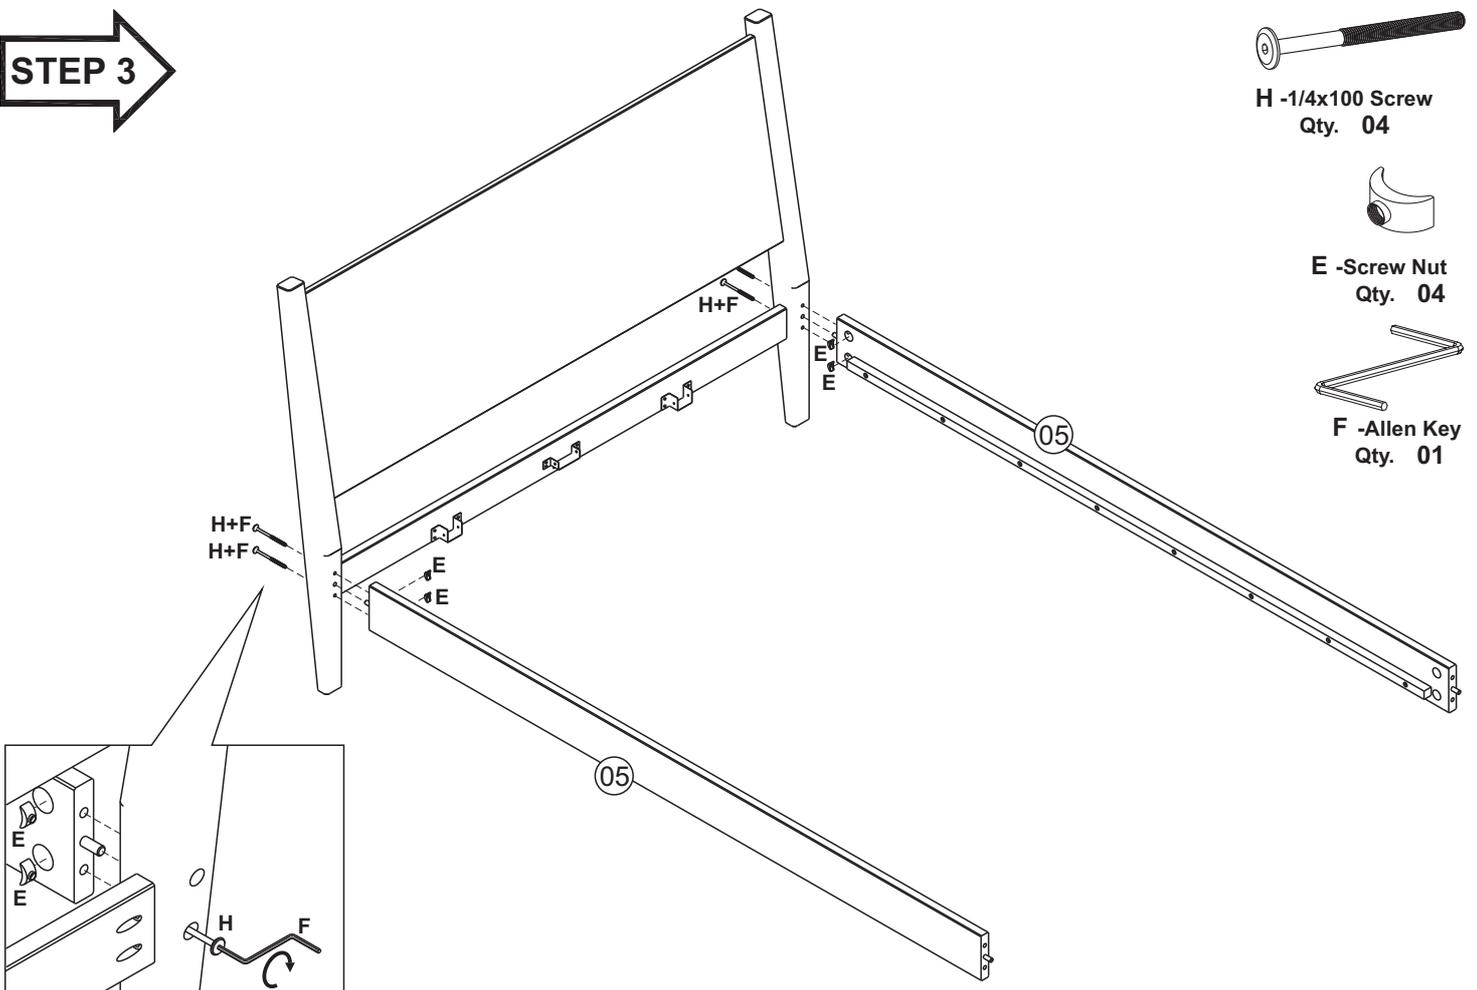

STEP 4

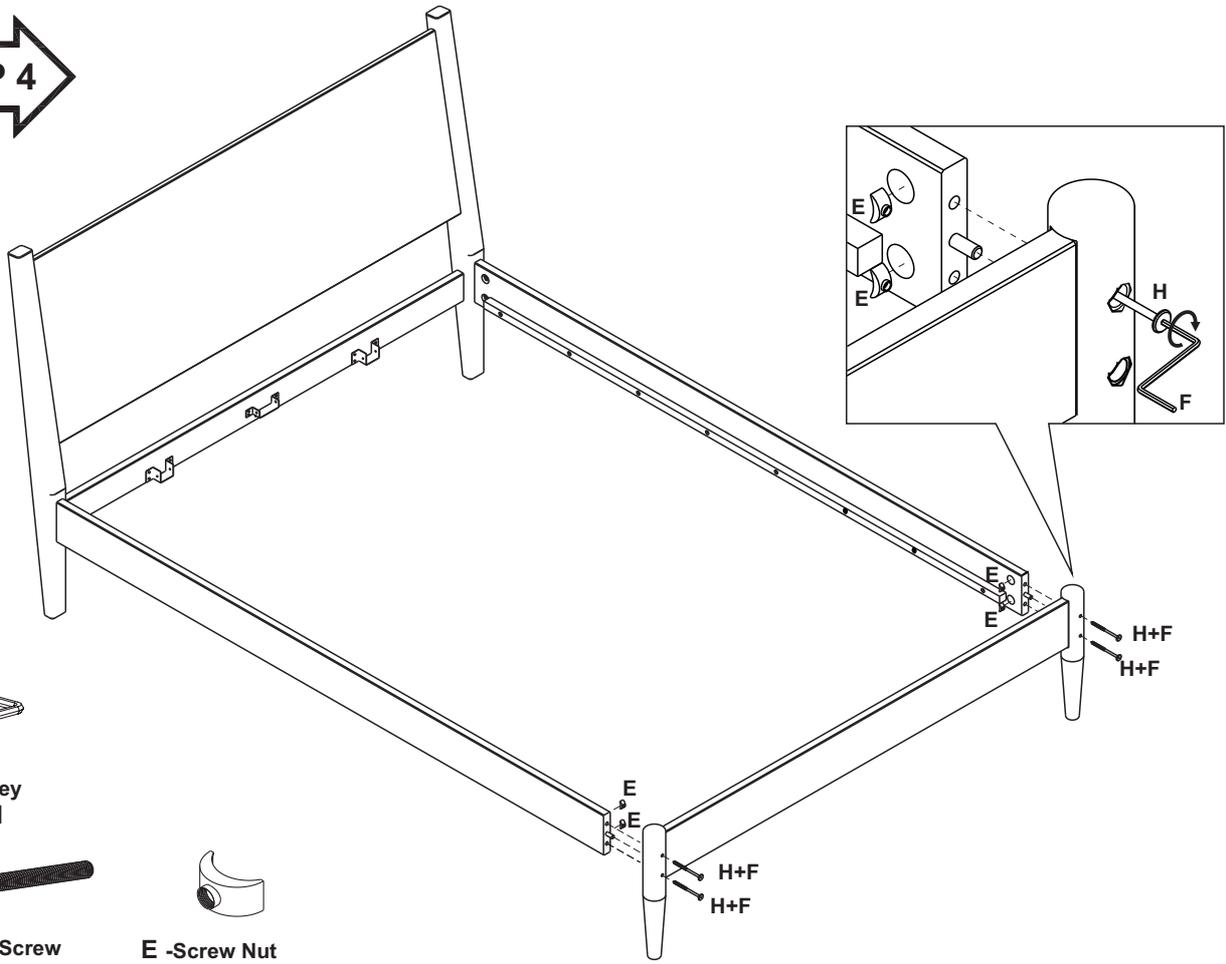


F -Allen Key
Qty. 01

H -1/4x100 Screw
Qty. 04

E -Screw Nut
Qty. 04



STEP 5

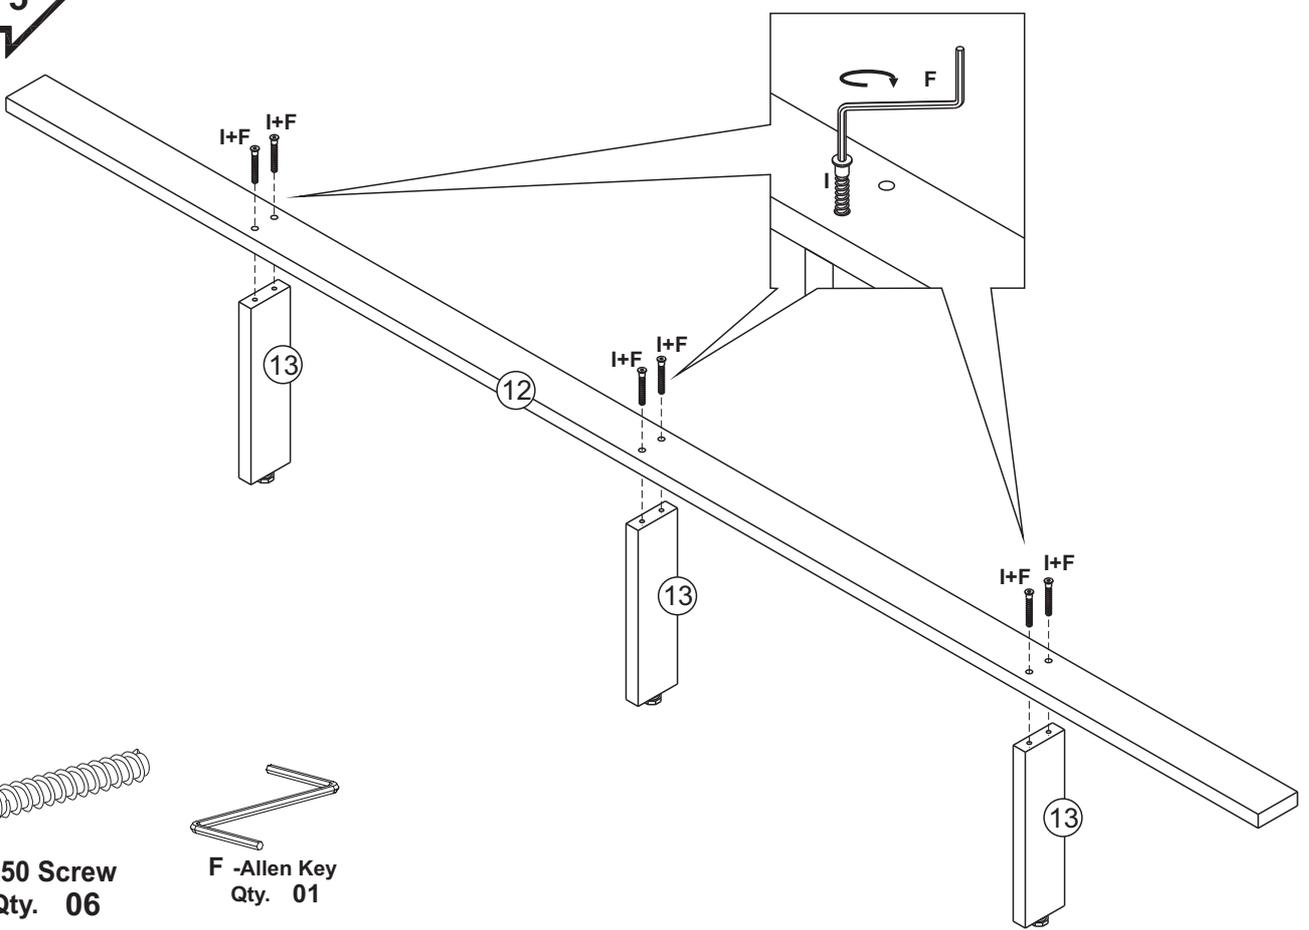

I - 7,0x50 Screw
Qty. 06


F -Allen Key
Qty. 01

STEP 6

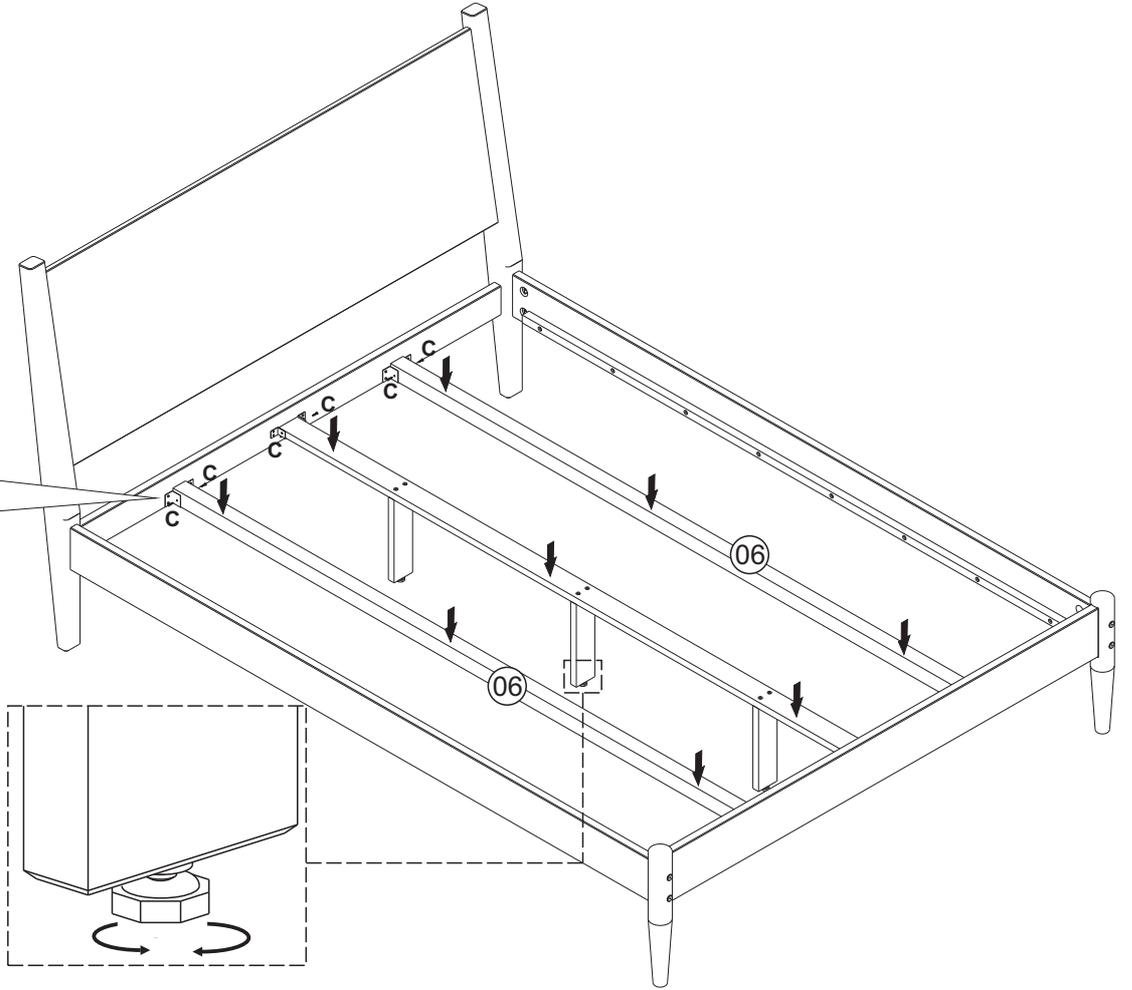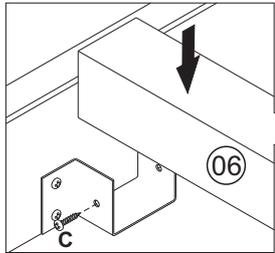



C -3,5x16 Screw
Qty. 12

STEP 7

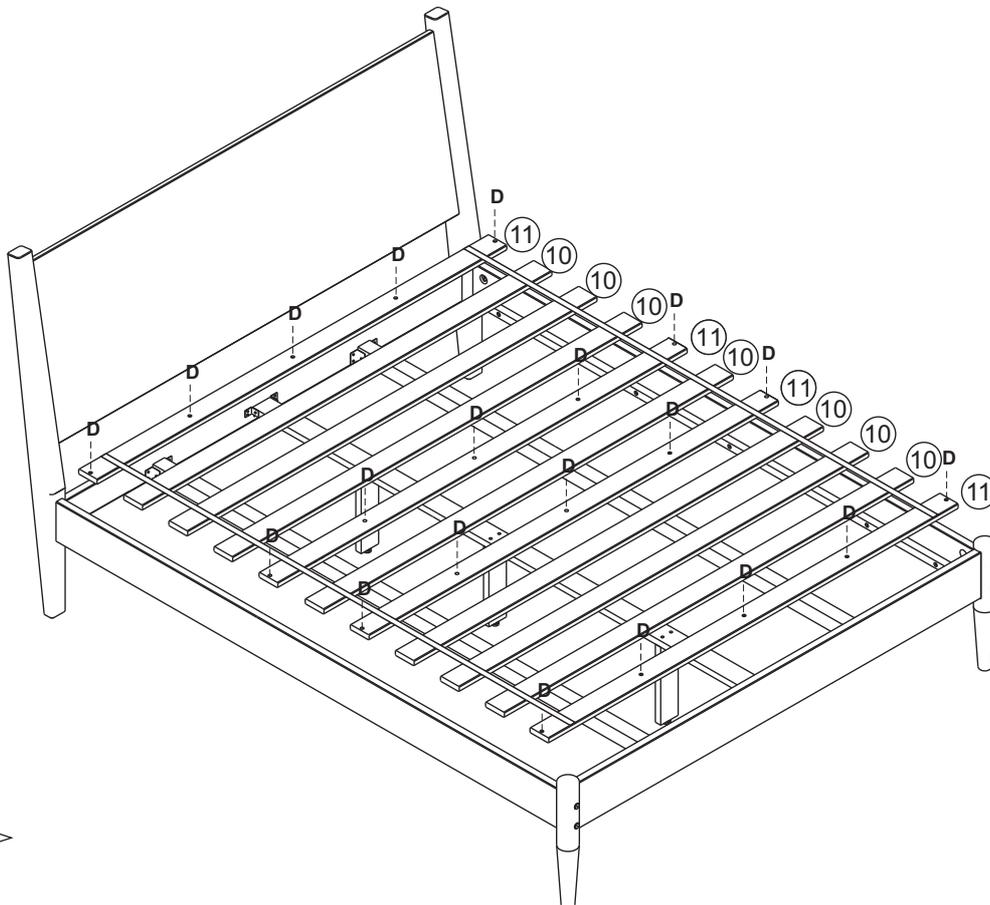

D -3,5x30 Screw
Qty. 20

STEP 8

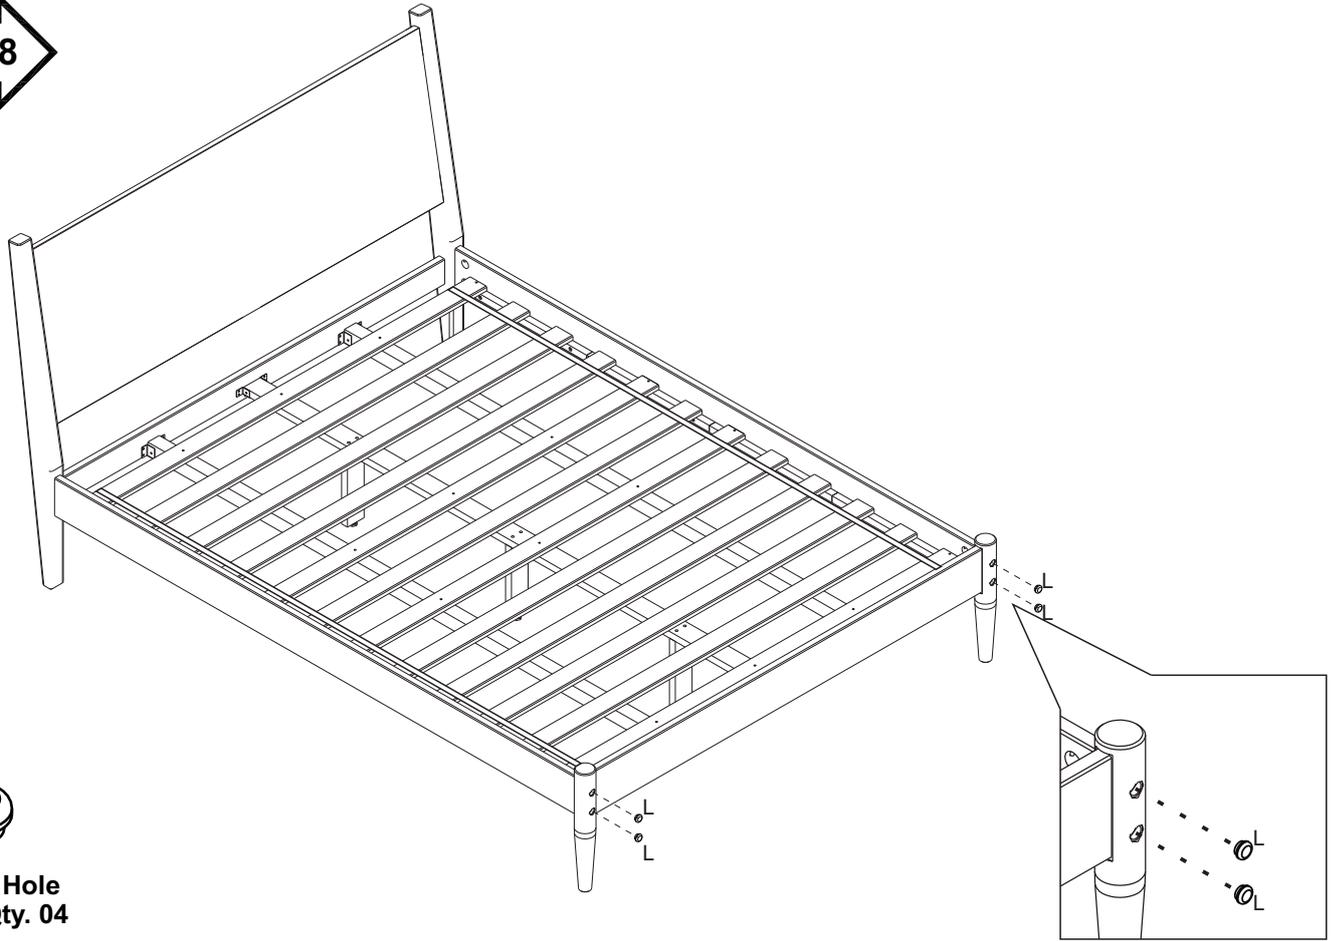

**L - Wood Hole
Cover - Qty. 04**
