


INSTALL BULBS AND LAMP SHADE

1. Install the Lamp Body

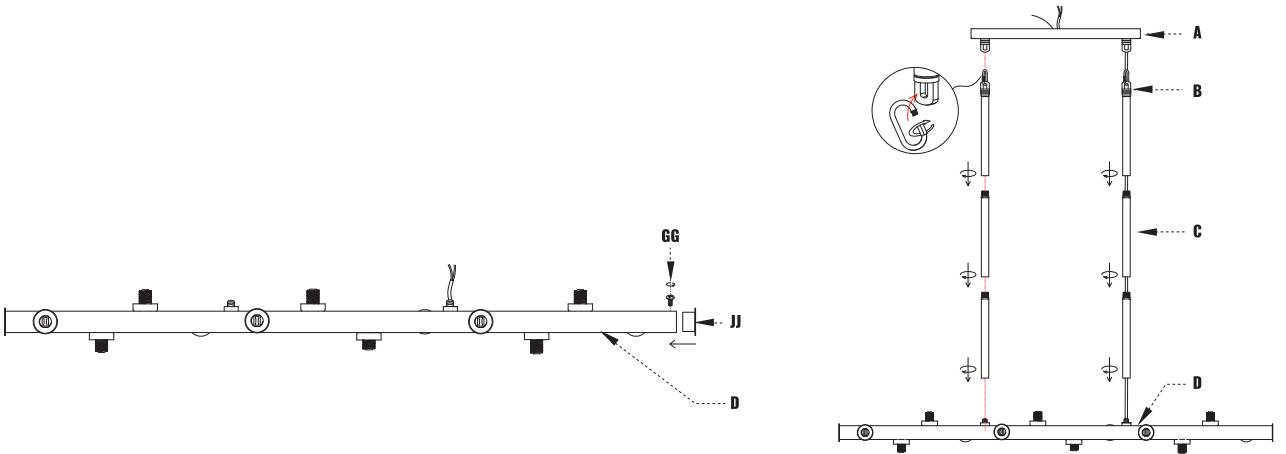


Step 1 : Put Square Plug (JJ) into Lamp Body (D) and lock it with M4 Screw (GG).

Step 2 : Pass the power cord of the Lamp Body (D) through Hanging Rod B (C), Hanging Rod A (B), Canopy (A) as shown in the picture.

Step 3 : Rotate and fix the Hanging Rod B (C) onto the Lamp Body (D), then rotate and fix the Hanging Rod A (B) onto the Hanging Rod B (C).

Step 4 : Loosen the hooks on Hanging Rod A (B) and buckle them on Canopy (A).

INSTALL BULBS AND LAMP SHADE

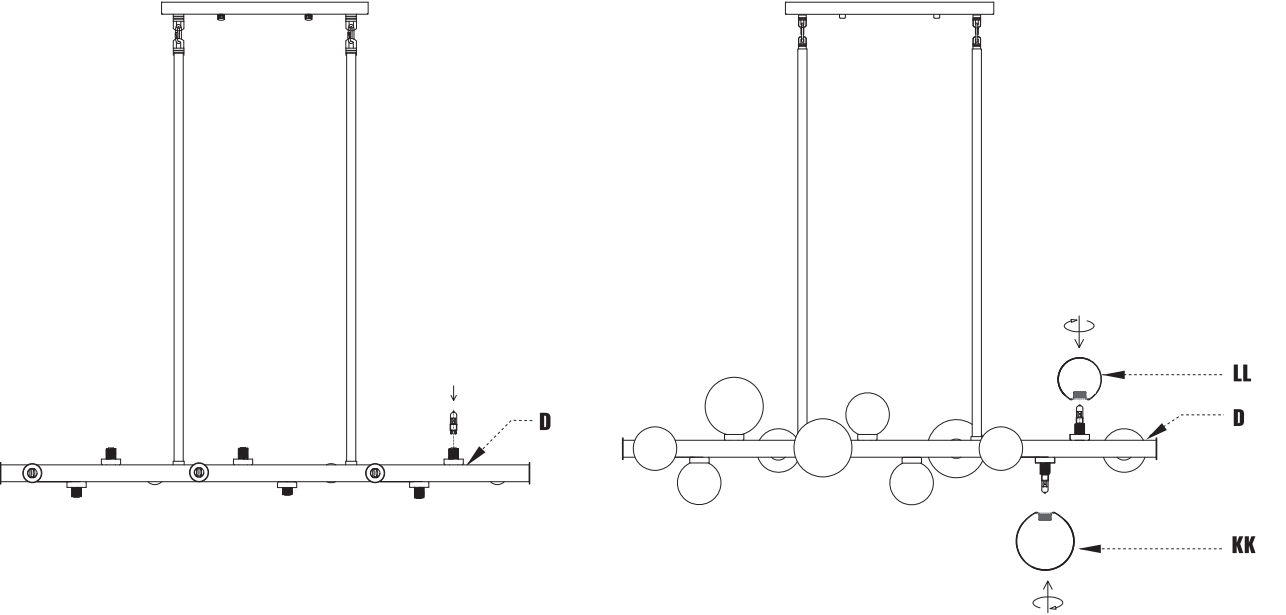


Step 1 : Install the G9 bulbs (not included).

Step 2 : Install the Large Lamp Shade (KK) and Small Lamp Shade (LL) on the sockets in the order as the picture shows.

Note :
This lamp uses G9 bulbs base and can only be used in conjunction with LED bulbs up to 7W. Fully dimmable when used with dimmable bulbs and compatible dimming switches (not included).

INSTALLATION
MANUAL

CHANDELIER
Model No.: HLP370BRZ-12A

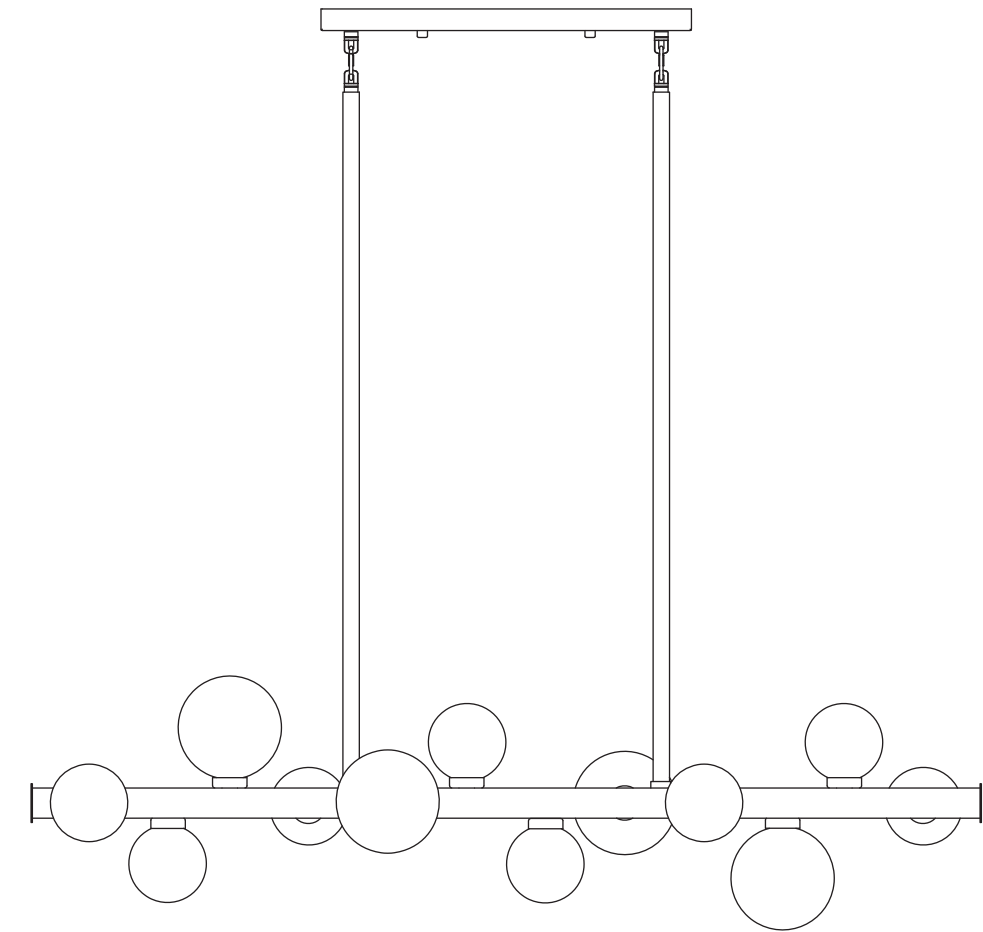


Scan for Installation Video


TOOLS REQUIRED




Ladder



Pliers




Wire Strippers








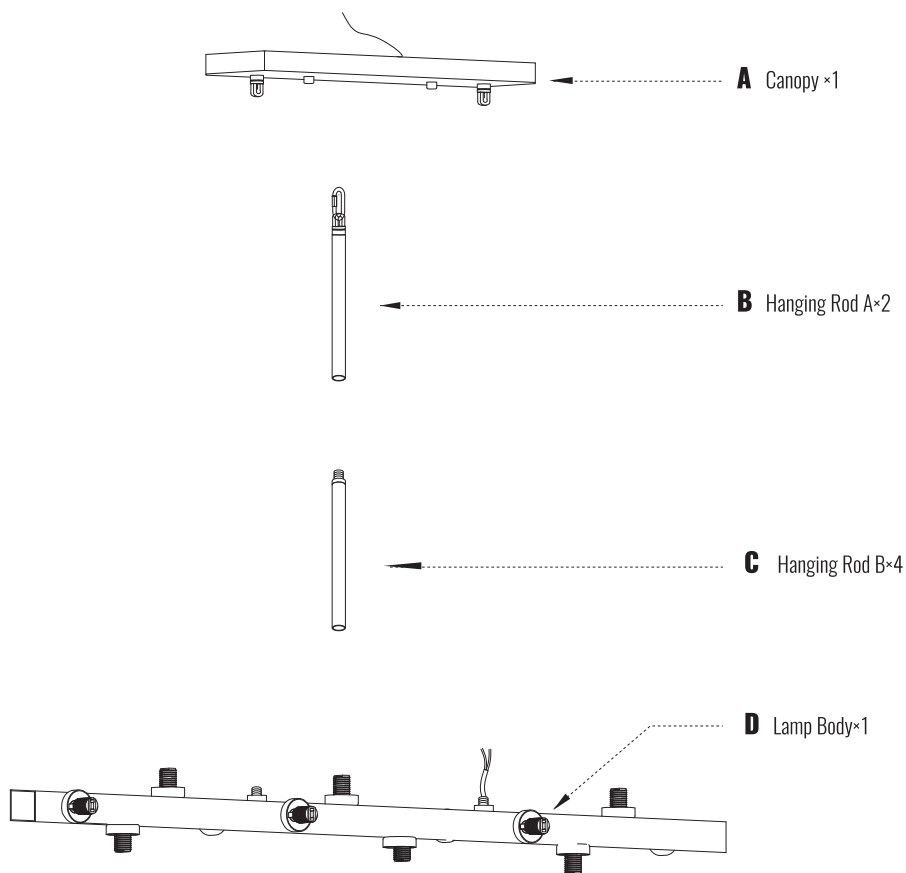







Screwdrivers

PACKING LIST




INSTALLATION KIT

AA  Mounting Bracket 1×	BB  Ground Screw 1×	CC  Outlet Box Screw 2×	DD  Washer 2×	EE  Cap Nut 4×
FF  Wire Nut 3×	GG  M4 Screw 2×	HH  Plastic Anchor 2×	II  Wood Screw 2×	JJ  Square Plug 2×
KK  Large Lamp Shade 4×	LL  Small Lamp Shade 8×	MM  Gloves 1×		

NOTE:
1. Ground Screw (BB) has already been pre-installed in the Mounting Bracket (AA), and AA/EE have already been pre-installed in Canopy (A).

MOUNTING AND WIRE

1. Install the Mounting Bracket

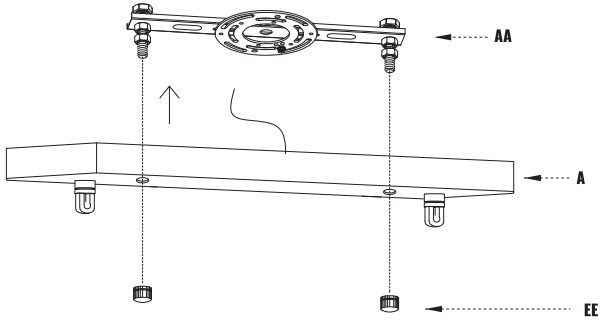


Step 1: Loosen the Cap Nut (EE) from Canpoy (A), take the Mounting Bracket (AA) out and set it aside for use.


Step 2: Pass the Outlet Box Screw (CC) through the Mounting Bracket (AA) into the Outlet Box.

Step 3: Pass Wood Screw (II) through Washer (DD) and then through Mounting Bracket (AA), then secure it into Plastic Anchor (HH).

NOTE:
Plastic Anchor (HH) needs to be pre-installed into the ceilings.

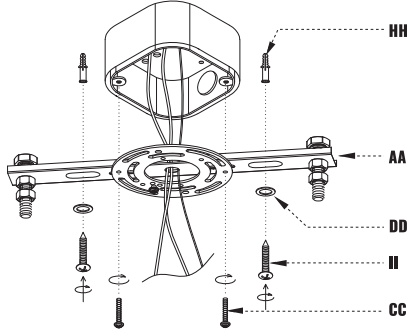


2. Connect the Wires

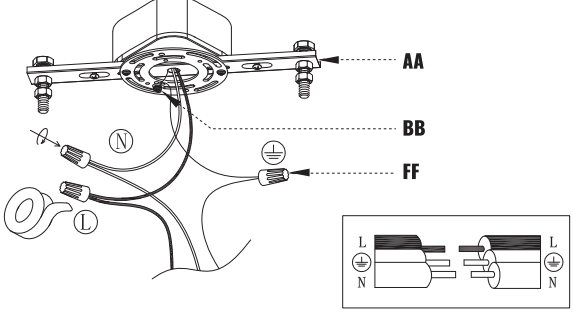

Step 1: Connect the wires from the fixture to the house supply wires with Wire Nuts (FF), ground wire (green, green/yellow, or bare) to ground wire, neutral wire (white) to neutral wire, and hot wire (black) to the hot wire. Wrap the connection with electrical tape.

Step 2: Spread apart the wires so that the hot wires are on one side of the outlet box and the neutral wires are on the other side.

3. Fix the Canopy

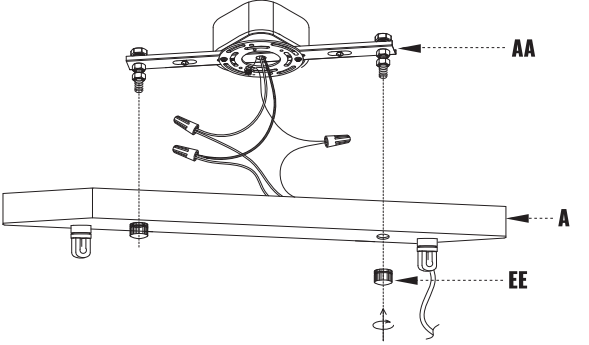

Fix the Canopy (A) onto the Mounting Bracket (AA) with Cap Nuts (EE).