
TEAMSON HOME


Elegant Home Fashions Russell Medicine Cabinet with Mirror and Two Ouhes - Salt Oak


TIME SAVER!
3D Interactive Instruction

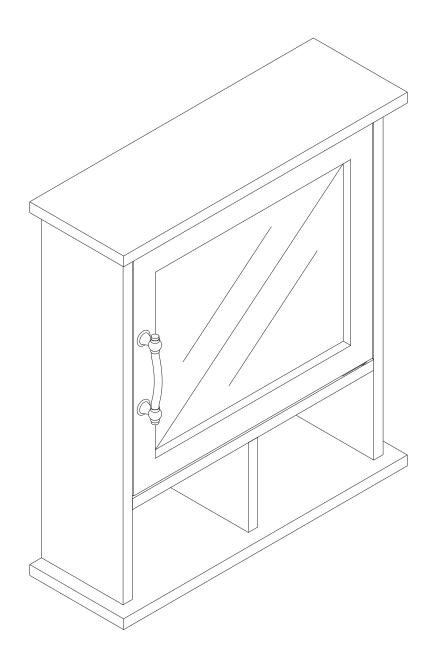


F0015



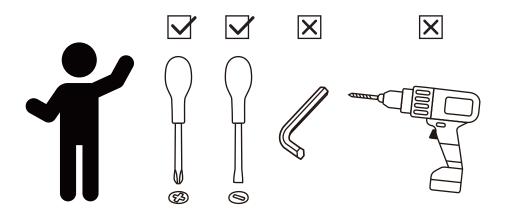

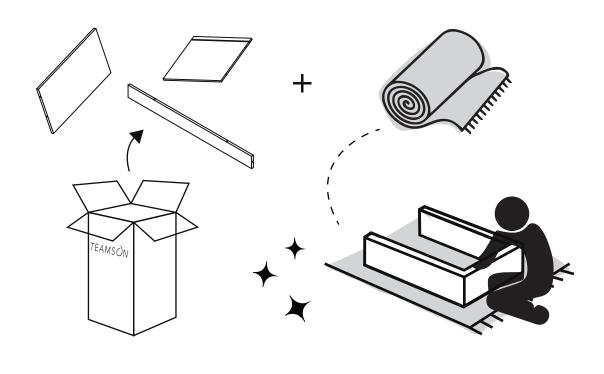

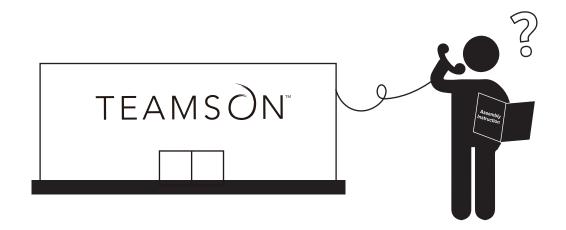

^{**} Got questions? Please have your product code (on the first page of this instruction, e.g. TD-12345A) and the order number ready, give us a call or email us through our customer care support! We are always ready to assist you!

TEAMSON HOME



3D Interactive Instruction www.teamsonhome.com

Serving you well gives us great joy!

USA +1(770)-246-4898

Mon - Fri 9:00am ~ 5:00pm EST ⊠ service@eleganthf.net

EU/UK··· +44(0)1952-916-050

Mon - Thu 9:00am ~ 5:00pm GMT Friday 9:00am ~ 4:00pm GMT ⊠ support@teamson.co.uk

ASSEMBLY INSTRUCTIONS-IMPORTANT

Carefully unpack & identify each component before attempting to assemble. Refer to parts list. Please take care when assembling the unit and always set the parts on a clean, soft surface. If you require any assistance with assembly, parts, please call the company you place order with or please email to:service@eleganthf.net

INSTRUCCIONES PARA ARMAR-IMPORANT:


Desempaque cuidadosamente e identifique cada componente antes de tartar de empezar su ensambladura. Verifique la lista de partes. Por favor tenga cuidado cuando arme la unidad y siempre coloque las piezas sobre una superficie plana, suave y limpia. Si necesita ayuda con el armado, envie un correo electzórico a service@eleganthf.net

DIRECTIVES DE MONTAGE-IMPORTANT:

Avant de commencer l'assemblage, déballez délicatement toutes les pièces et repérez-les sur la liste des pièces. Procédez avec soins durant l'assemblage et posez toujours les pièces sur une surface proper, douce et lisse. sie vouo plait e-mail á service@eleganthf.net


Thank you for choosing Teamson Home


Exploded Drawing

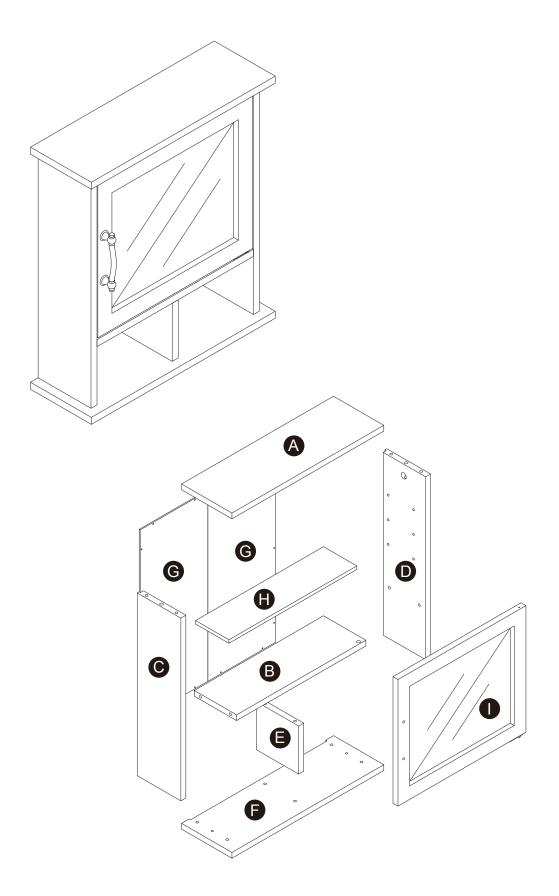



Product Parts

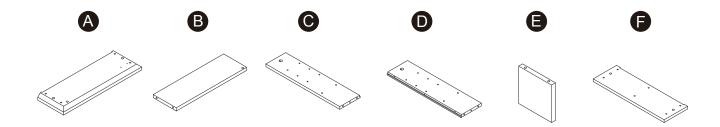

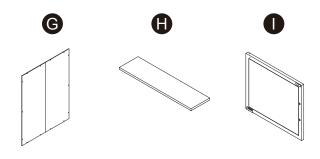



A WARNING:

- 1. Do not let any sharp objects touch or rub the surface of the product.
- 2. When assemblying, do not let children play around the working area.
- 3. Please confirm all parts are correct before starting the assembly process.
- Do not tighten all bolts and screws completely until the entire unit has been assembled and set up.

Hardware

























Ø3*12 D=7

16 pcs

2 pcs

1 pc

2 pcs

16_{pcs}

Ø6*30

 $2 \, \mathsf{pcs}$





9



1















Ø4*35

 $2 \, \mathsf{pcs}$

4 pcs

2 pcs

Ø3*12

1 pc

2 pcs

1 pc









Ø4*38

2 pcs

 $2 \, \mathsf{pcs}$



Step 1

















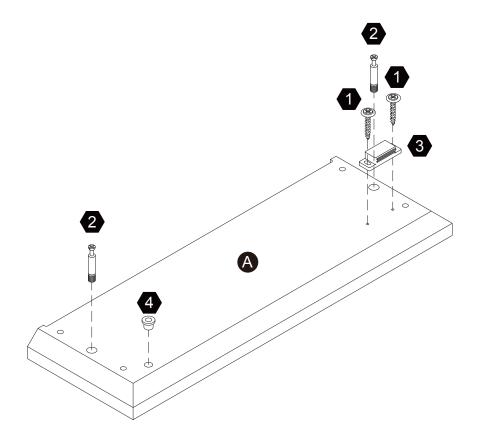

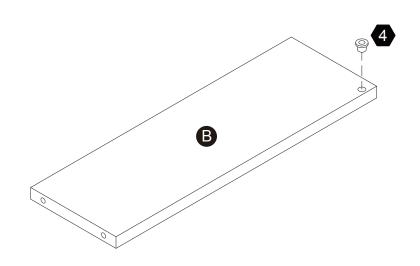















Ø6*30

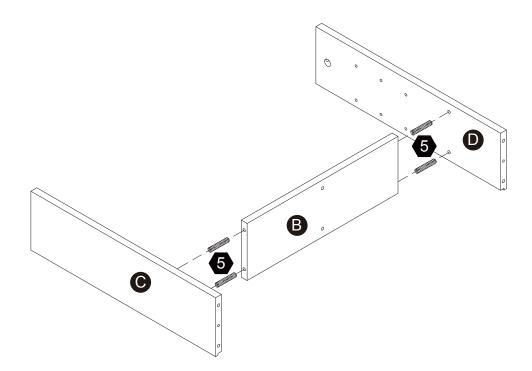

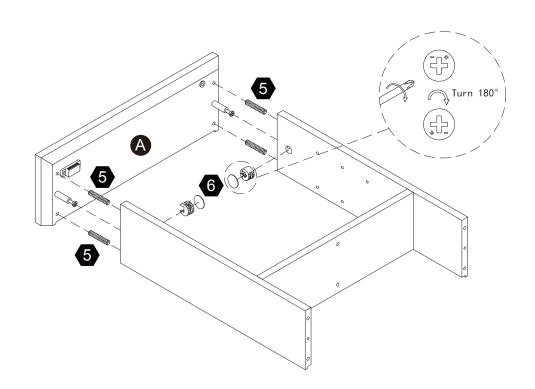









 $8 \ \mathsf{pcs}$





2 pcs

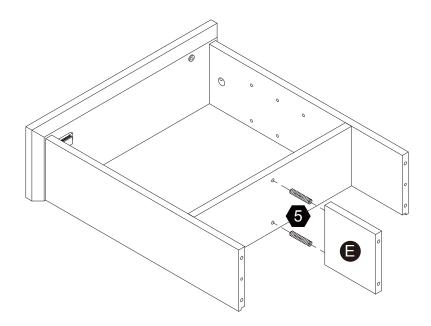

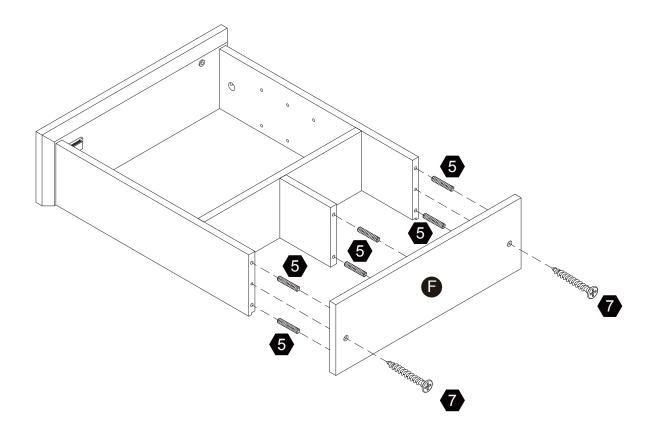













Ø3*12 D=7

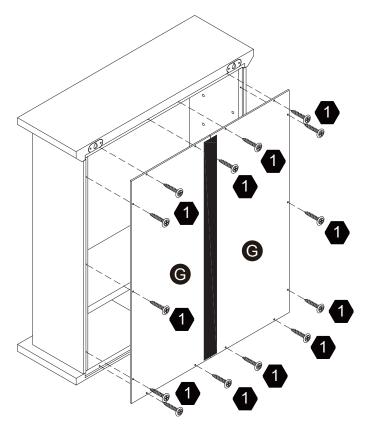

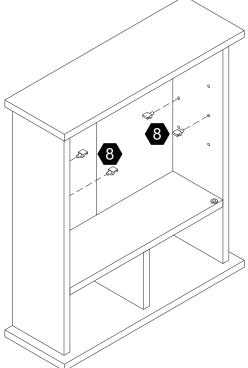






Step 5



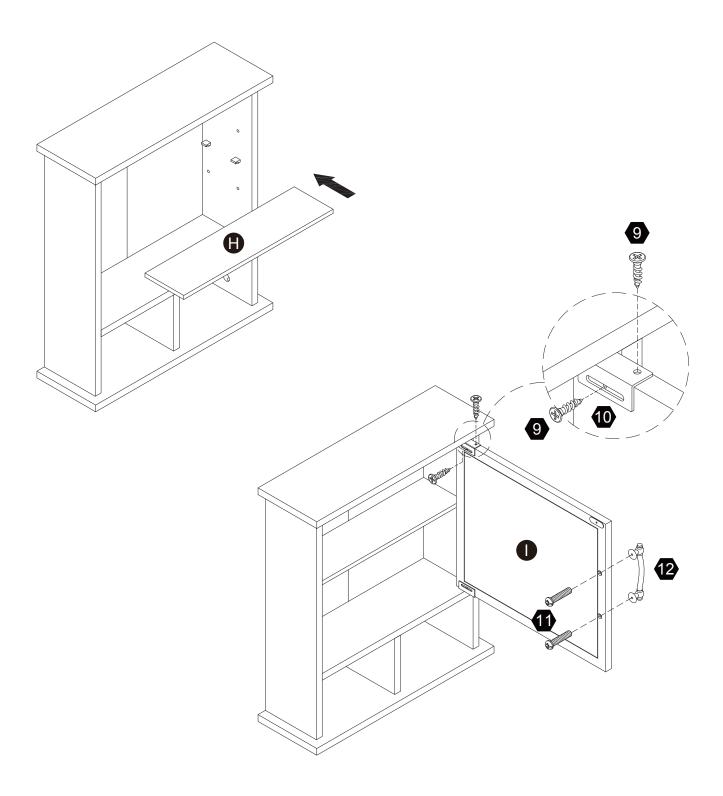



Step 6

