


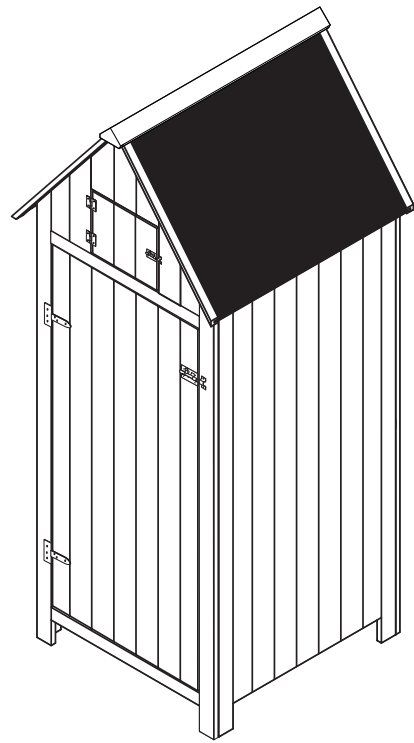

ASSEMBLY INSTRUCTIONS

WOOD GARDEN SHED

SKU: T-PS23-0221-SBG

BE
YOUR
LIFE BUILDER












www.patiowell.com



Patiowell
Wood Garden Shed
Installation Tutorial
[https://www.patiowell.com/
pages/video-t-ps23-0221-sbg](https://www.patiowell.com/pages/video-t-ps23-0221-sbg)


 saleservice@patiowell.com

PARTS

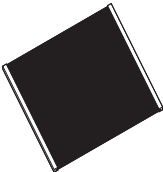 1 1pcs	 2 1pcs	 3 2pcs	 4 1pcs
 5 1pcs	 6 1pcs	 7 3pcs	 8 1pcs
 9 1pcs	 10 2pcs	 11 1pcs	 12 2pcs
 13 1pcs	 M4*40 A 19pcs	 M4*25 B 22pcs	 M3*16 C 56pcs
 D 2pcs	 E 1pcs	 F 8pcs	 G 1pcs  H 8pcs

STEP 1

When screwing, it is necessary to be vertical.

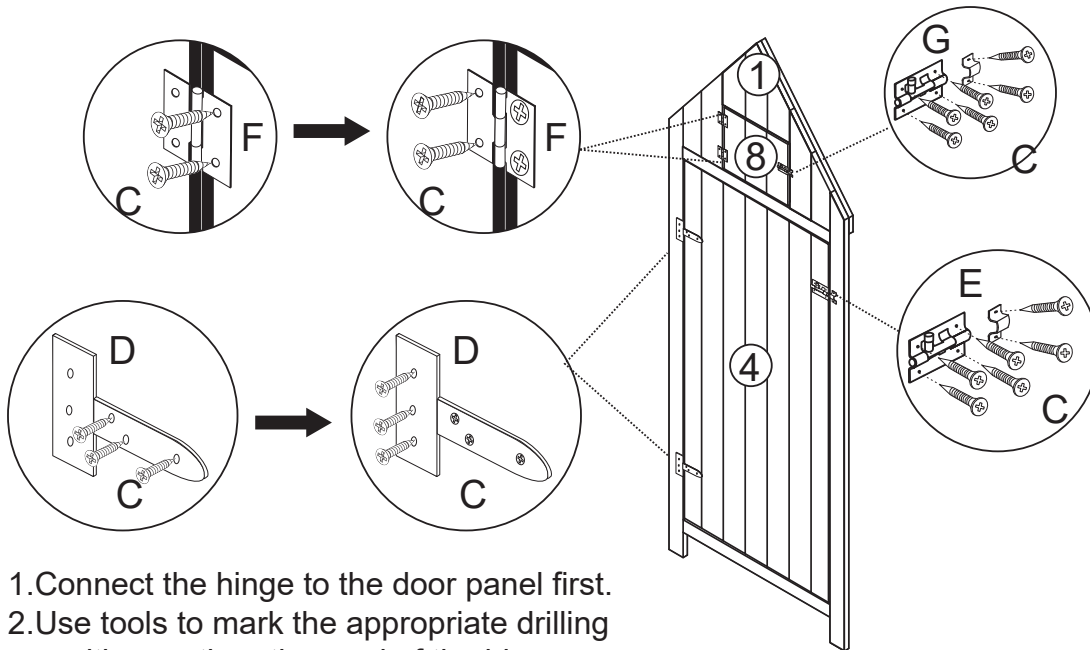


1. Connect the hinge to the door panel first.
2. Use tools to mark the appropriate drilling position on the other end of the hinge.



C X32

STEP 2



When screwing, it is necessary to be vertical.

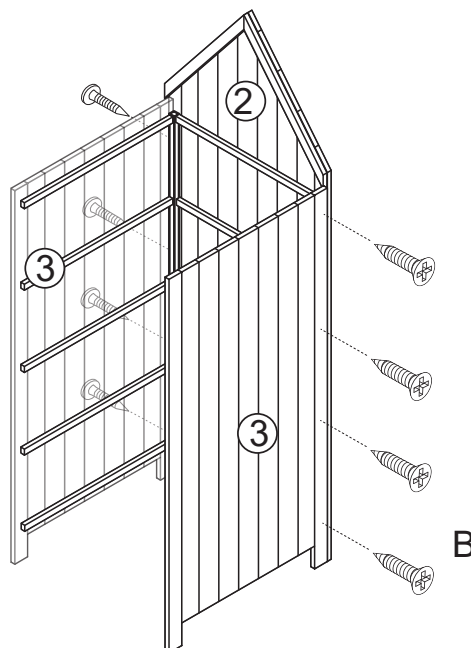

B X8



STEP 3

When screwing, it is necessary to be vertical.

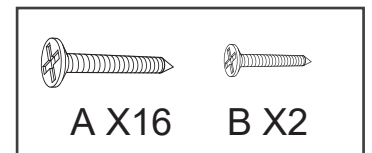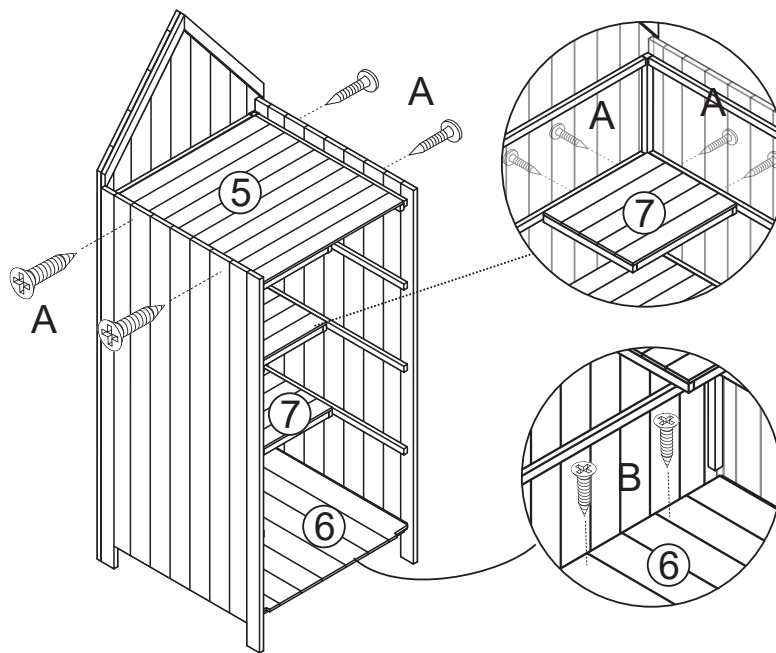



STEP 4

When screwing, it is necessary to be vertical.

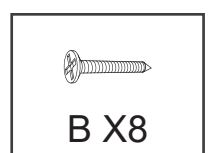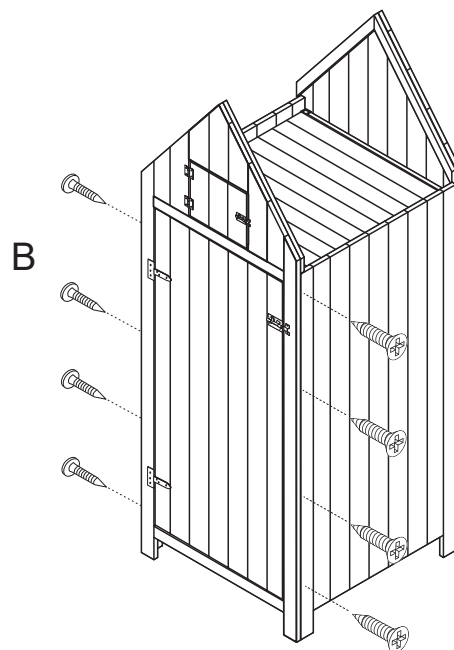



STEP 5

When screwing, it is necessary to be vertical.

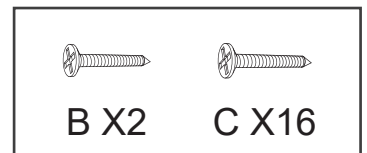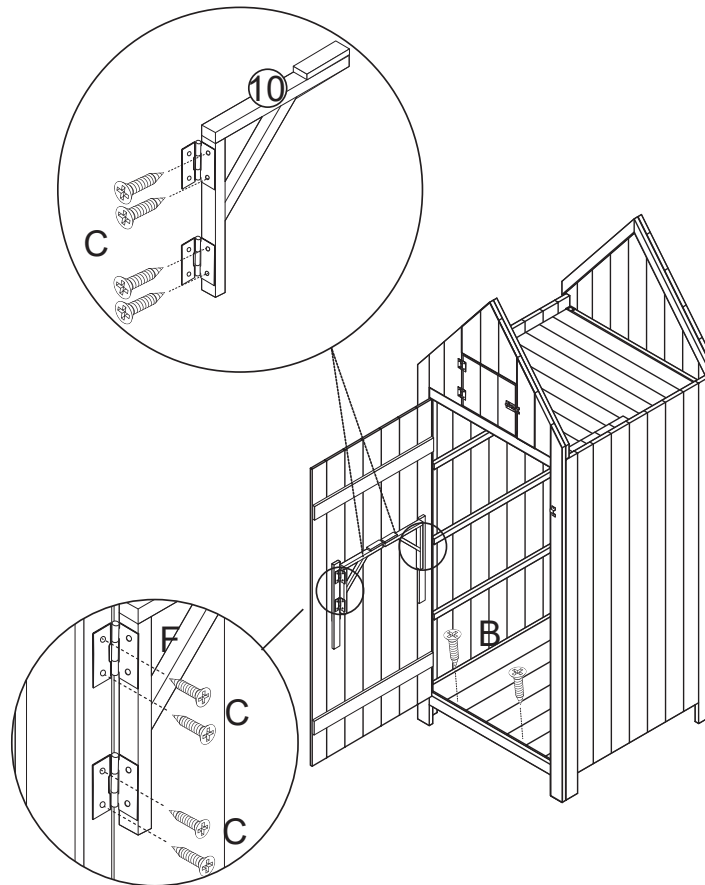


STEP 6

When screwing, it is necessary to be vertical.

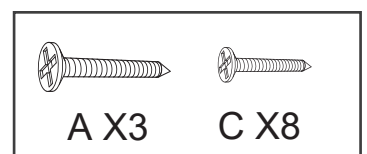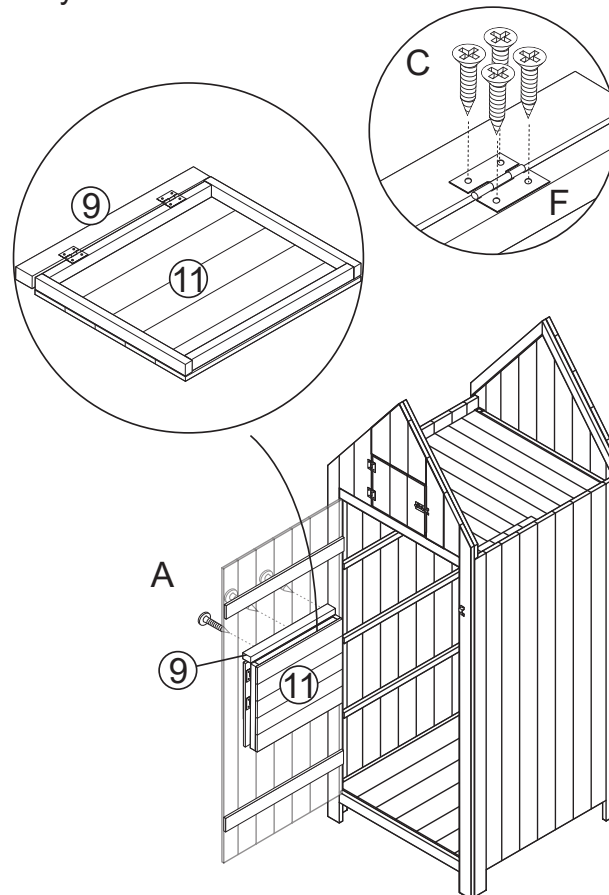


STEP 7

When screwing, it is necessary to be vertical.

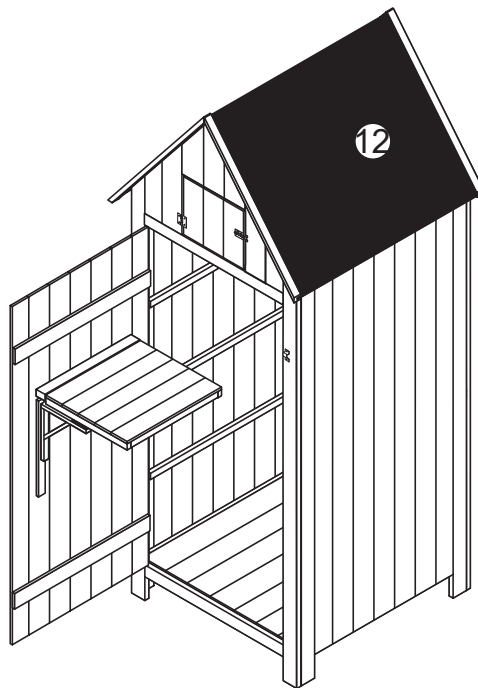

STEP 8

When screwing, it is necessary to be vertical.

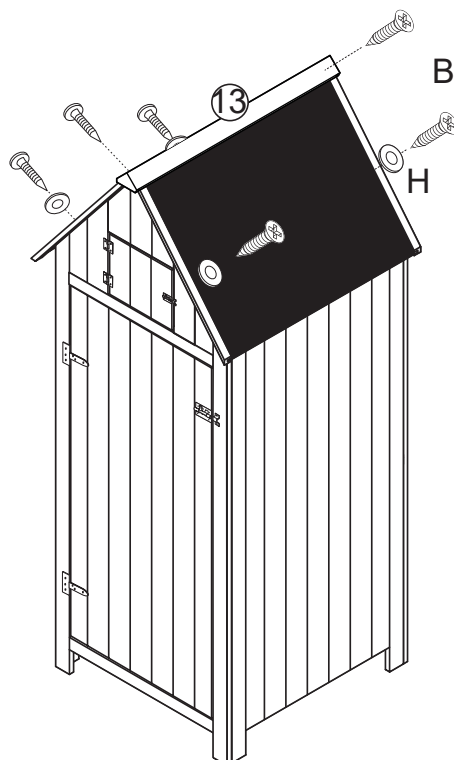

B X6



H X4