

American Planking Installation Instructions Read Carefully Before Installation

Step 1) Open boxes of planking in the room it will be installed. Wood MUST acclimate to the conditions of the room for a minimum of 72 hours.

OTE: This product is not to be used in high humidity areas.

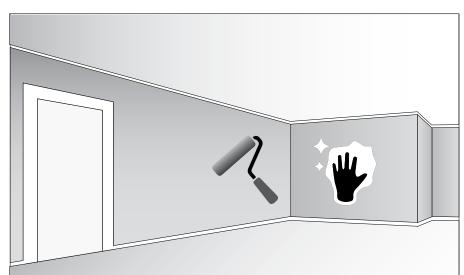


Step 2) Before installation, make sure that the surface is clean, flat, and dry. If you are installing over a sheetrock wall that is painted a specific color, we recommend that you paint the wall a similar color as the planking you are installing so the original color will not show through any possible seams between the planks.

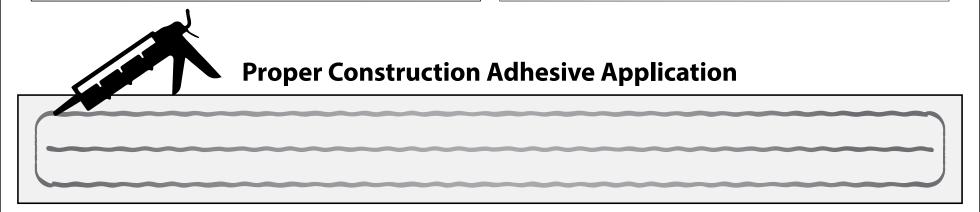

Proper Brad / Nail Placement



Step 3) Recommended installation is with Heavy Duty *Liquid Nails® (construction adhesive) and to be nailed with a brad nail gun or a hammer and finishing nails. Each plank should have a bead of adhesive 1" from all outside edges and a single bead applied down the center of the plank (see above diagram). Recommended brad/nail lengths is 1-1/4". Apply brads/nails approximately 1/2" from outside edges of planks and into studs when possible (see above diagram). If a brad gun is not available, use 3d x 1-1/4" finish nails along with a nail set to set the nail head slightly before the surface of the plank. It is not recommended to apply wood putty to the nail holes since the putty will collect in the weathered wood grain.

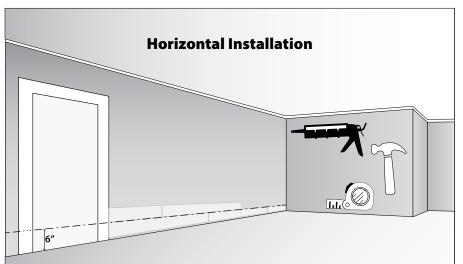

Starting on the floor, draw a level line 6" from the floor. Next, attach the first plank in the left corner and add construction adhesive to the back of the plank then nail in place (see instructions above). Repeat this process until you reach the right wall, cutting pieces as needed. Stagger the next row of planks over the joints and cut pieces to fit as needed until you reach the ceiling. Finally, add wood trim at the floor to finish your installation if desired.


Barnwood Gray Touch Up Instructions

What you • **Minwax® - Weathered Oak MW270 Penetrating Stain **will need:** • **Minwax® - Pickled Oak MW260 Penetrating Stain

Cotton swabs or a small art brush

Step 1: Apply a small amount of **Minwax® Weathered Oak MW270 stain to a cotton swab (or small art brush). Lightly brush the stain into the raw wood area needing to be repaired. Repeat light coats of stain until the raw wood looks similar to the stain color that is in the can.

Step 2: Apply a small amount of **Minwax® Pickled Oak MW260 stain to a cotton swab (or small art brush). Lightly brush the stain over the area needing to be repaired. Repeat light coats of stain until the area blends into the original plank color.

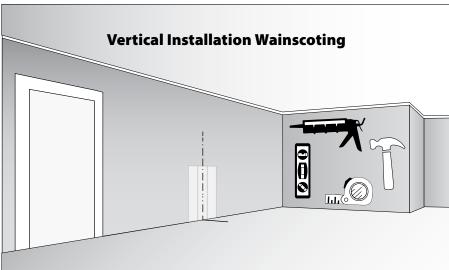

Start by finding the center of the wall and mark its location on the floor. Install the first plank on the wall centered on the mark with construction adhesive and nail in place with a brad gun (see instructions above). Use a level to make sure it is plumb. Next, attach planks on the left and right of first centered plank until you reach the corners of both walls. The width of the final plank at each corner will need to be trimmed to fit.

AmericanPac.com



*Liquid Nails® is a registered trademark of PPG Architectural Finishes Inc. © 2024 PPG Industries, Inc.

** Minwax° is a registered trademark of The Sherwin - Williams Company © 2024 Minwax° Company

01/2024v2

Warning: Wood Dust - Cancer www.P65Warnings.ca.gov