# ASSEMBLY INSTRUCTIONS 24INCH BATHROOM VANITY (COMBO)



Thank you for buying our products.

Please read the installation manual carefully before installation,

we need you to follow the instructions on the accessories and hardware

step by step assembly complete, our instructions are very detailed.

Products are environmentally friendly products,

Please rest assured that you do not soak in water, do not place very heavy items,


do not malicious push and pull,

if you have any problems in the process of assembly and use, please contact us.

Thank you again for your purchase of our products,


I wish you a happy life.

# **Detail View - BATHROOM VANITY**

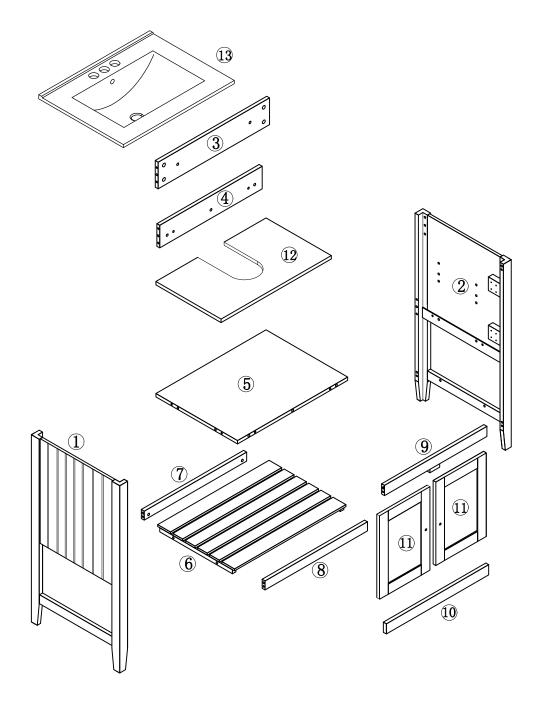

**Identifying the Hardware**-Identify the hardware using the illustrations below.


#### Part List - N725P246473

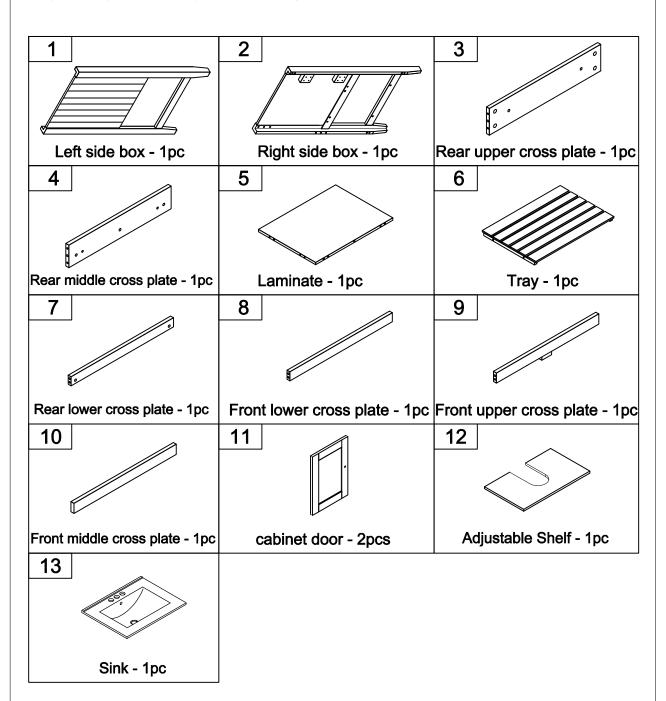



### Hardware List - N725P246473


Α	В	С
ø12x1/4"x28mm	ø6x35mm	ø14.5x12mm
Hex-Head bolts(4pcs)	Three in one bolts(24pcs)	Three in one lock(24pcs)
D	E	F
200	(4)200000000>	
<i>™</i>	ø7xø3.5x12mm	4mm
Damping hinge(4pcs)	Flat head screw(24pcs)	Allen key(1pcs)
G	Н	J
OY////D)		
ø8x30mm	ø5/32"x20mm	ø10xø30mm
Wood dowel(18pcs)	Handle screw(2pcs)	handle(2pcs)
K	L	
88		
Anti fall hardware(1set)	Laminate pad(4pcs)	


ASSEMBLY TOOLS REQUIRED ( NOT INCLUDED )




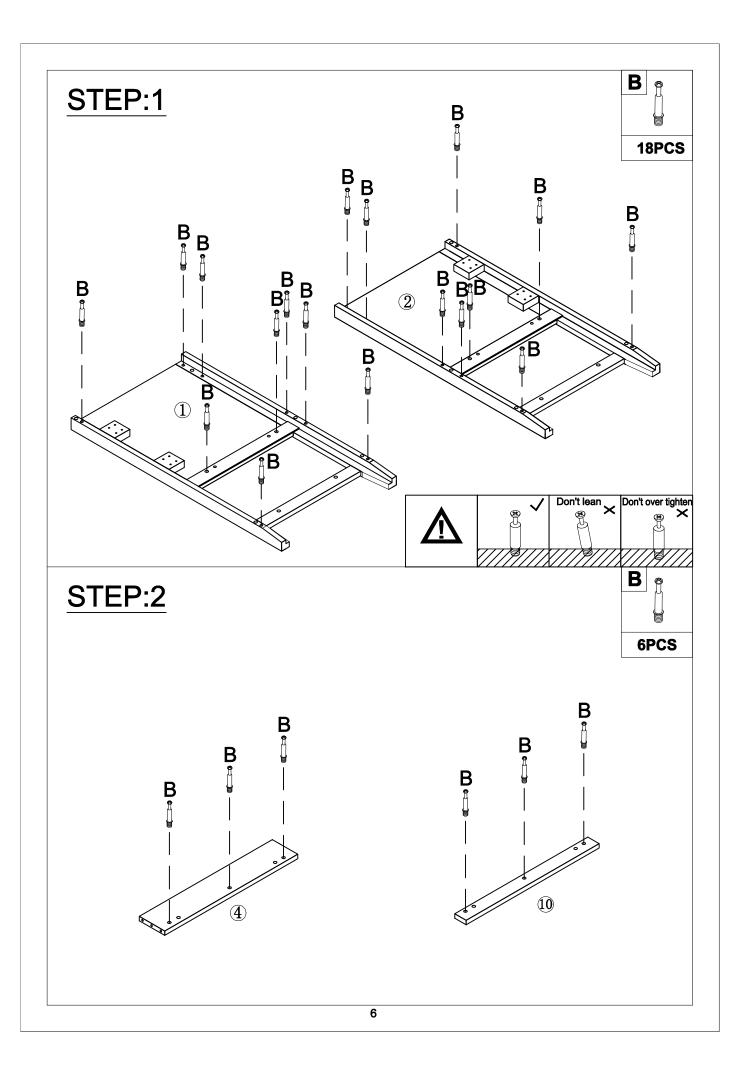

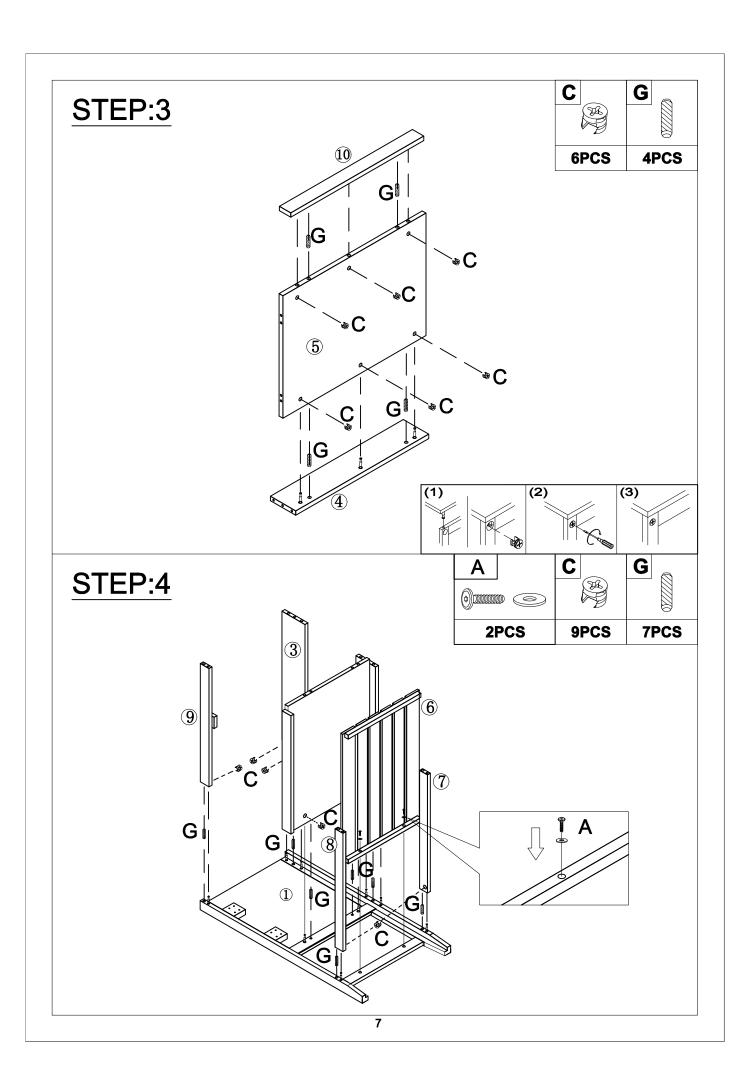

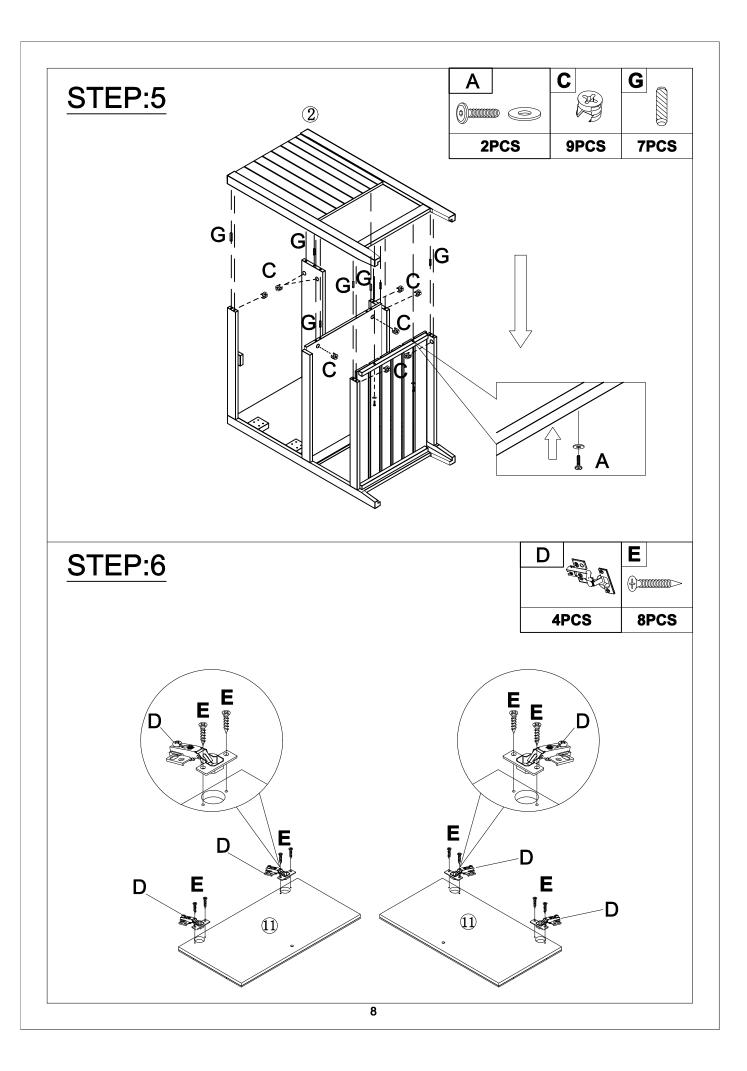

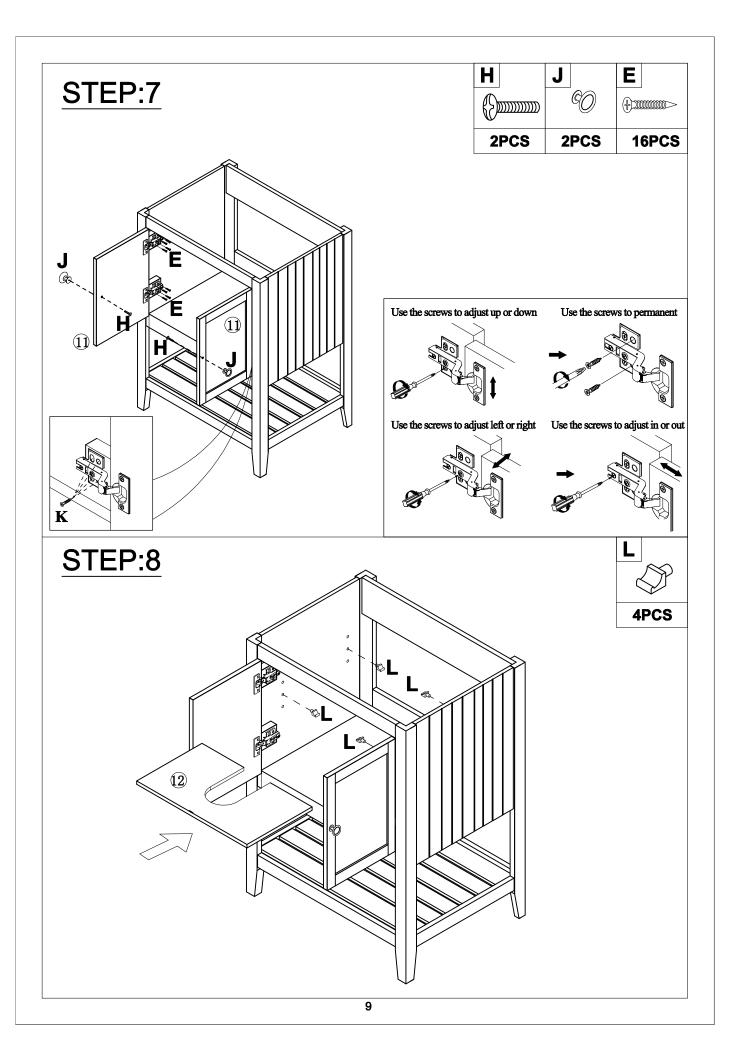

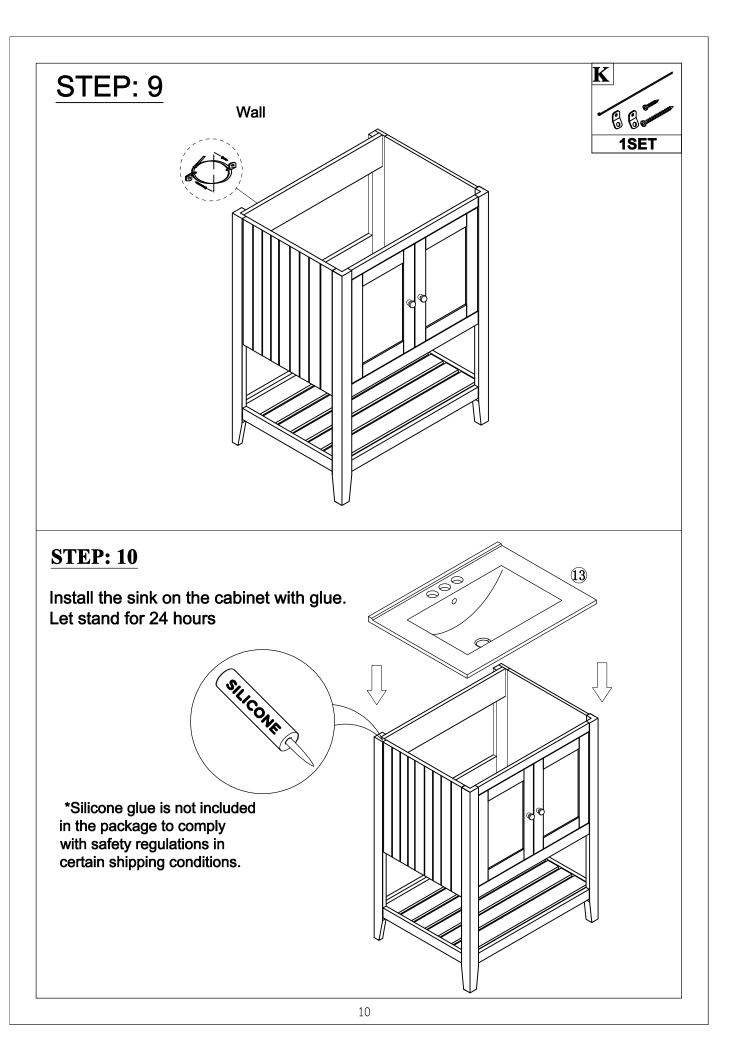


# **STEP: 10**






# HINGE ADJUSTMENTS

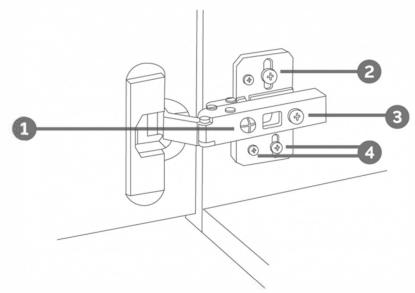

## 1 Sideways / Tilt adjustment


Turn the screw clockwise to move the door further away from the side of the cabinet anticlockwise to move the door closer to the side of the cabinet

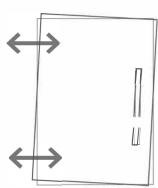

## 2 4 Height adjustment

While supporting the weight of the door, turn the screws

clockwise to move the door up anticlockwise to move the door down

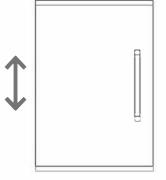

## 3 Forward and back adjustment

If the gap between the back of the door and the cabinet is too small, and the door may not close fully. Turn the screw

clockwise to decrease the gap between the door and the cabinet

anticlockwise to increase the gap between the door and the cabinet

