



ASSEMBLY INSTRUCTION (Instructions de montage)

N752P368503

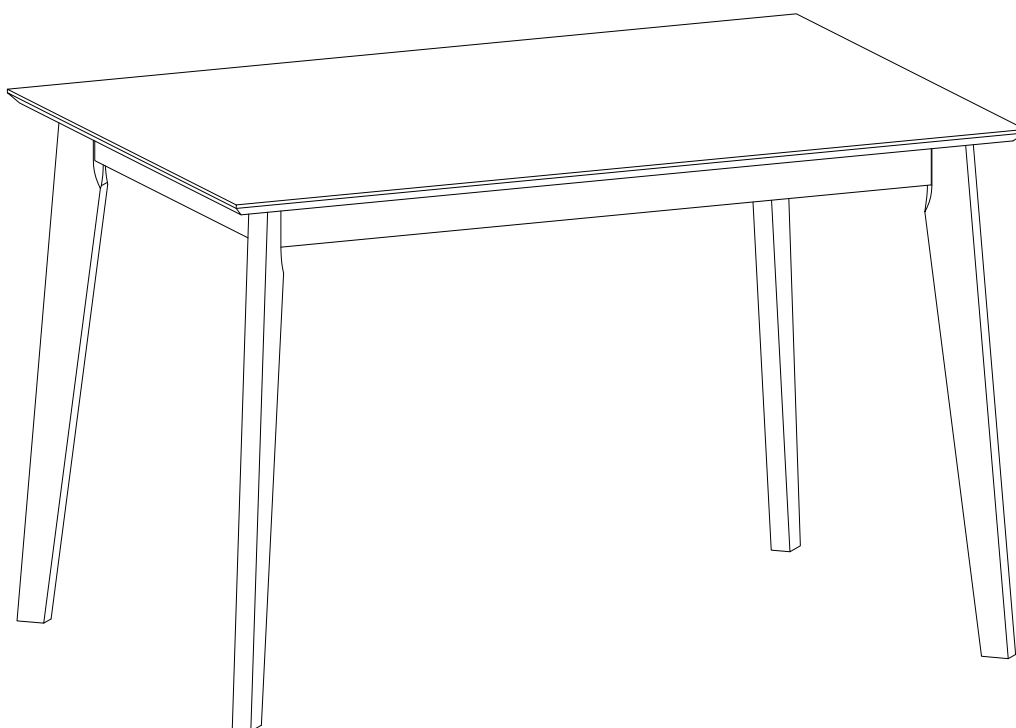

NOTE: 50% TIGHTEN BEFORE FIXING ALL BOLTS
(REMARQUE : SERRER 50% AVANT DE FIXER TOUS LES BOULONS)

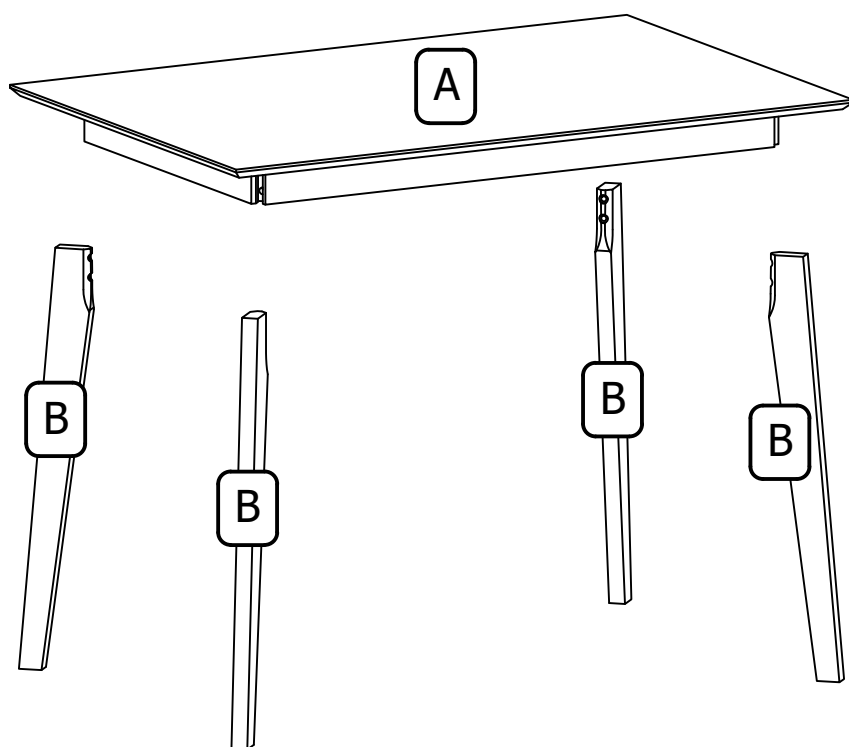

Notice:

1 50% Tighten before fixing all screws, Allen wrench is recommended instead of an electric drill.

2 Place the item on a flat ground to adjust and make sure it remains
3 stable.

4 Tighten up all screws with tools gradually.

If the screws are not aligned with holes during assembly, please loosen
5 all the other screws to 50% and continue the assembly process.

If the item is not stable, please loosen all the screws, adjust it on a flat
6 ground and tighten up all screws again.

Note : If one or some screws are fully tightened during assembly, chances are the others will not be aligned with holes. In addition, all the holes are designed to be relatively larger to provide more space for the adjustment of the screws.

PART LIST

A



Tabletop (1PC)
Plateau de table (1PC)

B





Table Leg (4PCS)
Pied de table (4PCS)


HARDWARE LIST

1



JCBB M8 x 70 (8PCS)
Boulon JCBB M8 x 70 (8PCS)

2



Flat Washer M8 (8PCS)
Rondelle plate M8 (8PCS)

3




Spring Washer M8 (8PCS)
Rondelle élastique M8 (8PCS)

4




Allen Key M4 (1PC)
Clé Allen M4 (1PC)

STEP 1

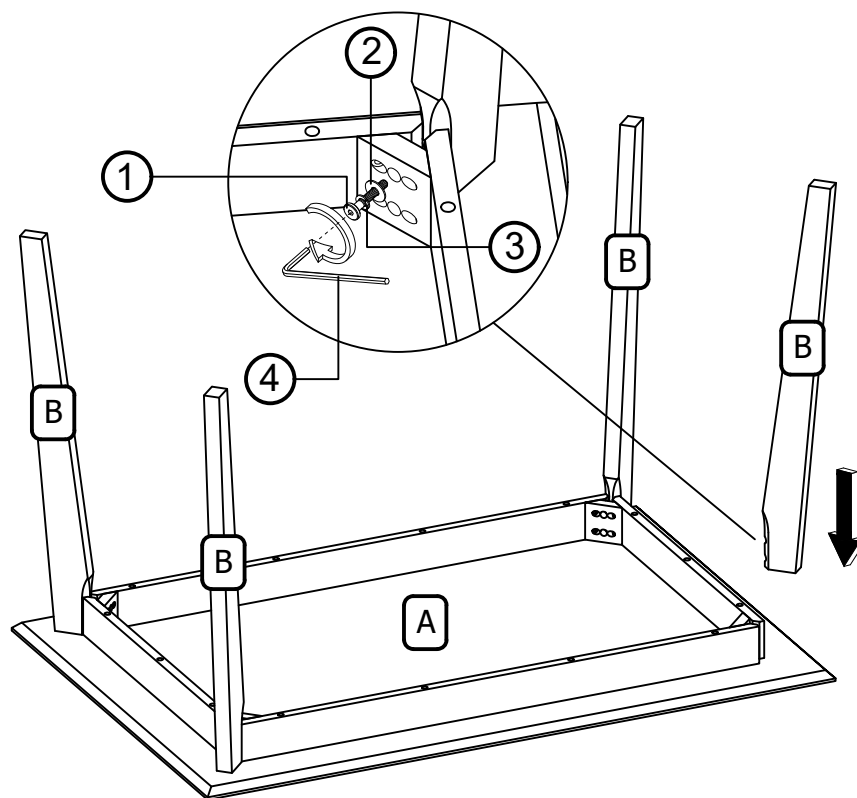


1		JCBB SCREW M8 X 70MM Boulon JCBB M8 x 70	8pcs	3		Spring Washer M8 Rondelle élastique M8	8pcs
2		Flat Washer M8 Rondelle plate M8	8pcs	4		Allen Key M4 Clé Allen M4	1pc

STEP 2

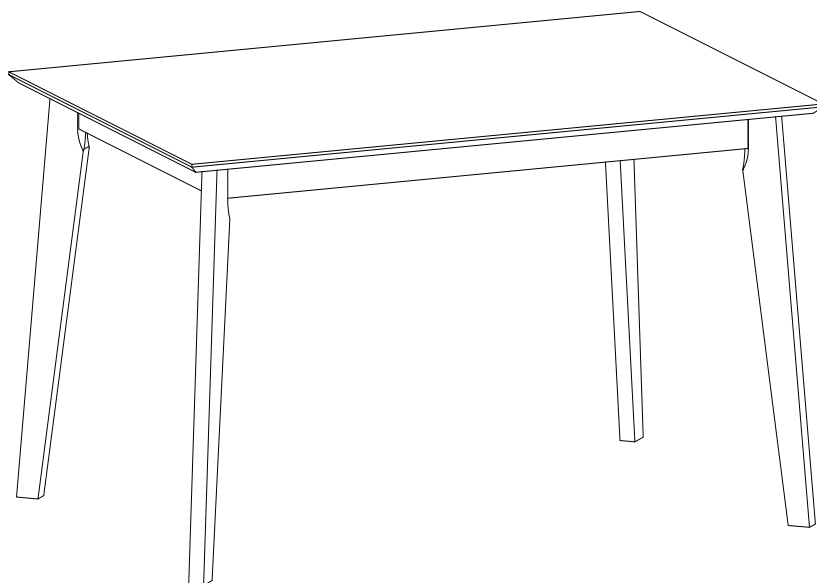


ASSEMBLY INSTRUCTION (Instructions de montage)

N752P368504

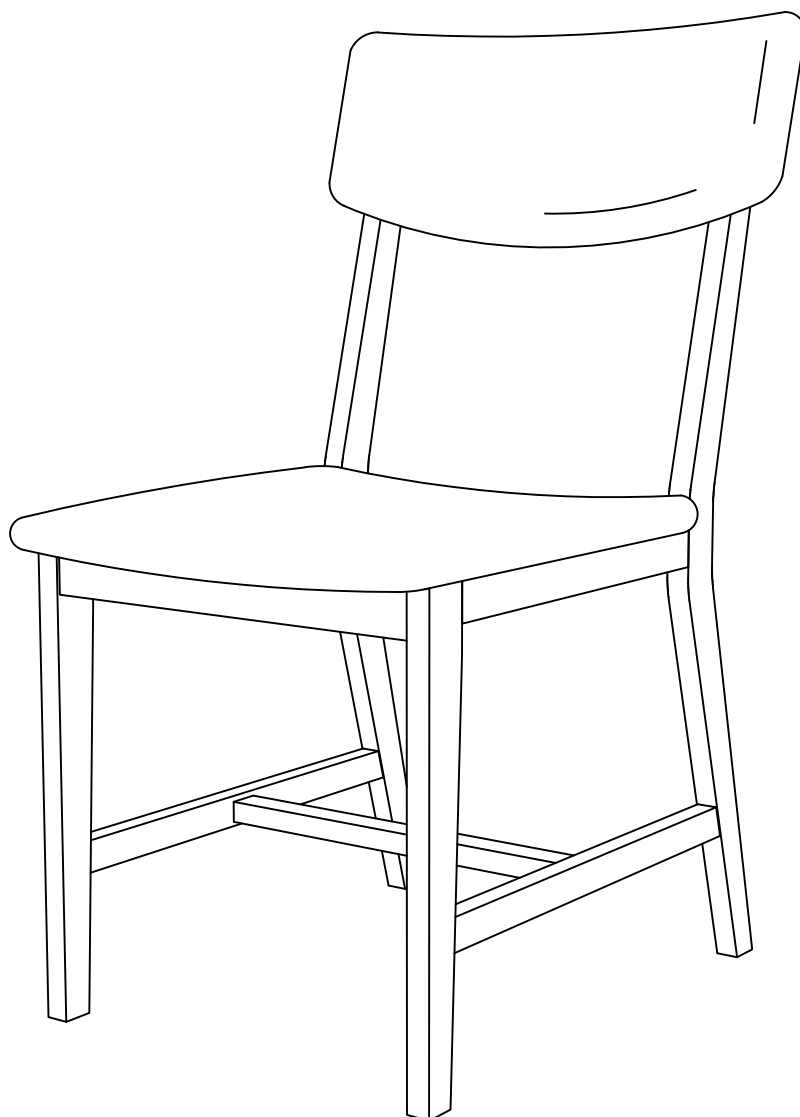

NOTE: 50% TIGHTEN BEFORE FIXING ALL BOLTS
(REMARQUE : SERRER 50% AVANT DE FIXER TOUS LES BOULONS)

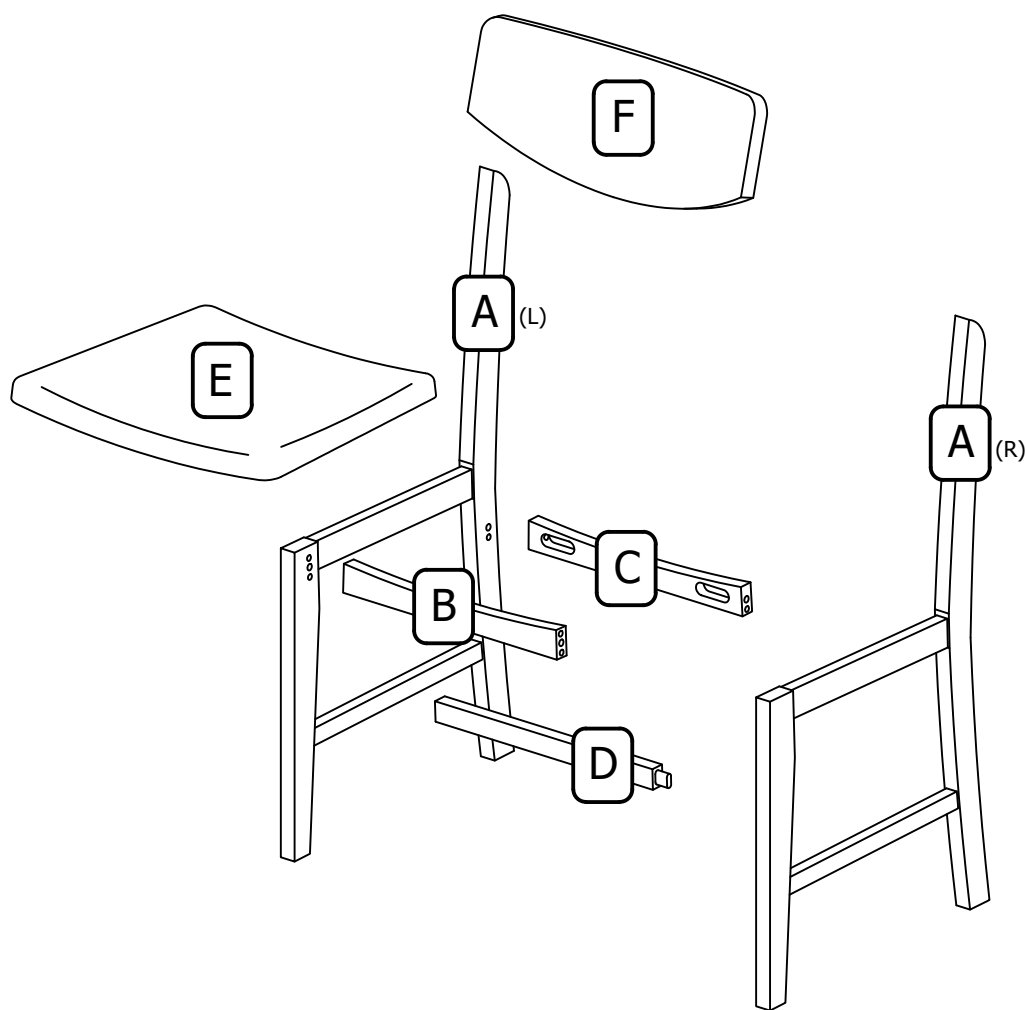

Notice:

1 50% Tighten before fixing all screws, Allen wrench is recommended instead of an electric drill.

2 Place the item on a flat ground to adjust and make sure it remains
3 stable.





4 Tighten up all screws with tools gradually.

If the screws are not aligned with holes during assembly, please loosen
5 all the other screws to 50% and continue the assembly process.

If the item is not stable, please loosen all the screws, adjust it on a flat
6 ground and tighten up all screws again.

Note : If one or some screws are fully tightened during assembly, chances are the others will not be aligned with holes. In addition, all the holes are designed to be relatively larger to provide more space for the adjustment of the screws.





PART LIST

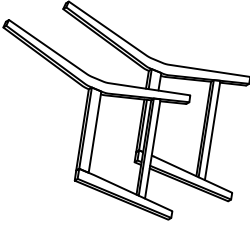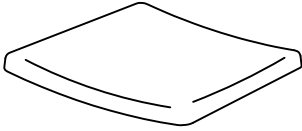A  Chair Leg (2PCS) R&L Pied de chaise (2PCS) R&L	B  Front Apron (1PC) Traverse avant (1PC)	C  Back Apron (1PC) Traverse arrière (1PC)
D  Leg Support (1PC) Support de jambe (1PC)	E  Cushion Seat (1PC) Siège coussiné (1PC)	F  Cushion Back (1PC) Dossier coussiné (1PC)


HARDWARE LIST

TOOLS REQUIRED (Not provided)




1  Allen Key M4 (1PC) Clé Allen M4 (1PC)	2  JCBC M6 x 28 (4PCS) Boulon JCBC M6 x 28 (4PCS)	3  JCBC M6 x 40 (4PCS) Boulon JCBC M6 x 40 (4PCS)	4  Spring Washer M6 x 13 (4PCS) Rondelle élastique M6 x 13 (4PCS)
5  Wood Dowel M8 x 30 (6PCS) Cheville en bois M8 x 30 (6PCS)	6  CSK Screw M4 x 30 (4PCS) Vis fraisée M4 x 30 (4PCS)	7  Wood Button 14.5 (4PCS) Bouchon en bois 14.5 (4PCS)	8  CSK Screw M4 x 28 (2PCS) Vis fraisée M4 x 28 (2PCS)

STEP 1

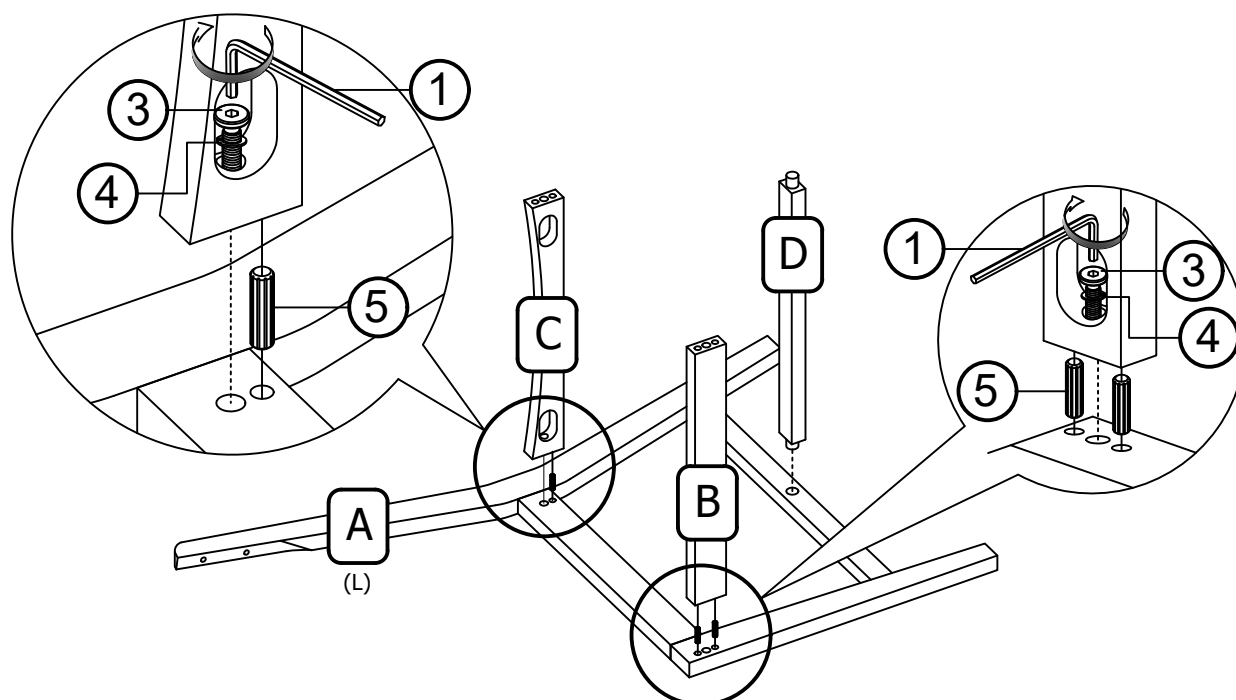


1		Allen Key M4 Clé Allen M4	1pc	4		Spring Washer M6 Rondelle élastique M6	2pcs
3		JCBC SCREW M6 X 40MM Boulon JCBC M6 x 40	2pcs	5		Wood Dowel M8 30 Cheville en bois M8 x 30	3pcs

STEP 2

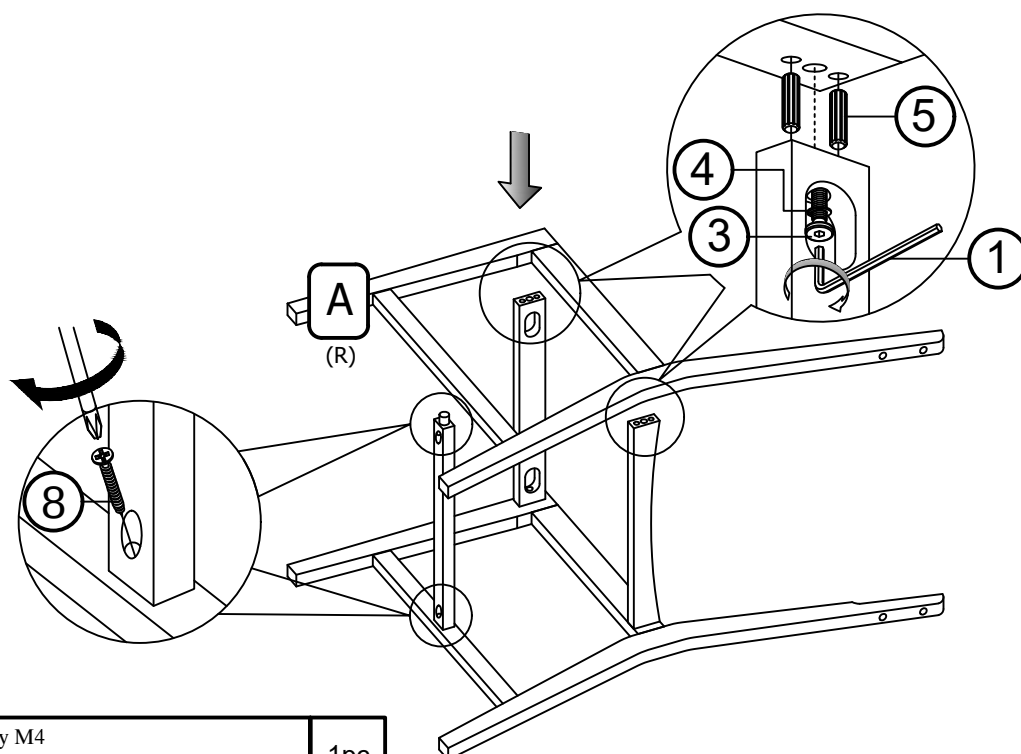


1		Allen Key M4 Clé Allen M4	1pc	5		Wood Dowel M8 30 Cheville en bois M8 x 30	3pcs
3		JCBC SCREW M6 X 40MM Boulon JCBC M6 x 40	2pcs	8		Csk Screw M4 X 28 Vis fraisée M4 x 28	2pcs
4		Spring Washer M6 Rondelle élastique M6	2pcs				

STEP 3

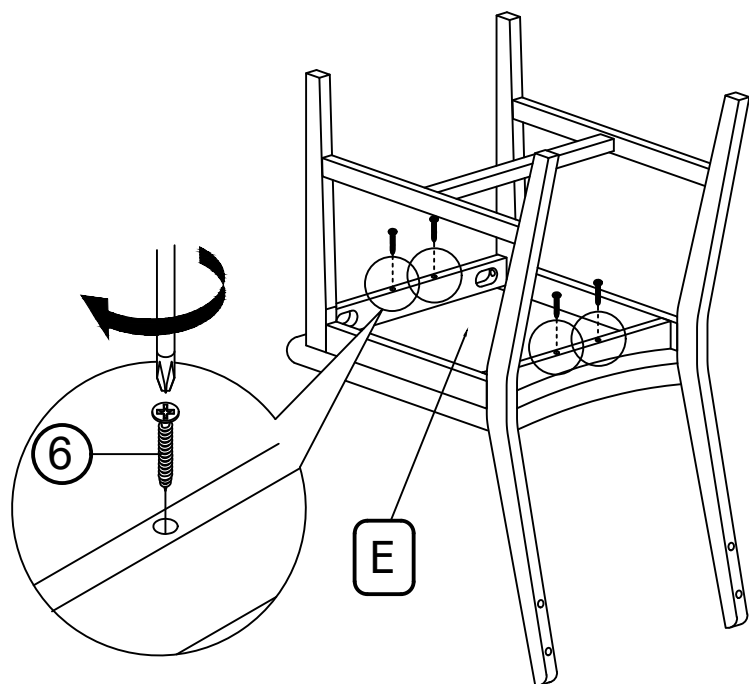

6		Csk Screw M4 X 30 Vis fraisée M4 x 30	4pcs
---	---	--	------

STEP 4

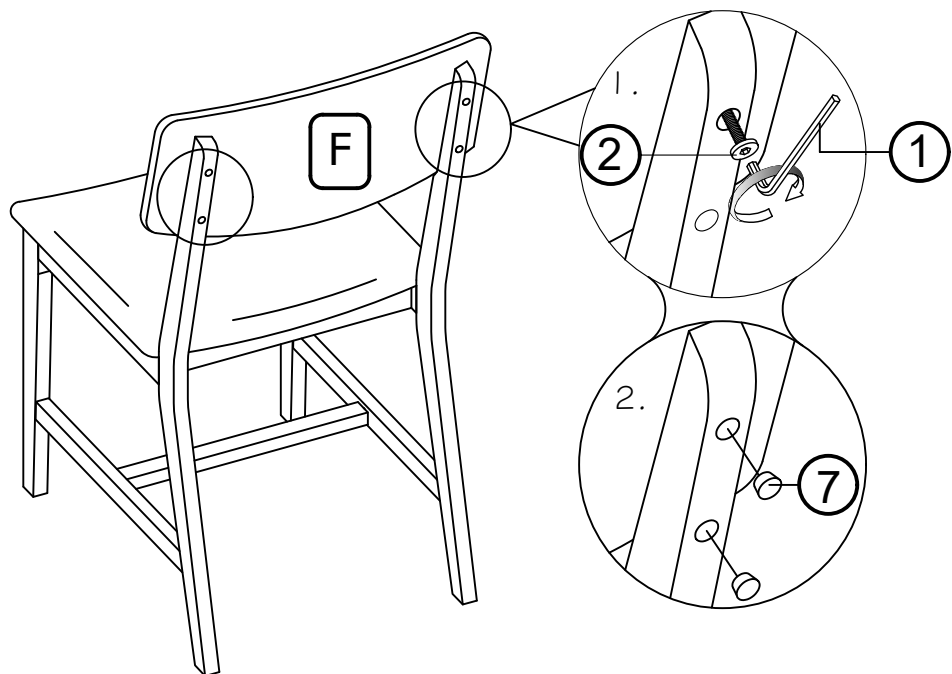

1		Allen Key M4 Clé Allen M4	1pc
2		JCBC SCREW M6 X 28MM Boulon JCBC M6 x 28	4pcs
7		Wood Button 14.5 Bouchon en bois 14.5	4pcs