



POWER SECTIONAL ASSEMBLY INSTRUCTION (TOTAL 6 BOX)

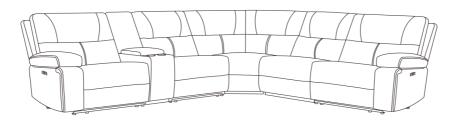

Please zip up the armrest bag and tuck the velcro into the seat cushion, and take out the concole backrest, unscrew the five-star screw on the backrest, and install the backrest on the console as shown.

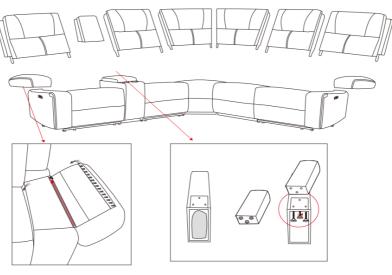

Fix the backrest by metal lock.

