

If you have any question or need help, please visit **PARLOS**® website http://www.parlos.com









1 Insert the faucet.



2 Tighten the mounting nuts.

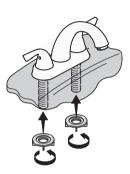

3 Connect and tighten the supply hoses.

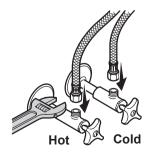

4 Turn on the water supplies. Check all connections for leaks.





PARLOS®

Pop-up Drain with Overflow Installation Guide










- Fits for sink WITH overflow hole.
- Clean the sink hole, make sure to remove debris.
- Please avoid using plumber's putty.
 The seal on top is leak-free.
 Plumber's putty might cause damage.
- Silicone and plumbing tape can be use for sealing requirement.




1 Unscrew components A & B to the seal.

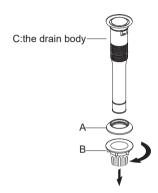

2 Slide the drain body C through the hole in the sink.



3 Screw components A & B back on as shown.



4 Connect the rear end of the drain to the Drain Pipe.



5 Push to activate.

