


Kitchen Island Carts

Assembly Instructions - Please keep for future reference

WF318964

If you have any
questions, please feel
free to contact us.
Email: [lowesteam@
aminalife.com](mailto:lowesteam@aminalife.com)

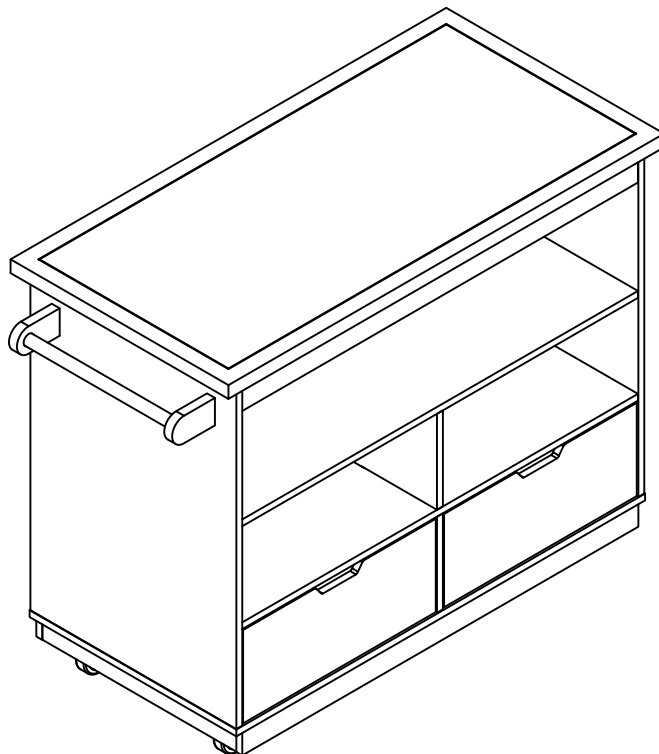

Dimensions

Width-43.3 inch

Depth-21.65 inch

Height-35.63 inch

Important – Please read these instructions fully before starting assembly



Safety and Care Advice

Important – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



- To reduce the likelihood of damaging your product please ensure that your power drill is set on a low torque setting.

Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure That all bolts and fittings are tightend properly.

WARNING In order to help prevent overturning – please follow these instructions

To help prevent product toppling over please follow the below steps:-


Use the anti tip strap or wall fixing method provided (if applicable)
Do not allow children to climb or hang on the furniture
Do not open more than one drawer at a time
Do not place heavy items in the top drawers
Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose

Please note that only the anti tip strap is provided.
You will need to provide wall plugs and screws applicable for your wall type


Components - Fittings

Please check you have all the panels listed below


Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

A  Ø6*30mm Dowel x52	B  Cam Bolt x42	C  Cam Lock x42	D  4*45mm Screw x14
E  4*35mm Screw x18	F  4*25mm Screw x16	G  3.0*12mm Screw x24	H  Drawer Slide 14" x4
I  Locking Caster x2	J  Caster x2	K  6*12mm Bolt x16	L  Allen Key x1
M  Hole to Stick x20			



Tools required



Phillips screwdriver
(medium & large)



Ruler - Use this ruler to help correctly identify the screws




The screws length is measured from the head to the point (35mm screw shown).

Using Camlocks

Step 1


Connect the male camlock as directed in the assembly instructions using a screwdriver.

DO NOT OVER TIGHTEN.
NE PAS SERRER EXCESSIVEMENT.

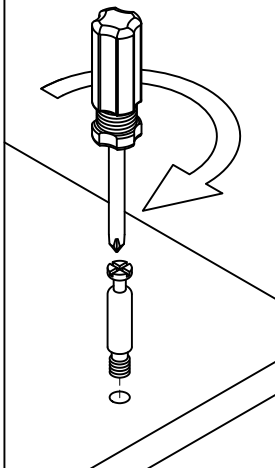

Step 2


Push the male camlock into the entry hole.

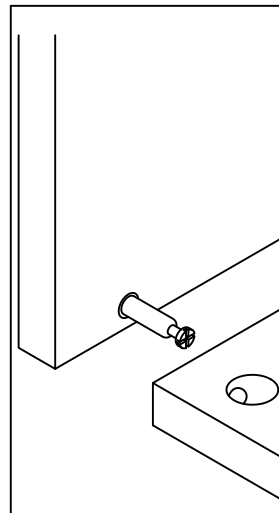

Step 3

Insert the female camlock as shown in the instruction.

Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

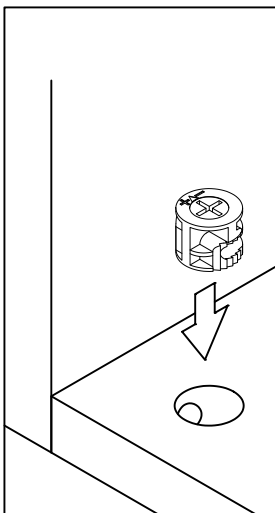


Step 1


Turn the female camlock clockwise with a screwdriver.

You should feel a click when the camlock is locked in place.

The joint is now secure.

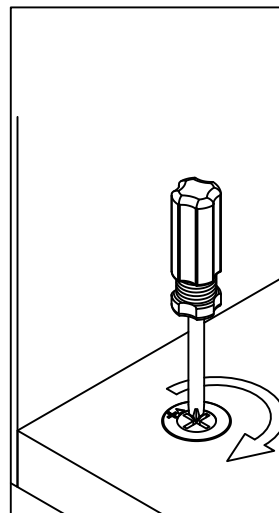


Assembly Instructions

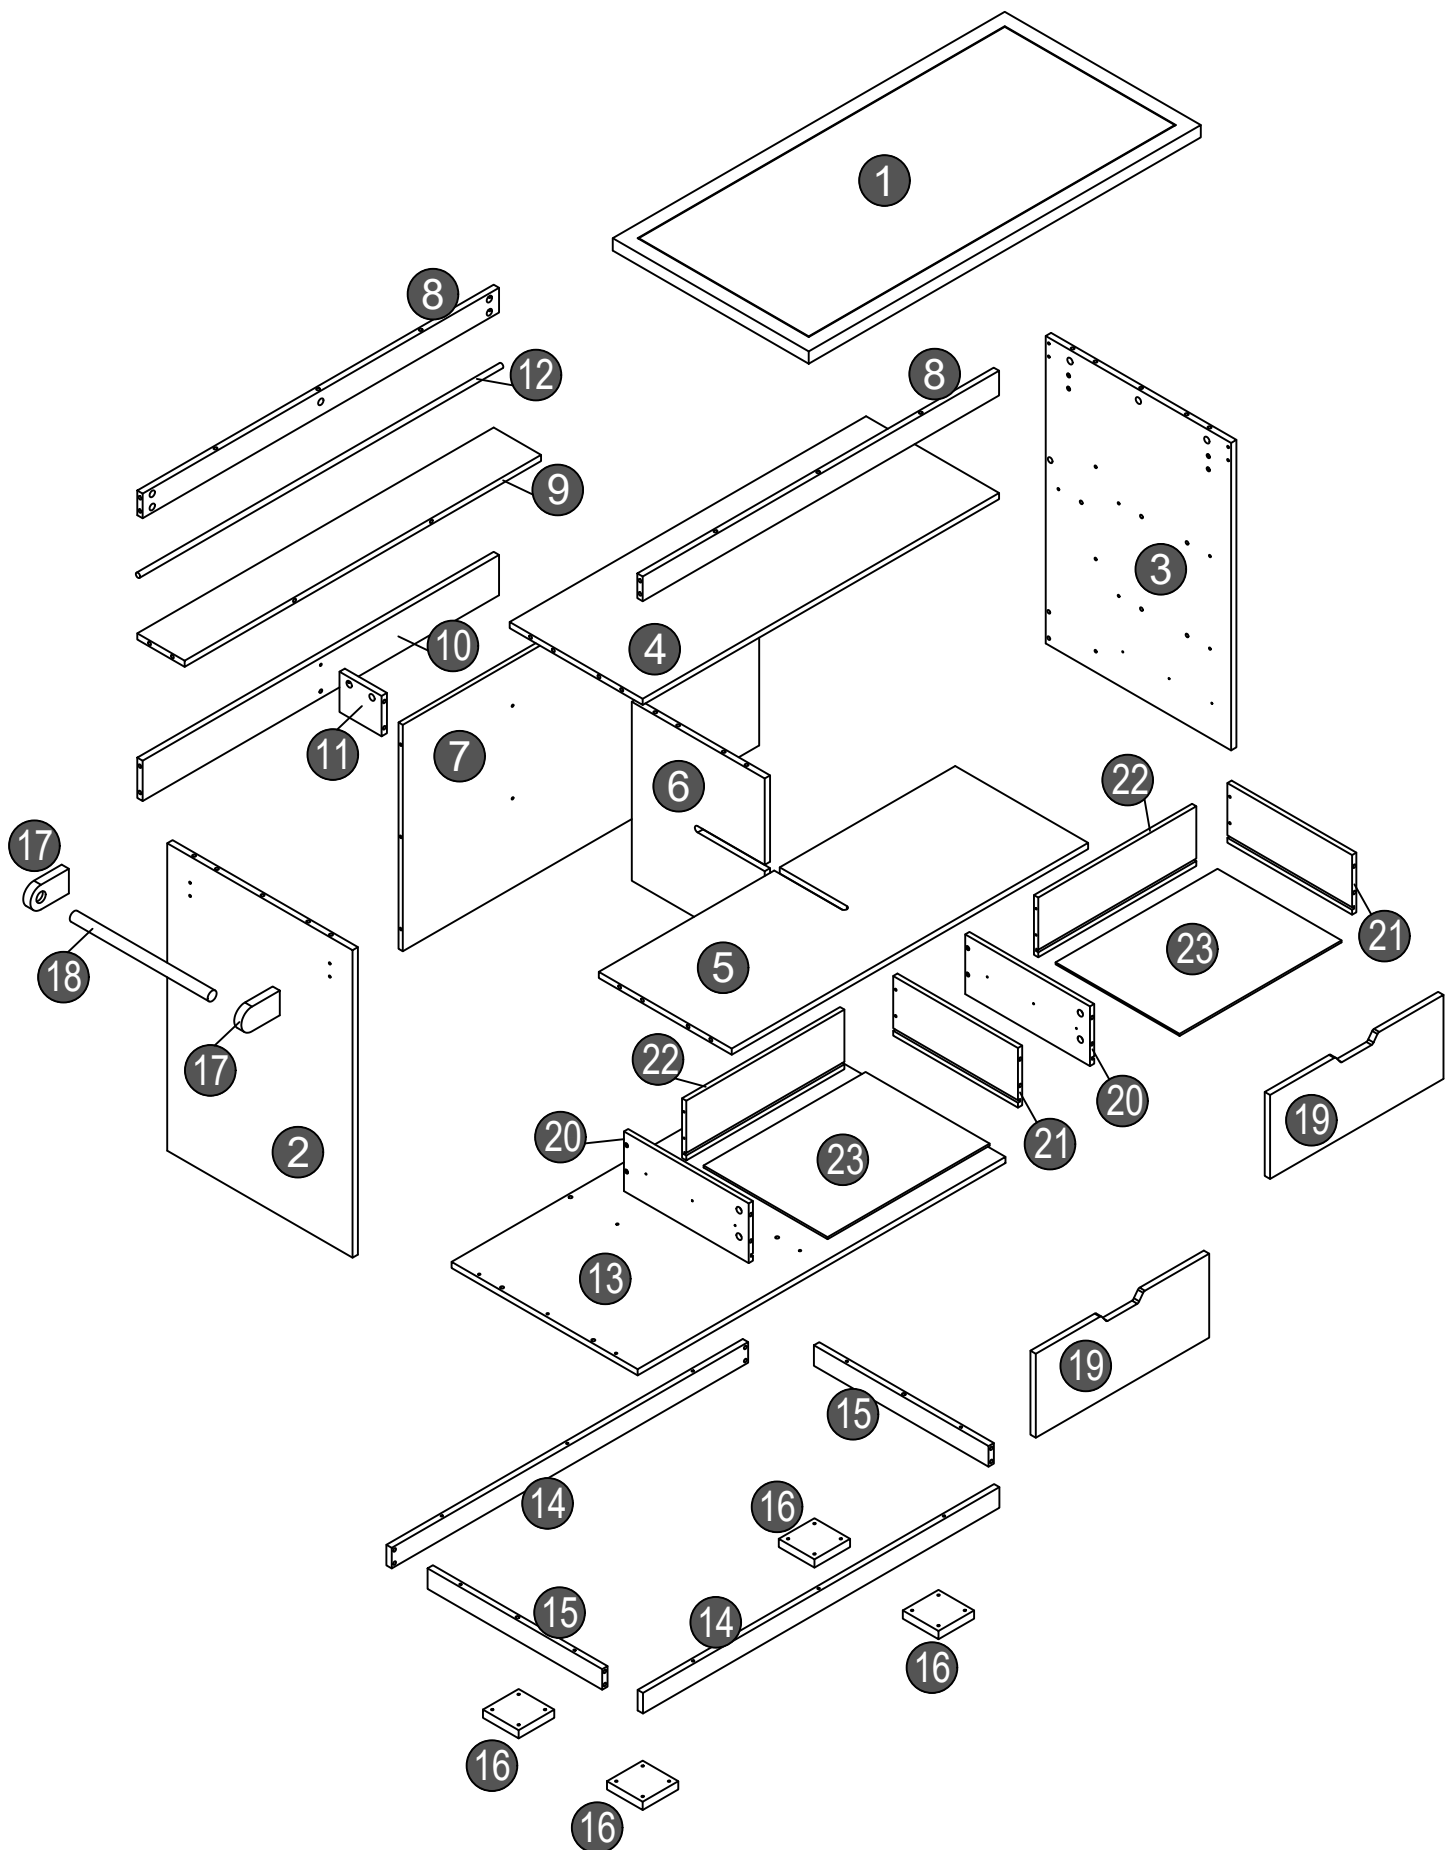


Assembly Instructions

Step 1


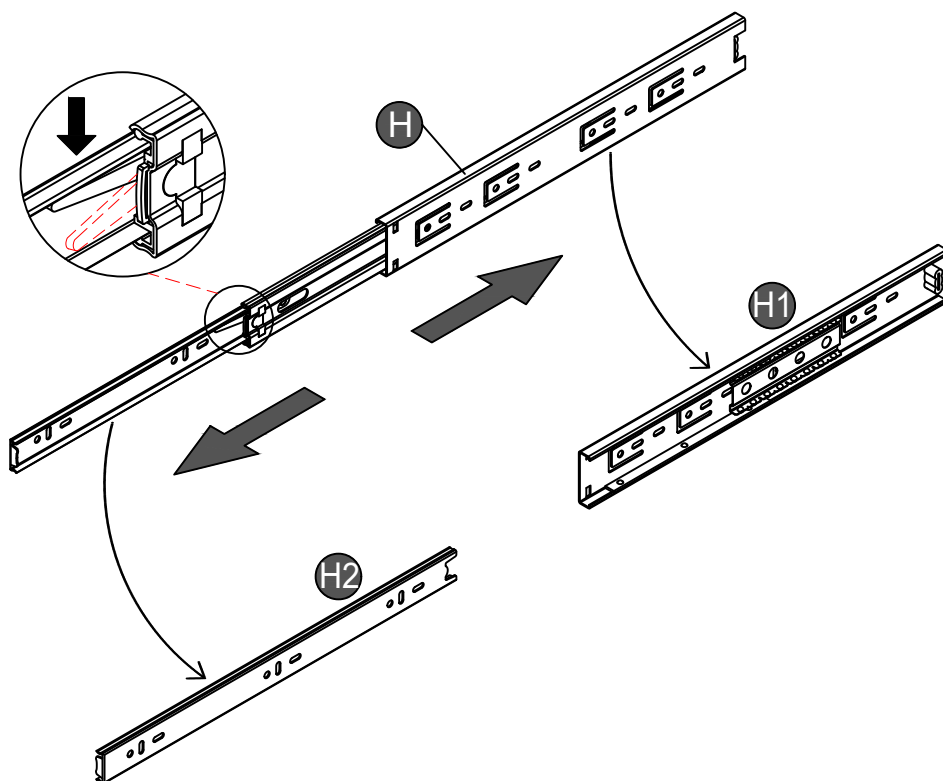


Split J into H1 and H2

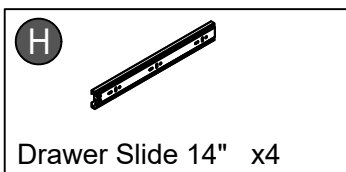


Drawer Slide 14" x4

Step 2

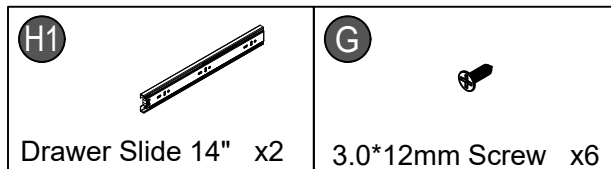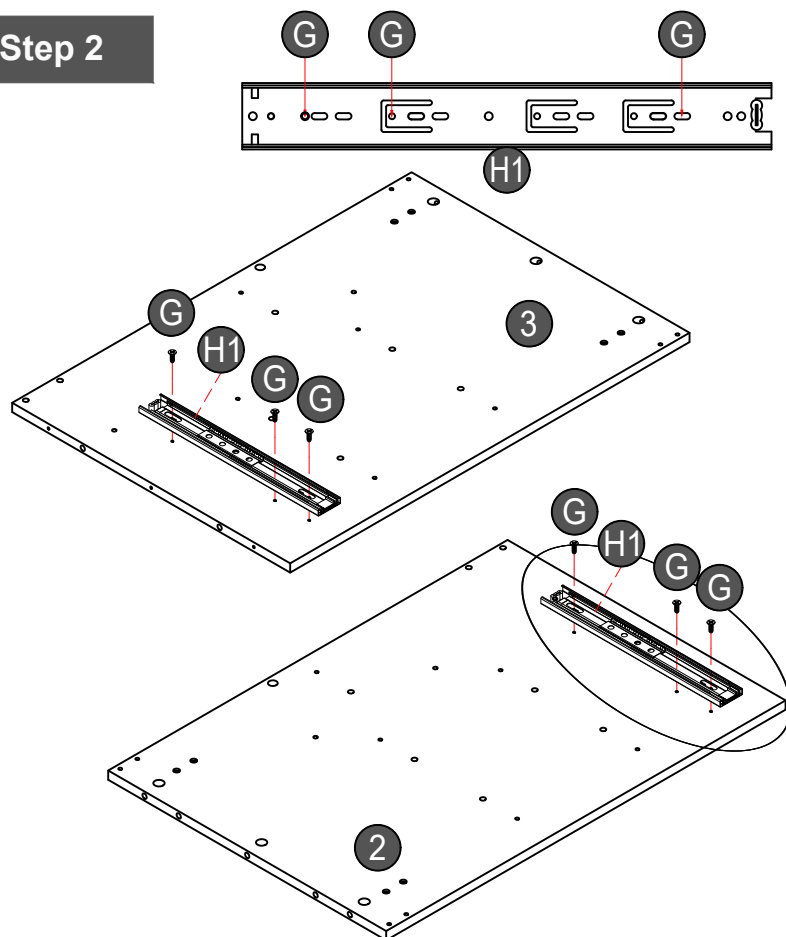

Drawer Slide 14" x2

3.0*12mm Screw x6

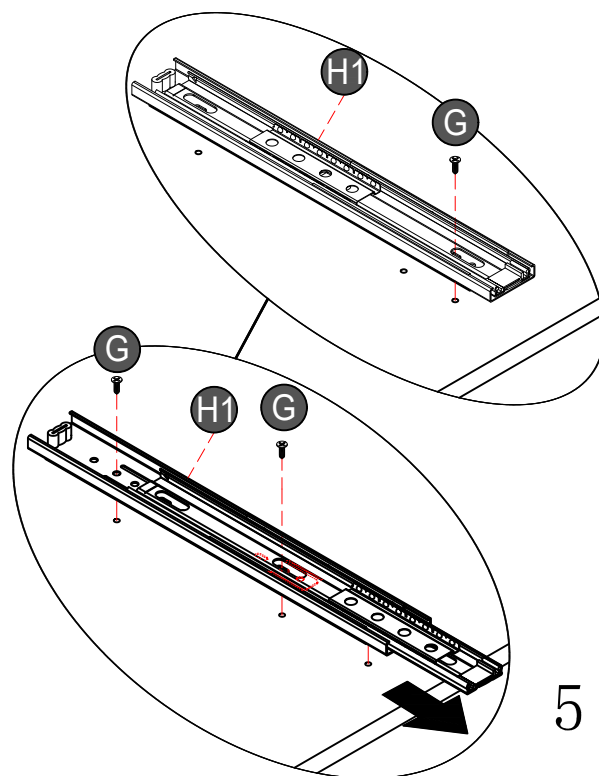


5

Assembly Instructions

Step 3

H1




Drawer Slide 14" x2


G



3.0*12mm Screw x6

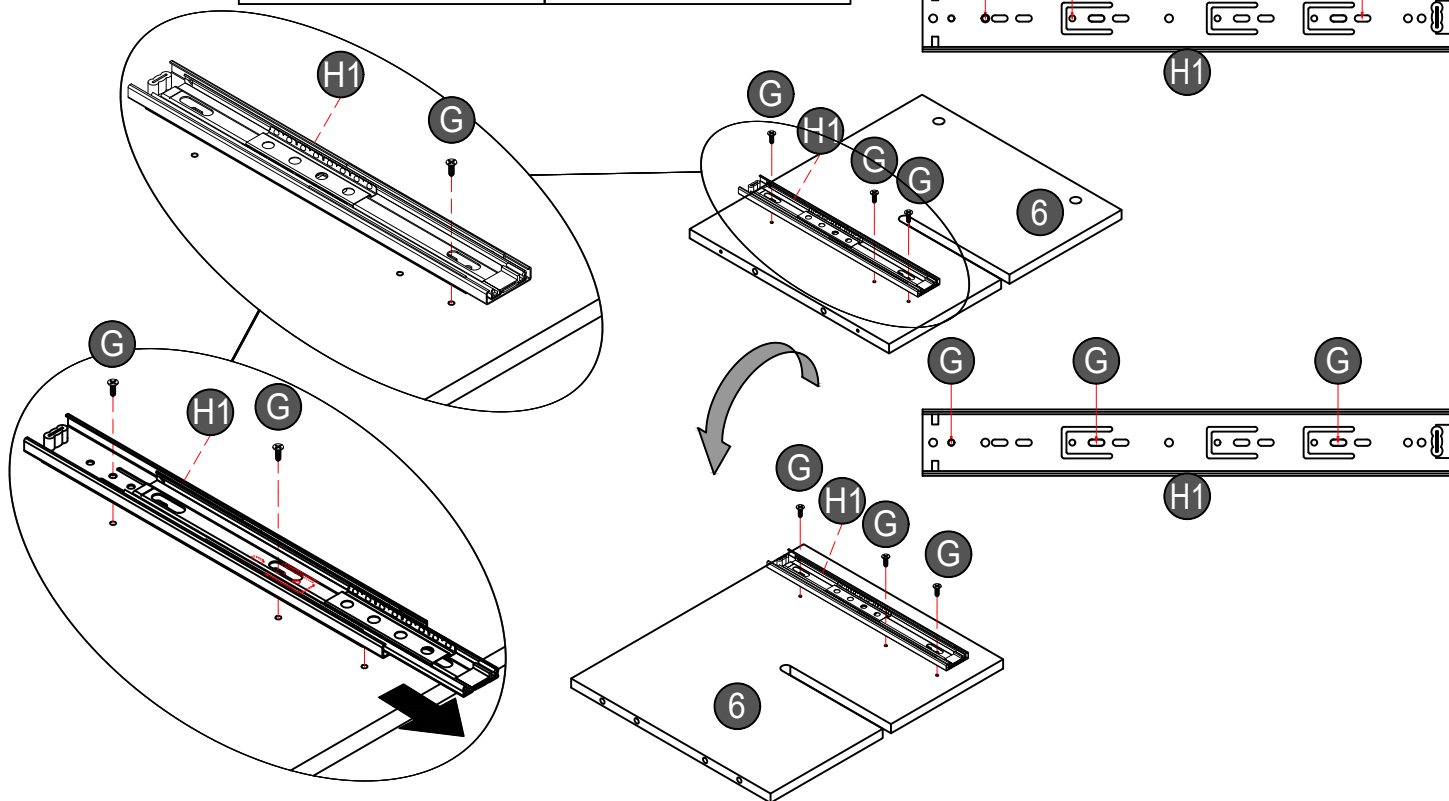


Step 4

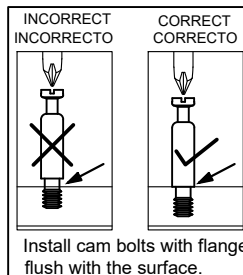

B




Cam Bolt x18


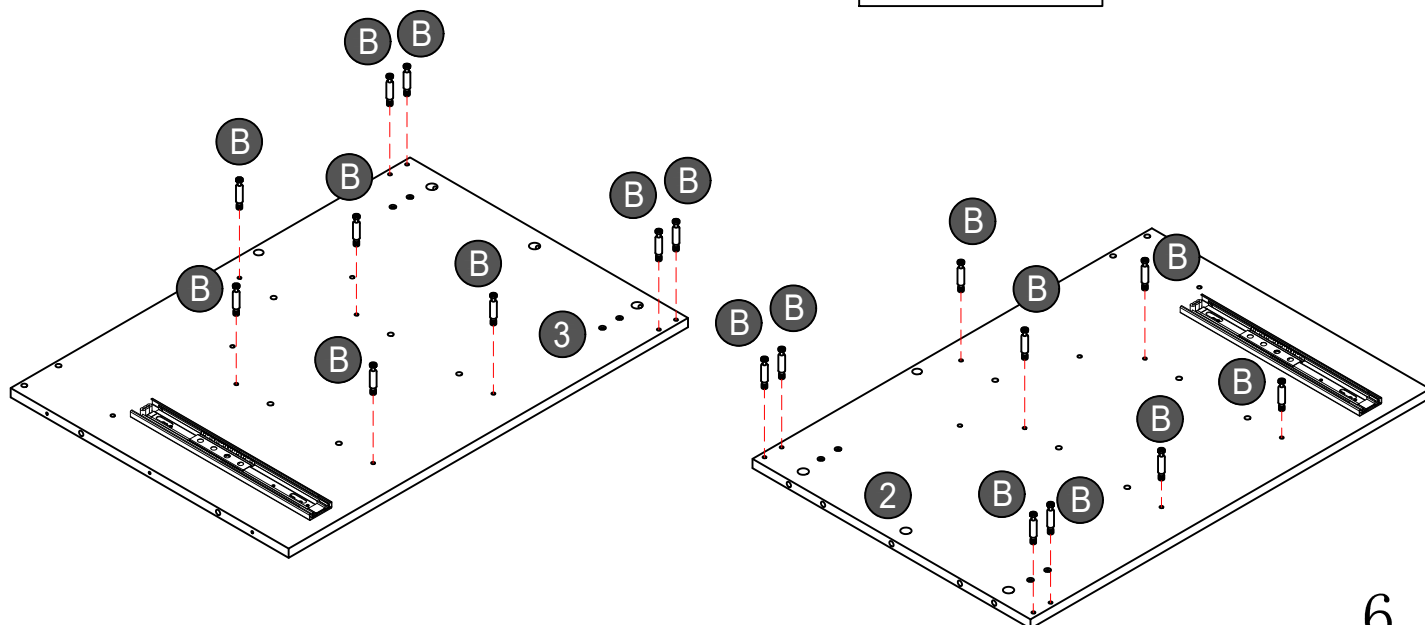


Assembly Instructions




Step 5

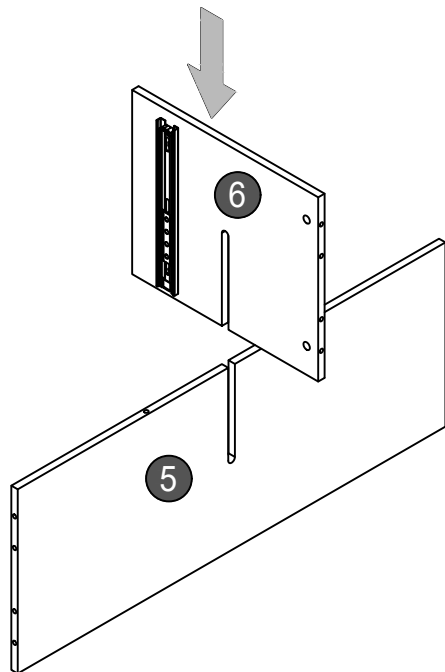



Step 6

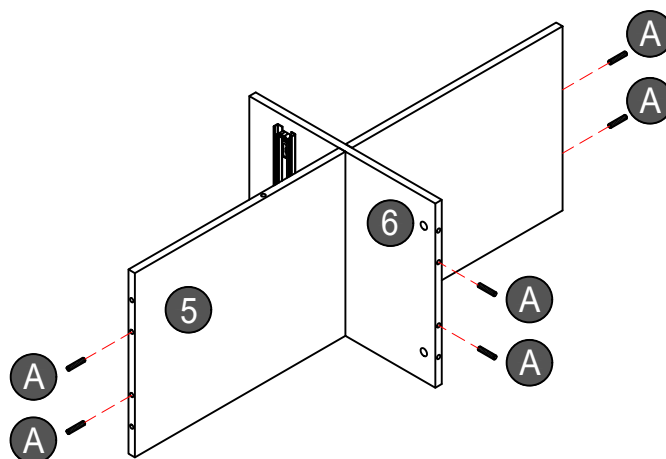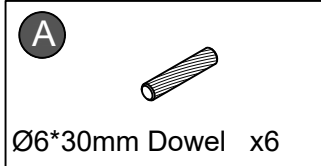

Step 7

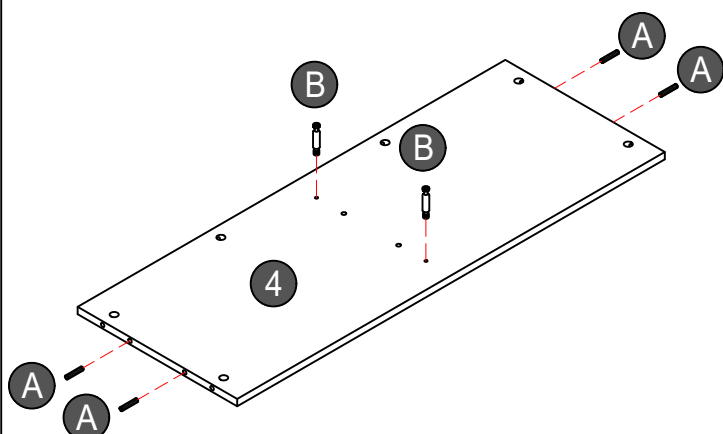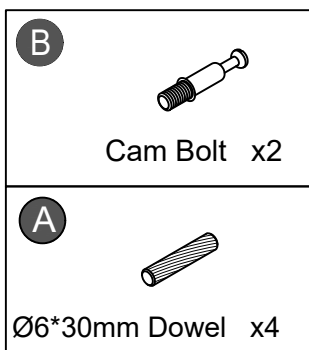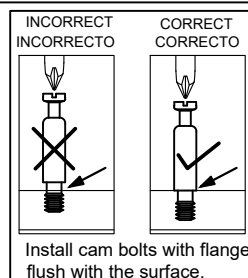


Step 8

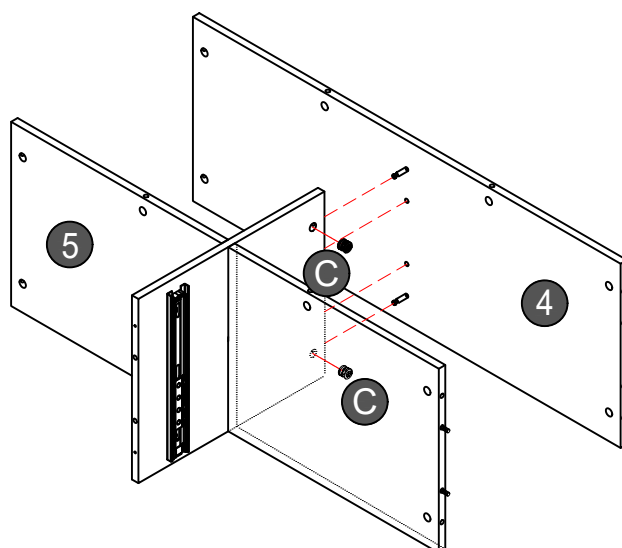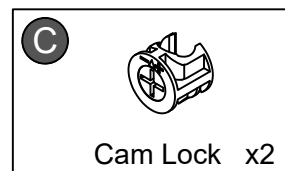

Assembly Instructions

Step 9

B





Cam Bolt x4

A



Ø6*30mm Dowel x6

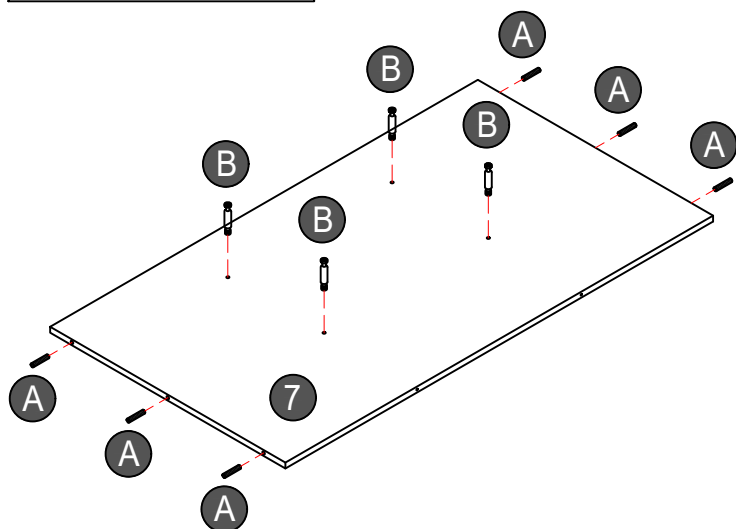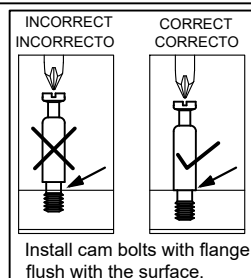


Step 10

C




Cam Lock x4

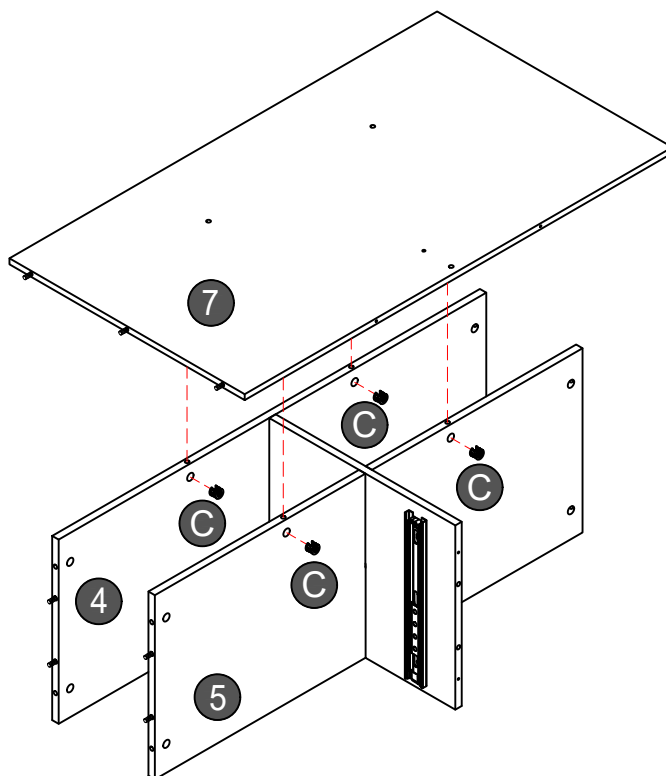


Step 11

B




Cam Bolt x1

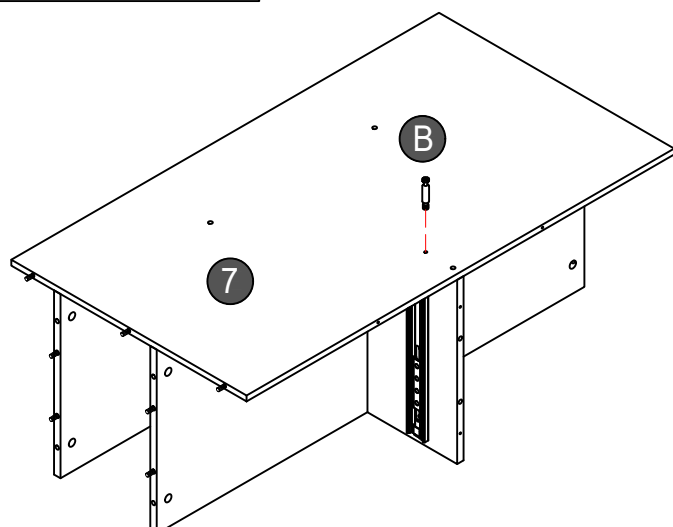

Step 12

B




Cam Bolt x1

A



Ø6*30mm Dowel x6

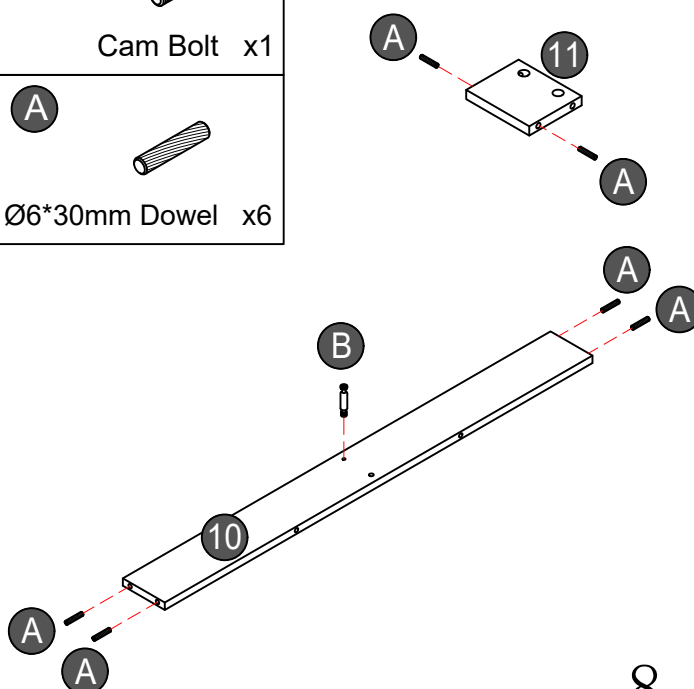


Assembly Instructions

Step 13

C



Cam Lock x1

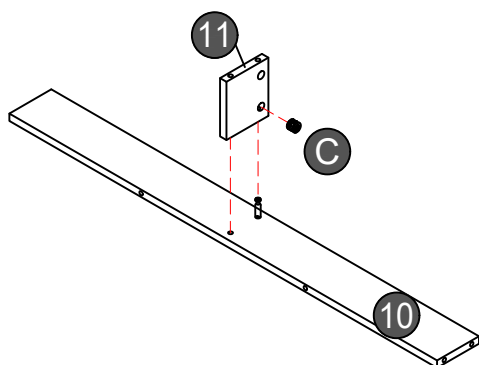


Step 14

A



Ø6*30mm Dowel x4

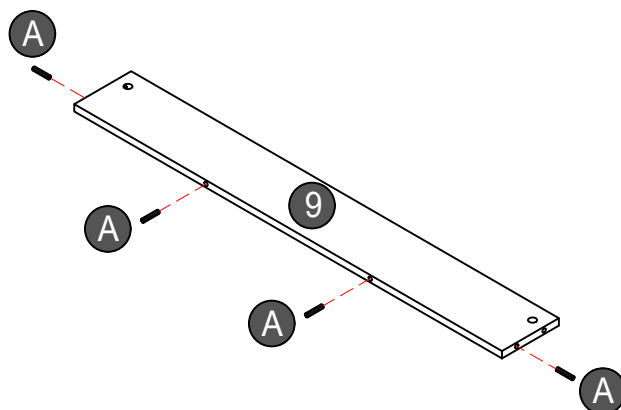


Step 15

C



Cam Lock x1

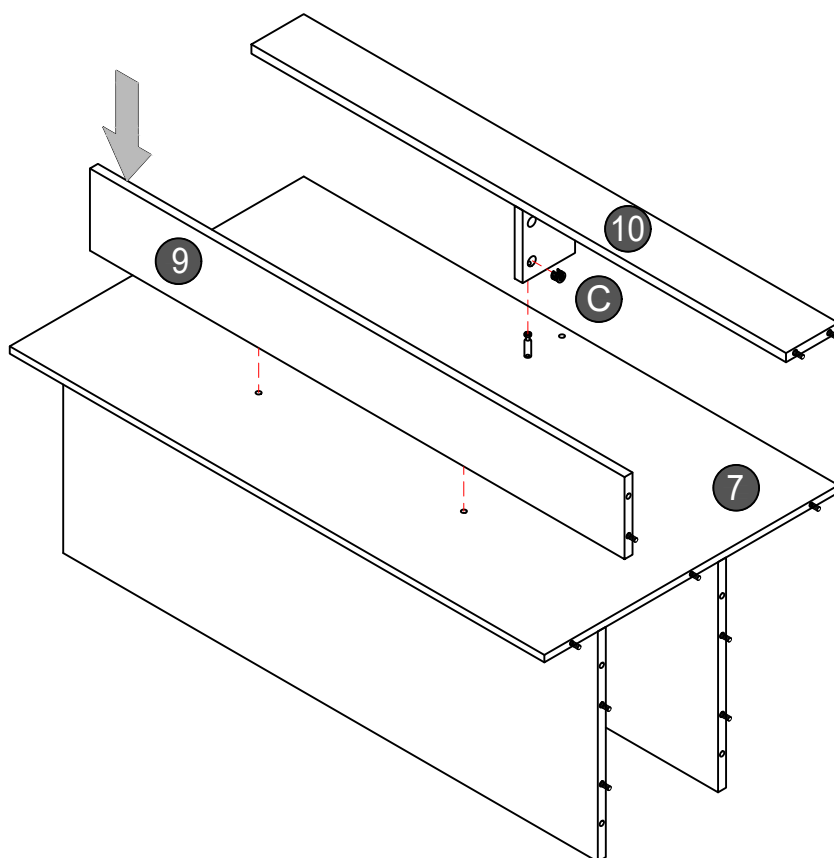


Assembly Instructions

Step 16

C



Cam Lock x5

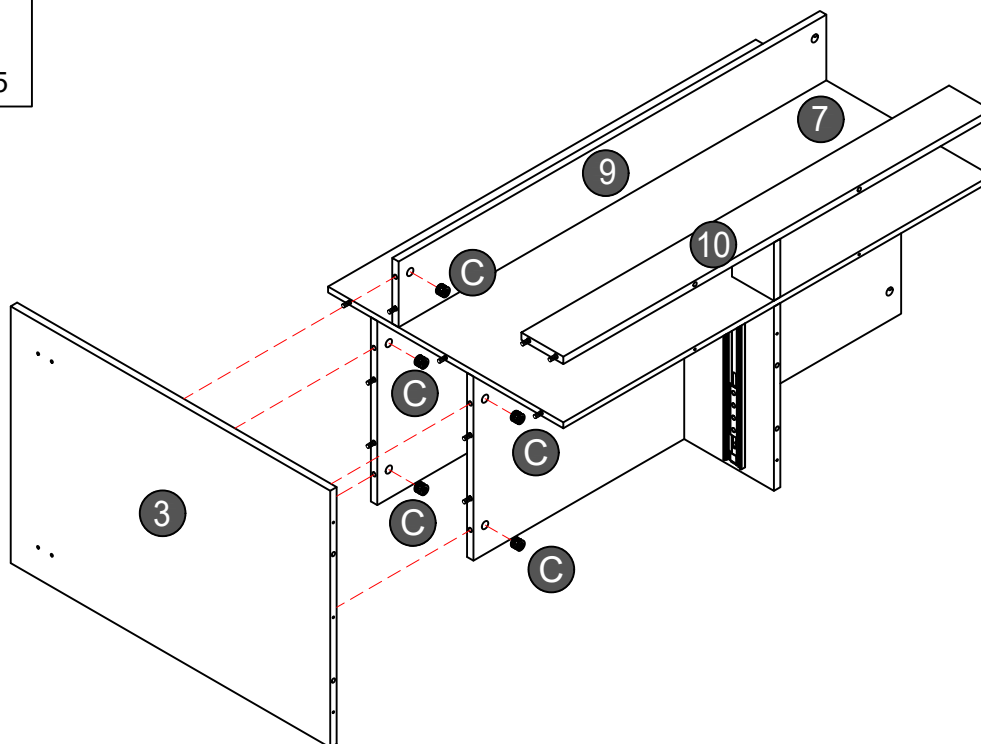


Step 17

C



Cam Lock x4

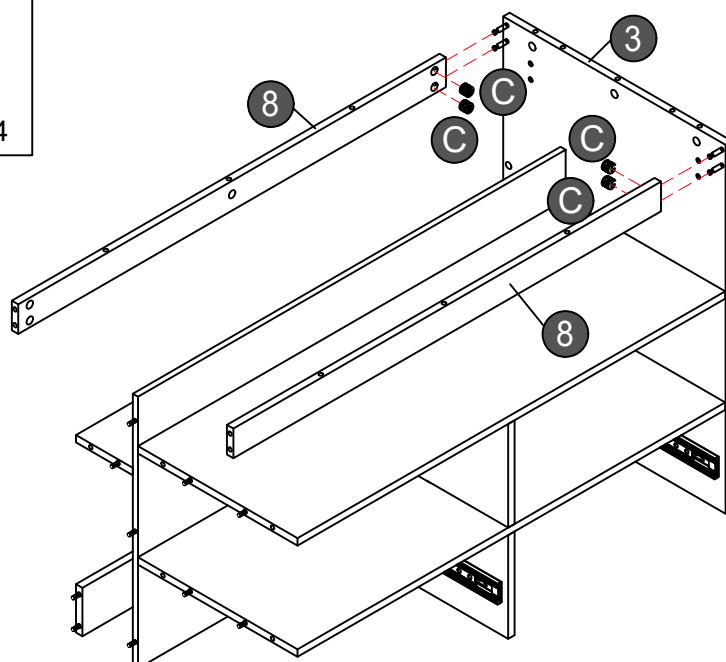


Assembly Instructions

Step 18

C



Cam Lock x9

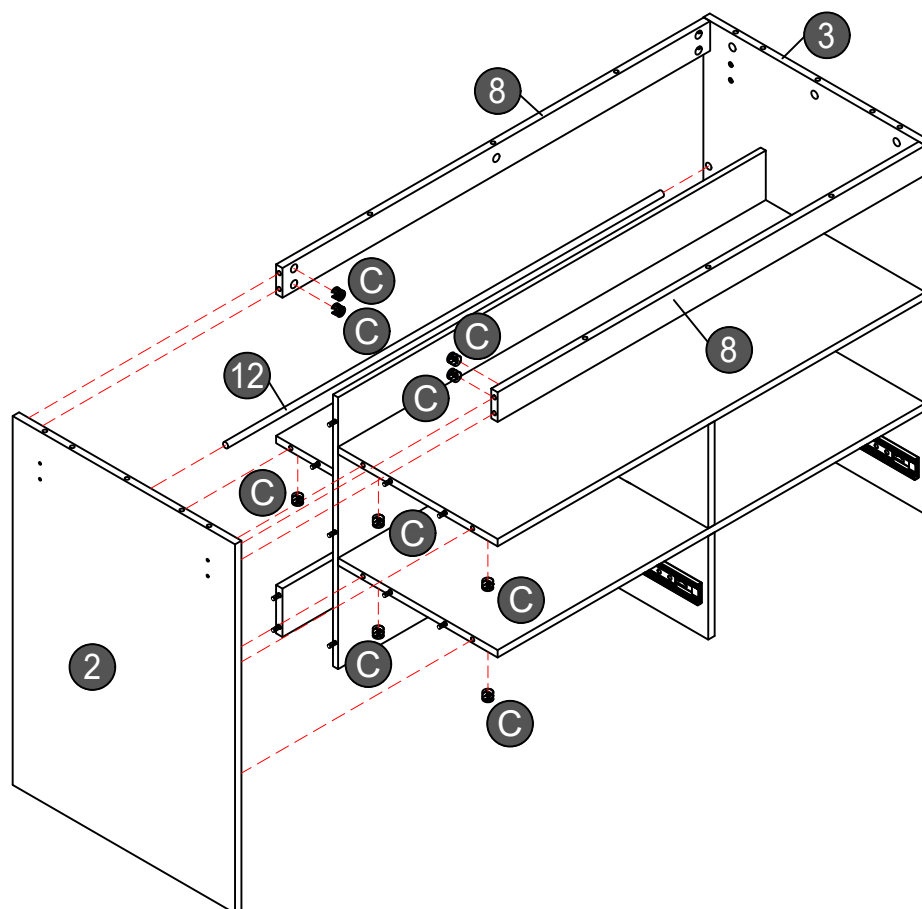


Step 19

A




Ø6*30mm Dowel x8

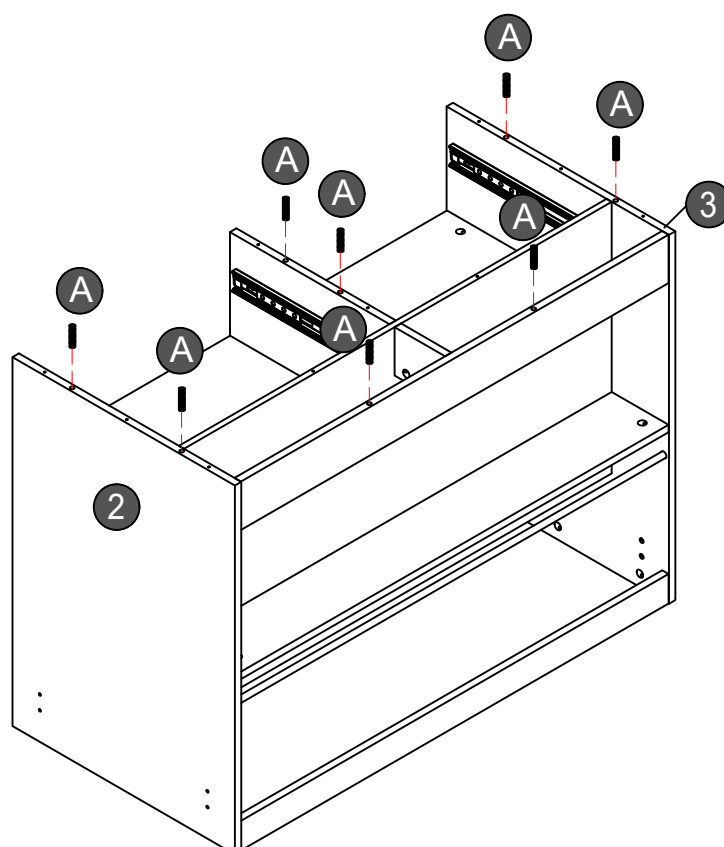


Assembly Instructions

Step 20

E



4*35mm Screw x10

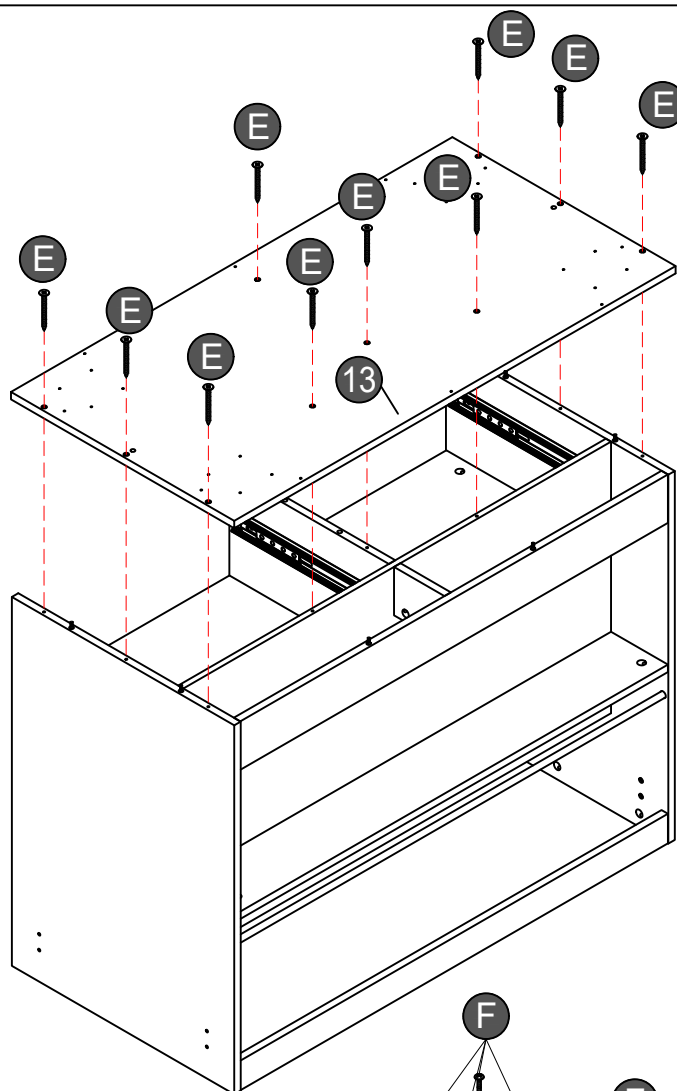


Step 21

F





4*25mm Screw x16


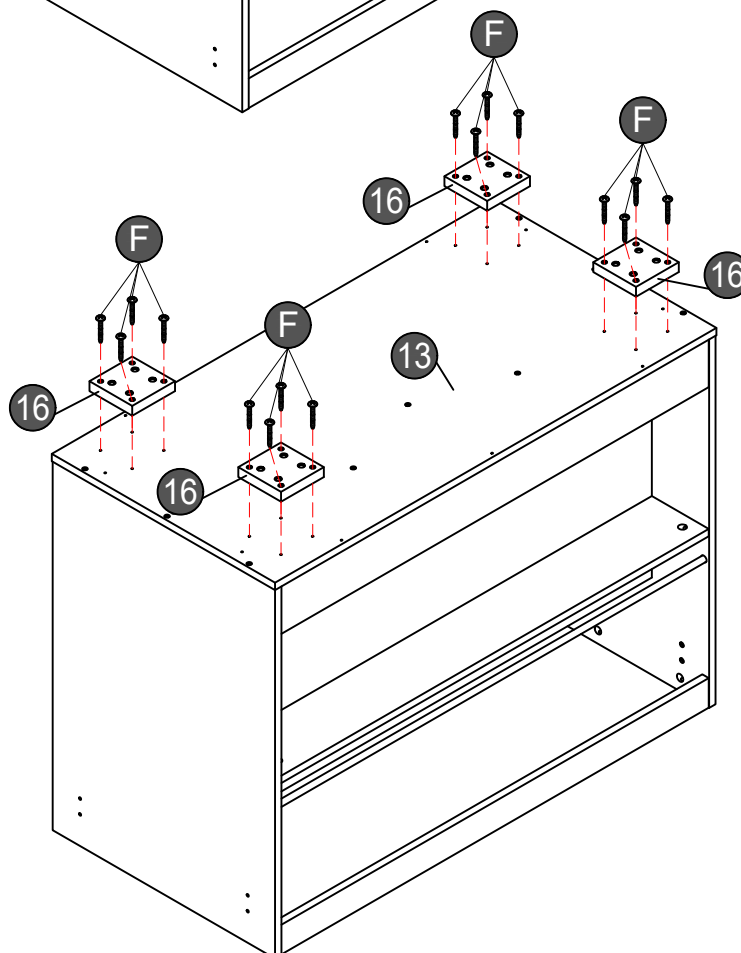


Assembly Instructions

Step 22

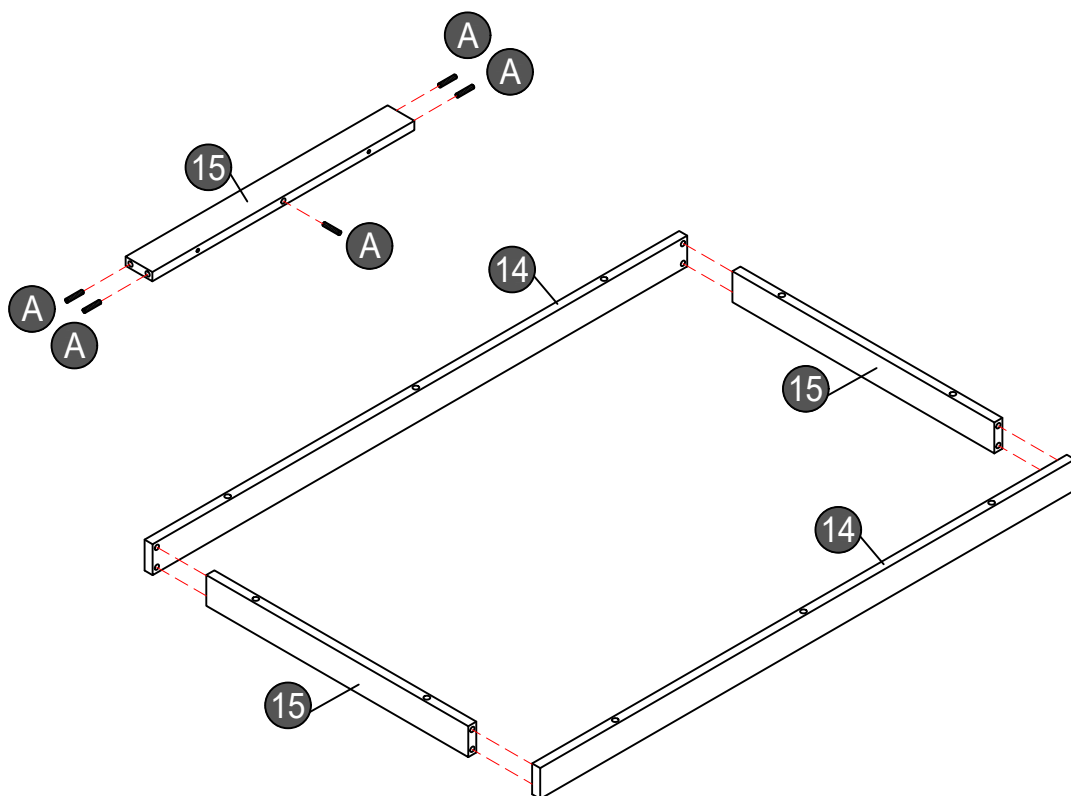
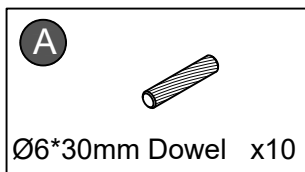


Step 23

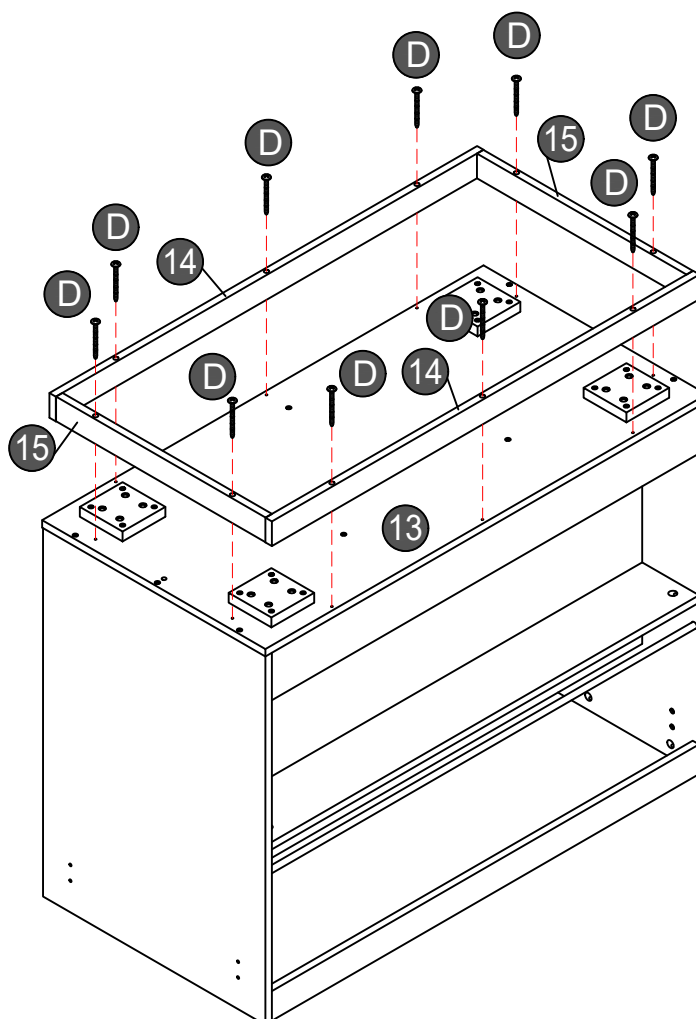
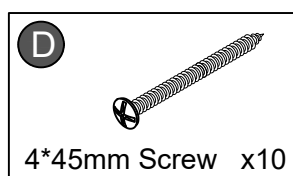


Assembly Instructions

Step 24

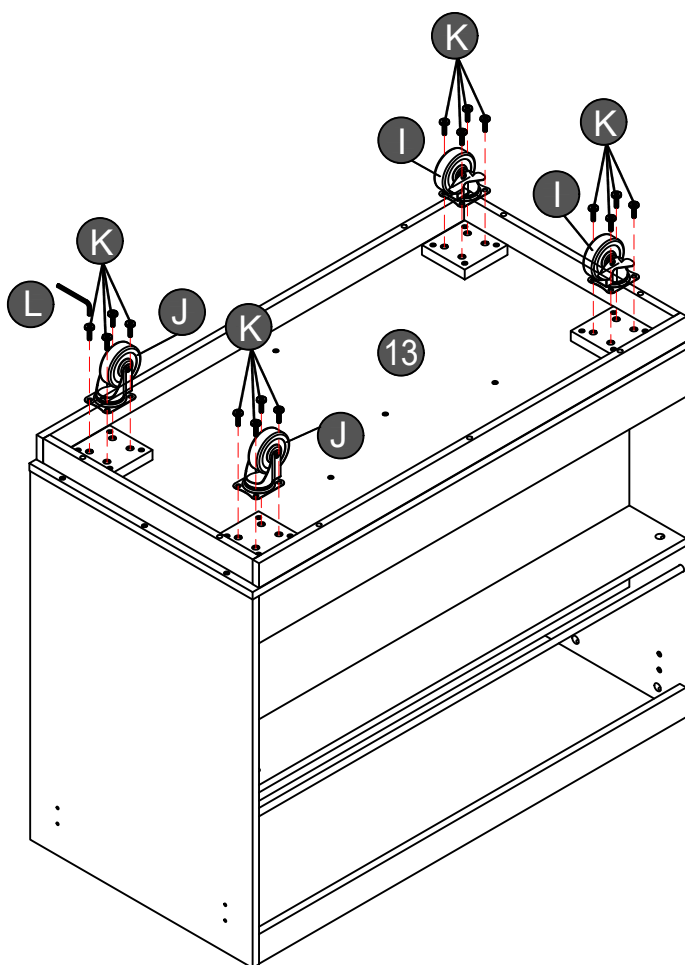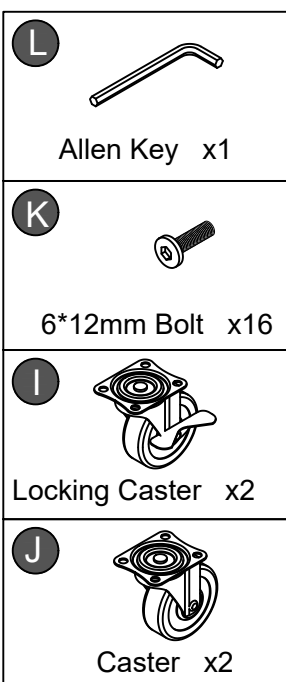

Step 25

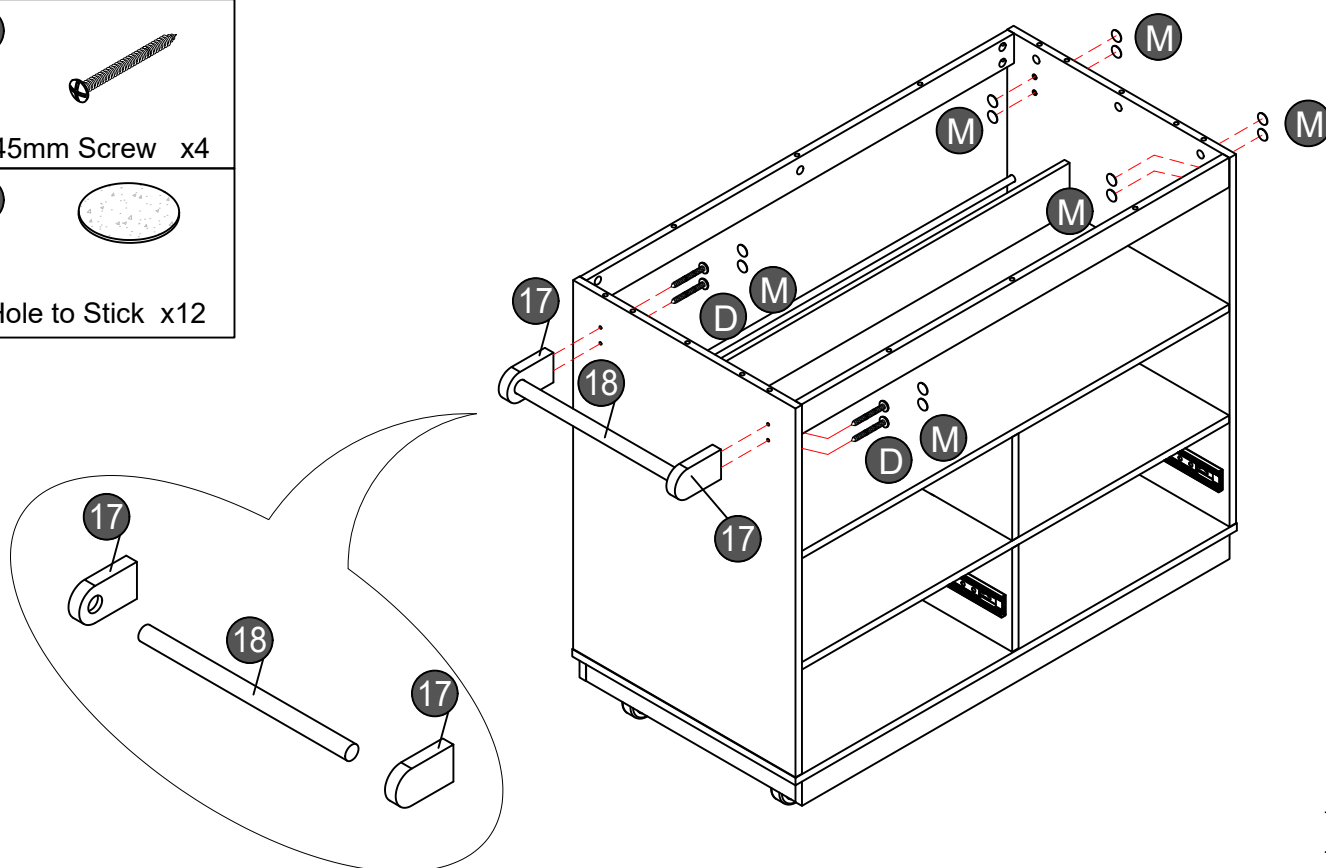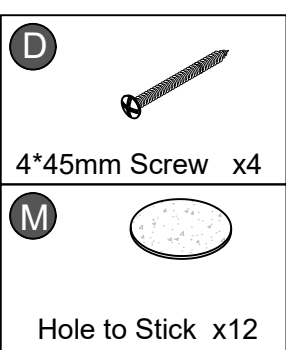


Assembly Instructions

Step 26

A




Ø6*30mm Dowel x8


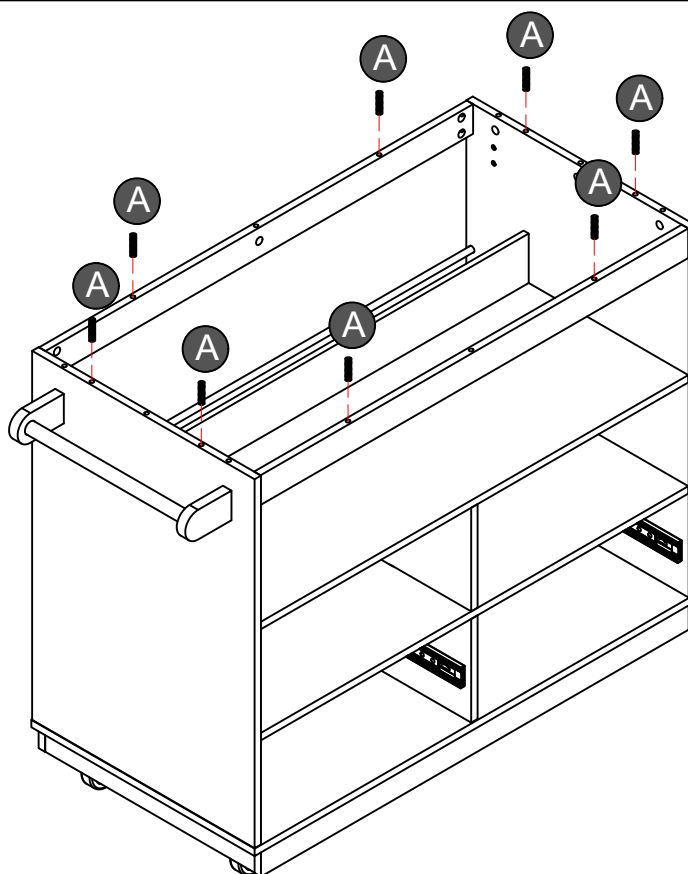


Step 27

B



Cam Bolt x8

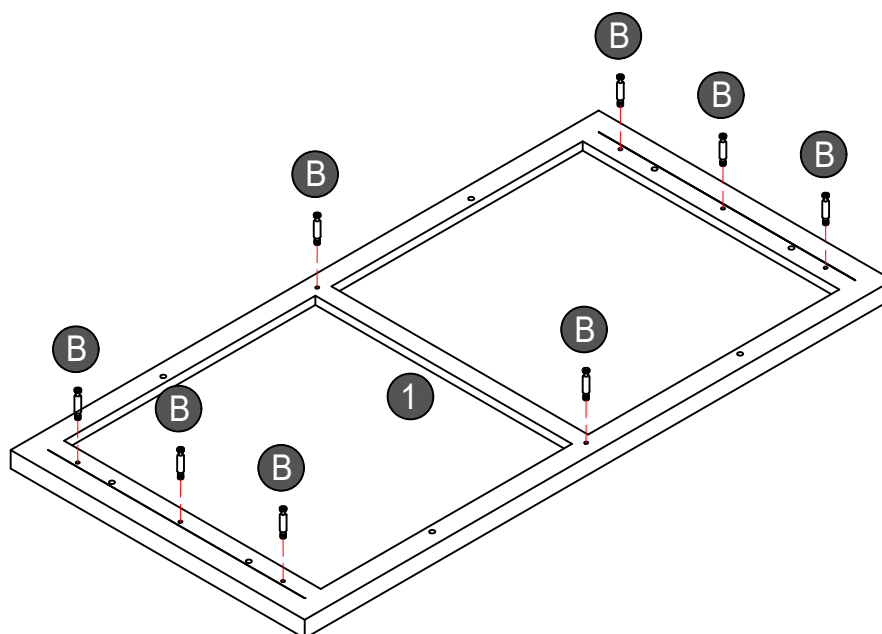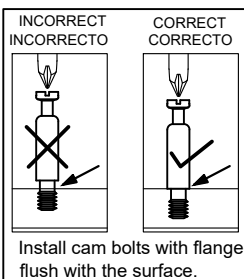


Assembly Instructions

Step 28

C



Cam Lock x8




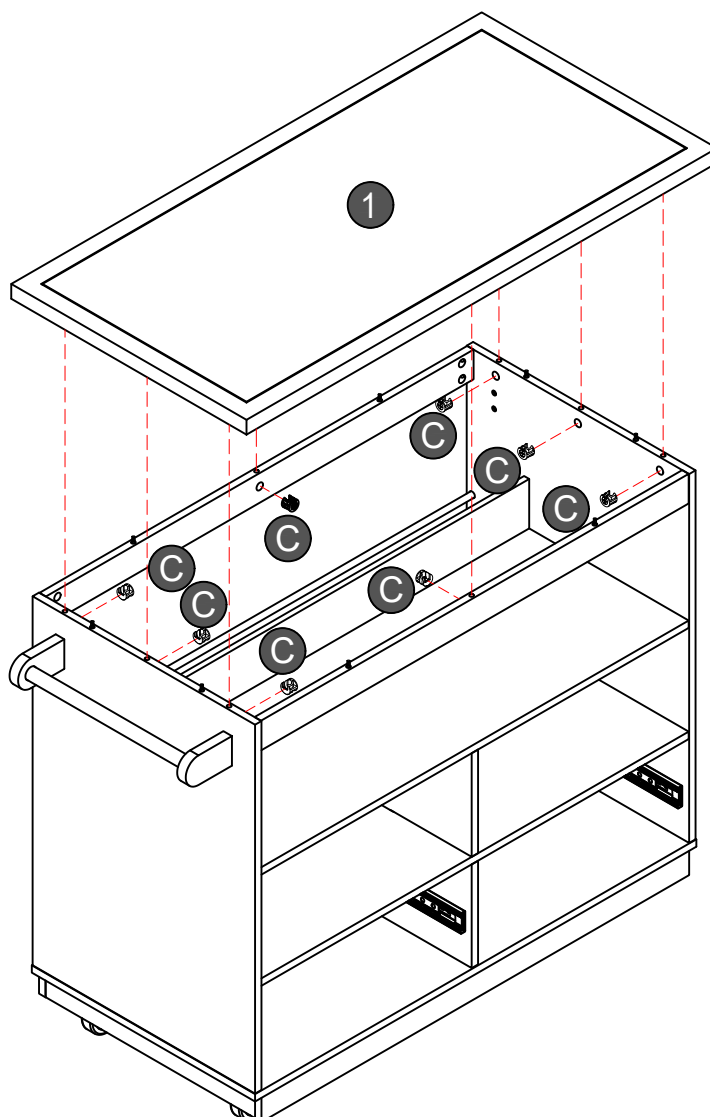


Step 29

B




Cam Bolt x8

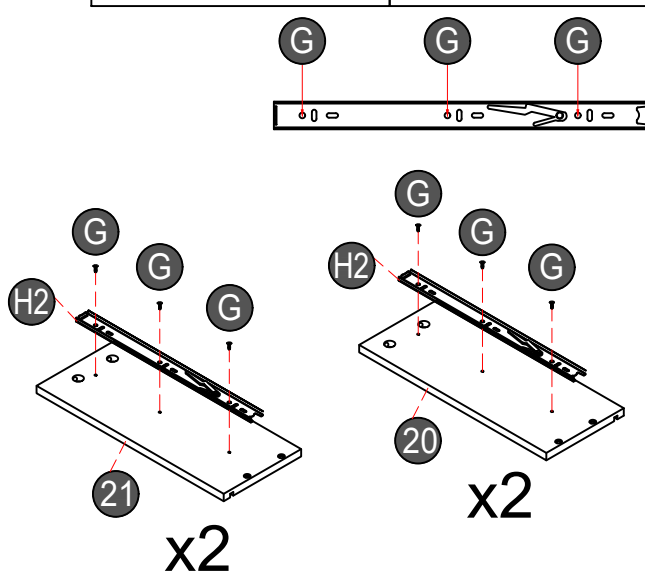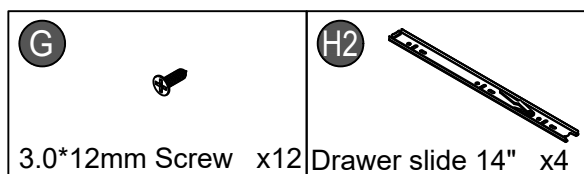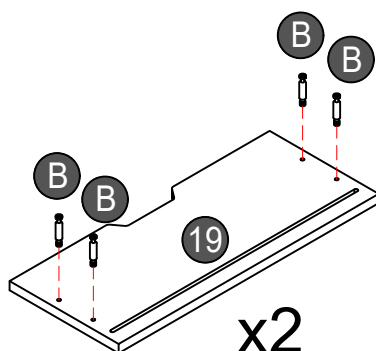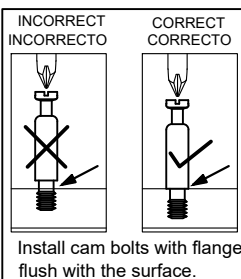


Assembly Instructions

Step 30

E



4*35mm Screw x8

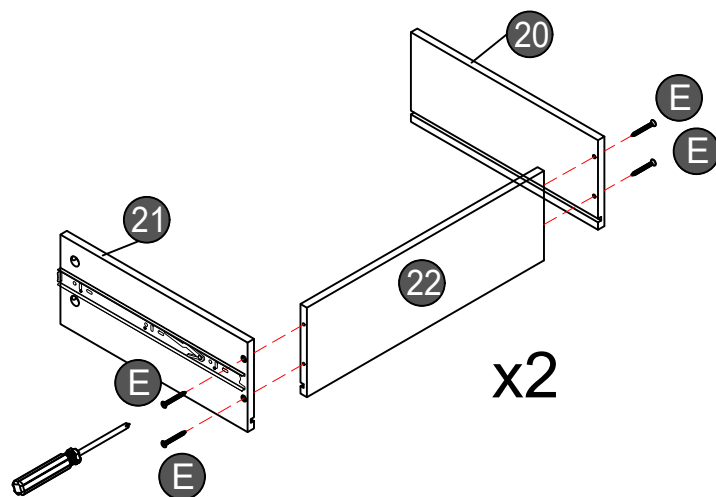

Step 31

C





Cam Lock x8

M



Hole to Stick x8

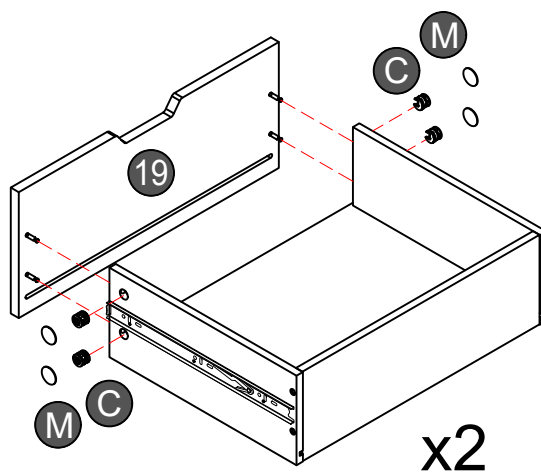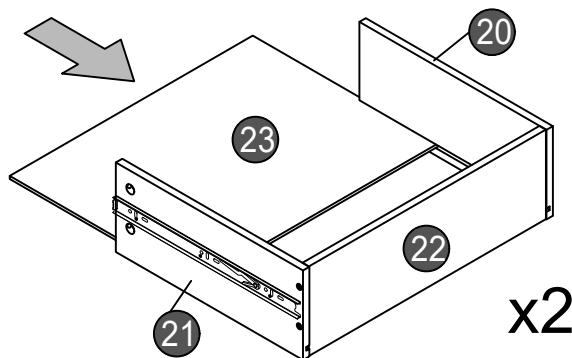

Assembly Instructions

Step 32

