



**FLEXSTONE**  
LUXURIOUS BATH SURROUNDS

# Shave Shelf Install Instructions

**\*Read all instructions before starting\***

**For missing items do not return to store.**

**Please call 877-941-3662**


(Monday – Friday 8:00 a.m. – 5:00 p.m MT)

**For additional information and resources, visit:  
[www.FlexstoneProducts.com](http://www.FlexstoneProducts.com)**

# Shave Shelf Instructions

## Installation of Shave Shelf

1. Install the Shave Shelf after the FlexStone wall panels are installed. Be sure to remove the protective masking from the walls before installing the Shave Shelf. Select the desired location for placement of the Shave Shelf that is a comfortable position for shaving (typically between 6-18 inches from the floor).
2. Perform a dry fit to make sure the shelf fits snugly into the corner of the wall surround. You will be able to fill in any small gaps between the Shave Shelf and the wall panel with silicone in Step 6.
3. Apply Performance Pro adhesive to the foam on the backside of the shelf using several beads of adhesive. Be sure to avoid the edge of the shave shelf so that adhesive does not squeeze out and create a mess when installing the shelf.
4. Run a bead of Performance Pro 100% Silicone to the back corner of the Shave Shelf, along the white foam.
5. Install the Shave Shelf at the desired location by simply pressing the shelf into the corner of the walls. The adhesive is tacky enough to hold the shelf in place while the adhesive cures. Wait at least three hours before proceeding to step 6. This will allow the adhesive time to set up so the shave shelf can remain steady while silicone is applied.
6. Seal all edge joints with Performance Pro 100% Silicone, as with the rest of the surround.

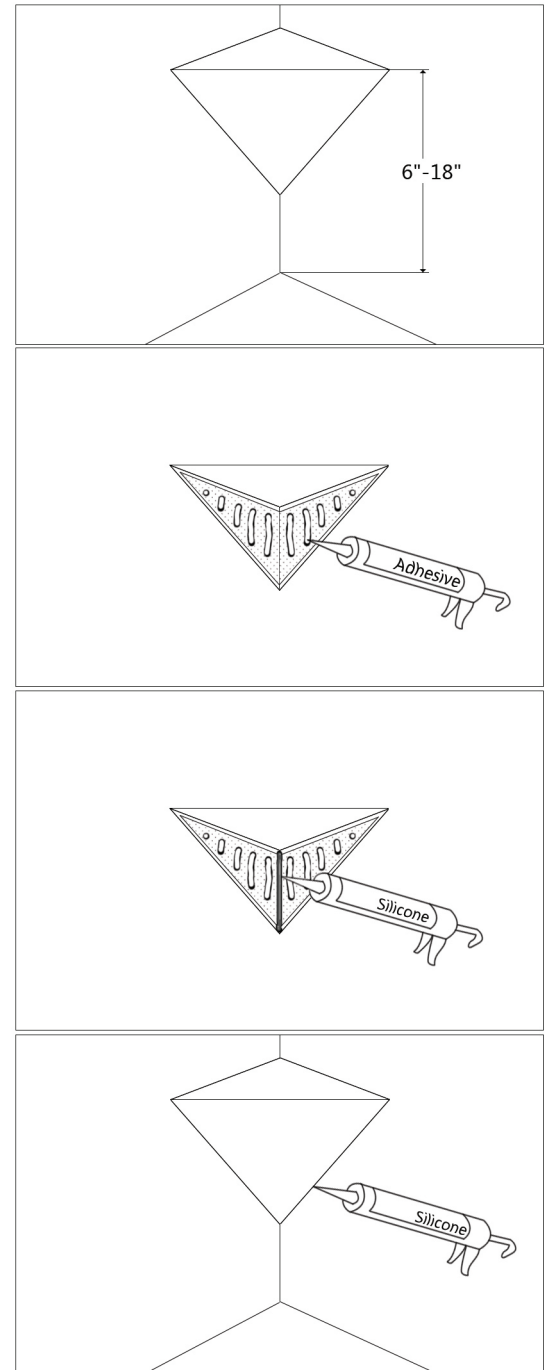

Please inspect package for any damage and read instructions carefully prior to installation. If you have any questions or issues, please call our customer support line at 877-941-3662.



**FLEXSTONE**  
LUXURIOUS BATH SURROUNDS