


# Triton 4-Fold Bath Screen


- Instruction suitable for Right Side or Left Side Installation .

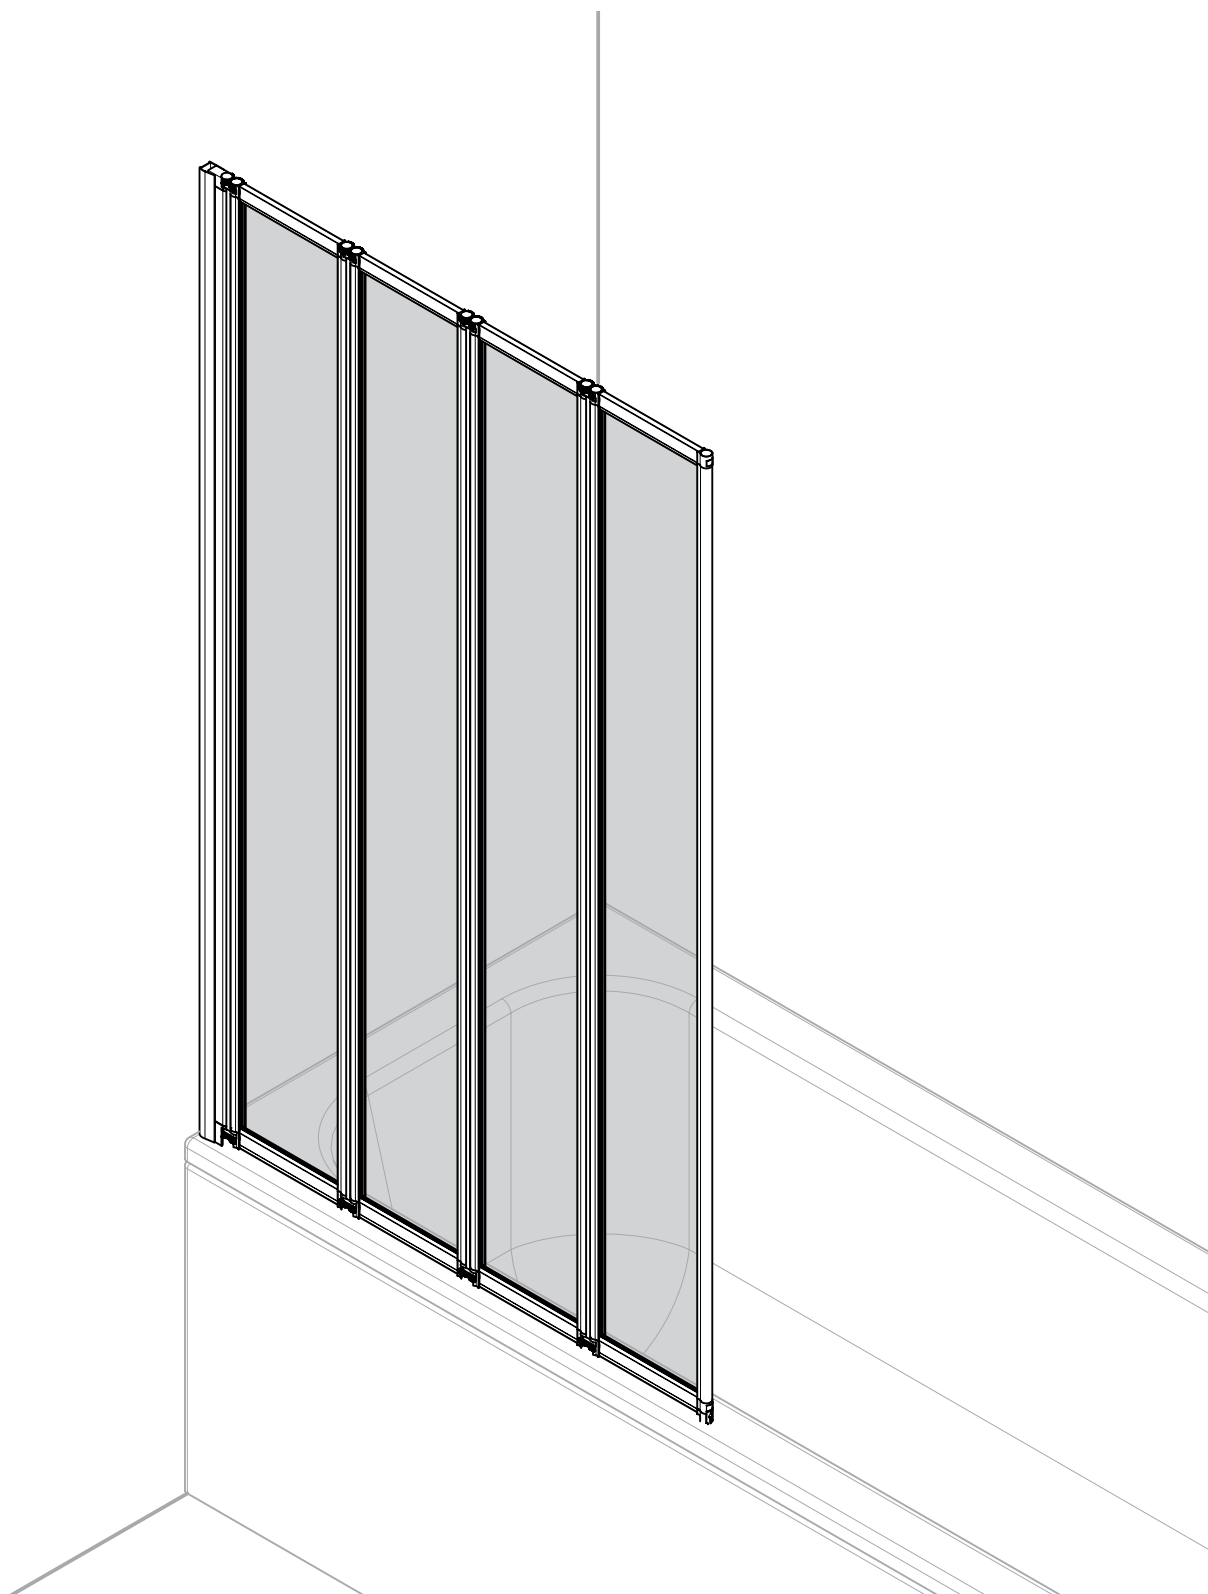

## Before You Start

- Check that the bath has been installed correctly and that it is level. **Please Note:** All product supplied without bath.
- Check that there is sufficient space on the bath for the product and that the screen movement does not impact on other items such as sinks and taps.
- Ensure the product is fitted to a non-porous surface ie. tiled. Check that the wall surface is flat.
- Unpack and check the product is complete and undamaged, (refer to 'Parts & Fittings Supplied' and 'Loose Screws & Fittings Supplied' sections for details).
- Fixings are supplied for solid walls only. Ensure that the correct fixings are used for the wall type – if in doubt seek professional advice.
- Ensure the area is clean, dry and dust free.
- Read the instructions in full.
- Have the correct tools available, (as shown below, see 'Tools Required').

Fig.A.

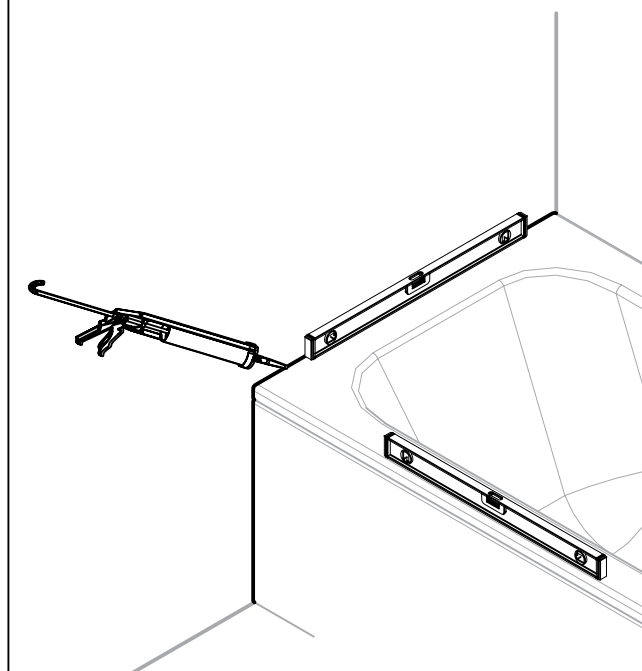


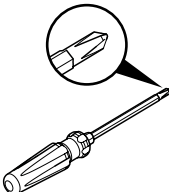
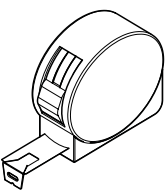
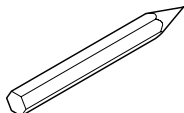
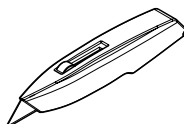
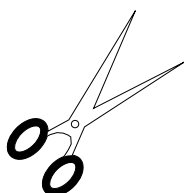
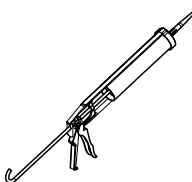
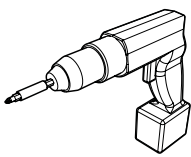
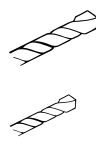
## Safety

- Handle all glass with care - support on cardboard to avoid risk of breakage.
- This product is heavy and requires 2 people to carry and install it.
- Check walls first for hidden pipes and cables before drilling.
- All glass is toughened – it cannot be reworked or replaced by ordinary glass.
- Use safety eyewear when drilling.
- Use safety eyewear when handling glass.
- Keep all small parts away from children.

## Disclaimer


- Please notify the retailer immediately of any damage or faults. The manufacturer cannot be held responsible for any installation costs that may arise from damaged or faulty product being installed.
- Please dispose of all packaging with due regard to the environment.

## Tools Required (not supplied)

<p>Spirit Level</p> 	<p>Screwdriver</p> 	<p>Tape Measure</p> 	<p>Pencil</p> 	<p>Utility Knife</p> 
<p>Scissors</p> 	<p>Silicone Gun &amp; Sealant</p> 	<p>Power Drill</p> 	<p>Suitable Drill Bits</p>  <p>6mm dia. *</p> <p>3mm dia. HSS</p>	<p>* Ensure drill bit used is suitable for wall surface</p>


## Parts & Fittings Supplied

**!** Keep small parts away from children

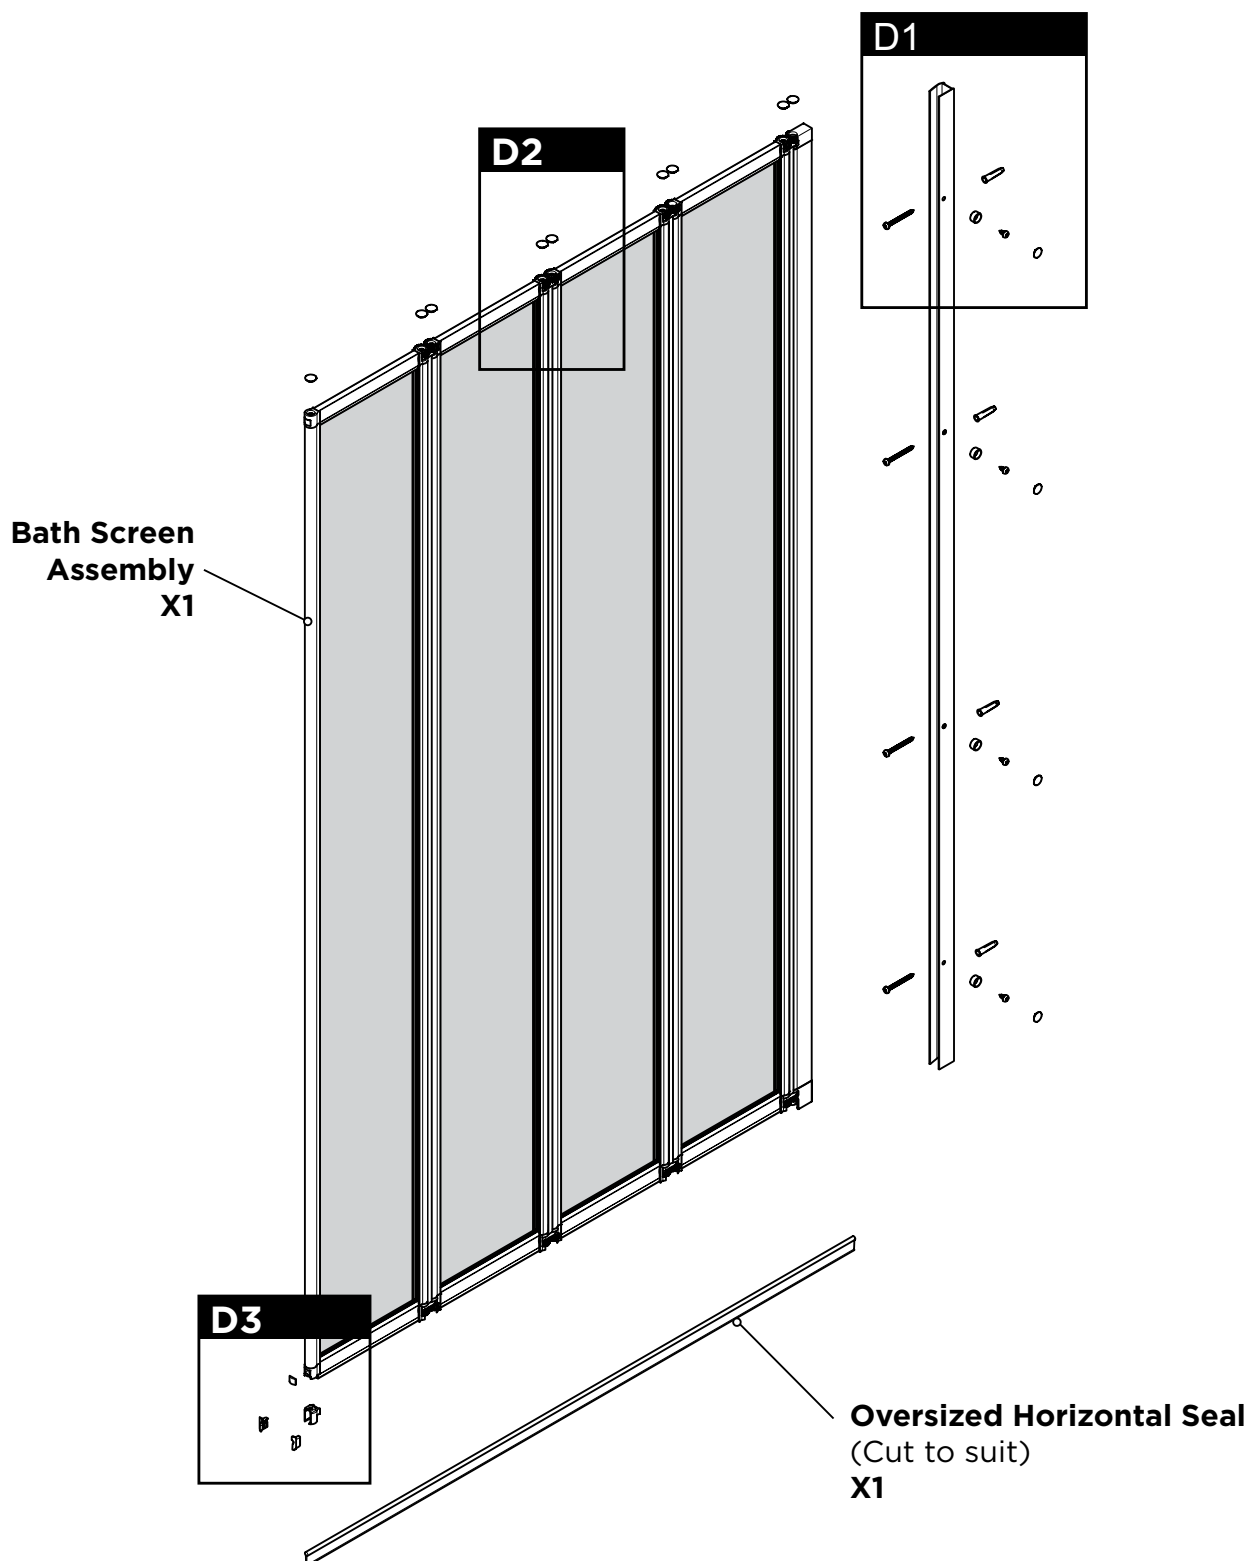


We have taken great care to ensure that this product reaches you in perfect condition. However should any parts be damaged or missing please contact your point of purchase. This does not affect your statutory rights. In addition if you require replacement parts your point of purchase will be happy to assist.


**D1**

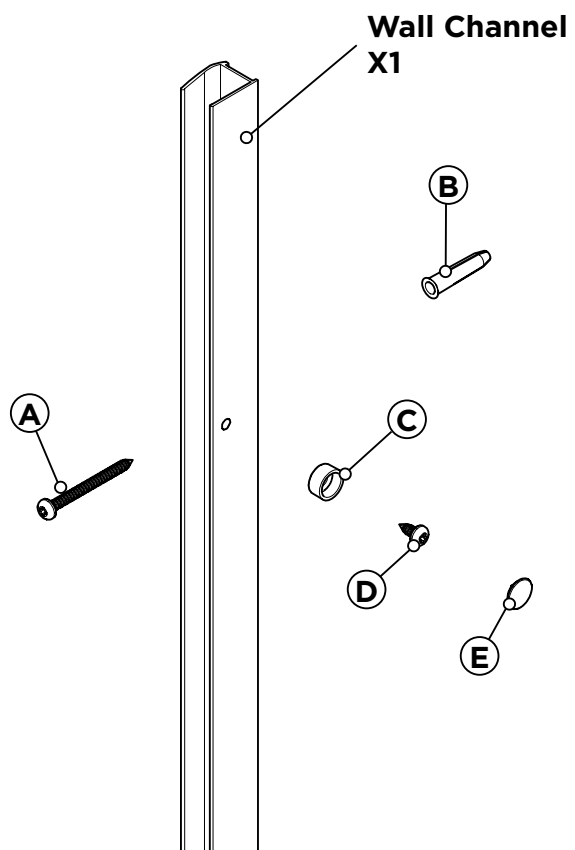

**D2**





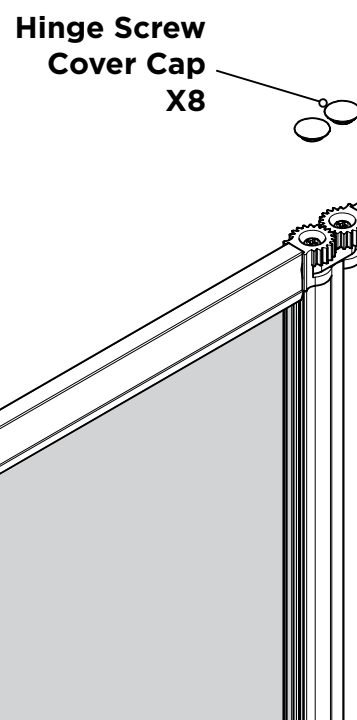


**D3**

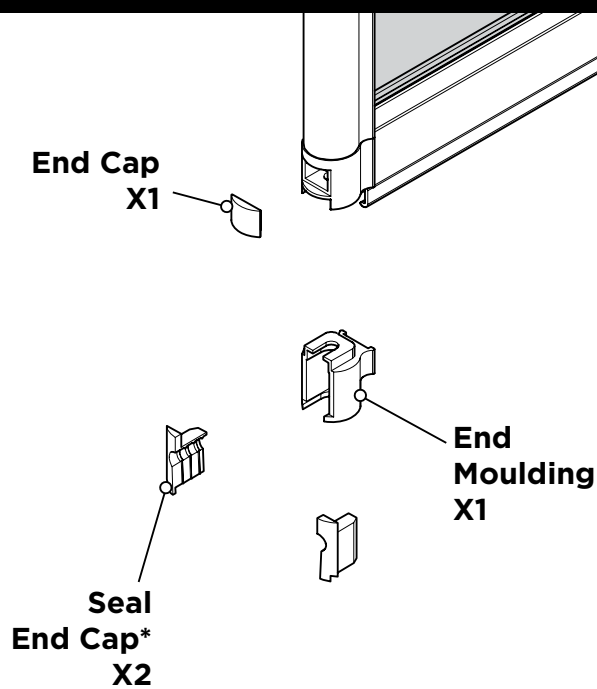

**\* Left and Right Hand variants  
Supplied (1 No. of each)**

## Loose Screws & Fittings Supplied
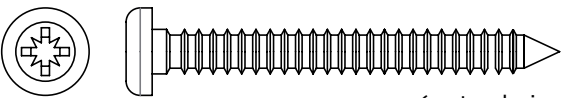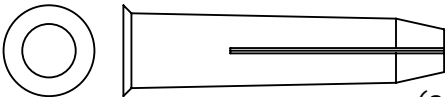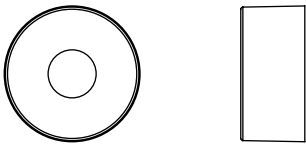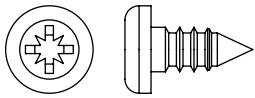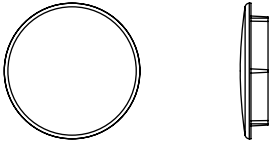
<b>(A)</b>	No.8 x 1½" Pan Head Pozi Screws	 (actual size)	Qty
			<b>x4</b>
<b>(B)</b>	Wall Plugs	 (actual size)	Qty
			<b>x4</b>
<b>(C)</b>	Screw Snap Cap Base	 (actual size)	Qty
			<b>x4</b>
<b>(D)</b>	No.8 x ¾" Pan Head Pozi Screws	 (actual size)	Qty
			<b>x4</b>
<b>(E)</b>	Screw Snap Caps	 (actual size)	Qty
			<b>x4</b>



**Tip:**  
When drilling tiles apply  
masking tape to surface to stop  
drill bit slipping.




Wall plugs supplied are for solid  
walls only. Ensure correct wall  
plug for wall type is used. If in  
doubt seek professional advice.



Position wall channel on wall.  
Ensure channel is vertically level  
and does not overhang the bath.

**1**

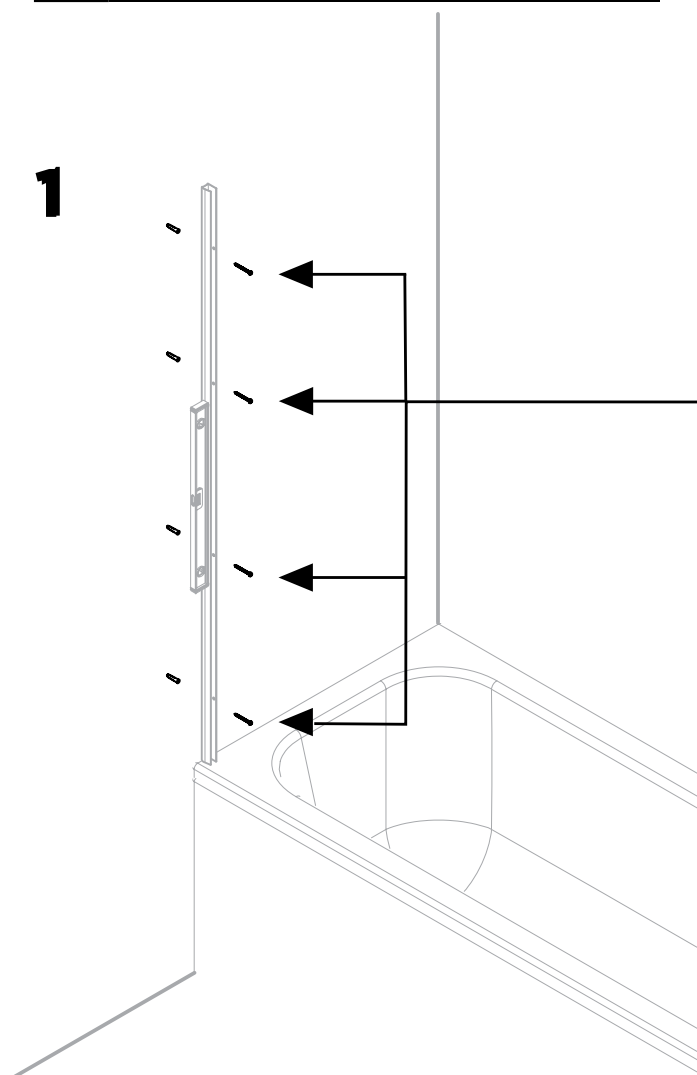


BATH  
SIDE

OUTSIDE  
FACE

**Please Note:**


Position Wall  
Channel with  
curved side facing  
away from bath.

1.1

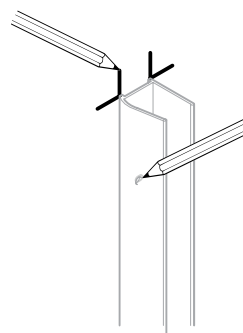


Mark position  
pre-drilled Wall  
Channel holes

1.2\*

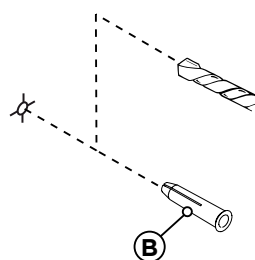





\* 6mm dia. holes  
with drill bit suitable  
for wall surface

1.3

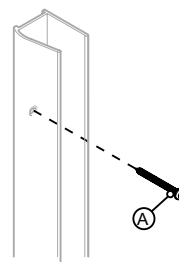


**Note:**

Please process the wall jamb according  
to the actual installed bathtub or shower base.

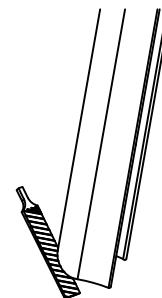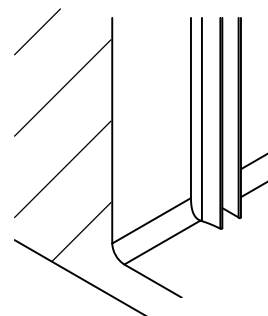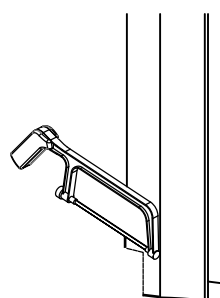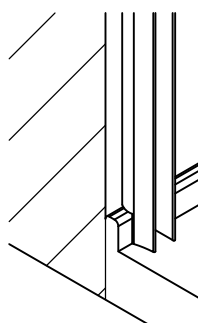


## Horizontal Seal Preparation

i)

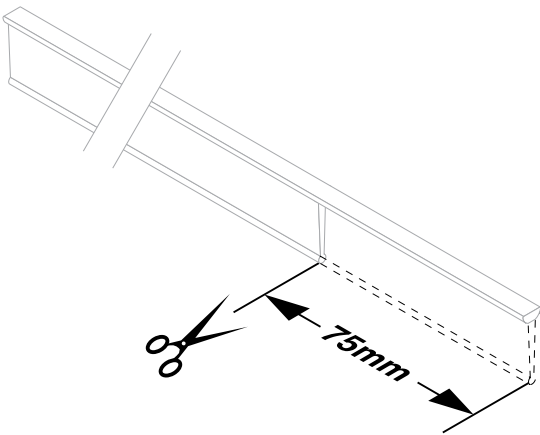


ii)

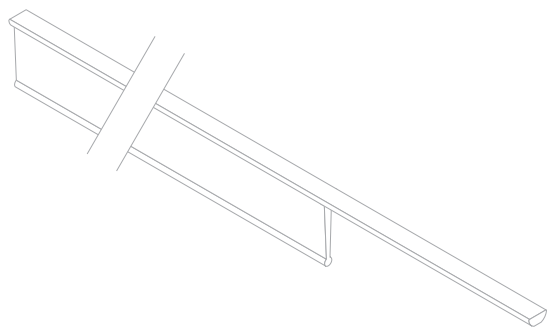


**2.1**

Slide Horizontal Seal into position

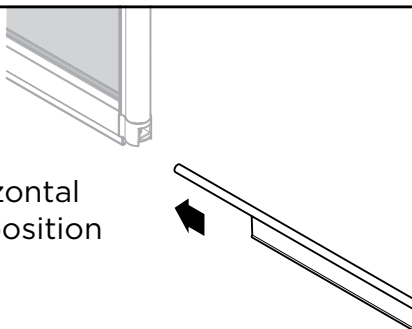


**2.2**

Slide Horizontal Seal into position

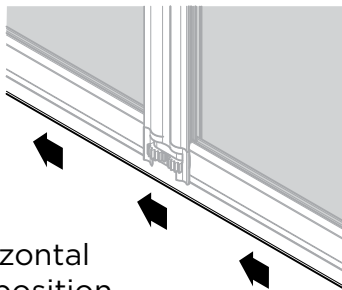


**2.3**

Tie end of seal into tight knot

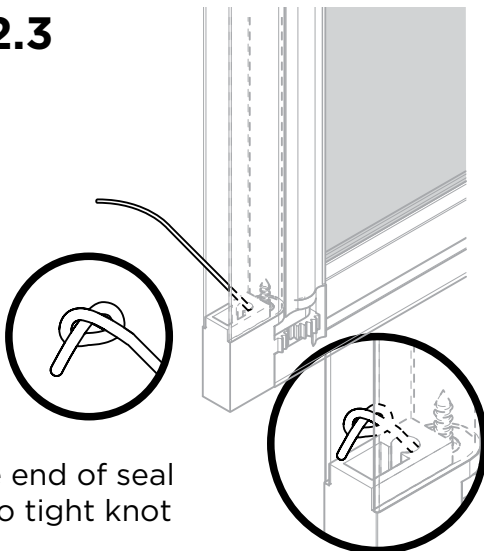


**2**

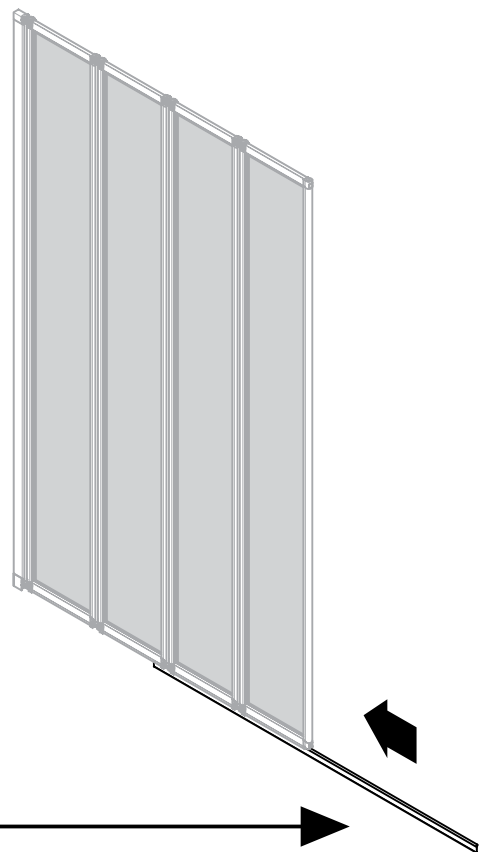


**Tip:**  
Apply a small amount of Silicone Lubricant to the Horizontal Seal to help slide into position.

### Underside View

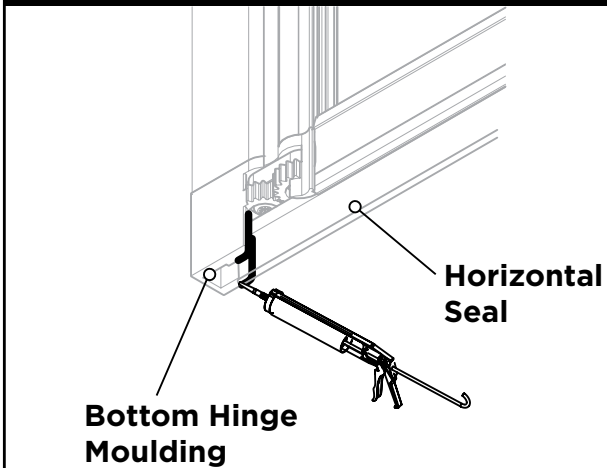


### Plan View

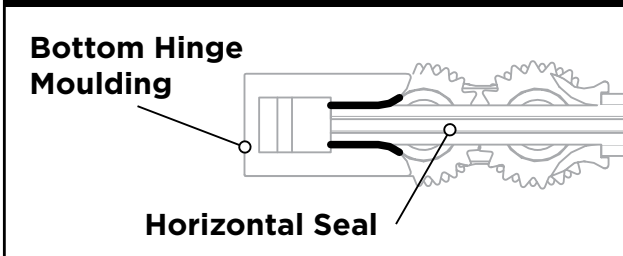


**IMPORTANT NOTE:**  
Please ensure that Silicone Sealant is apply fully between Horizontal Seal and Bottom Hinge Moulding as shown.

**3**

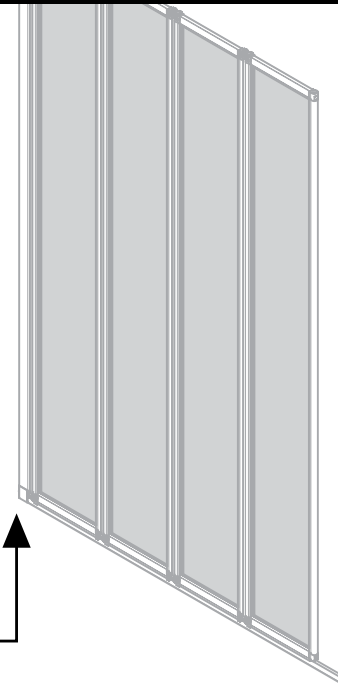


**4.1**

Remove screw  
as shown.

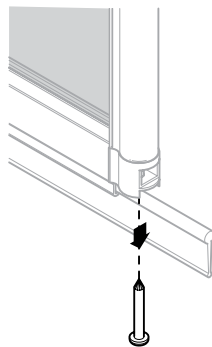


**4.2**

Push fit End  
Cap Moulding,  
fix using screw  
removed in  
previous step.

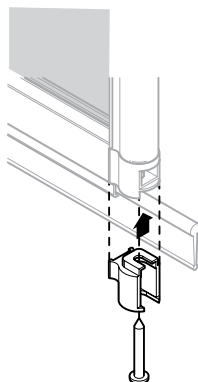


**4**

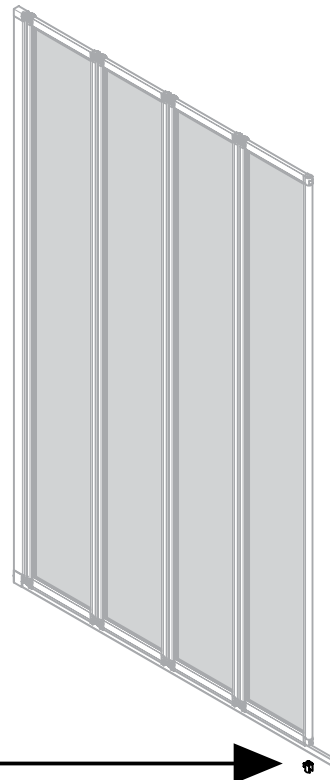




**5.1**

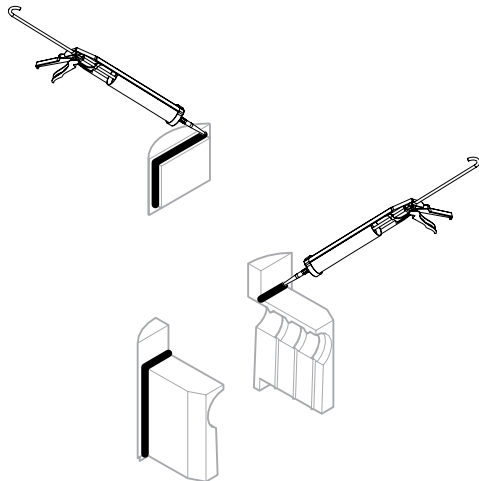


Apply a small amount of silicone sealant to End Cap and Seal End Caps.

**5.2**

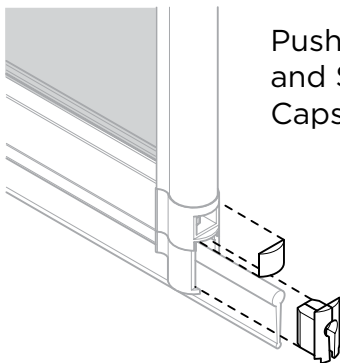


Push fit End Cap and Seal End Caps.


**5.3**

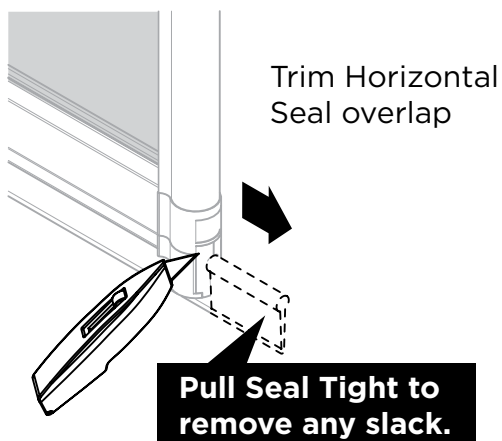

**5**

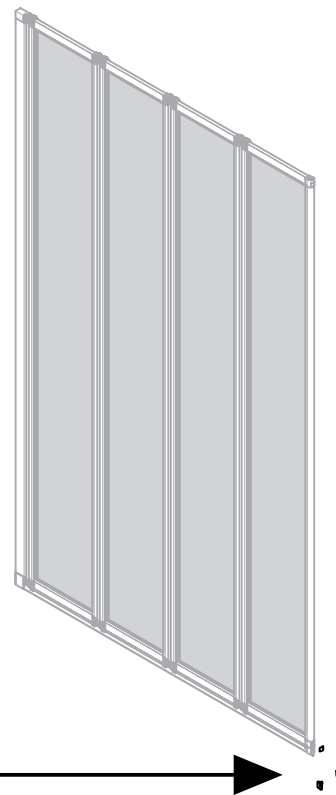

6

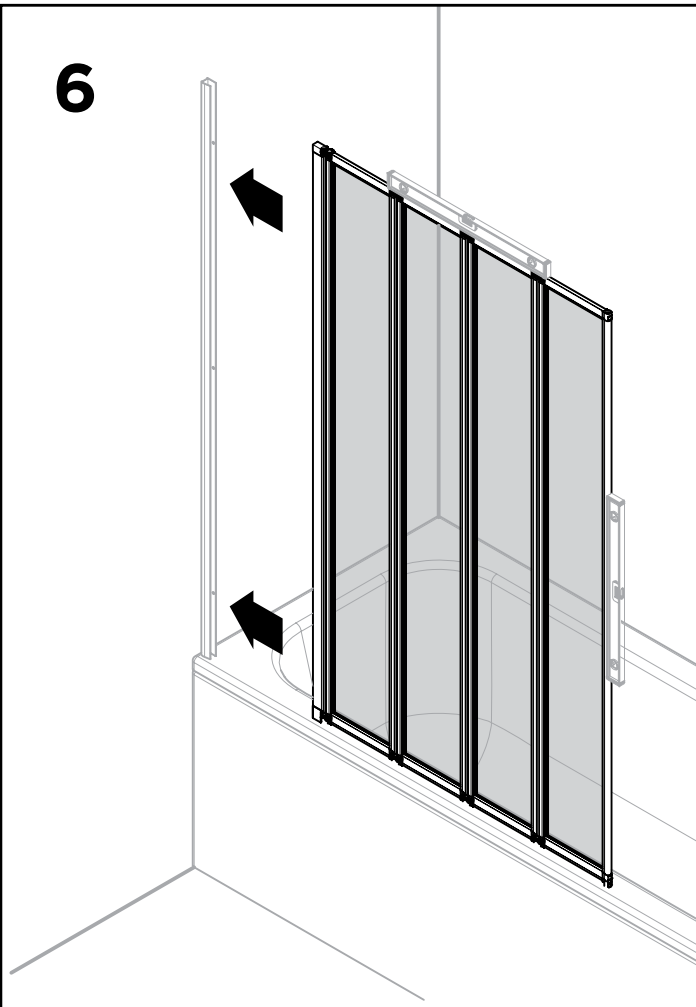


OUTSIDE  
FACE

BATH  
SIDE

**Please Note:**  
Ensure Horizontal Seal sits on top of bath.


Inside View

7

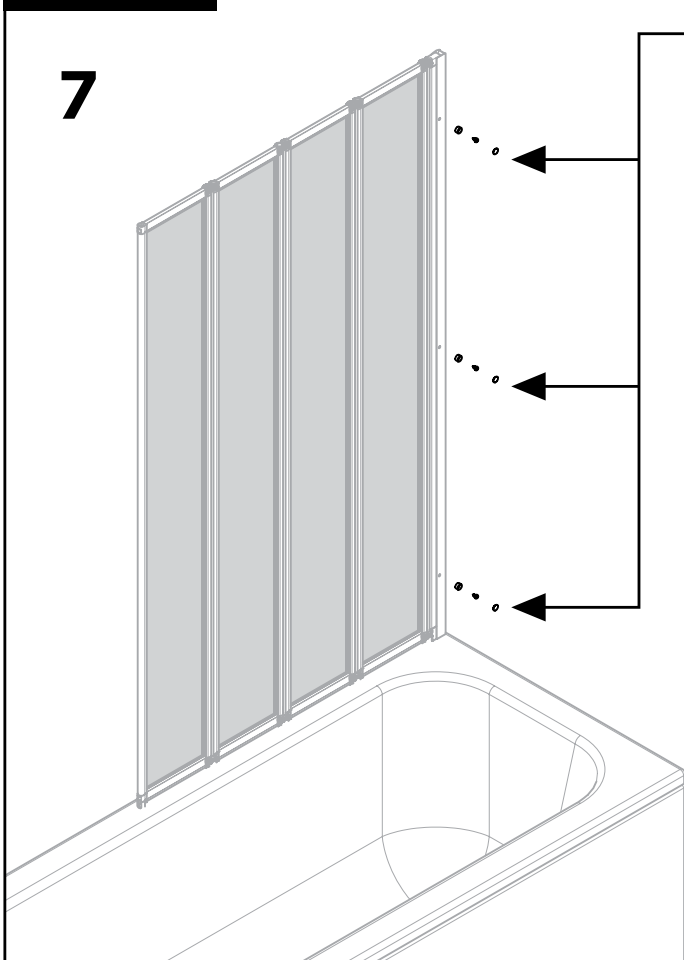


Inside View

\* 3mm dia. holes through  
pre-drilled wall channel  
holes using HSS drill bit

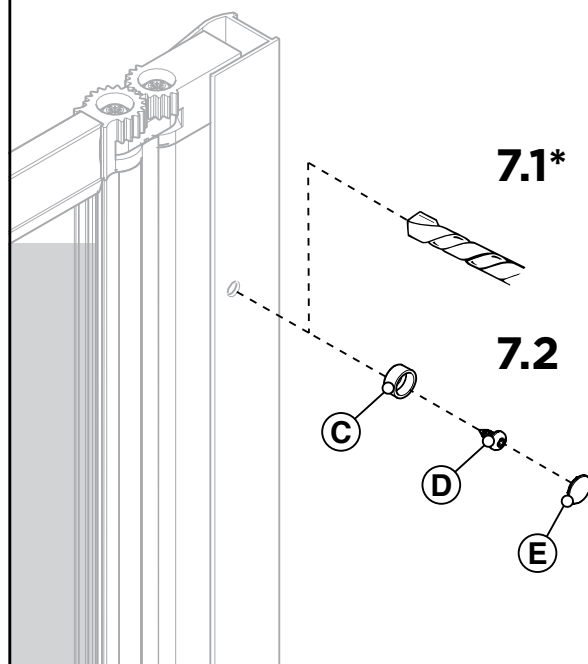


**Inside View**

**8**

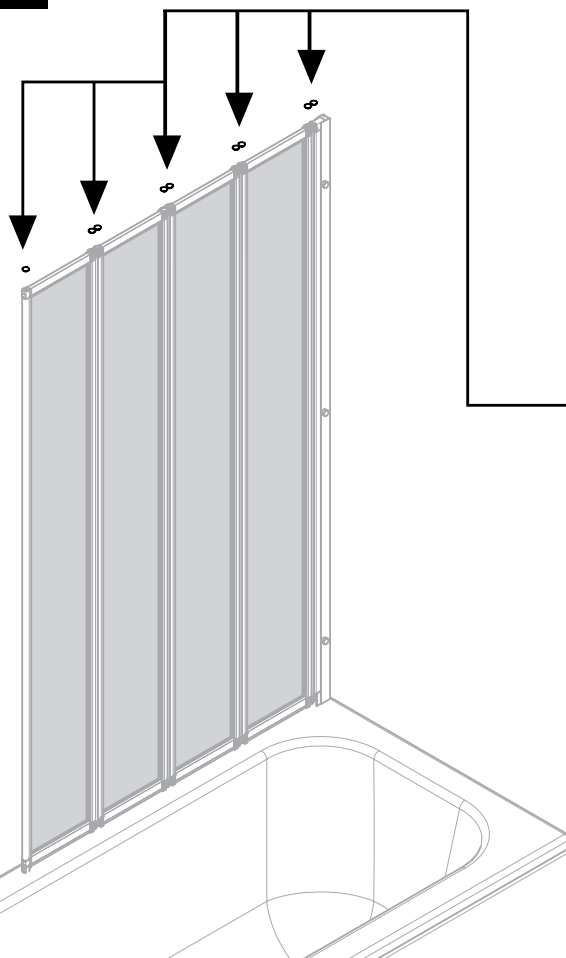

**Inside View**


**8.1**

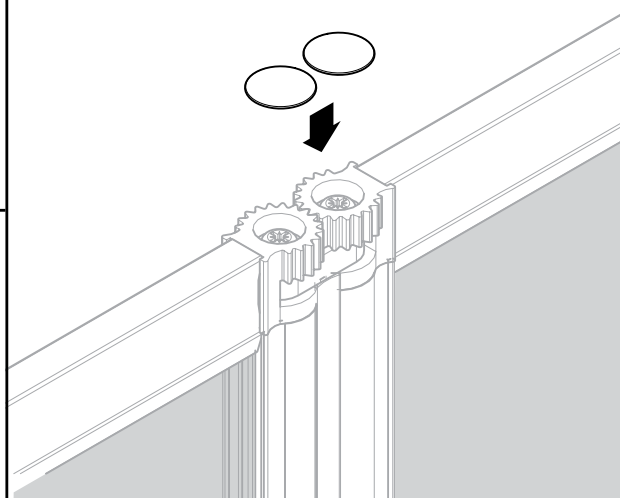

**Push fit Hinge Screw Cover Caps.**


**Inside View**

**9**

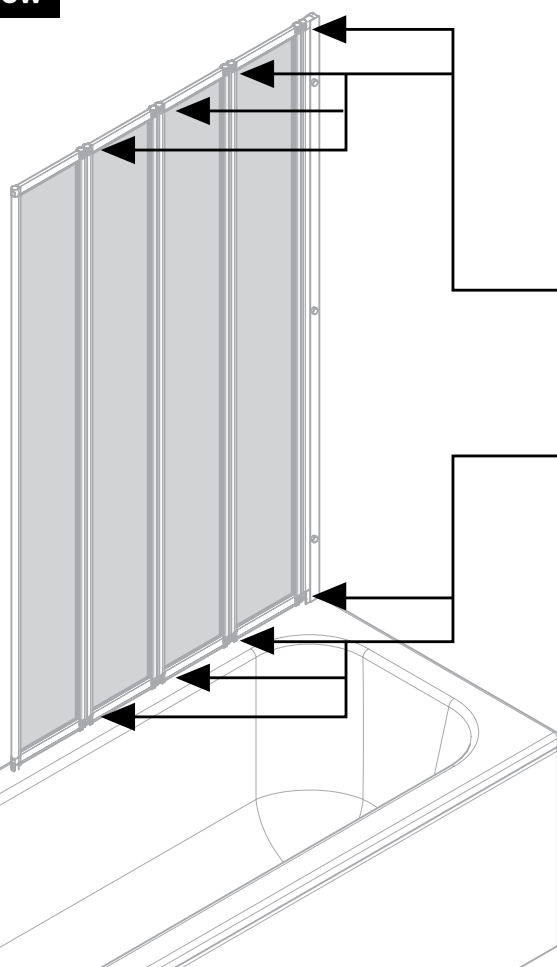

**Inside View**


**9.1**

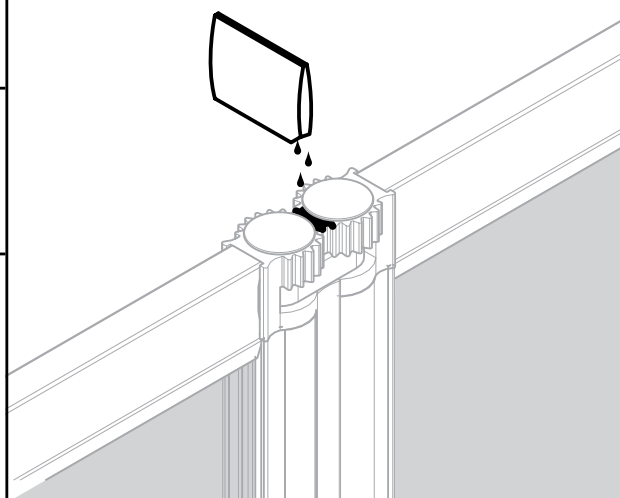

**Apply a small amount of Silicone Grease from sachet (supplied) to the hinge mouldings.**


## Inside View

10

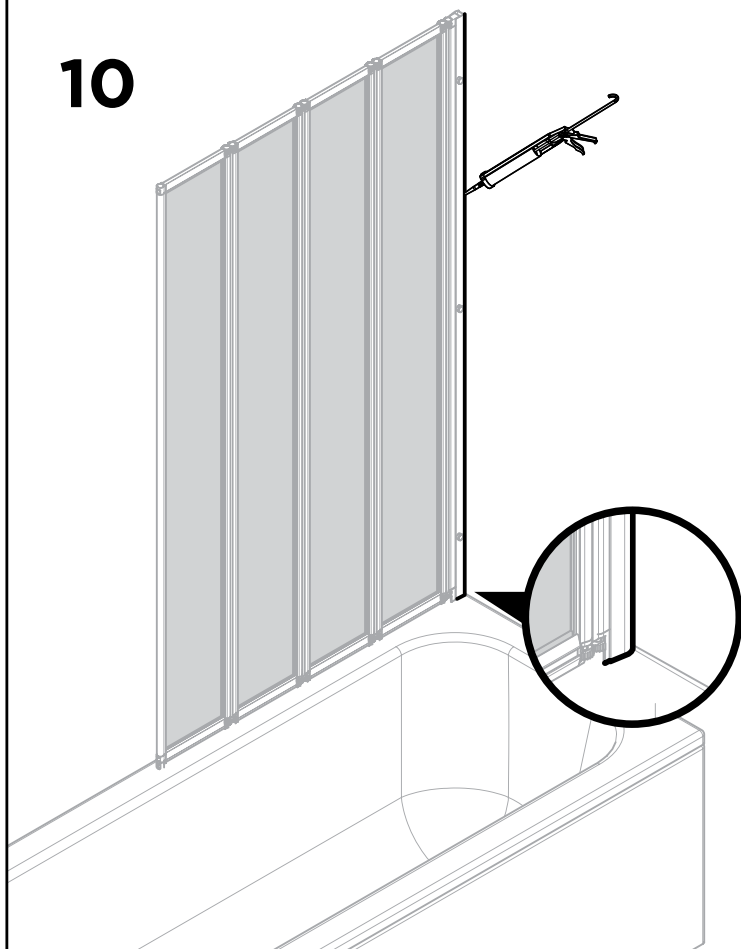


**Apply Silicone Sealant,**  
(not supplied).

**24 hour**

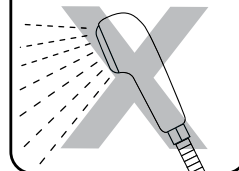


11

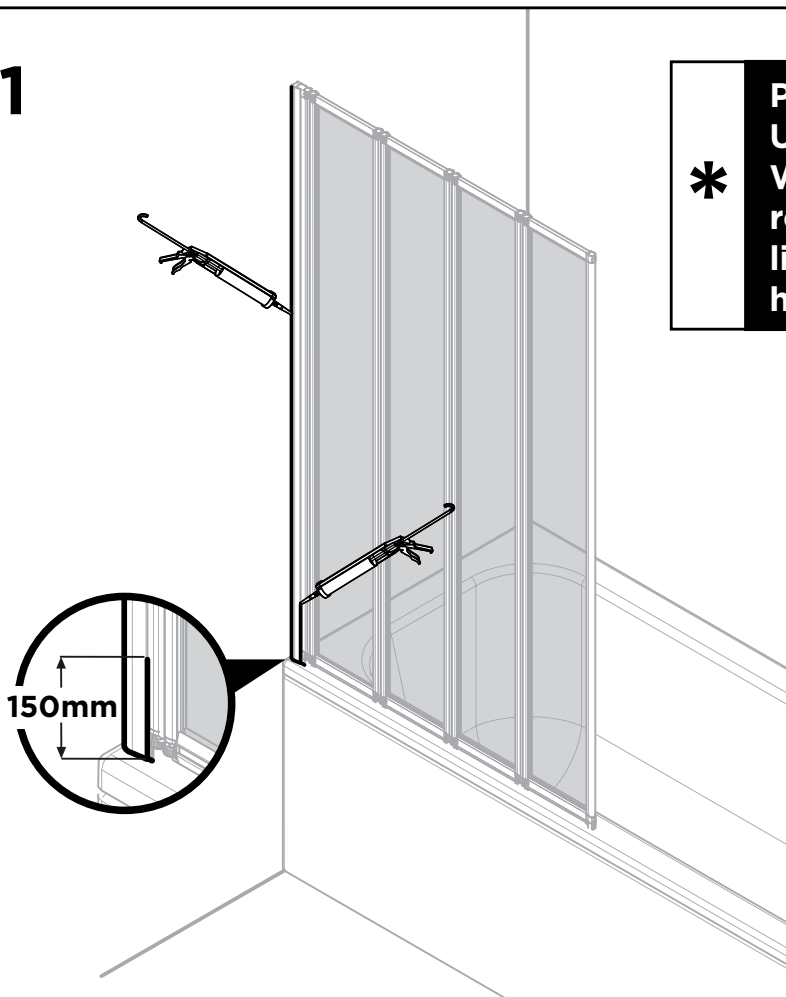

**Product Care:**  
Use a non abrasive cleaner.  
Water marks may be removed with a proprietary  
limescale remover or household vinegar.

**24 hour**

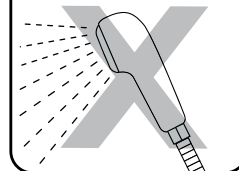

**Apply Silicone Sealant,**  
(not supplied).