

NOTICE

*Please make sure that you have all part indicated and they are in good condition before you begin assembly of this item. Refer to part list and hardware list below for guidance.

*This item should be assembled on a soft surface to prevent scratching the finish during assembly.

*This item may require periodic tightening.

*If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

PREPARATION

*Before beginning assembly of product, make sure all part are present. Compare part with part contents list and hardware contents list.

*If any part is missing or damaged, do not attempt to assemble the product.

*Estimated Assembly Time: 60 minutes.

*Tools Required for Assembly (Not included): Screwdriver


CARE AND MAINTENANCE

Adhesive felt pads should always be applied to areas of furniture which make direct contact with flooring, said application will prevent damage to the furniture and or surfaces on which the furniture lies.

Objects placed on articles of furniture should rest on non abrasive material as to prevent damage to the wood finish. Objects whose composition consists of plastic and rubber are known to discolor and damage the wood surfaces on which they rest. Wipe up spills immediately and avoid common hazards such as hot dishes, harsh solvents and abrasives. Cleaning should be done with a soft lint free cotton cloth dampened with water or furniture polish. On highly used surfaces we recommend applying a quality paste wax which should be used on a regular basis to provide additional protection from scratches and spills.

How often you apply the wax depends on how much wear the furniture receives


Part List

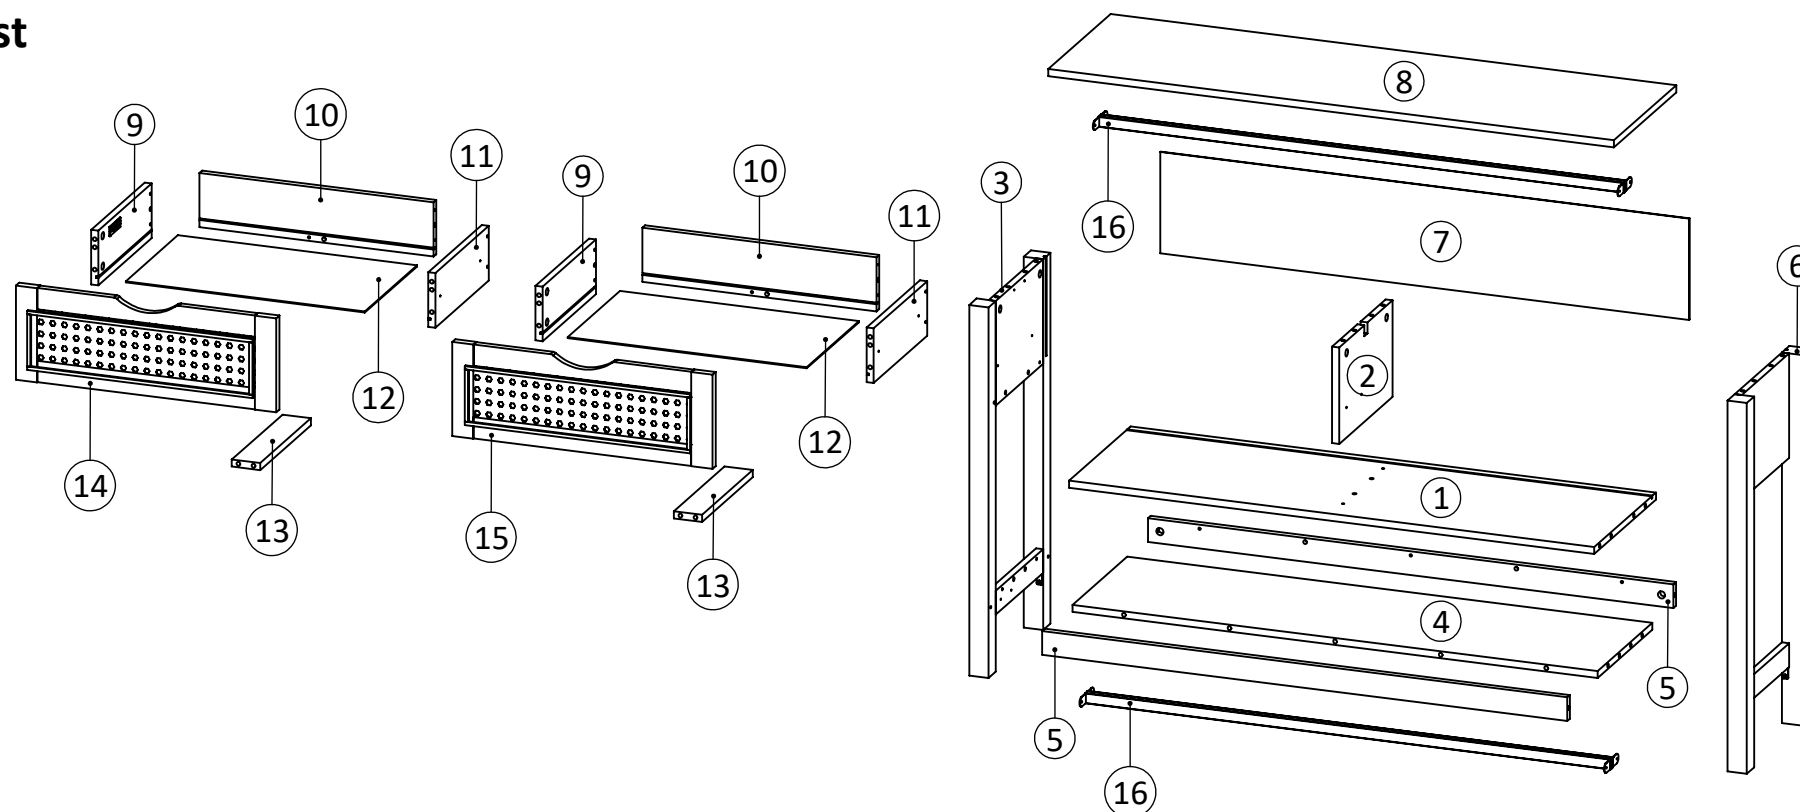

 **SAFAVIEH**
FURNITURE

Model# CNS3100

Product Dimensions: W 47.24" X D 13.78" X H 31.50"

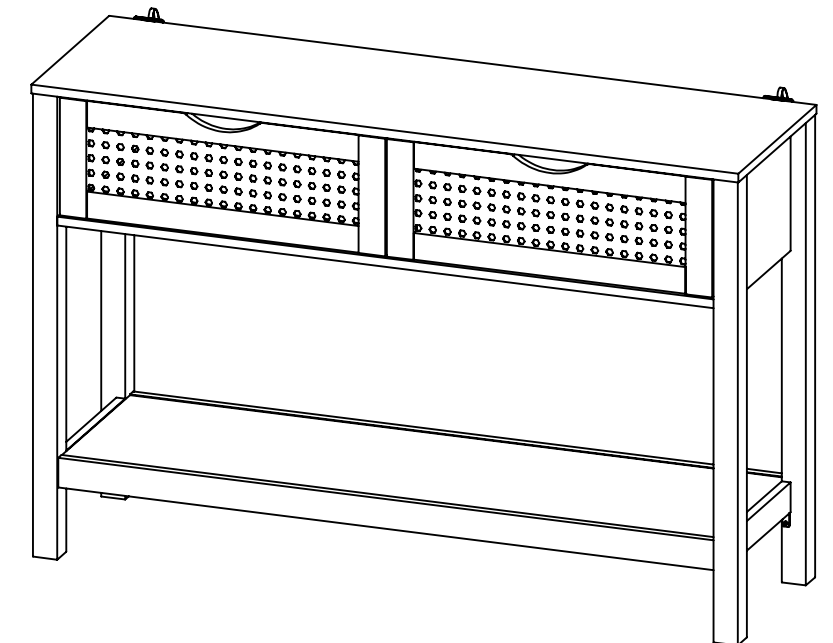

WARNING

WEIGHT CAPACITY










Top load Limit: 45 lbs




Shelf Load Limit: 42 lbs

Drawer Load Limit: 7 lbs



Hardware List

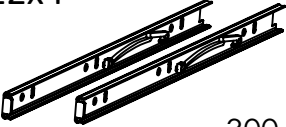HW1x34  Ø6x32 mm	HW2x34  Ø15x12 mm	HW3x32  Ø8x32 mm	HW4x24  Ø6x12 PH	HW5x14  Ø7x32 mm	HW6x2  Ø6x50 mm
HW8x8  Ø4x19 mm	HW9x16  Cover cap sticker	HW10x8  Plastic stopper	HW11x4  300 mm	HW12x4  300 mm	

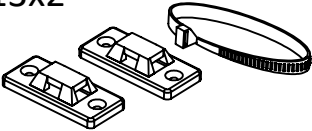Anti-Tip Restrain Pack	
HW7x4  Ø6x15 mm	HW13x2 
HW14x4  Ø8x35 PLUG	HW15x4  Ø10x50 mm

Part List & HW


Piece	Description	Qty	Carton Call
1	Center Shelf Panel	1	1 of 1
2	Center Side Panel	1	1 of 1
3	Left Side Panel	1	1 of 1
4	Bottom Panel	1	1 of 1
5	Bottom Support	2	1 of 1
6	Right Side Panel	1	1 of 1
7	Back Panel	1	1 of 1
8	Top Panel	1	1 of 1
9	Left Side Drawer	2	1 of 1
10	Back Drawer	2	1 of 1
11	Right Side Drawer	2	1 of 1
12	Base Drawer	2	1 of 1
13	Support Drawer	2	1 of 1
14	Left Front Drawer	1	1 of 1
15	Right Front Drawer	1	1 of 1
16	Metal Support	2	1 of 1

Piece	Description	Qty	Carton Call
HW1	Cambolt	34	1 of 1
HW2	Camlock	34	1 of 1
HW3	Wooden Dowel	32	1 of 1
HW4	Screw M6 x 12 PH	24	1 of 1
HW5	Screw M7 x 35 mm	14	1 of 1
HW6	Screw M6 x 50 mm	2	1 of 1
HW7	Screw M6 x 15 mm	4	1 of 1
HW8	Screw M4 x 19 mm	8	1 of 1
HW9	Cover Cap Sticker	16	1 of 1
HW10	Plastic Stopper	8	1 of 1
HW11	Metal Runner 1	4	1 of 1
HW12	Metal Runner 2	4	1 of 1
HW13	Anti-Tip	2	1 of 1
HW14	M8 x 35 mm PLUG	4	1 of 1
HW15	Screw M10 x 50 mm	4	1 of 1


Special Tips for Fitting Minifix Cam (Cam-Lock), and Minifix Bolt (Cam-Bolts)

CAM-BOLT




Tighten until shoulder is flush with panel. Do not overtighten or undertighten (see example below)

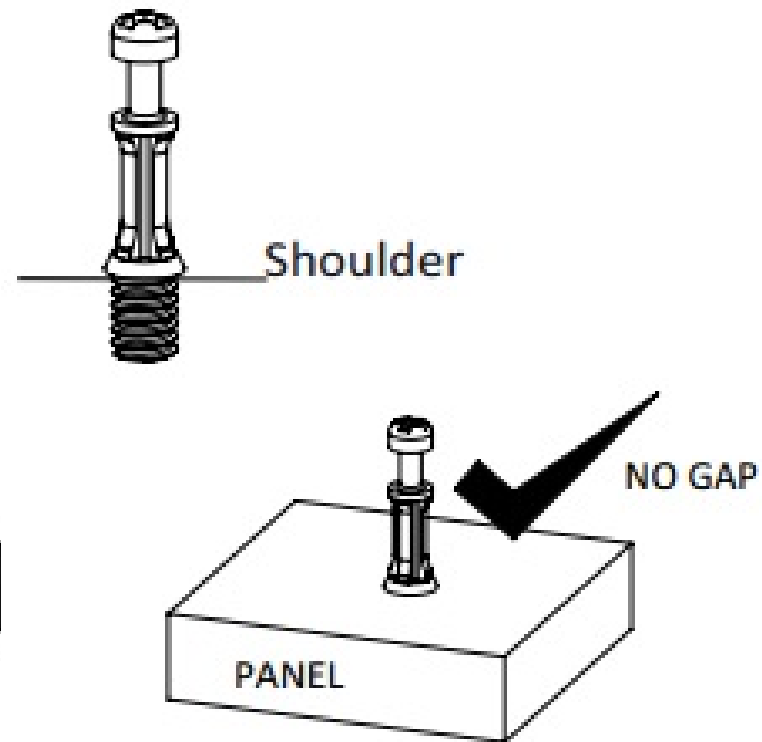

CAM-LOCK

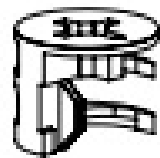


WHEN TIGHTENING CAM-LOCK
Turn the Cam-lock Clockwise Until
The Arrow Points in the Position as bellow

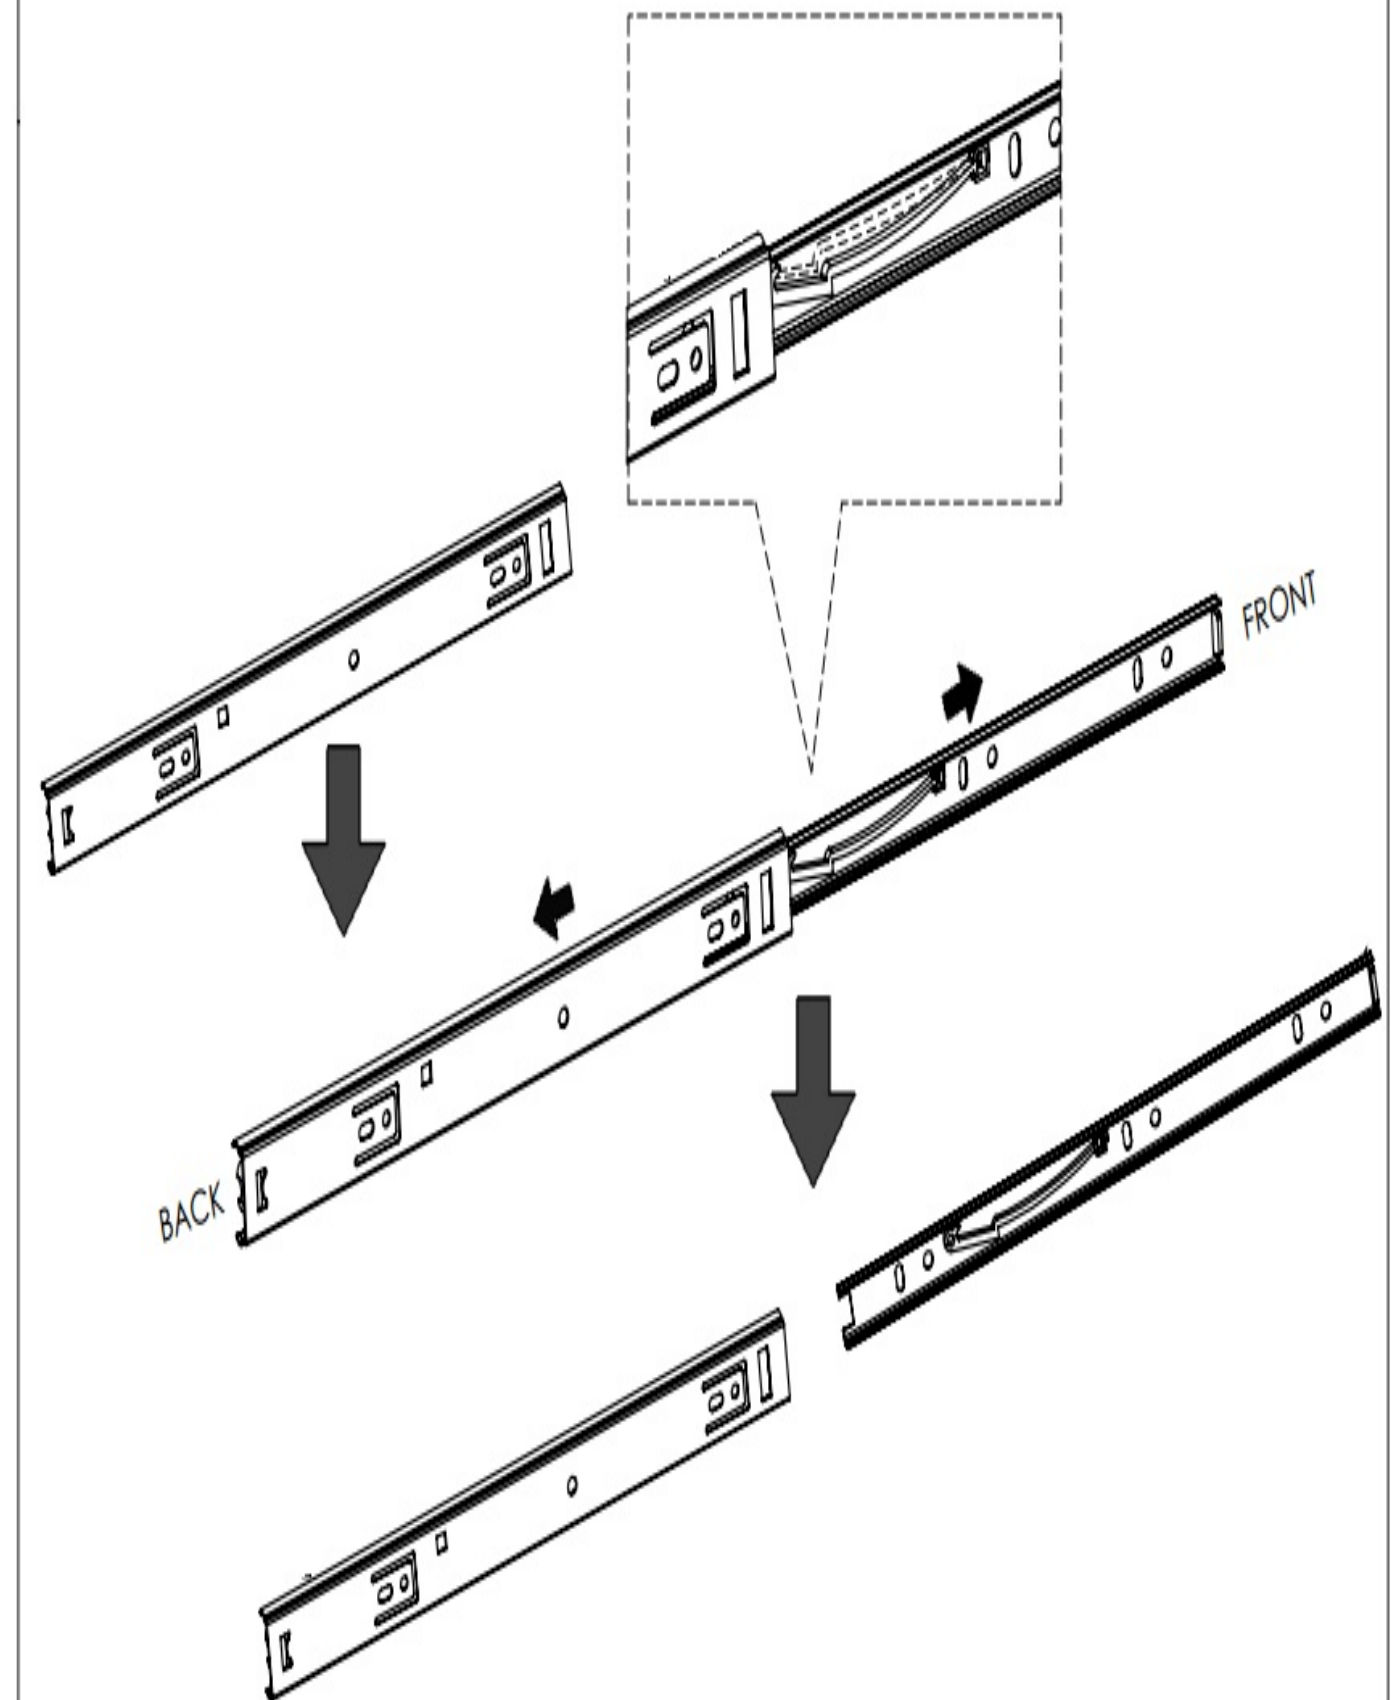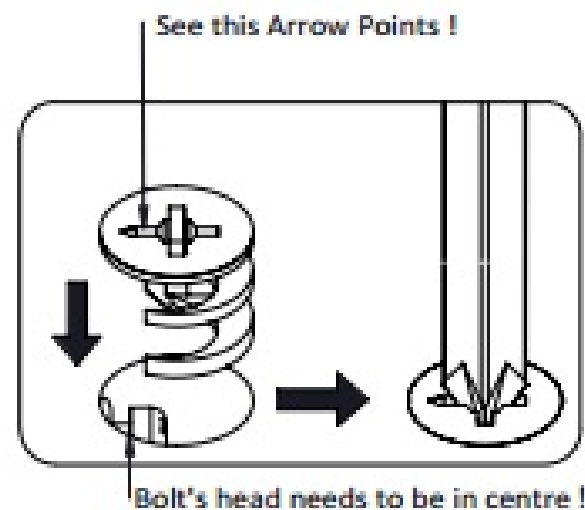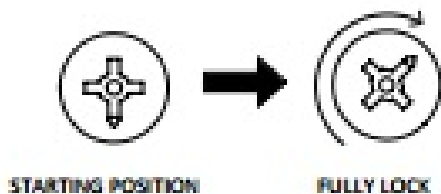


PREPARATION


Before beginning assembly of product, make sure all part are present. Compare part with part contents list and hardware contents list.
If any part is missing or damaged, do not attempt to assemble the product.
Estimated Assembly Time: 60 minutes.

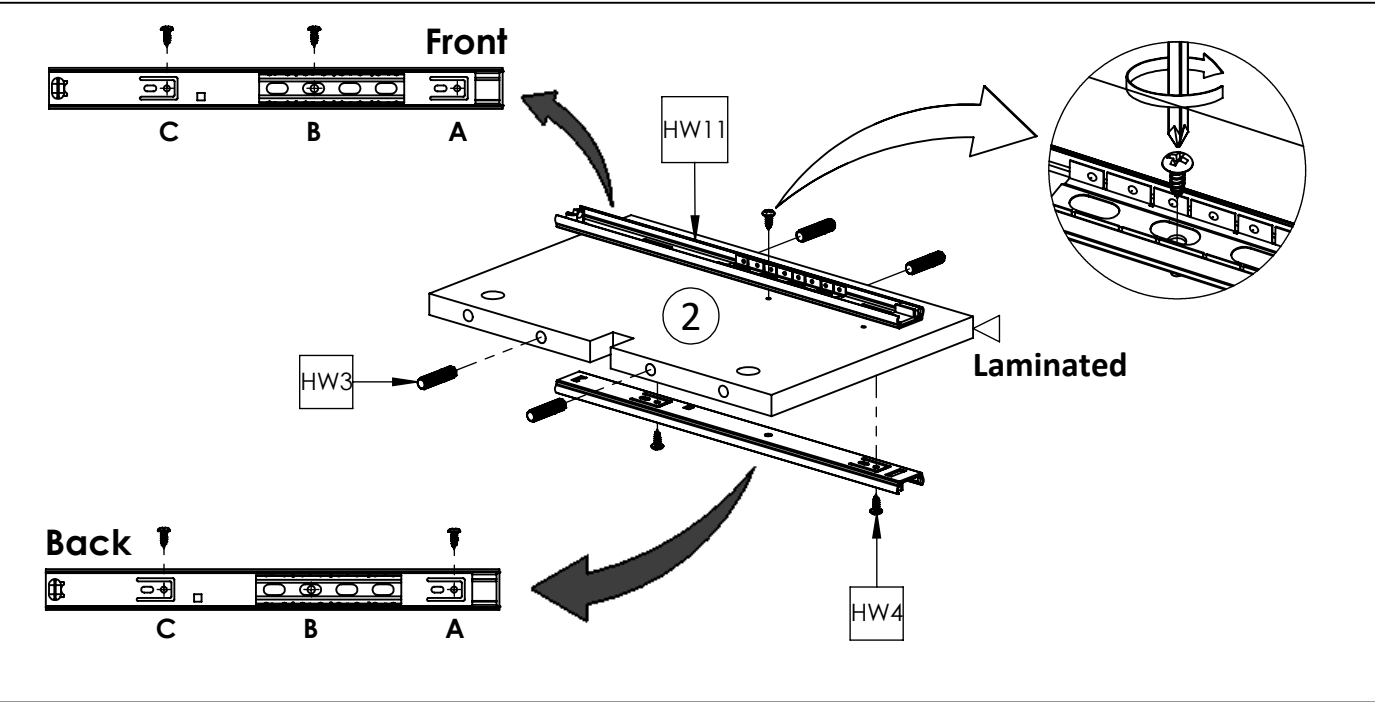


STEP1: Insert Wooden Dowel (HW3) Into Center Side Panel (2), Continue with securing part of the metal runner 1 (HW11) into position as the above image, using Screw M 6 x 12 mm PH (HW4) And tighten it using screwdriver.

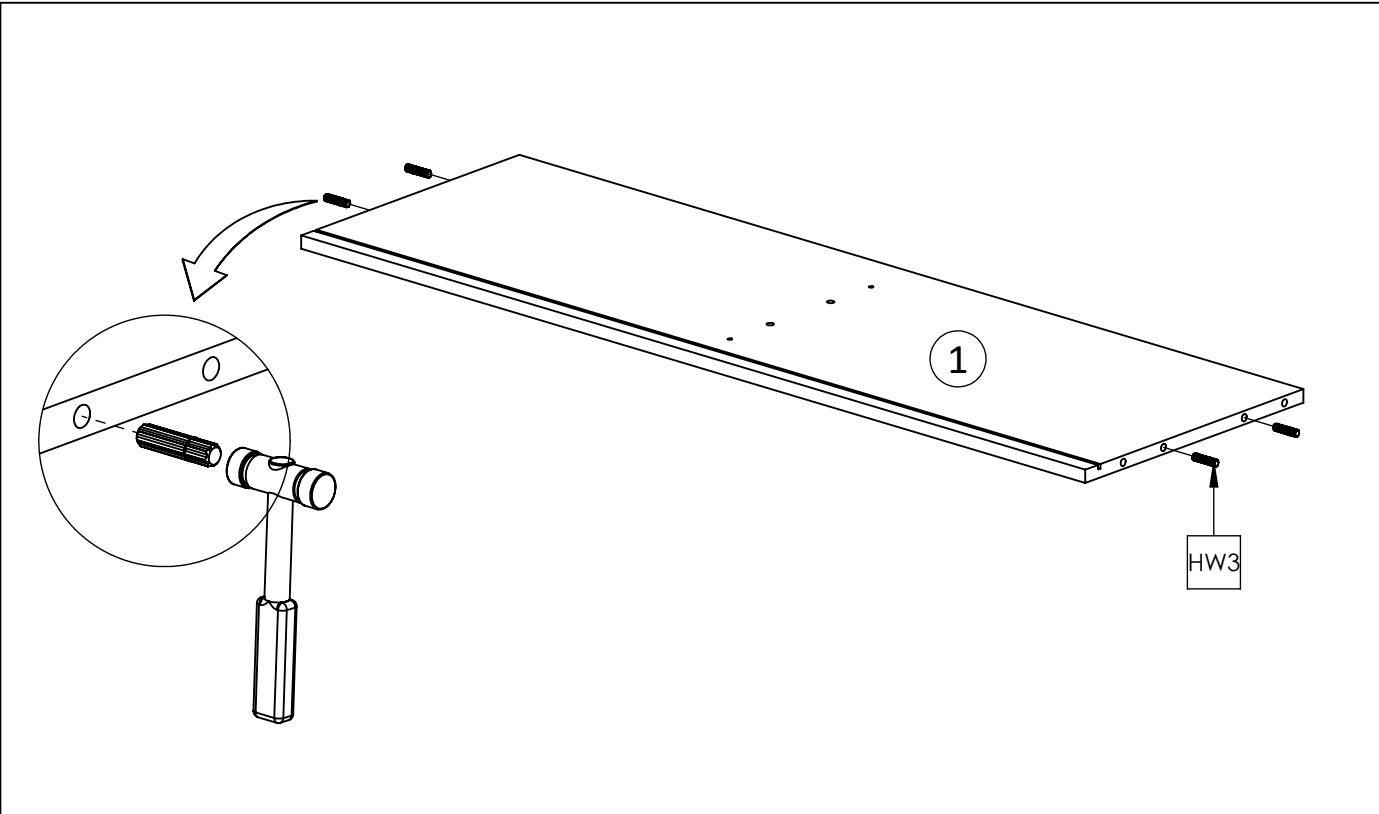


STEP2: Insert Wooden Dowel (HW3) Into Center Shelf Panel (1).

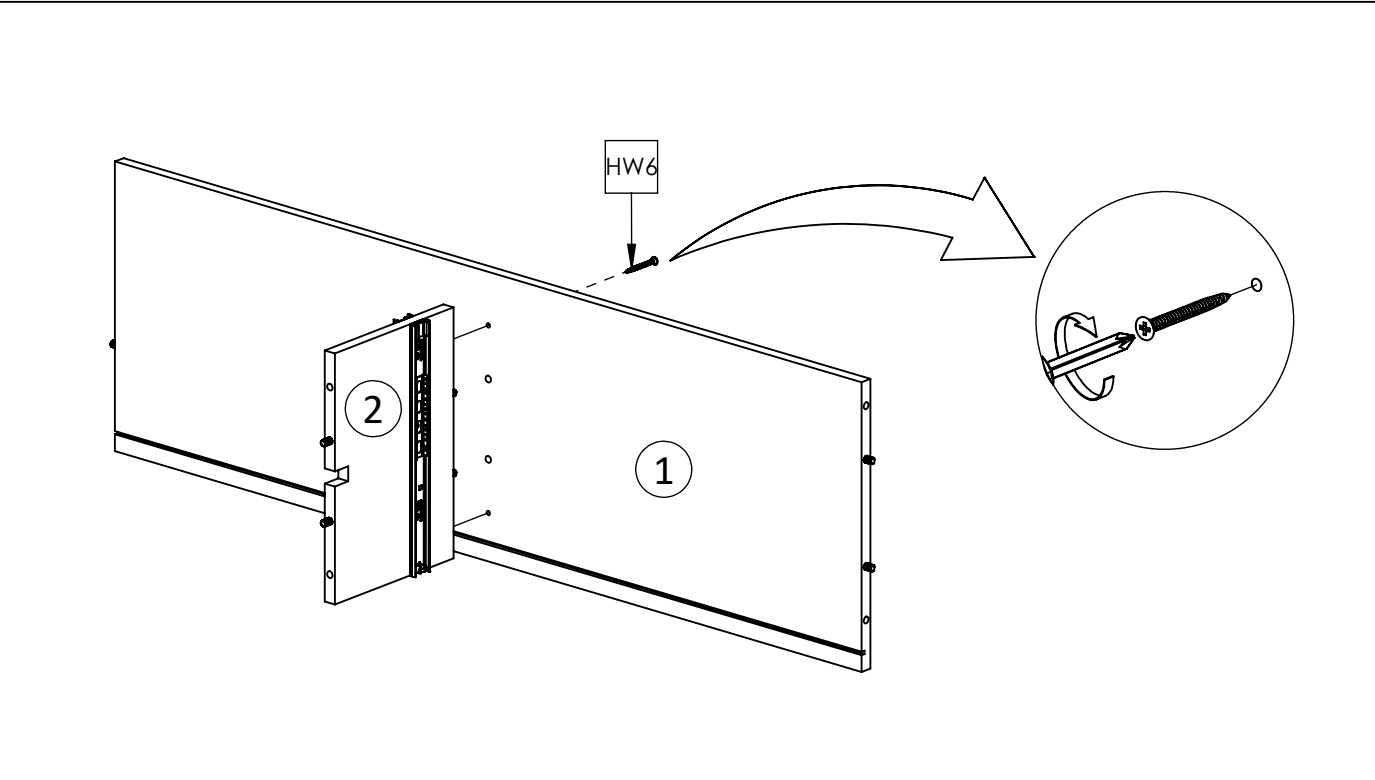


STEP3: Attach Center Side Panel (2) into Center Shelf Panel (1) Secure with Screw M6 x 50 mm (HW6) and tighten it using screwdriver.

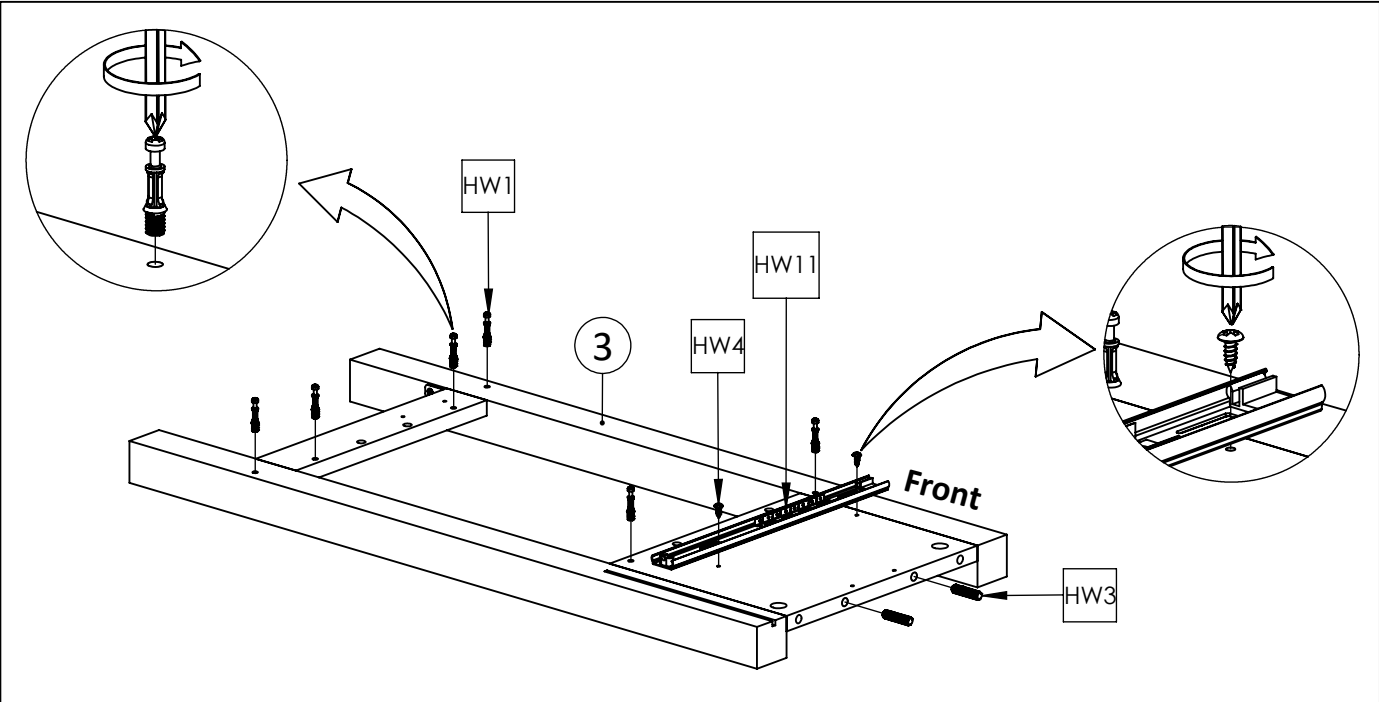


STEP4: Insert Cambolt (HW1) and Wooden Dowel (HW3) Into Left Side Panel (3), Continue with securing part of the metal runner 1 (HW11) into position as the above image, using Screw M 6 x 12 mm PH (HW4) And tighten it using screwdriver.

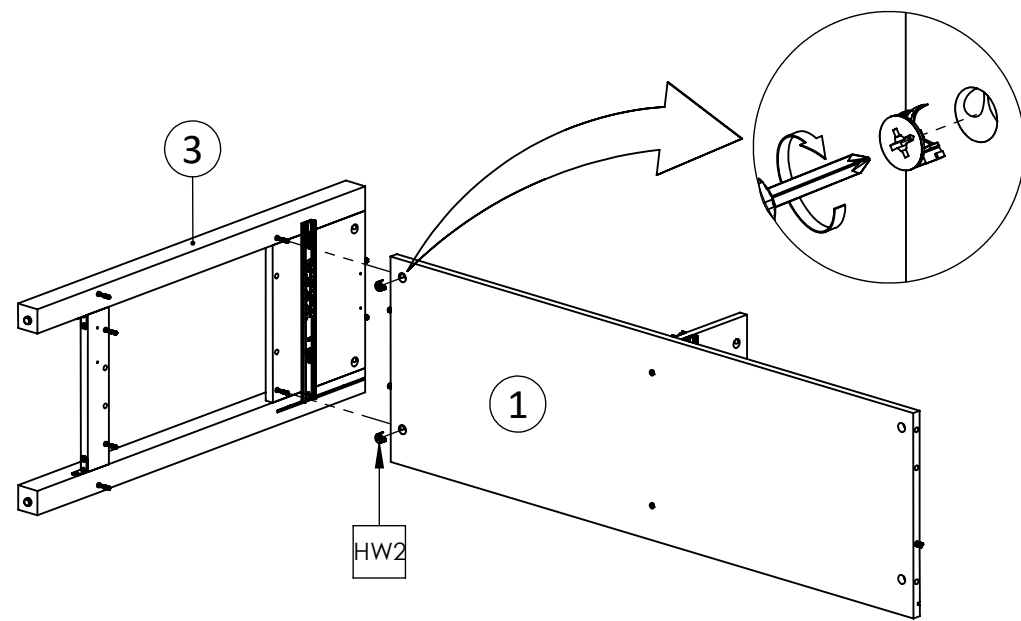


STEP5: Attach Center Shelf Panel (1), Left Side Panel (3)
Secure with Camlock (HW2) tighten it using screwdriver.

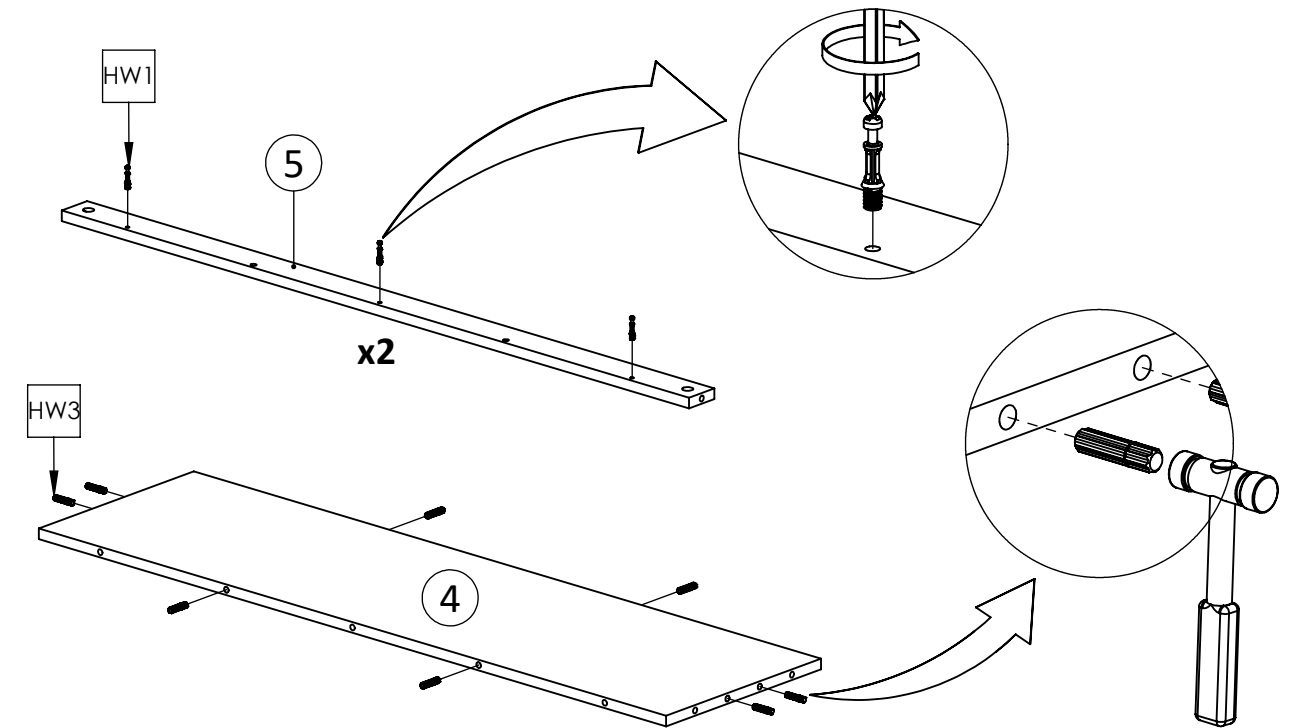


STEP6: Insert Cambolt (HW1) Into Bottom Support (5),
Insert Wooden Dowel (HW3) into Bottom Panel (4).

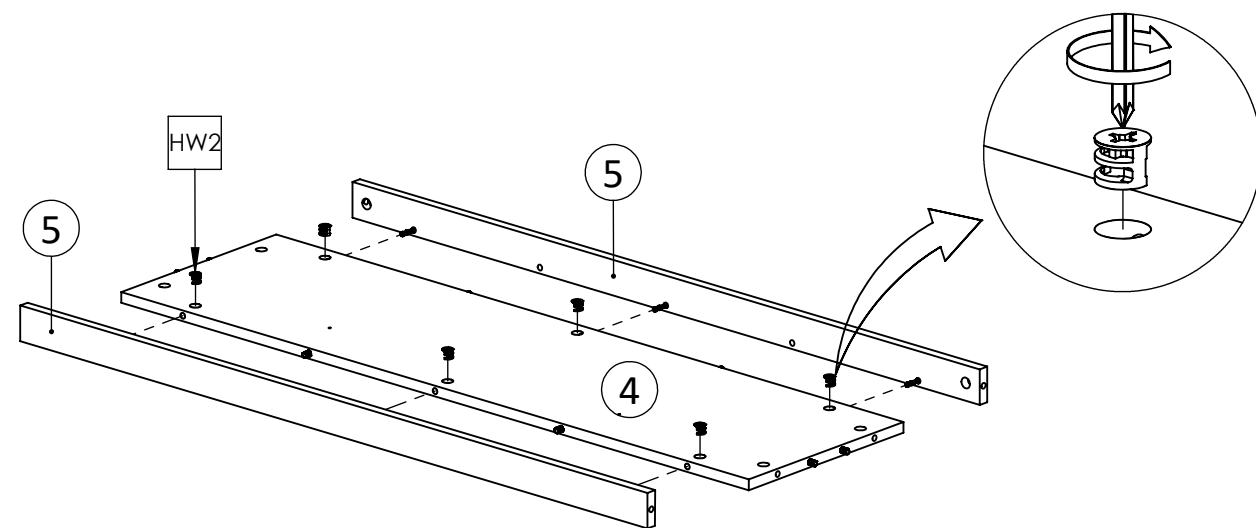


STEP7: Attach Bottom Support (5) into Bottom Panel (4)
Secure with Camlock (HW2) tighten it using screwdriver.

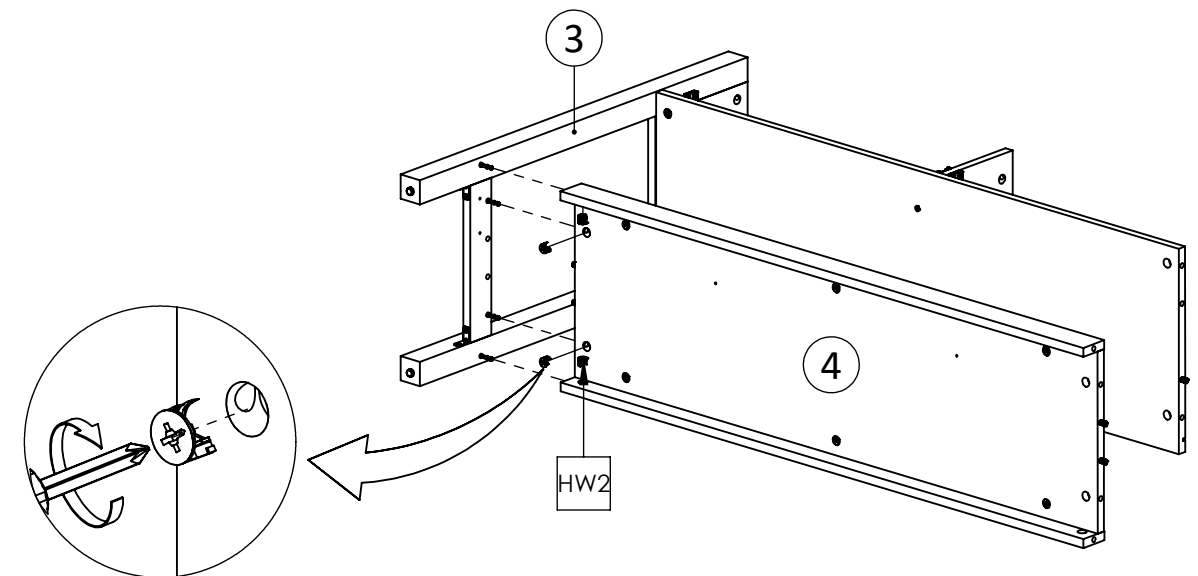


STEP8: Attach Bottom Panel (4), Into Left Side Panel (3)
Secure with Camlock (HW2) tighten it using screwdriver.

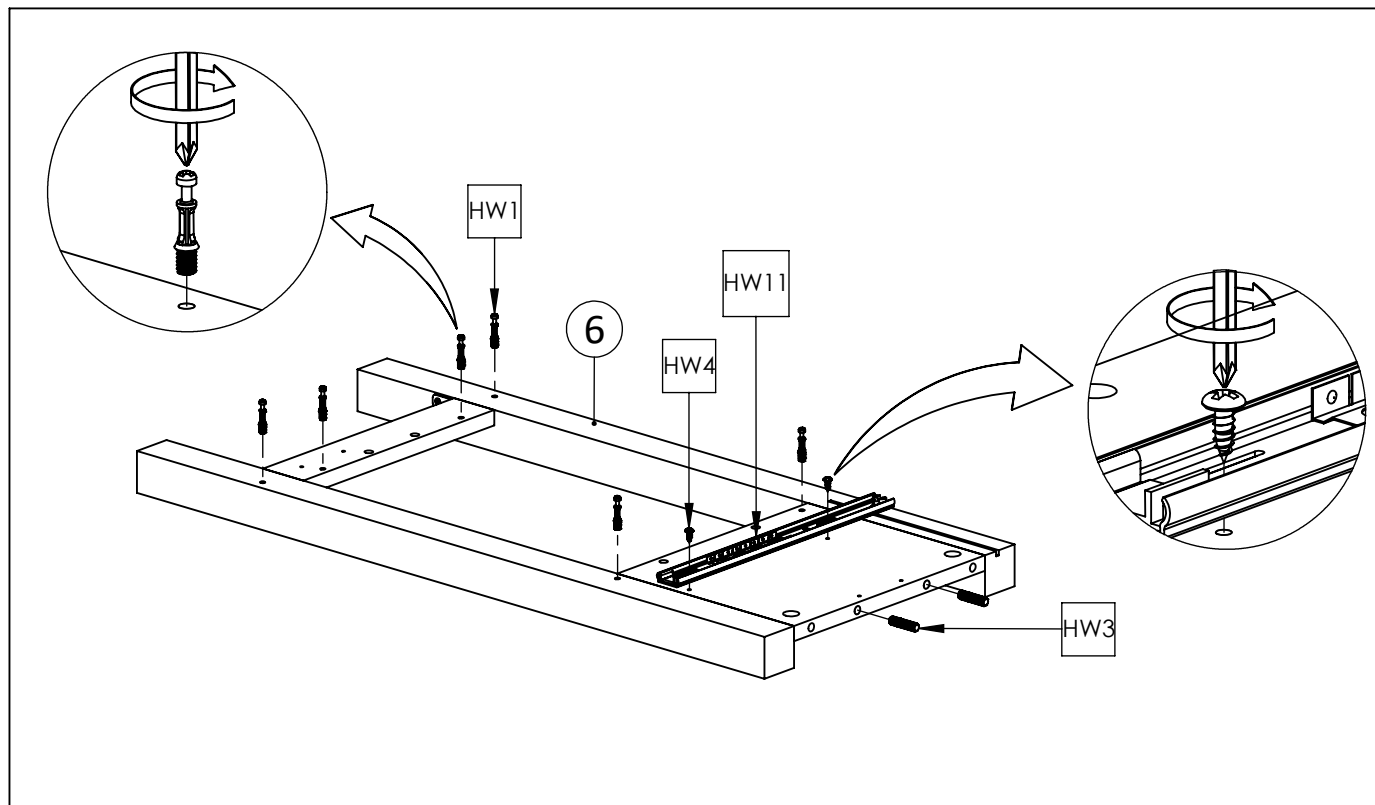


STEP9: Insert Cambolt (HW1) and Wooden Dowel (HW3) Into Right Side Panel (6), Continue with securing part of the metal runner 1 (HW11) into position as the above image, using Screw M 6 x 12 mm PH (HW4) And tighten it using screwdriver.

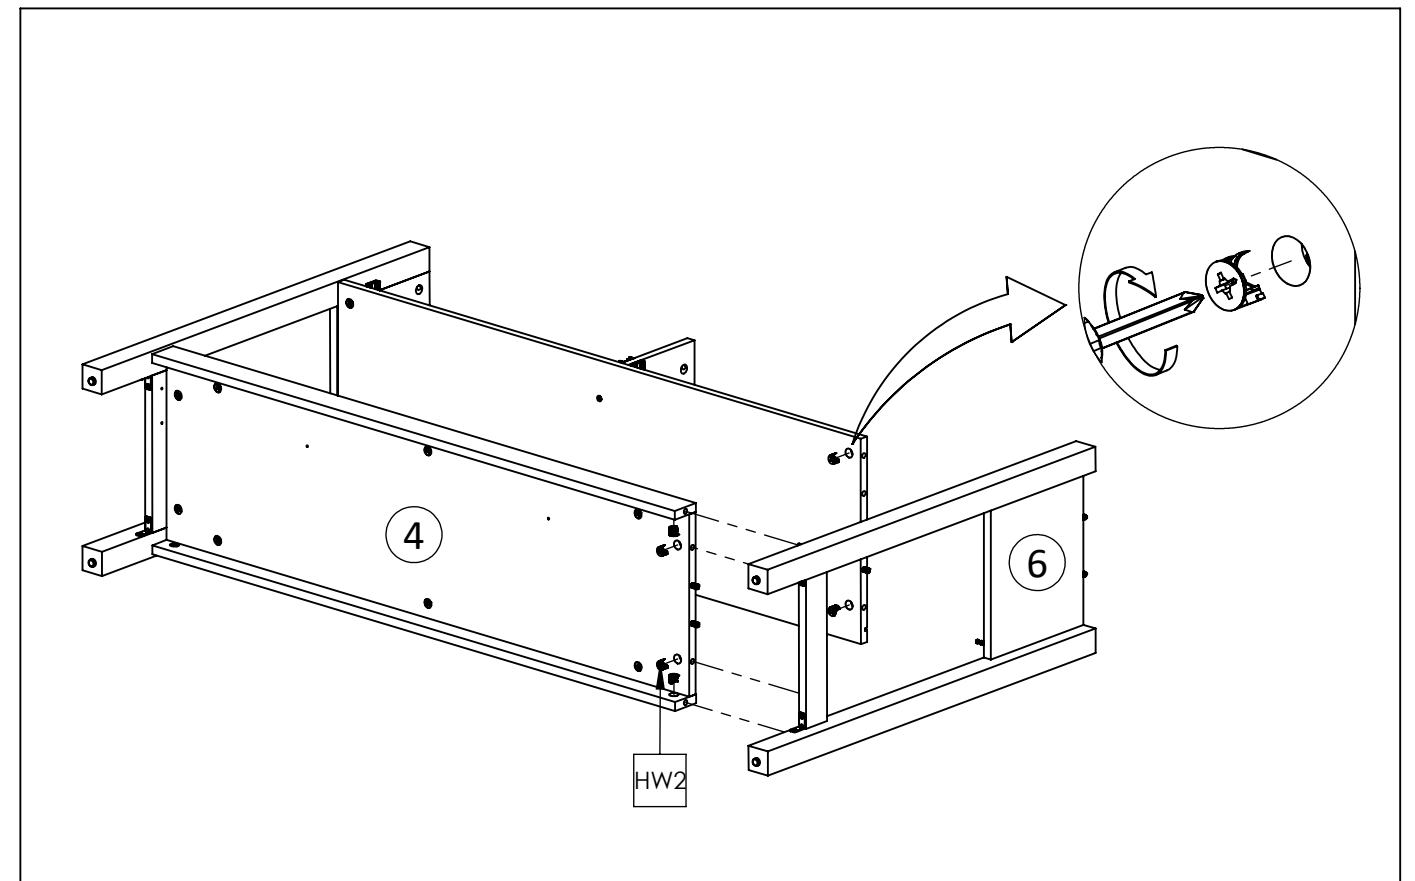





STEP10: Attach Right Side Panel (6), Into Bottom Panel (4), Secure with Camlock (HW2) tighten it using screwdriver.

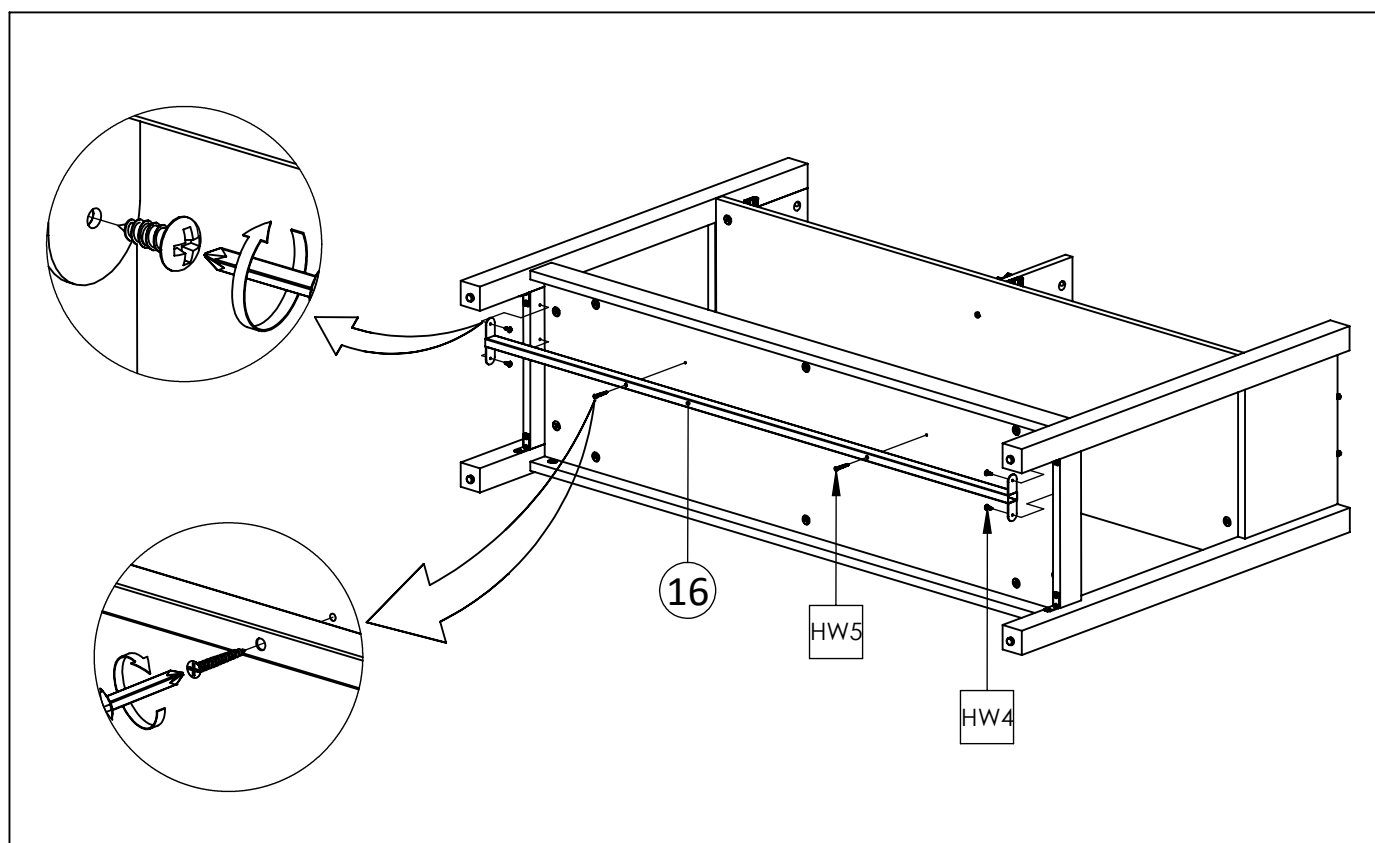


STEP11: Insert Metal Support (16) into Bottom Panel (4) Secure with Screw M7 x 35 mm (HW5) & Screw M6 x 12 PH (HW4) and tighten it using Screwdriver.

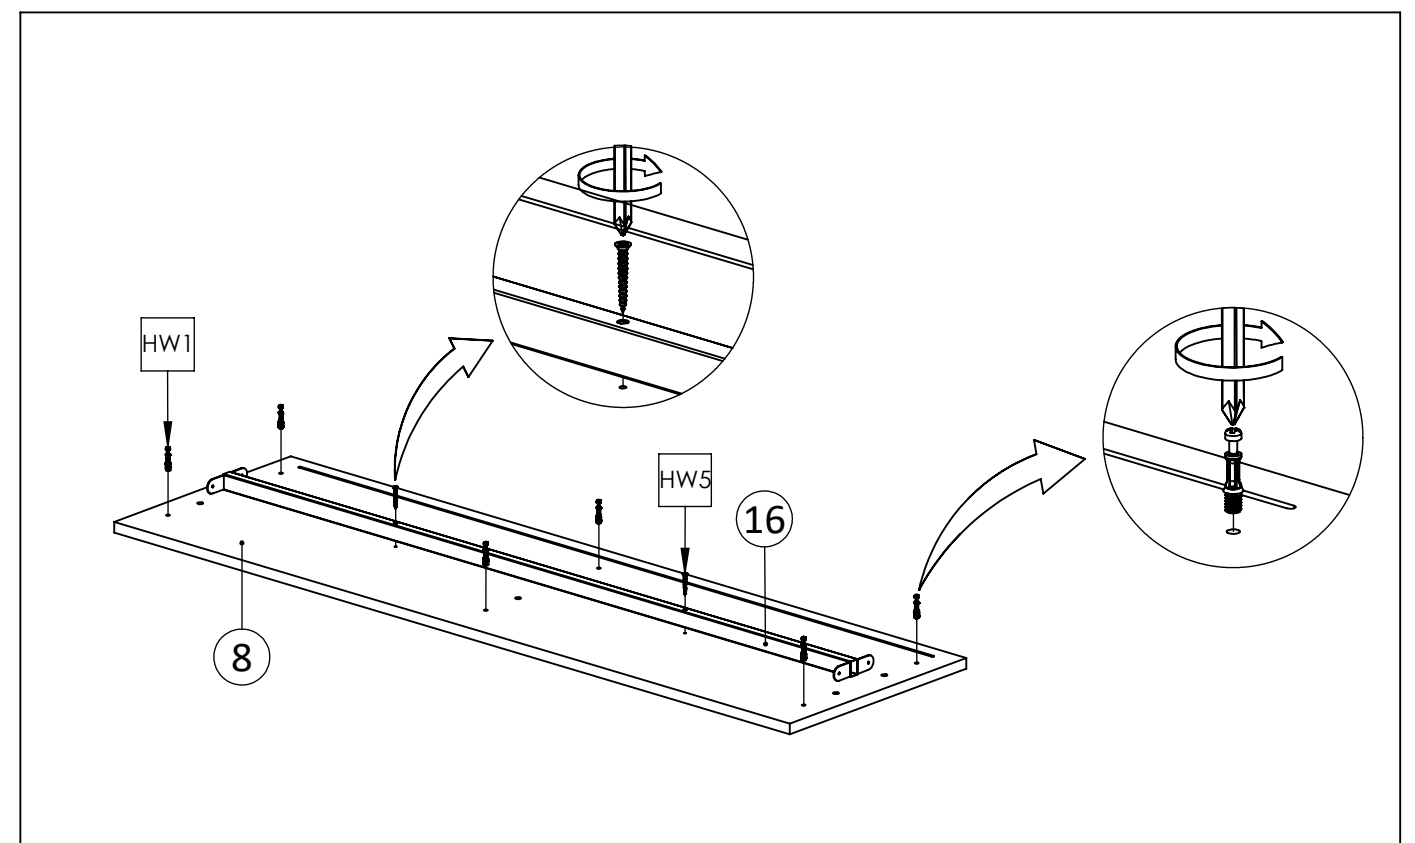


STEP12: Insert Cambolt (HW1) into Top Panel (8), Insert Metal Support (16) into Top Panel (8) Secure with Screw M7 x 35 mm (HW5) and tighten it using Screwdriver.

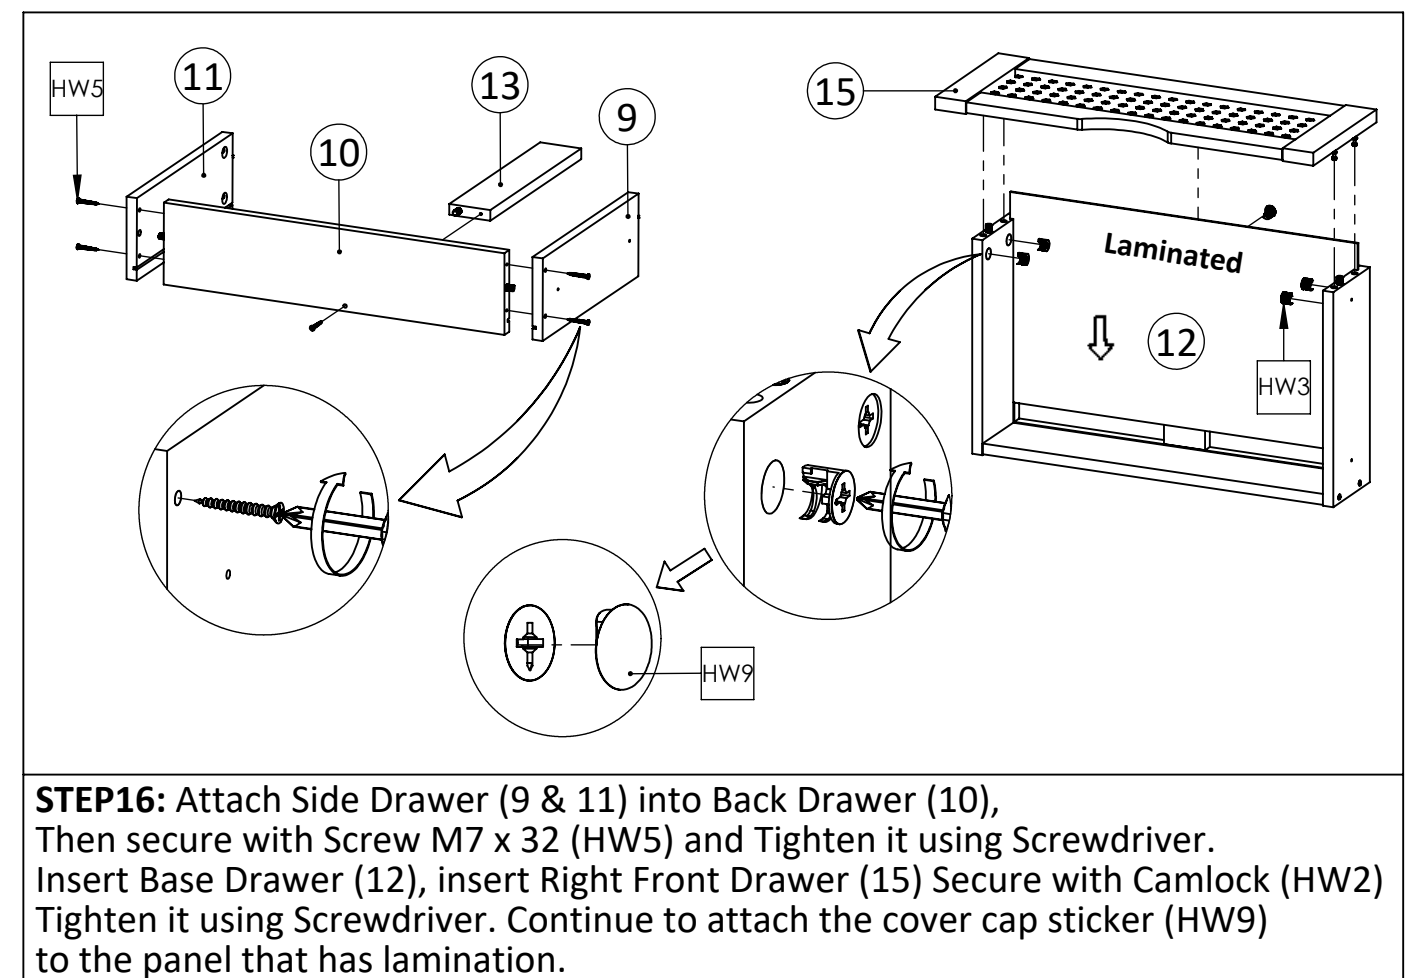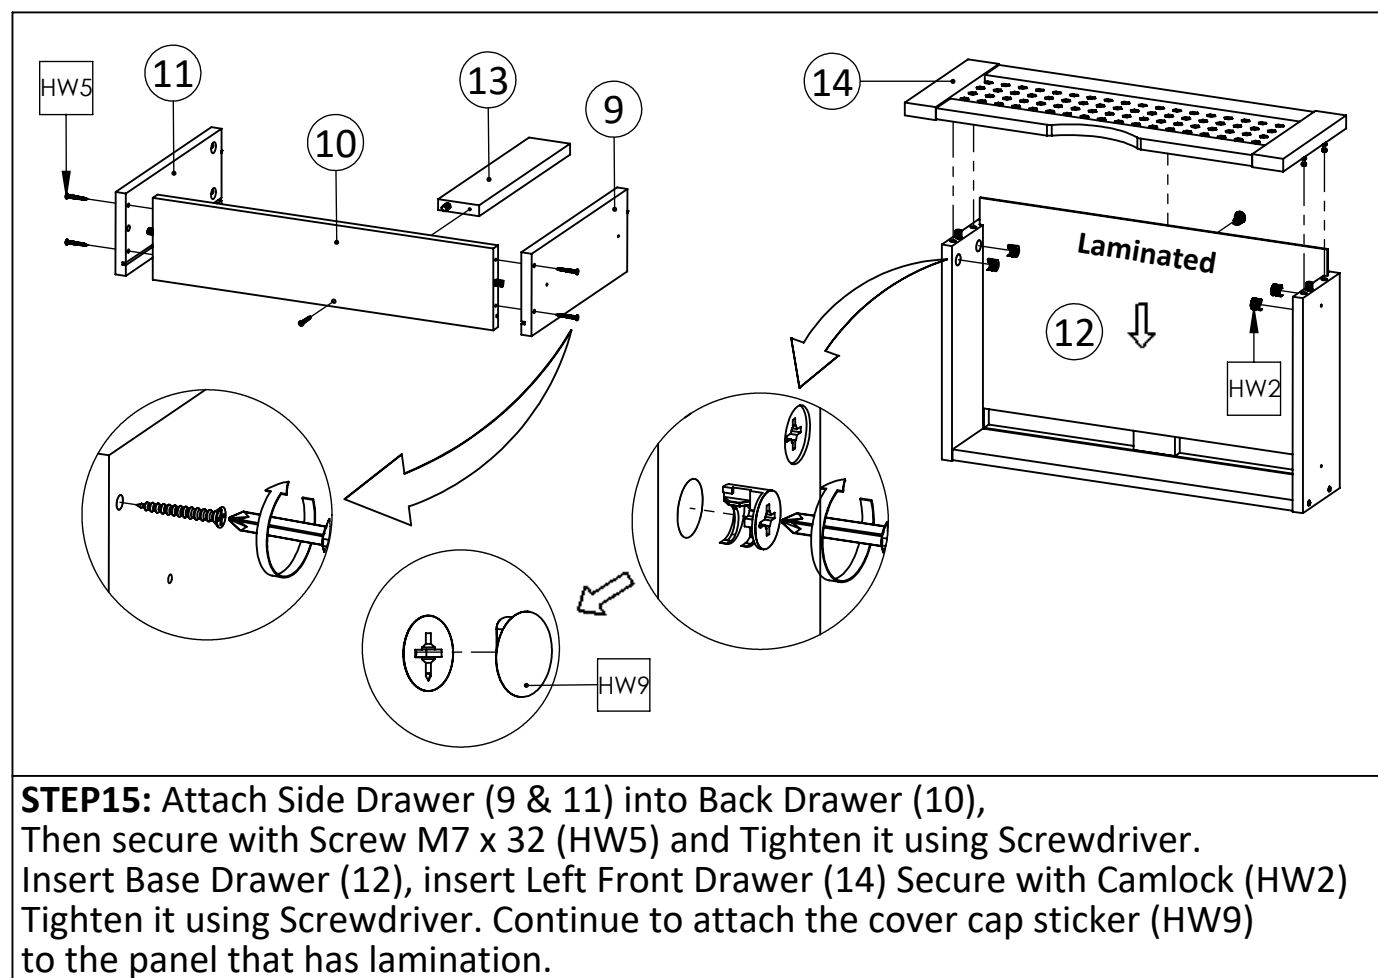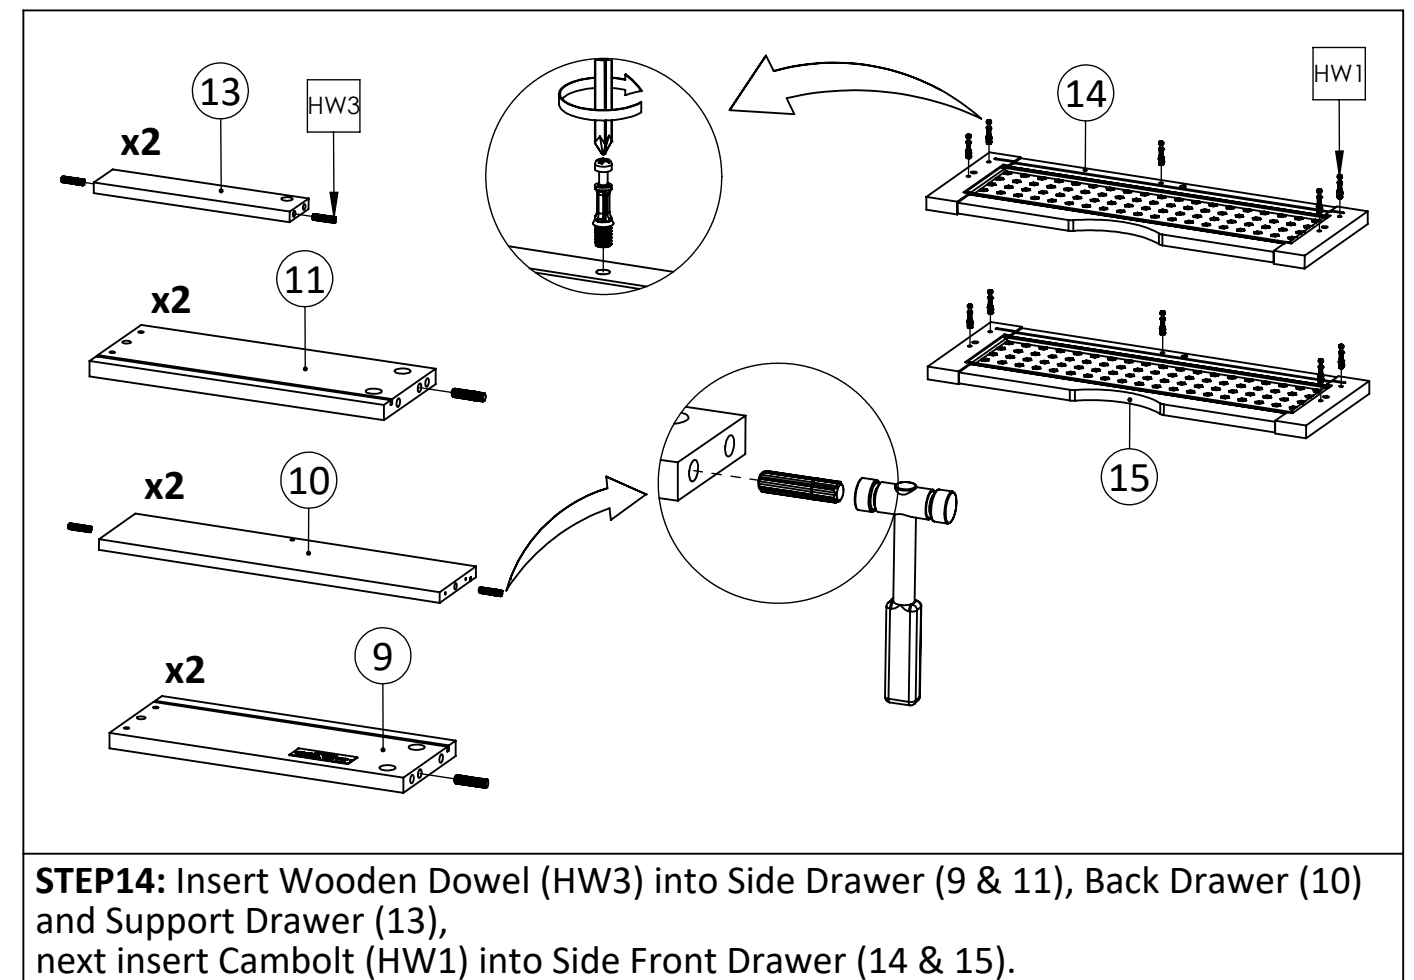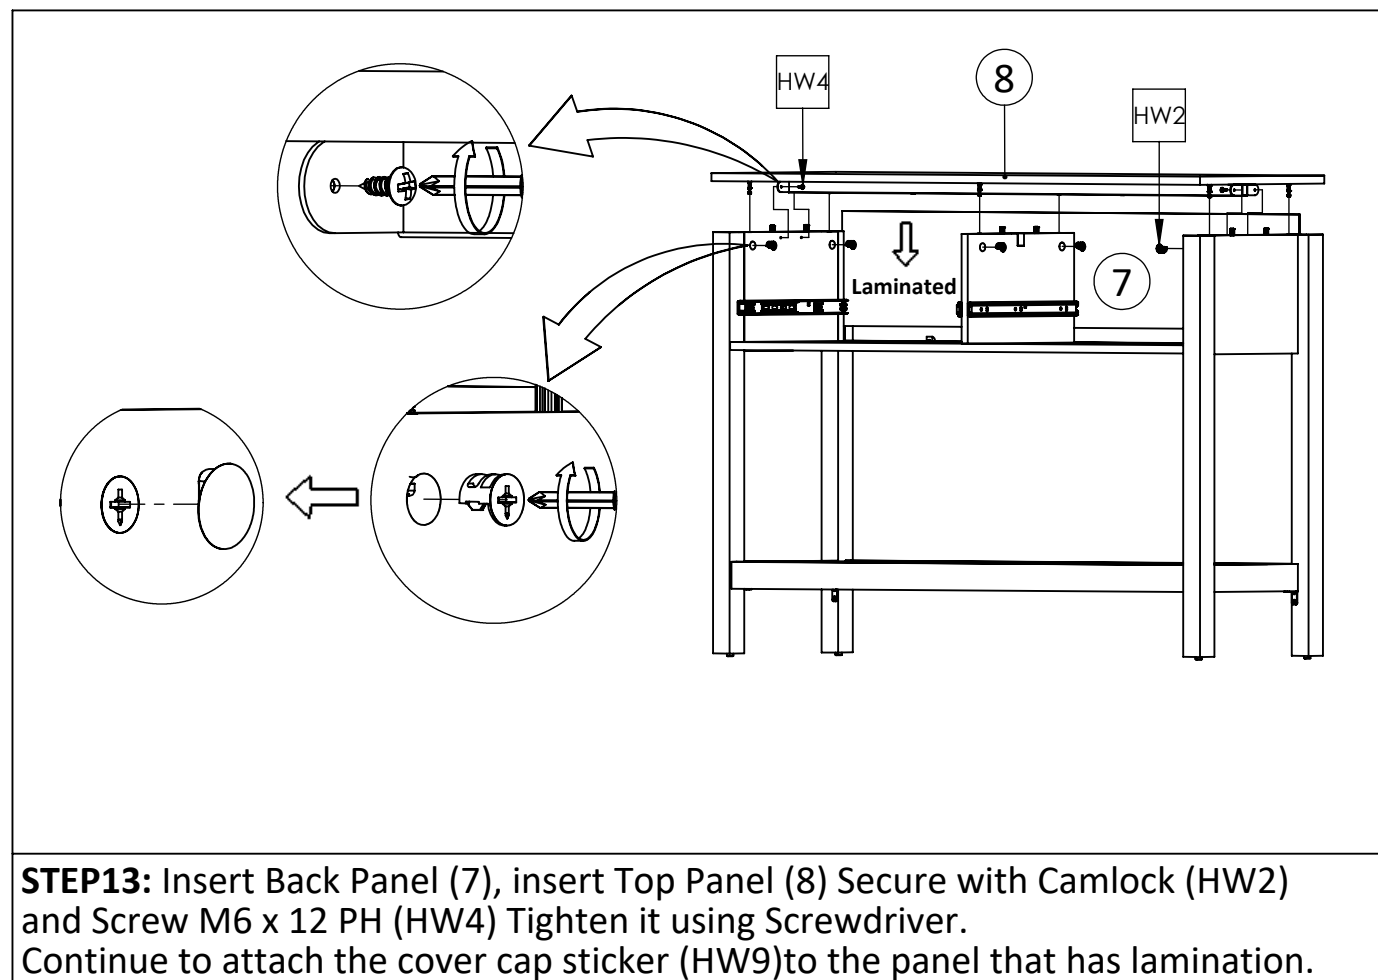


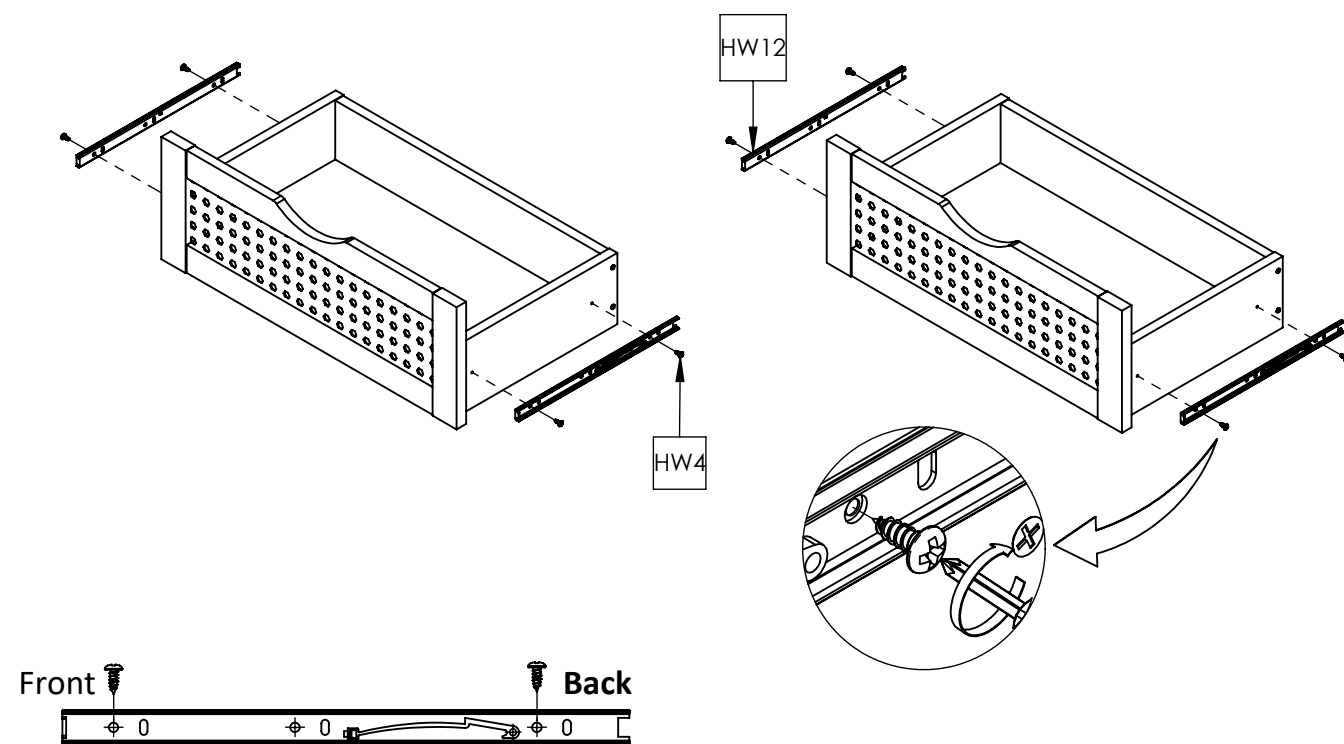


STEP17: install the Metal Runner 2 (HW12) into position as shown in picture. Secure with screw M6x12mm PH (HW4) And Tighten It Using Screwdriver.

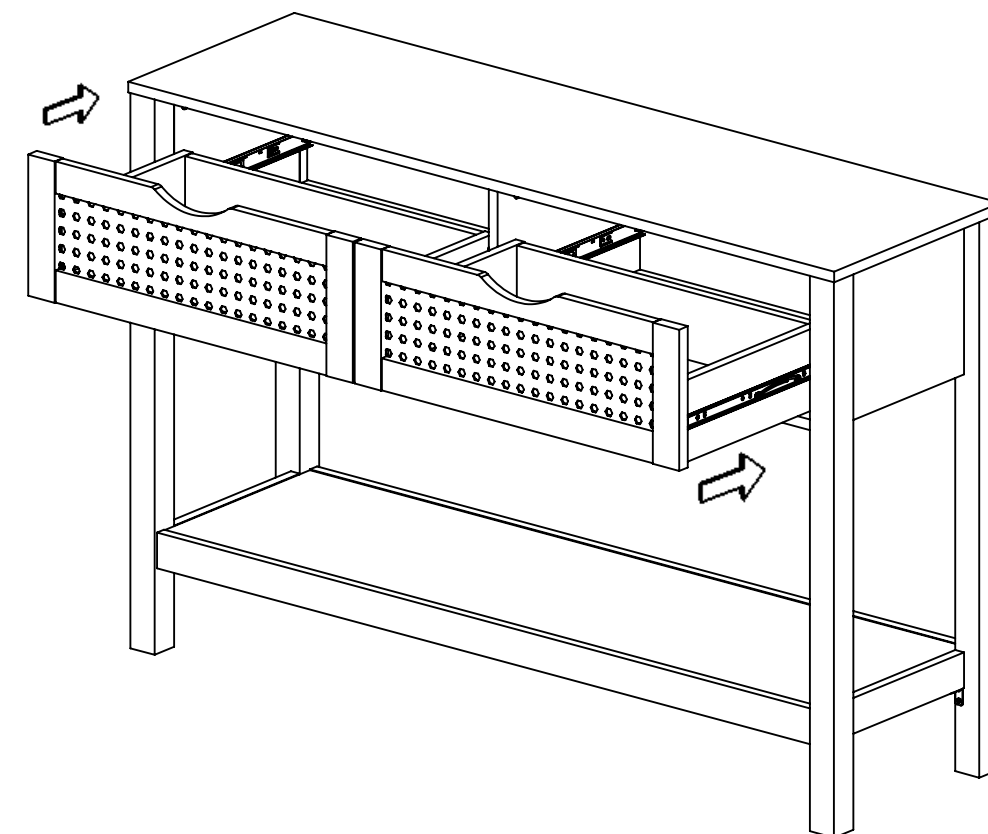

STEP18: Insert the attached drawer into the panel.

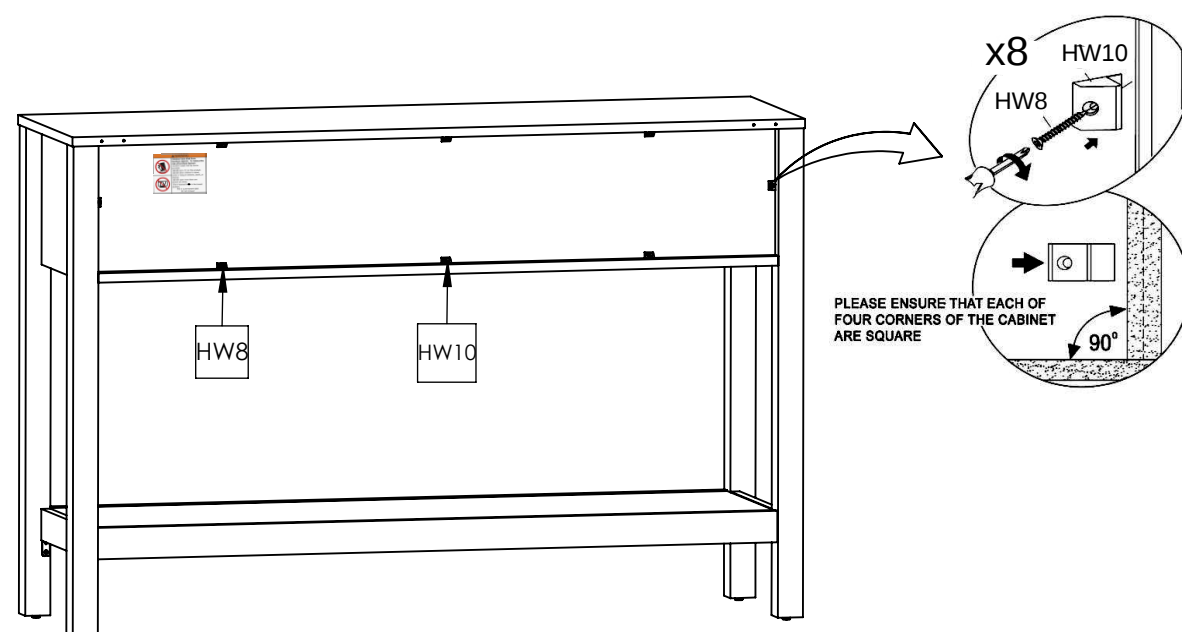

STEP19: Attach the plastic stopper (HW9) to the back panel Secure with screw M4x19 mm (HW6) And tighten it using screwdriver.

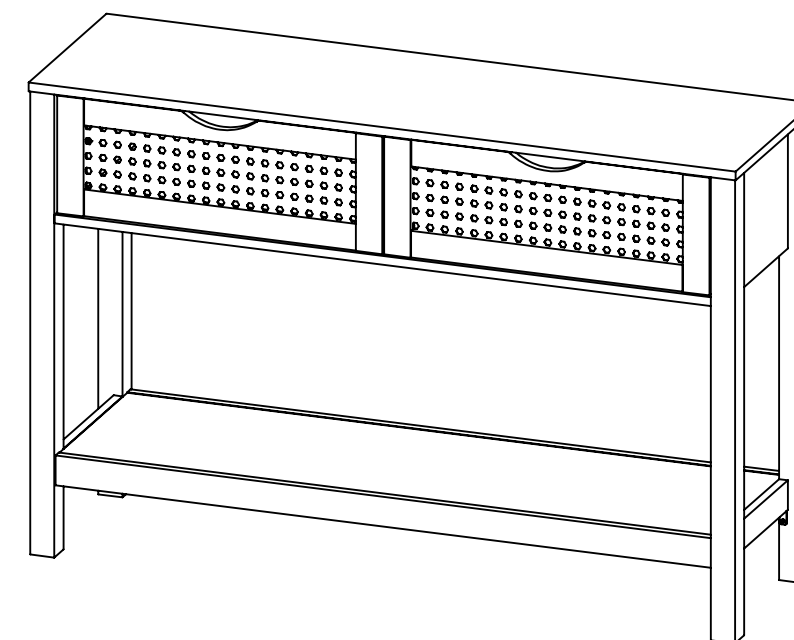

STEP20: Assembly is completed.




ANTI-TIP RESTRAINT INSTALLATION


! WARNING!

Children have died from furniture tipover.
To reduce the risk of furniture tipover:

- ALWAYS install tipover restraint provided.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lower drawers.

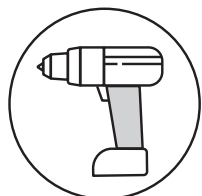


REQUIRED TOOL
8MM / 5/16" DRILL BIT

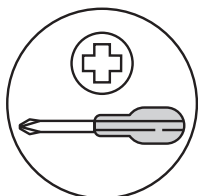

REQUIRED TOOL




Hardware (HW11 / HW7) to attach brackets to wall is designed for drywall. To attach this unit to another type of wall, consult with your local hardware store.

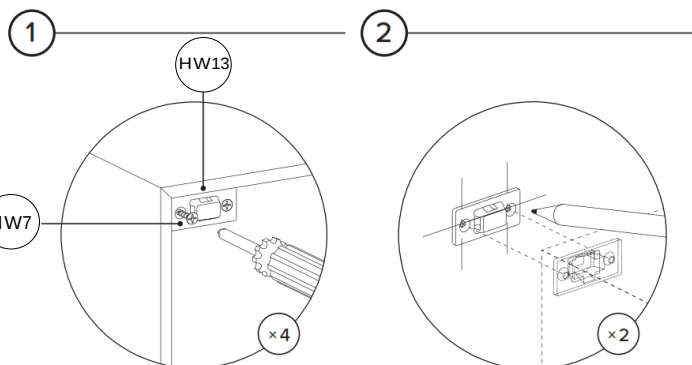


Attach pair of brackets to "Top Panel" of the unit. Note there are no existing pilot holes on the product.


Mark on wall where second pair of brackets should be placed.

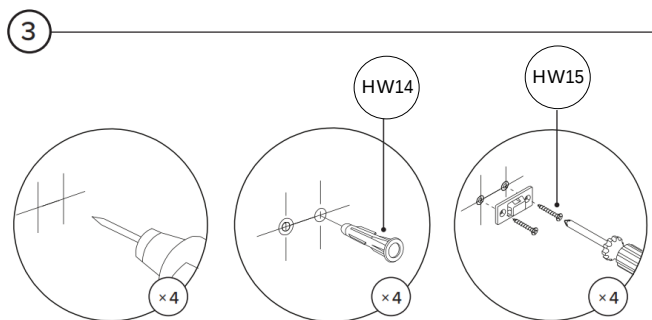

Drill holes in wall using 8mm / 5/16" drill bit.

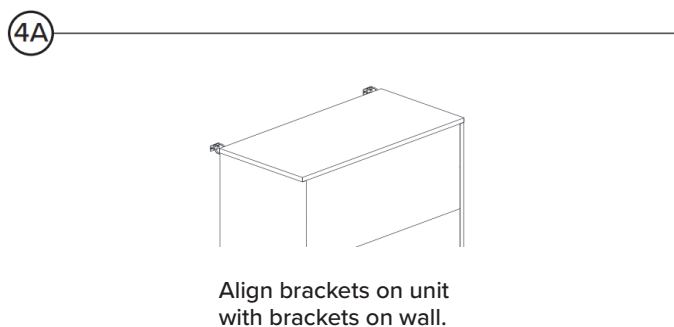

Align brackets on unit with brackets on wall.

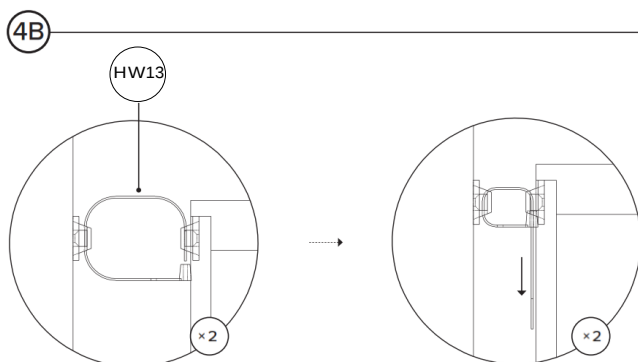

Pull strap down until it snap-locks.

ANTI-TIP RESTRAINT PACK

ID	DESCRIPTION	QTY
HW13	BRACKET 	4
HW7	M6 × 15MM SCREW 	4
HW14	M8 × 35MM PLUG 	4
HW15	M10 × 50MM SCREW 	4
HW13	STRAP 	2