

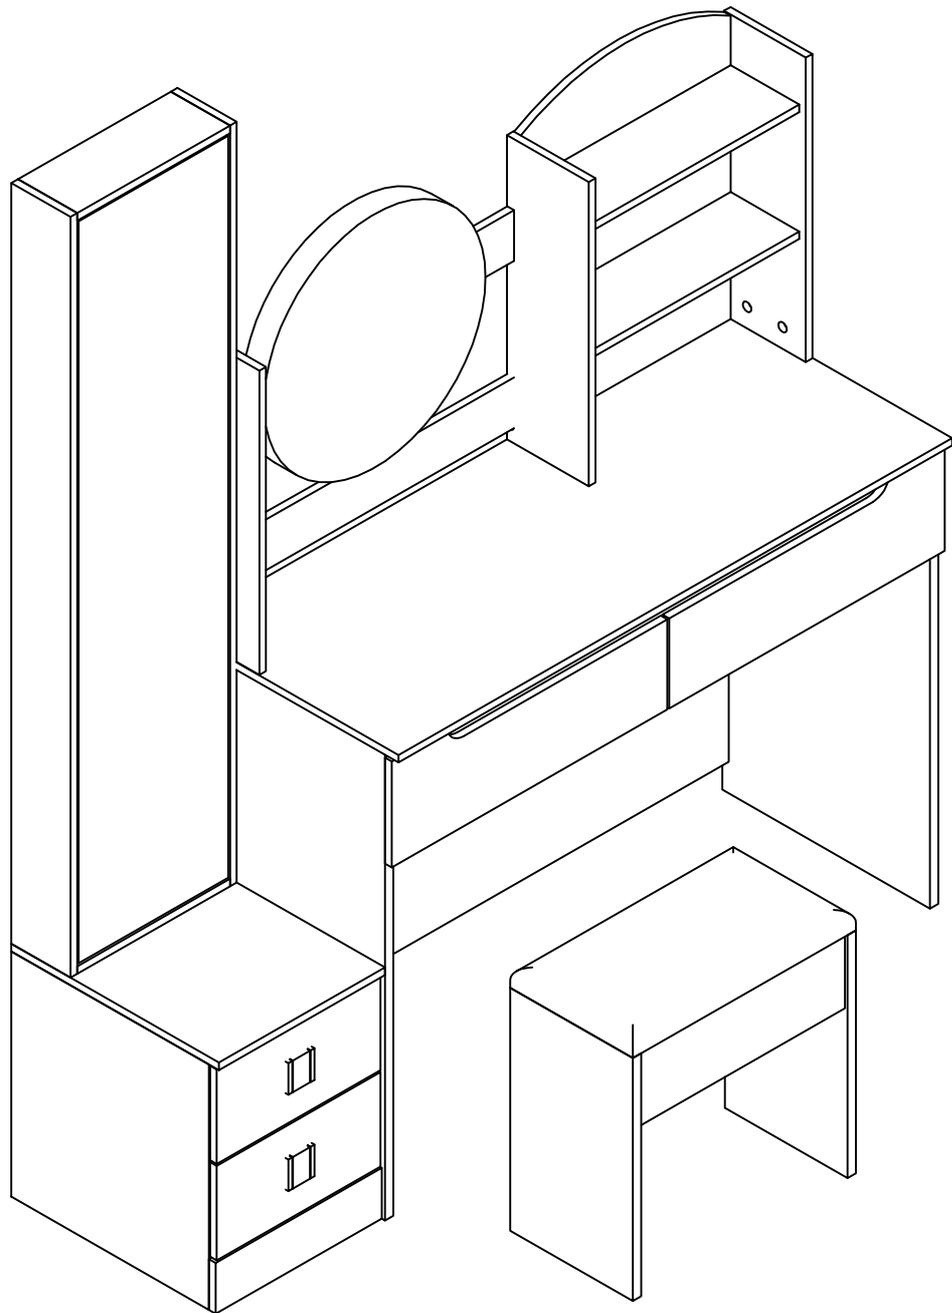
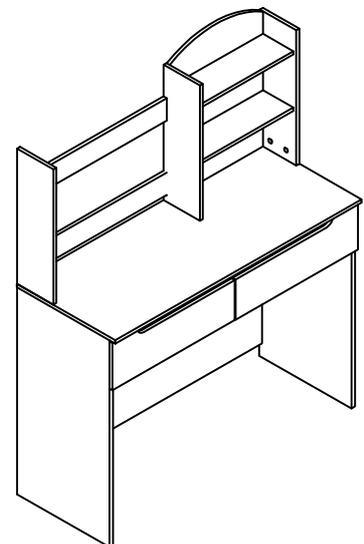
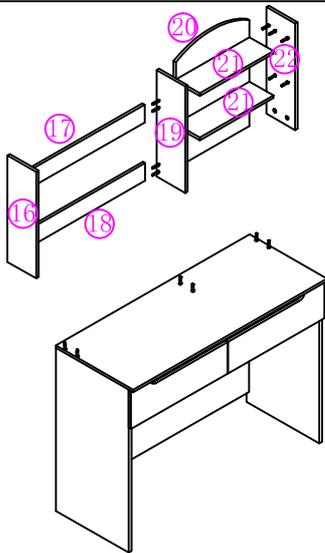
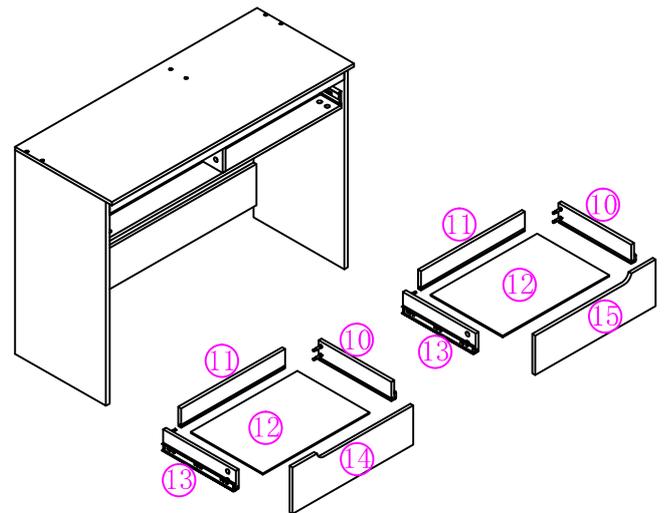
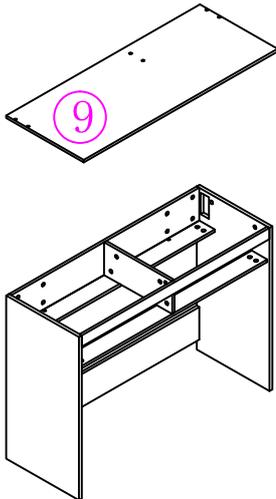


Installation guide for dressing table, dressing mirror, and stool

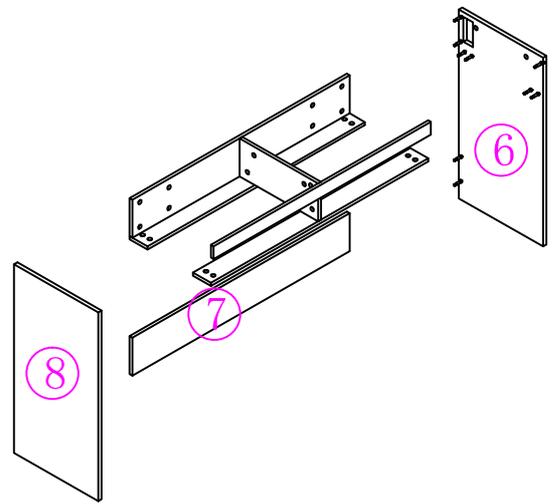

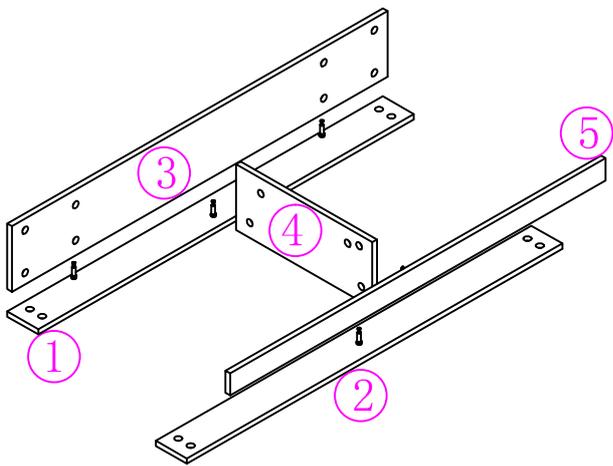

① - *1

② - *1

③ - *1

④ - *1

⑤ - *1

⑥ - *1

⑦ - *1

⑧ - *1

⑨ - *1

⑩ - *2

⑪ - *2

⑫ - *2

⑬ - *2

⑭ - *1

⑮ - *1

⑯ - *1

⑰ - *1



⑱ - *1

⑲ - *1



⑳ - *1

㉑ - *2


㉒ - *1

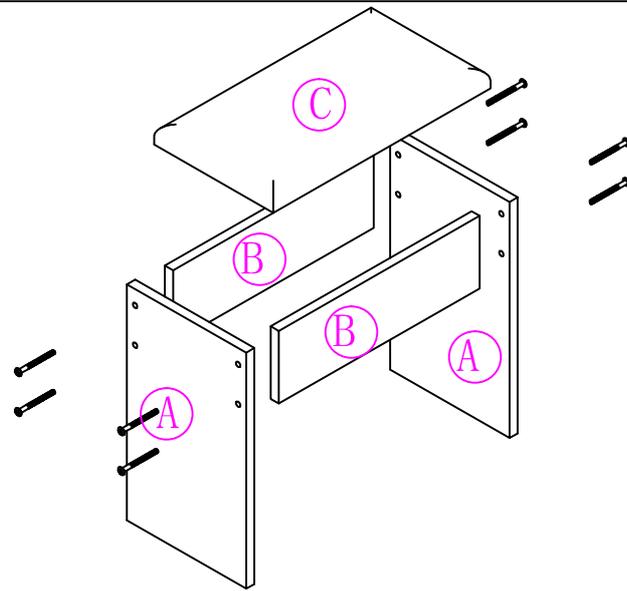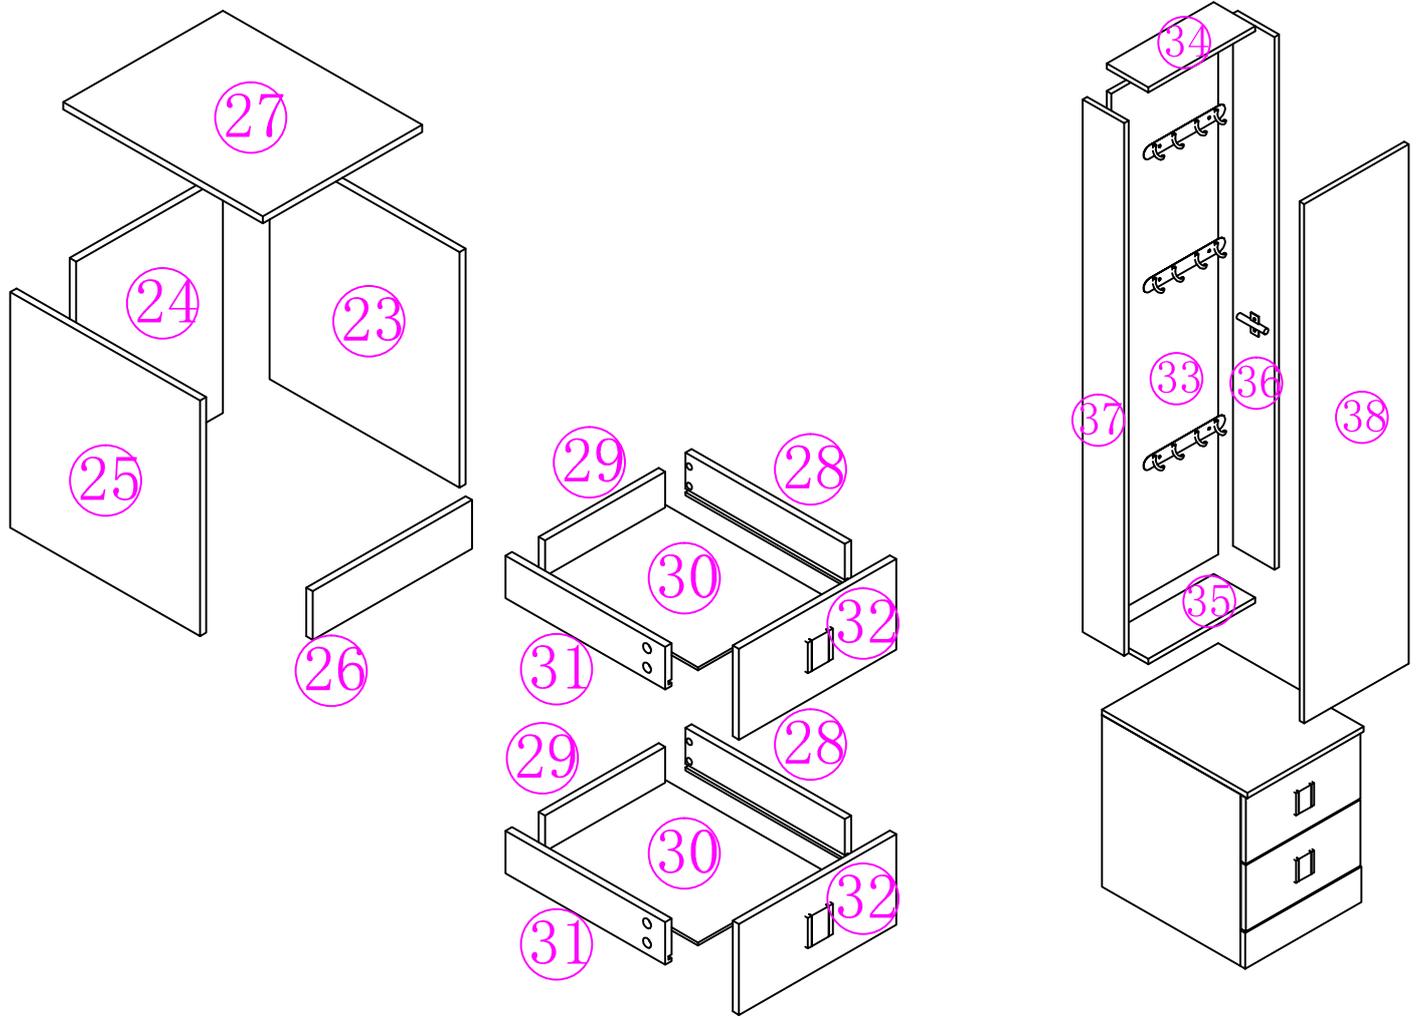


23 - *1	24 - *1	25 - *1	26 - *1
27 - *1	28 - *2	29 - *2	30 - *2
31 - *2	32 - *2	33 - *1	34 - *1
35 - *1	36 - *1	37 - *1	38 - *1
A - *2	B - *2	C - *1	





① - *1

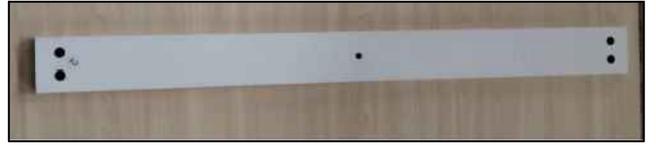

② - *1

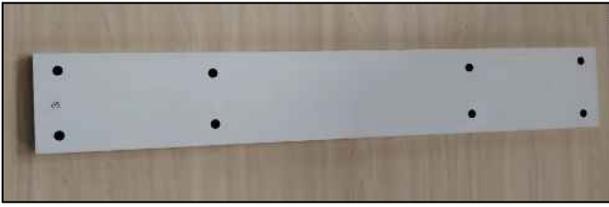



③ - *1

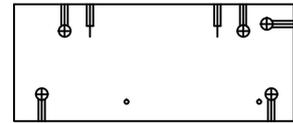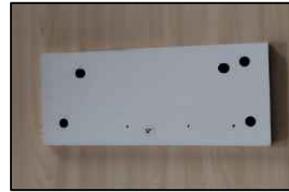

④ - *1




⑤ - *1

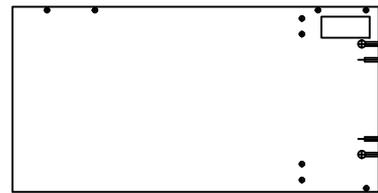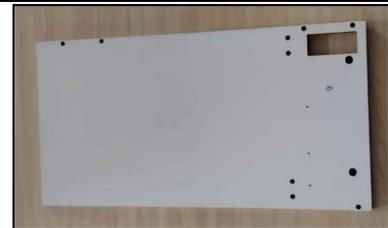



⑥ - *1



⑦ - *1

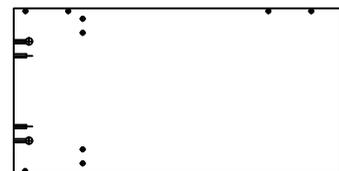


⑧ - *1

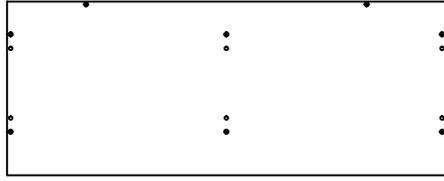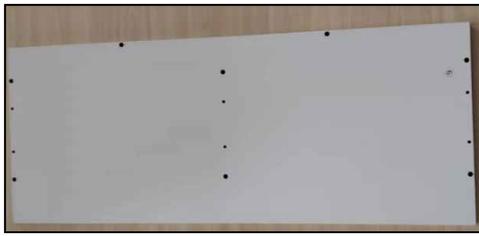


⑨ - *1




⑩ - *2





⑪ - *2

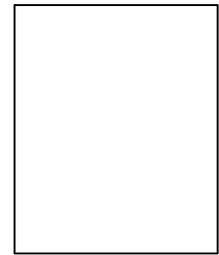



⑫ - *2



⑬ - *2

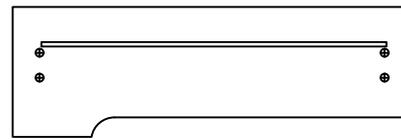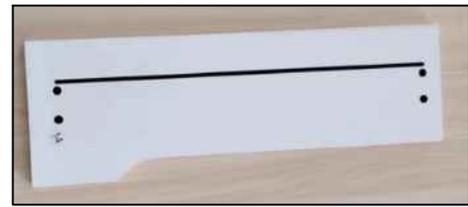


⑭ - *1

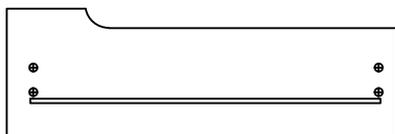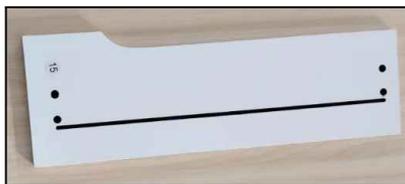


⑮ - *1




⑯ - *1




17 - *1

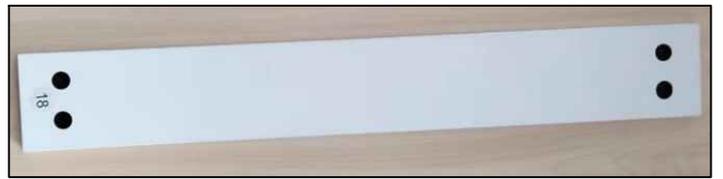


18 - *1

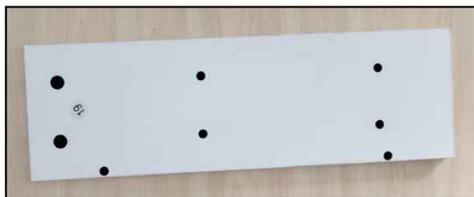


19 - *1

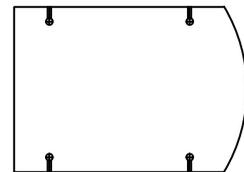


20 - *1

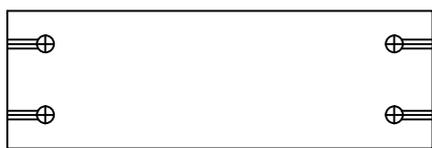


21 - *2

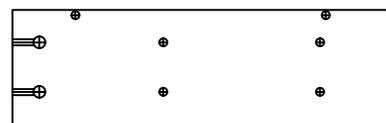



22 - *1

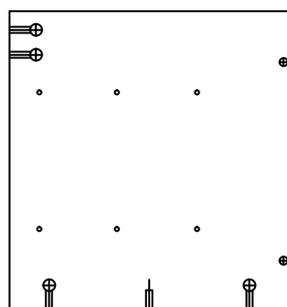



23 - *1

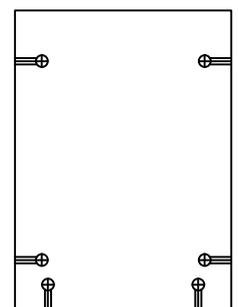


24 - *1

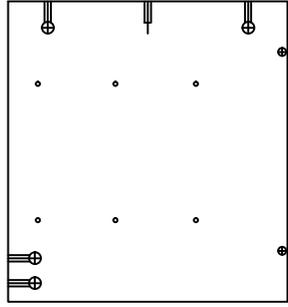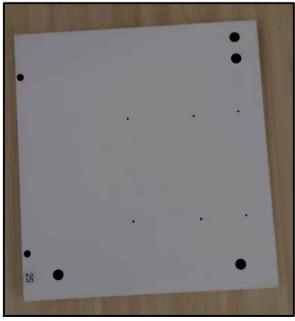


25 - *1

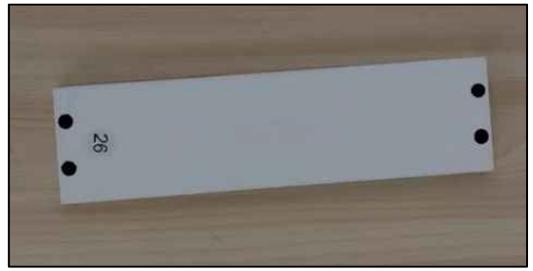


26 - *1

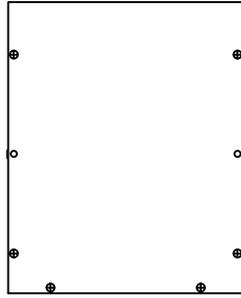


27 - *1

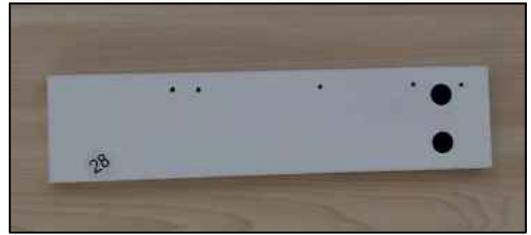


28 - *2





29 - *2

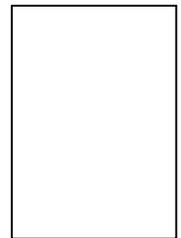



30 - *2

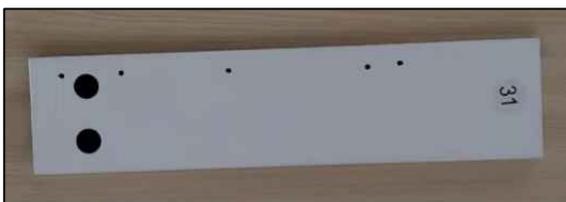

31 - *2

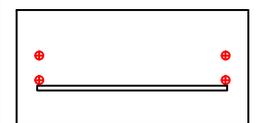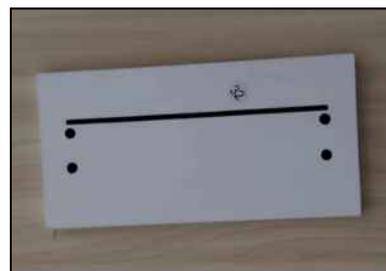



32 - *2

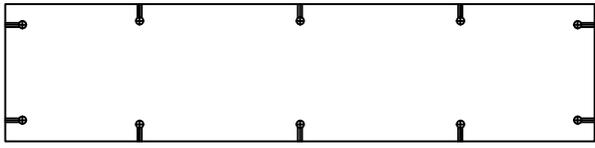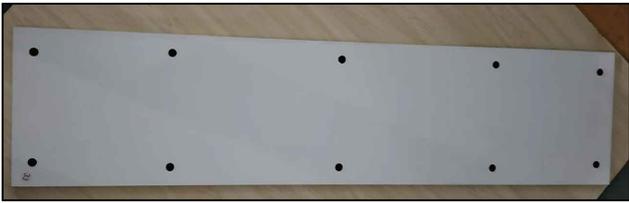


33 - *1




34 - *1

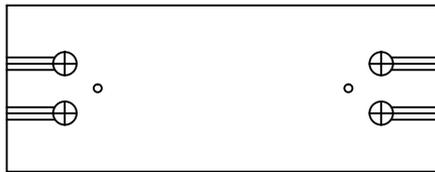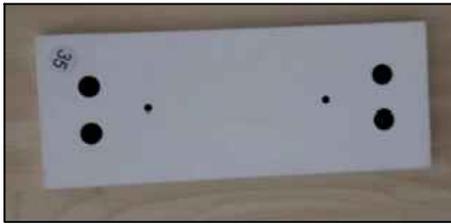


35 - *1




36 - *1



37 - *1

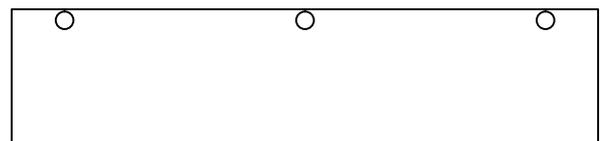

38 - *1

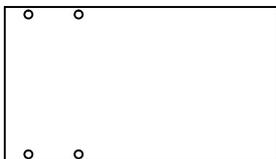

A - *2



B - *2



C - *1

Diagram of hardware components



Flathead screw



Three-section drawer slide



Screwdriver



Drawer handle/pull



Leg nail



Hooks



Long self-tapping screw



Corner brace




Small hammer



Wood rat



Short self-tapping screw

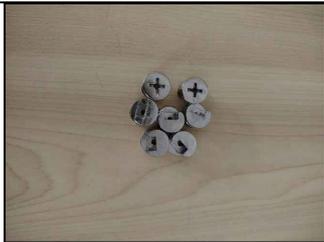

Three-in-one latch



Three-in-one lock rod / adhesive grains




Door bumper/rebounder



USB with three plugs


1. Screw installation method

When the screw is installed, please keep it in line with the board, and do not tighten it too tightly

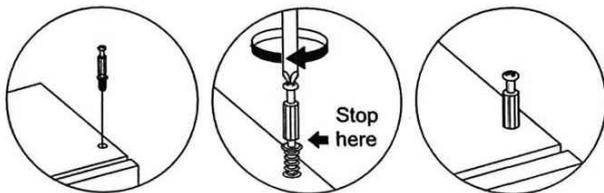


2. Check the Nut direction


This direction of the marked nut is consistent with the direction in which the screw is inserted

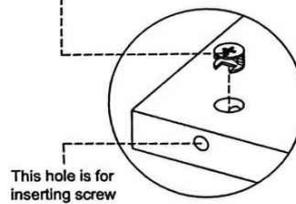

3. Installation on the board with fixing screws

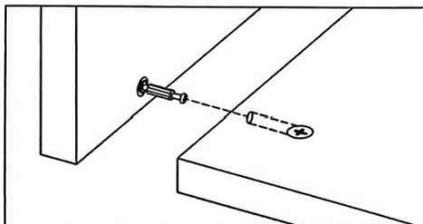


3. Rotate slowly until it stops

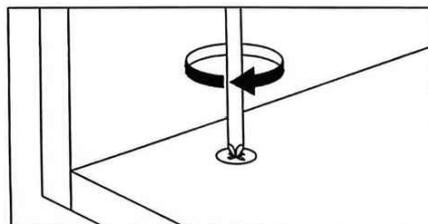

Round makeup mirror power cord




Three-color changing makeup mirror

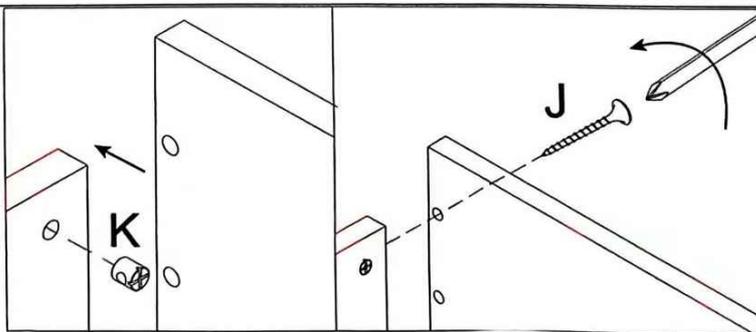


hinge



Step 1:

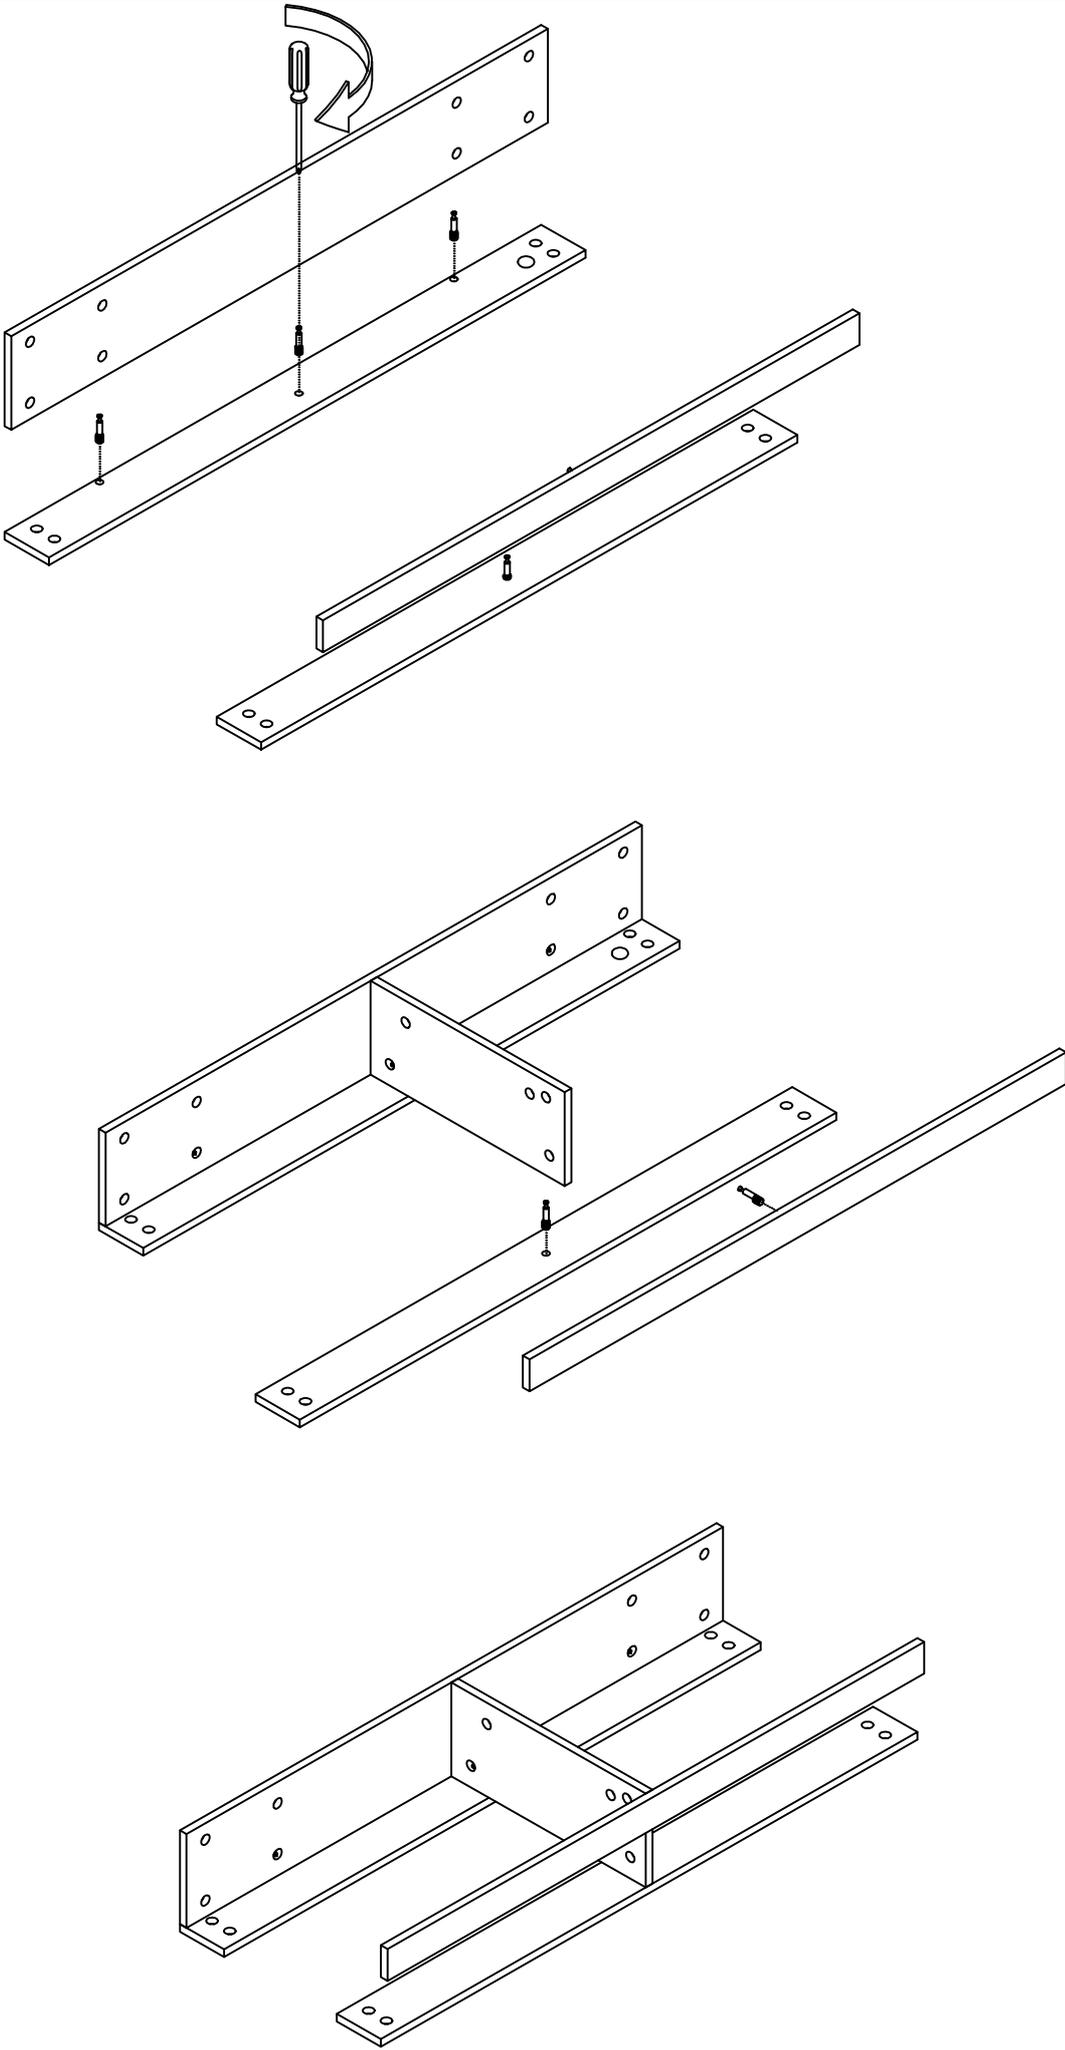







Step 2:

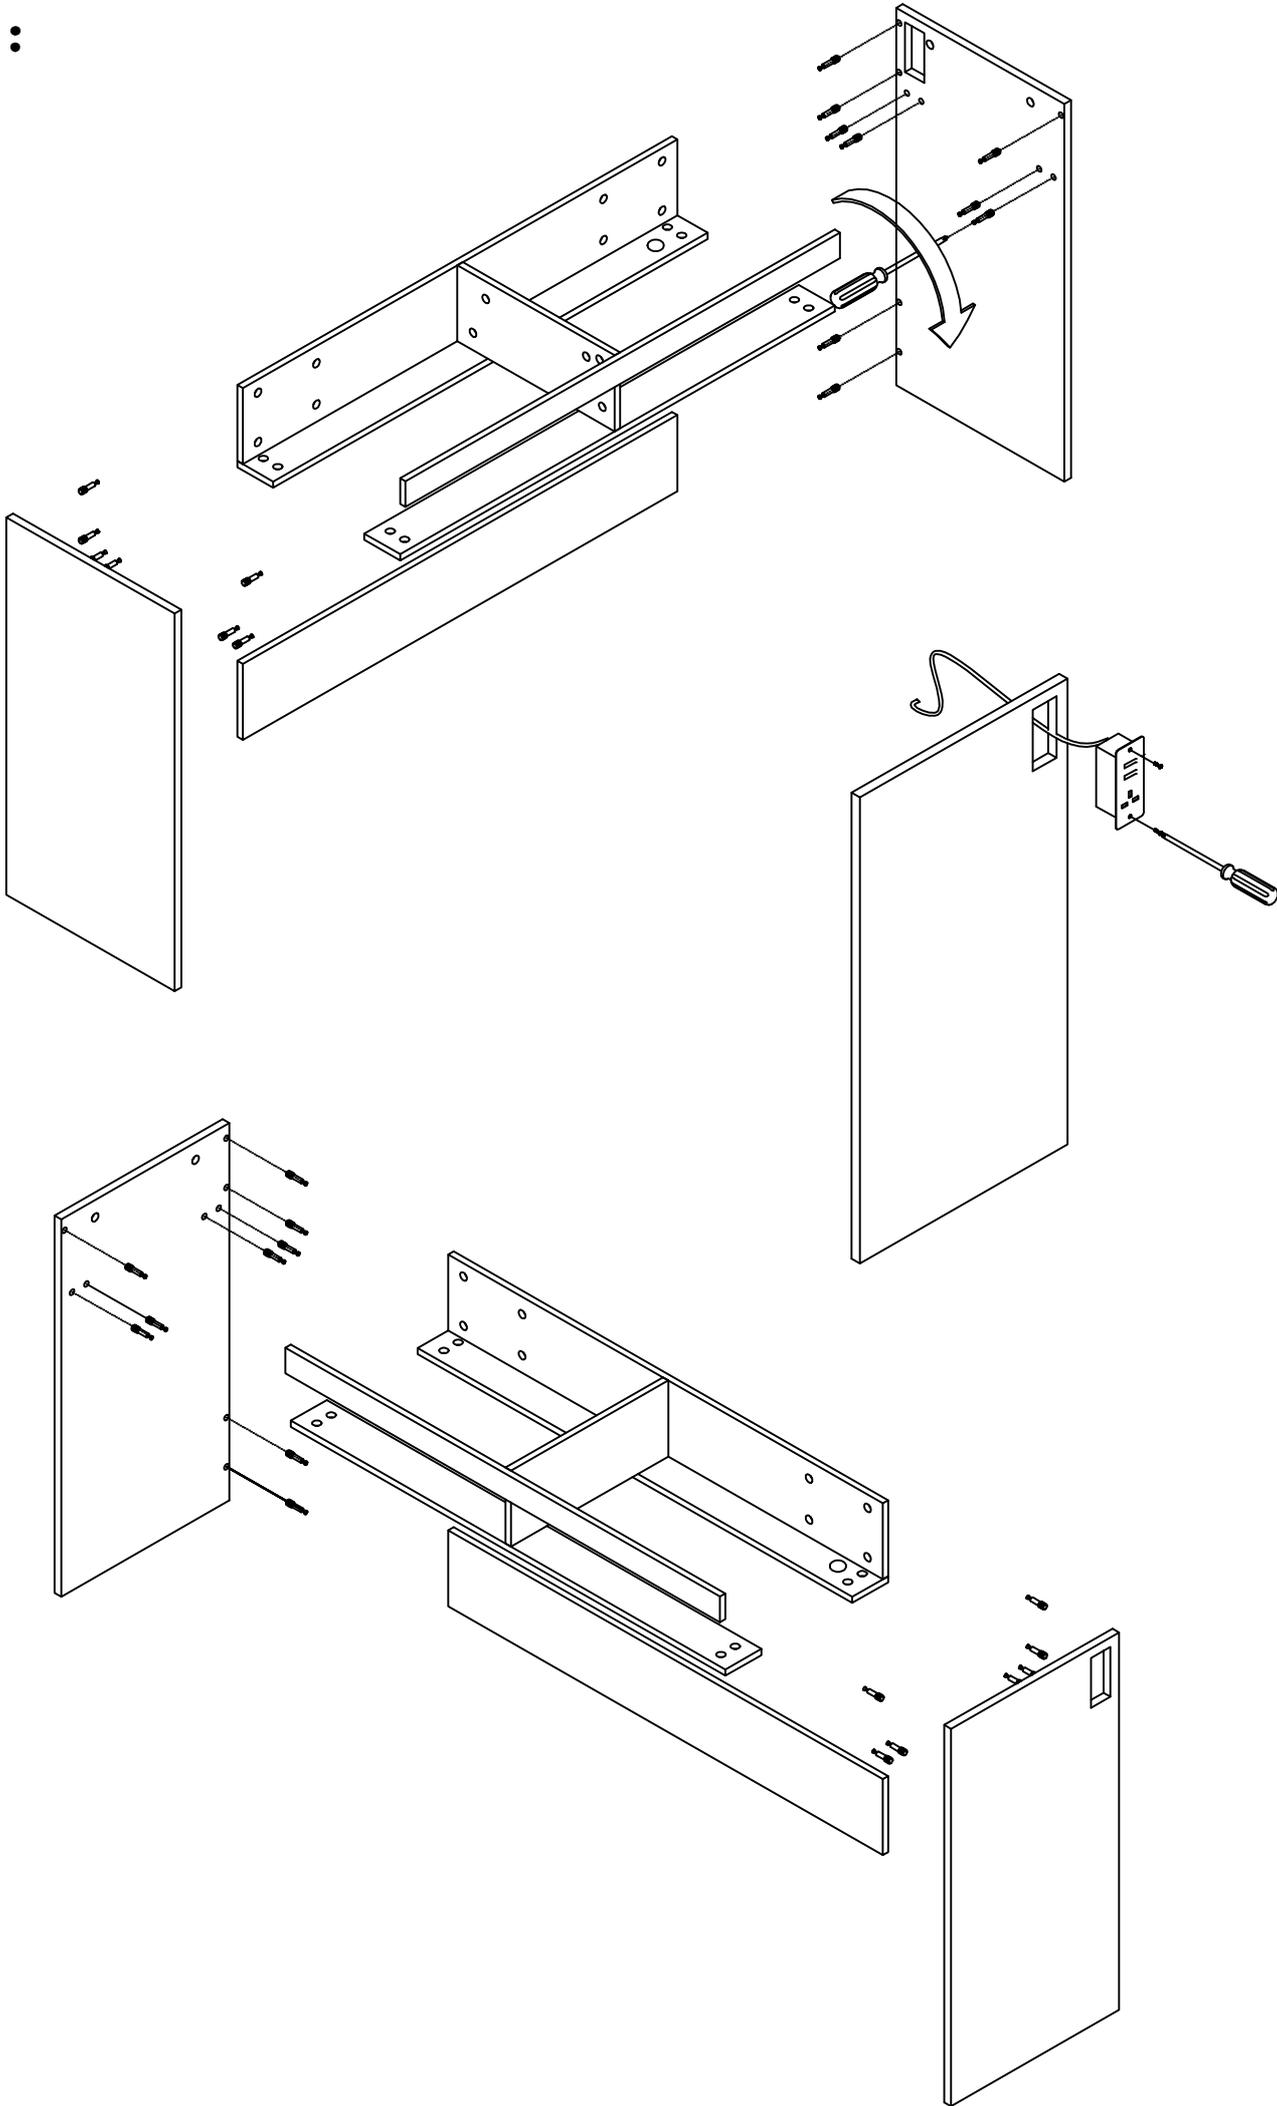



Step 3:

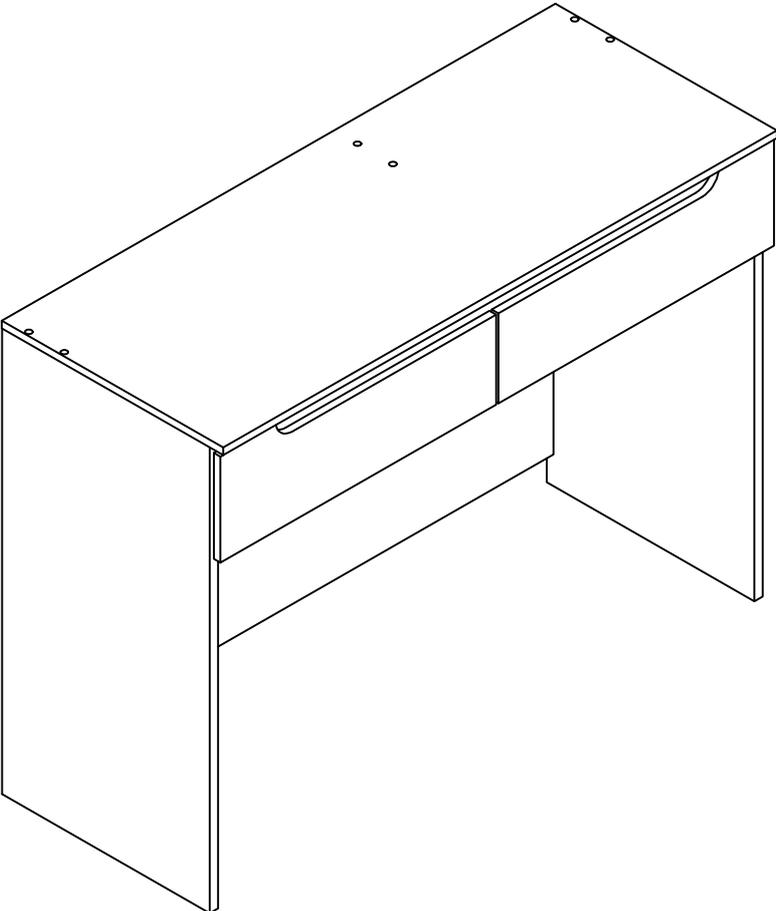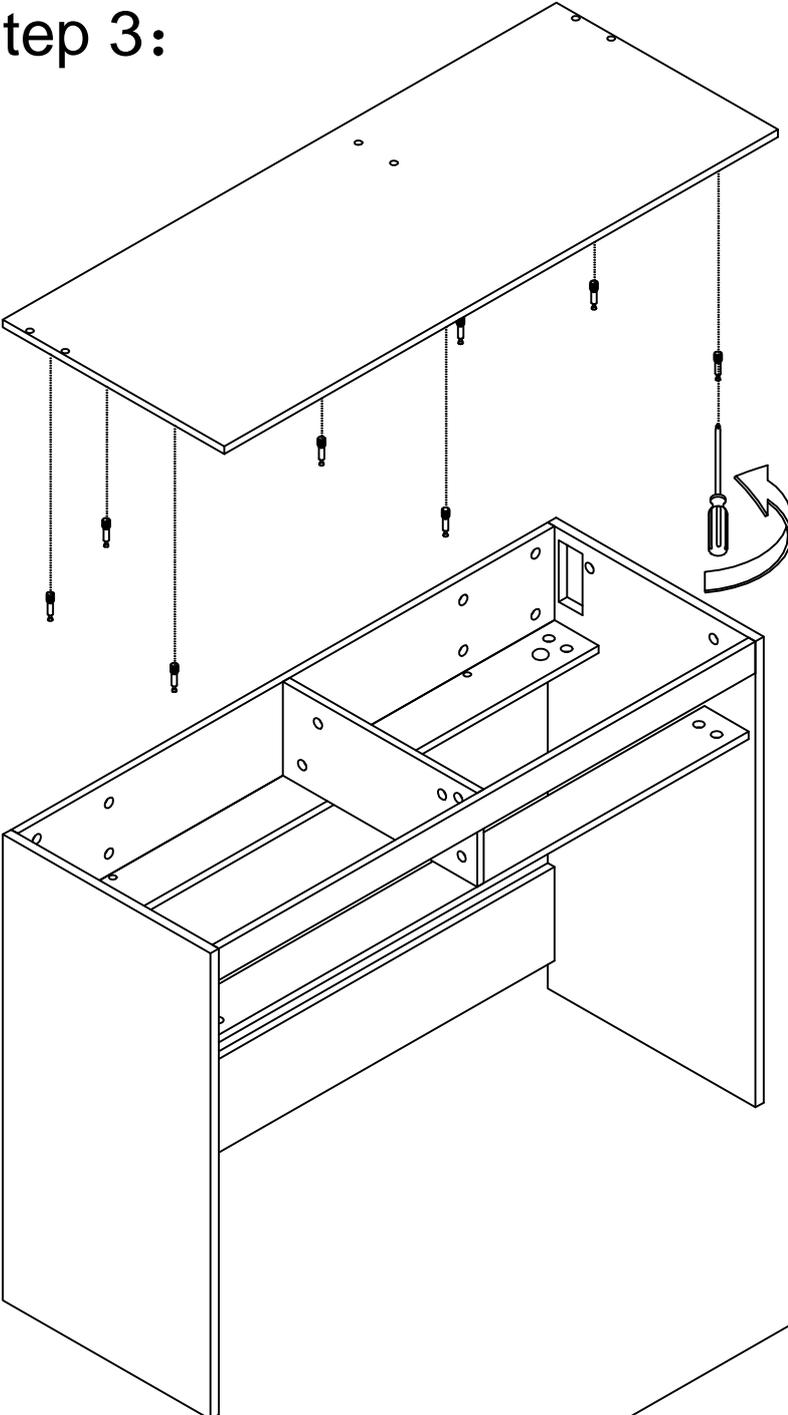


Step 4:

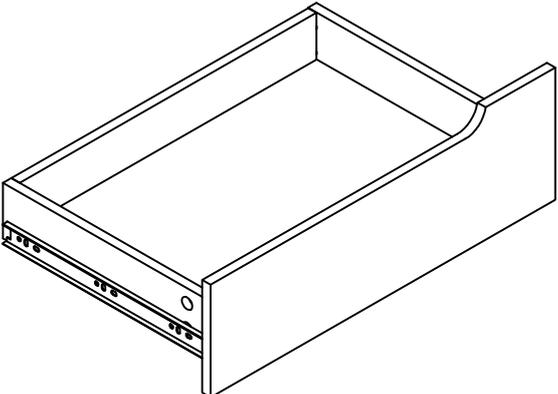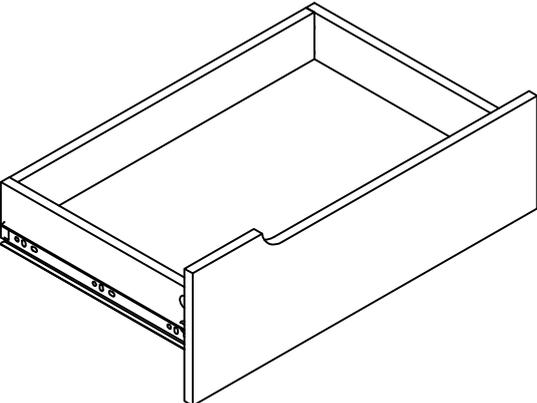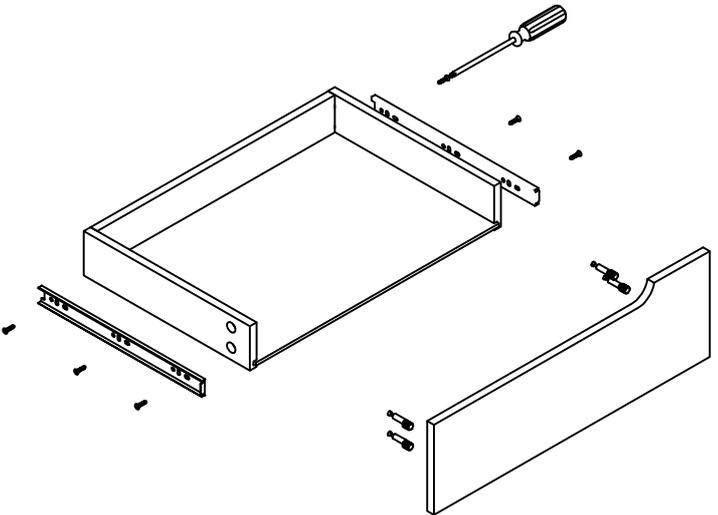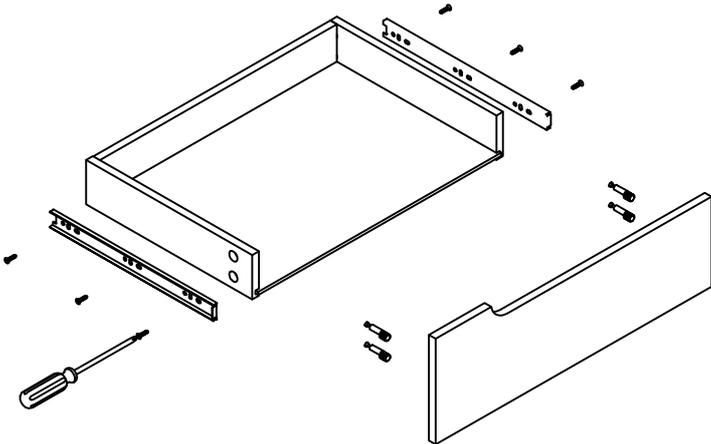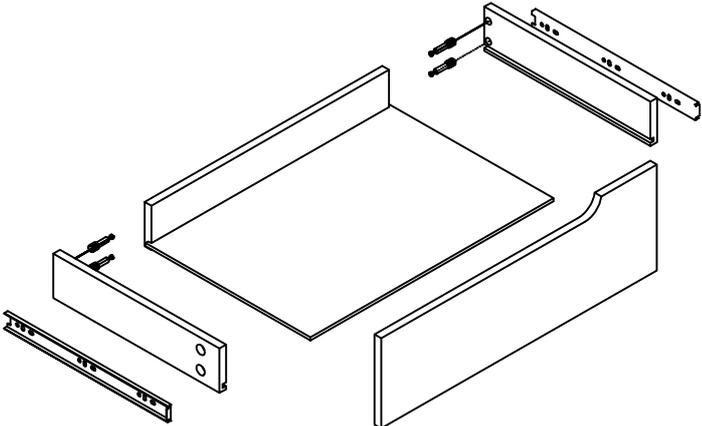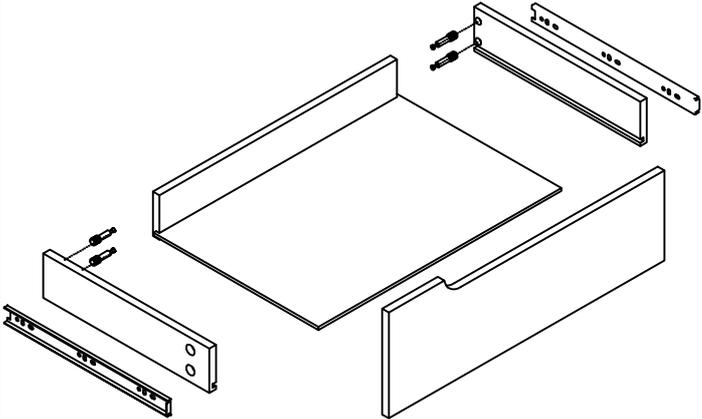


Step 5:

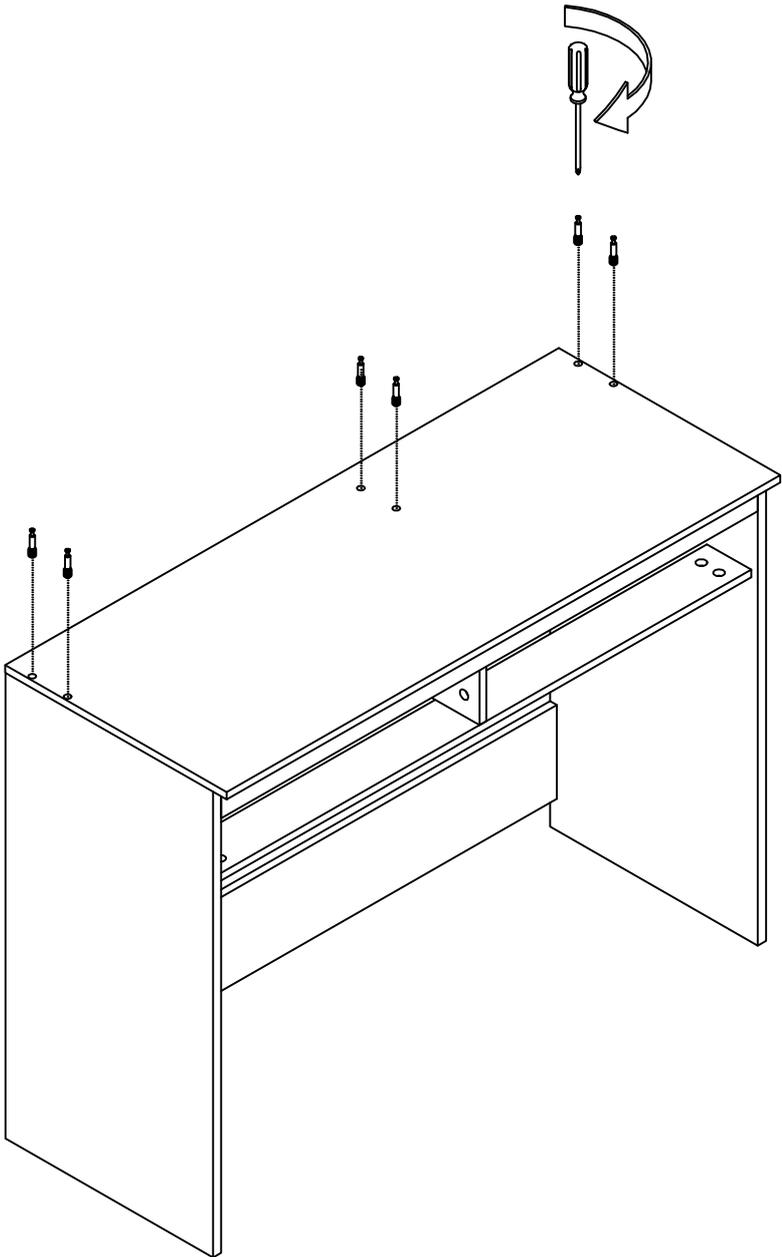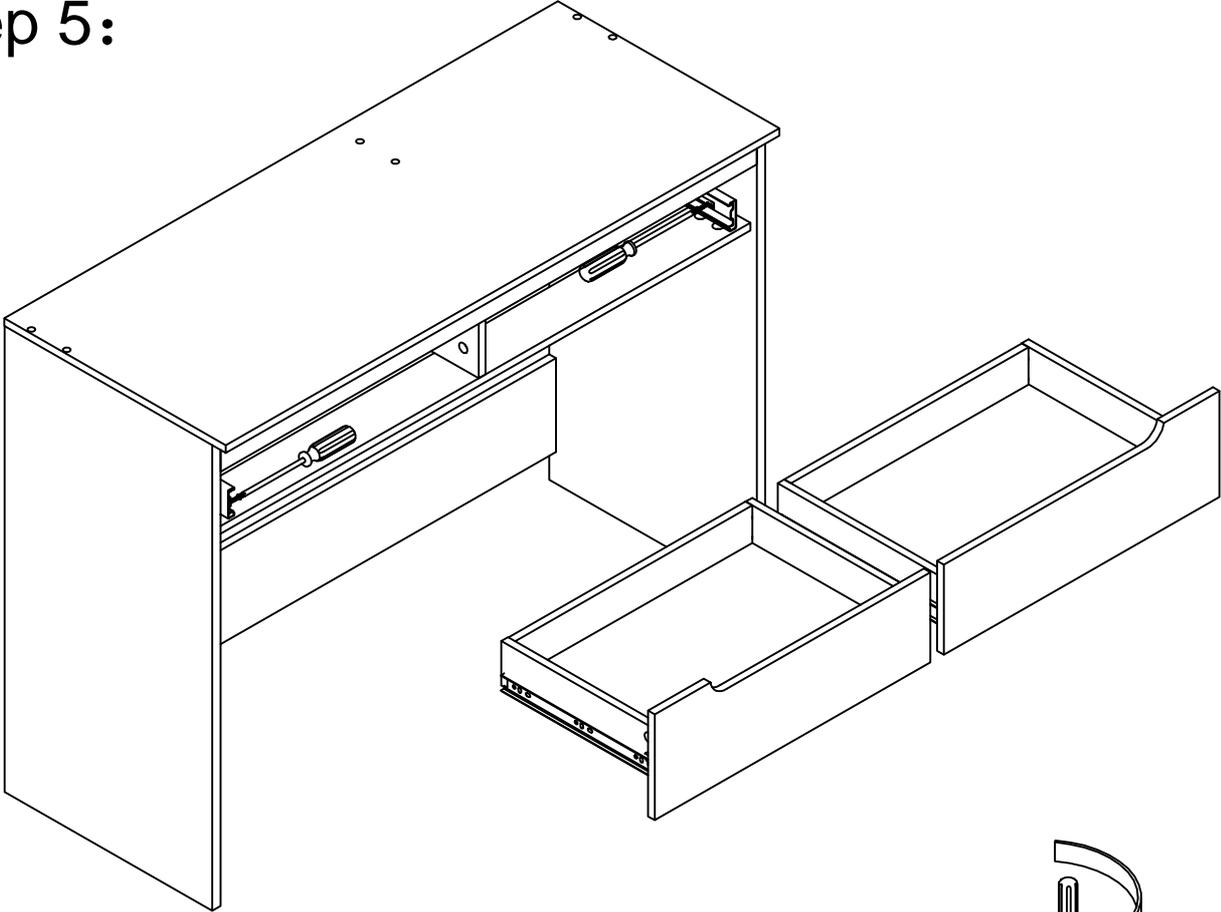






Step 6:

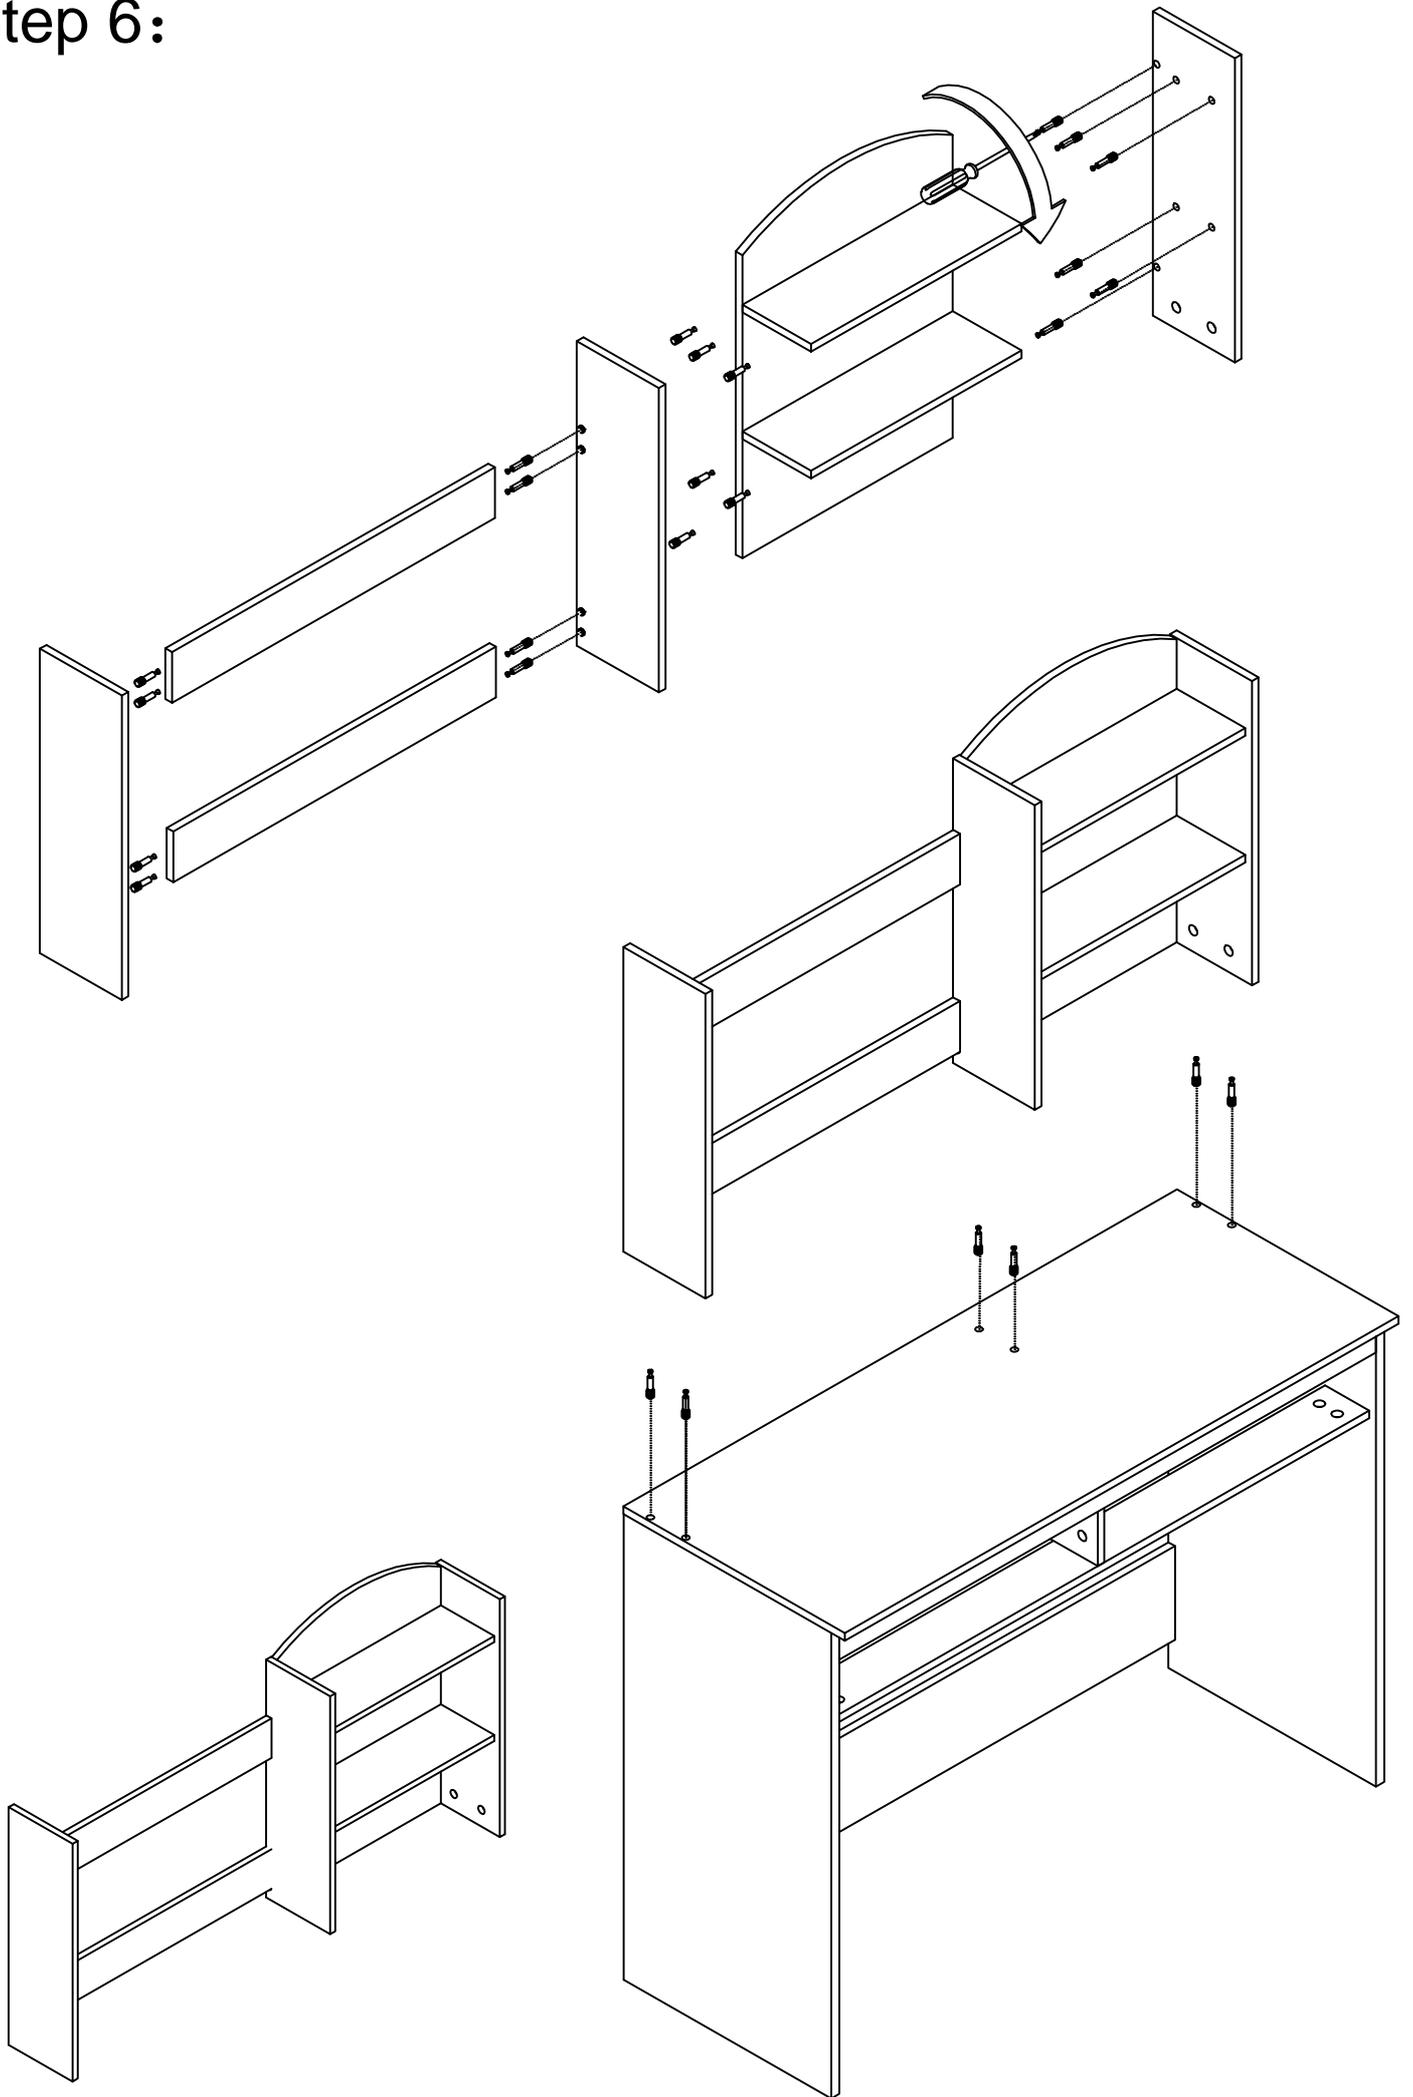


Step 7:

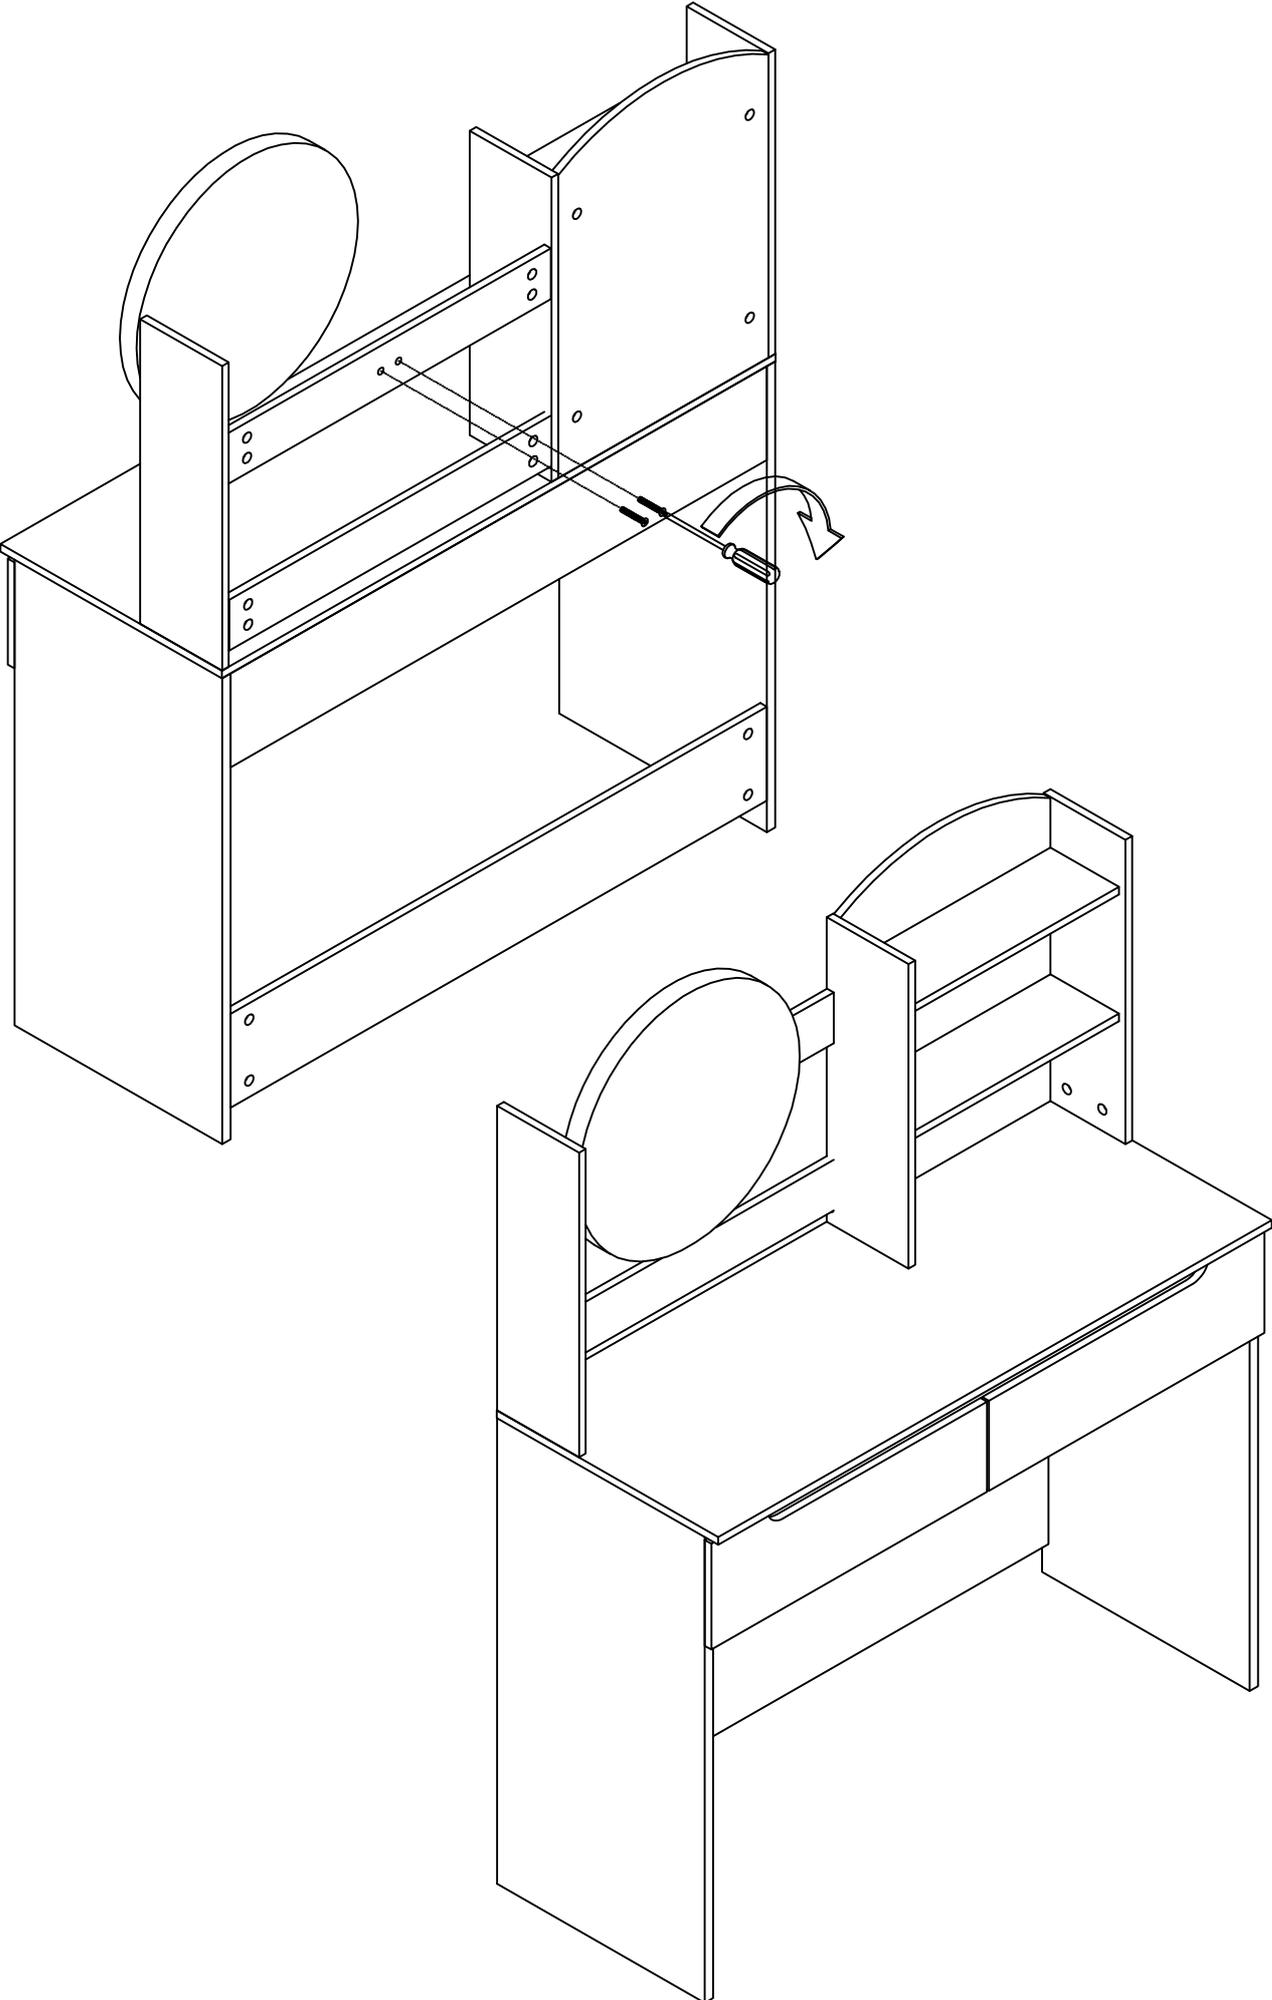

Step 8:

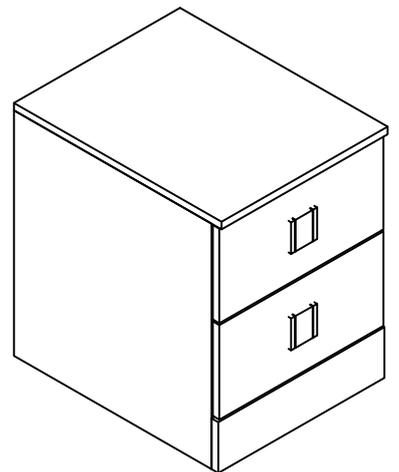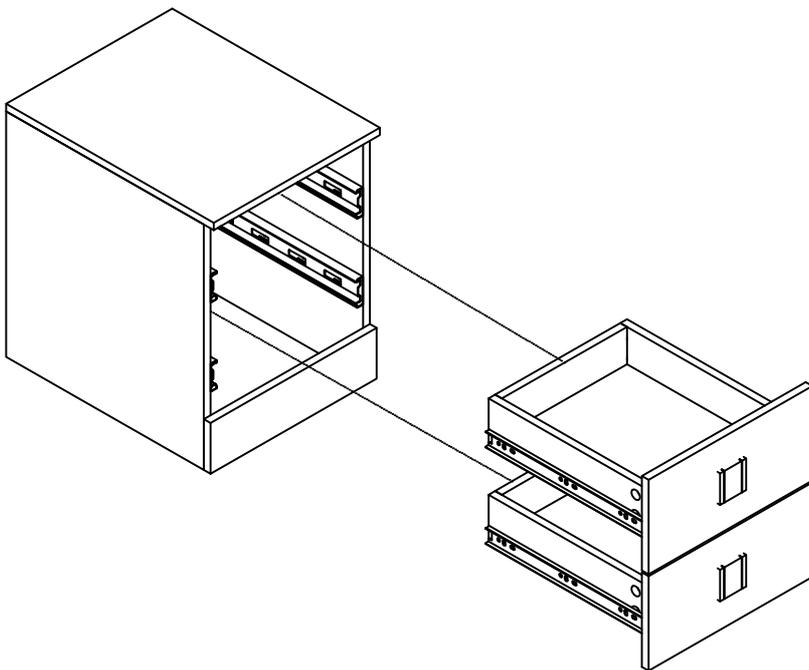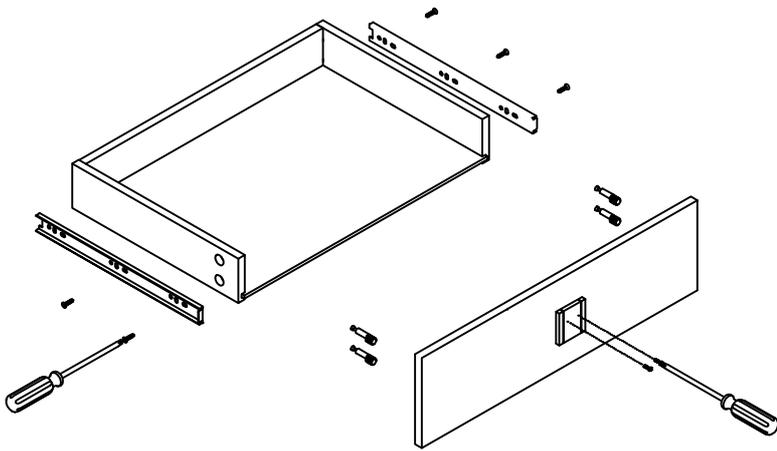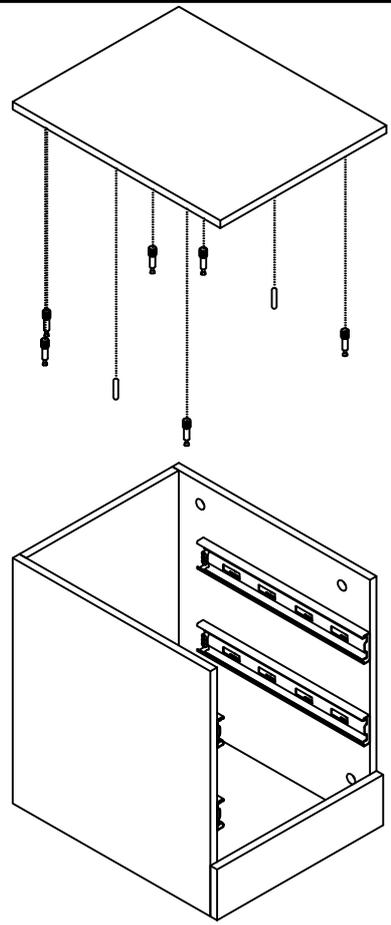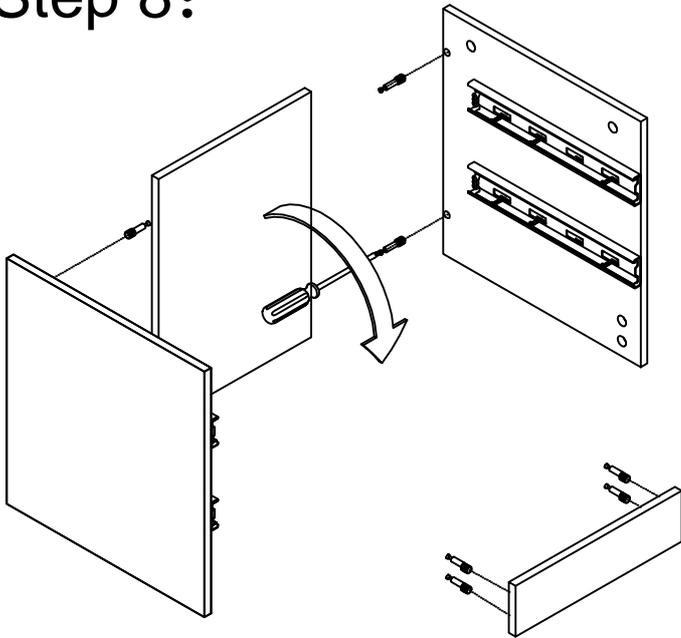

Step 9:

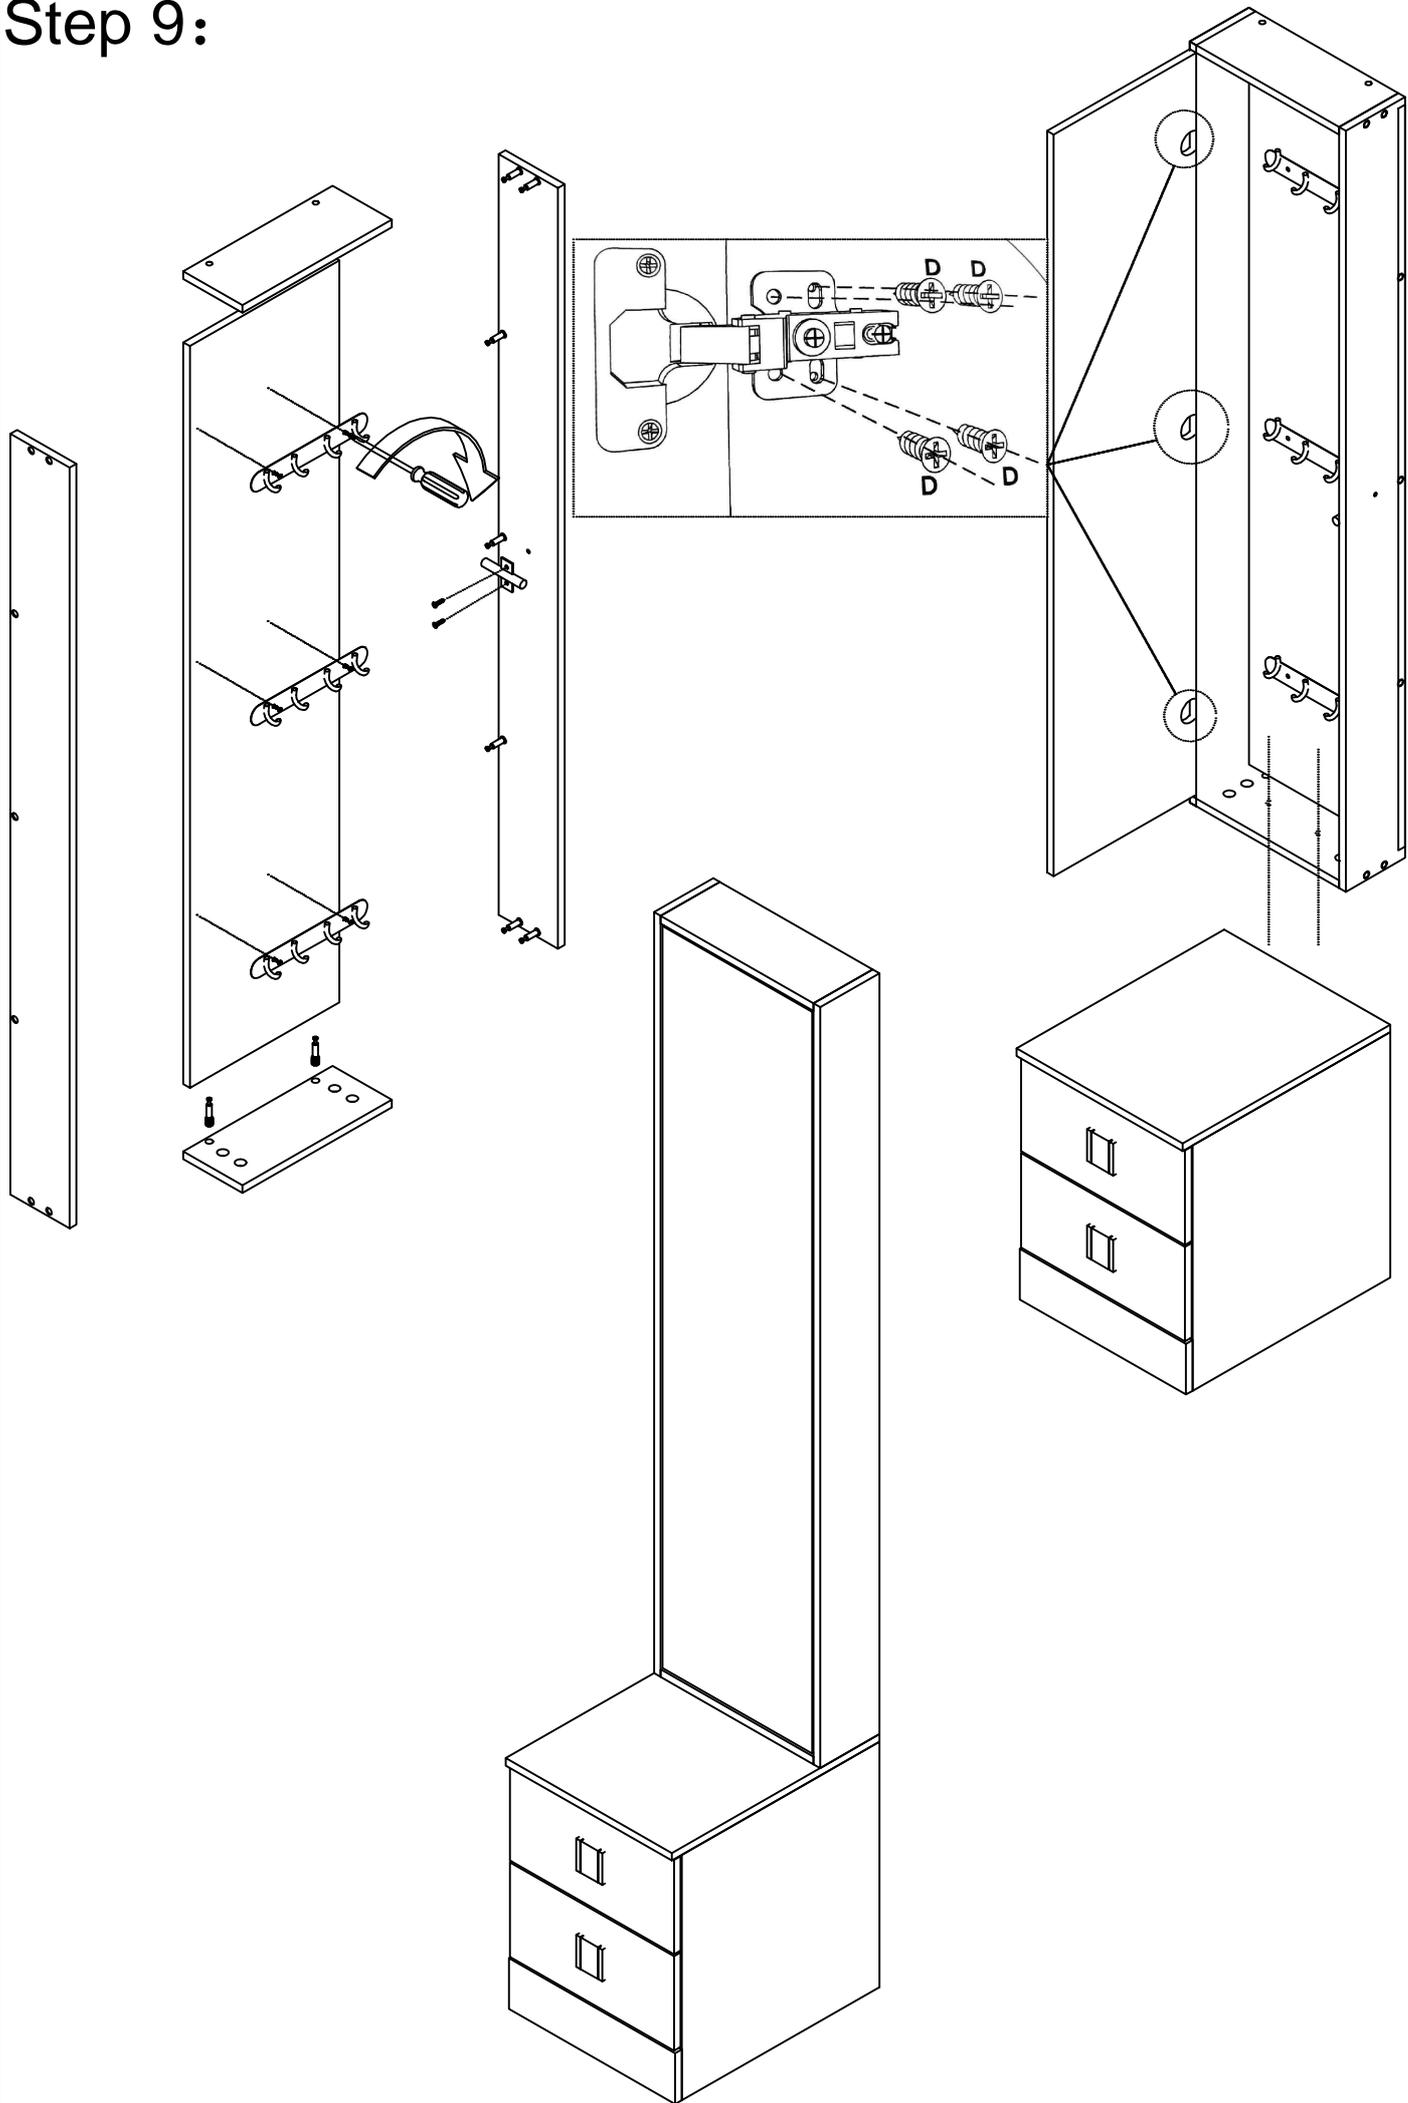

Step 10:

