


MR. GOODBAR®

The Original Home Security Bars

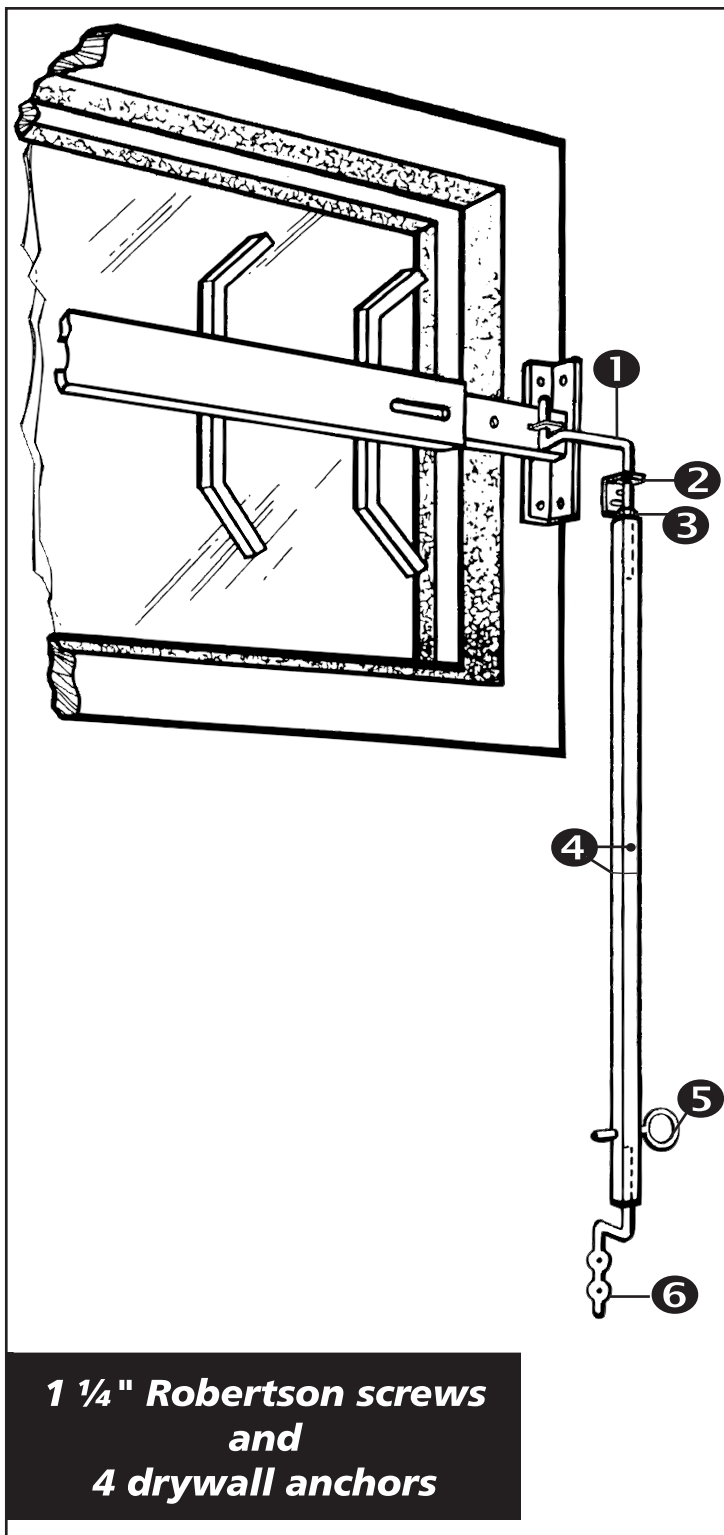

KEYLESS QUICK RELEASE LOCKING SYSTEM

Please ensure that window bar is mounted no deeper than 1" (2.5cm) into window frame before installing Keyless Quick Release Locking System.

TOOLS REQUIRED

- 5/32" (4 mm) Drill bit
- Robertson (square head) screw driver
- Pencil

ASSEMBLY

1. Fully thread nut onto lock bar
2. Fully thread lock bar into square tubing
3. Slide angle bracket onto lock bar
4. Connect two parts of square tubing
(*some models only)

KEYLESS QUICK RELEASE LOCKING SYSTEM DIAGRAM:

- ❶ 1/4" (6.35 mm) LOCK BAR
- ❷ ANGLE BRACKET
- ❸ 1/4" (6.35 mm) NUT
- ❹ TWO PART CONNECTION WITH PIN (*some models only)
- ❺ RELEASE PIN
- ❻ LOWER MOUNTING BRACKET

**1 1/4" Robertson screws
and
4 drywall anchors**

* On some models the Keyless Quick Release main square tubing comes in two parts. It is recommended that you use the full length of the Keyless Quick Release to fully ensure the security of your window but if space is limited you can use the top part only.

MR. GOODBAR[®]

The Original Home Security Bars



01. Fully insert lock bar into lock tab of window bar.



02. With angle bracket resting on top of nut, mark position of screws.
→ Pre-drill screw holes with a 1/8" (3.175 mm) drill bit.
(insert drywall anchors, in necessary)
→ Fasten with 1 1/4" (31.75 mm) screws.



03. Insert release pin into hole at bottom of square tubing.
(You may have to turn tubing for proper alignment.)
04. Insert lower mounting bracket into bottom of tubing until it touches release pin.
05. Ensuring that Keyless Quick Release Locking System is level, mark position of lower bracket.
→ Pre-drill screw holes with a 1/8" (3.175 mm) drill bit.
(insert drywall anchors, in necessary)
→ Fasten with 1 1/4" (31.75 mm) screws.



06. Ensure unit is operating smoothly and tighten all screws.