

CPVC STOP VALVE INSTALLATION INSTRUCTIONS




Installation Instructions:

1. Turn off water supply, and drain the line.
2. Cut CPVC square or remove existing valve and disconnect supply line.
3. Remove burrs from inside and outside of pipe.
4. Apply primer/solvent to CPVC pipe and valve, do not over apply.
5. Push valve on CPVC pipe and align with fixture.
6. Allow joint to cure.
7. Connect supply line to stop valve and fixture.
8. Turn on water and check connections.

Instrucciones de instalación:

1. Cierre el suministro de agua y drene la tubería.
2. Corte la escuadra de CPVC o quite la válvula existente y desconecte la tubería de suministro.
3. Retire las rebabas de la parte interior y exterior de la tubería.
4. Aplique el cebador/solvente a la tubería de CPVC y a la válvula, no aplique en exceso.
5. Empuje la válvula en la tubería de CPVC y alinee con el accesorio.
6. Permita que se cure la junta.
7. Conecte la tubería de suministro para detener la válvula y el accesorio.
8. Abra el flujo de agua y revise las conexiones.

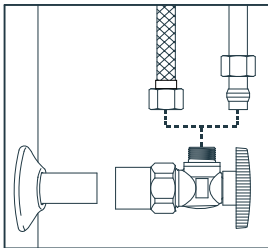

AN RWC BRAND
RWC

Distributed by
Reliance Worldwide Corporation®
1-877-700-4242