

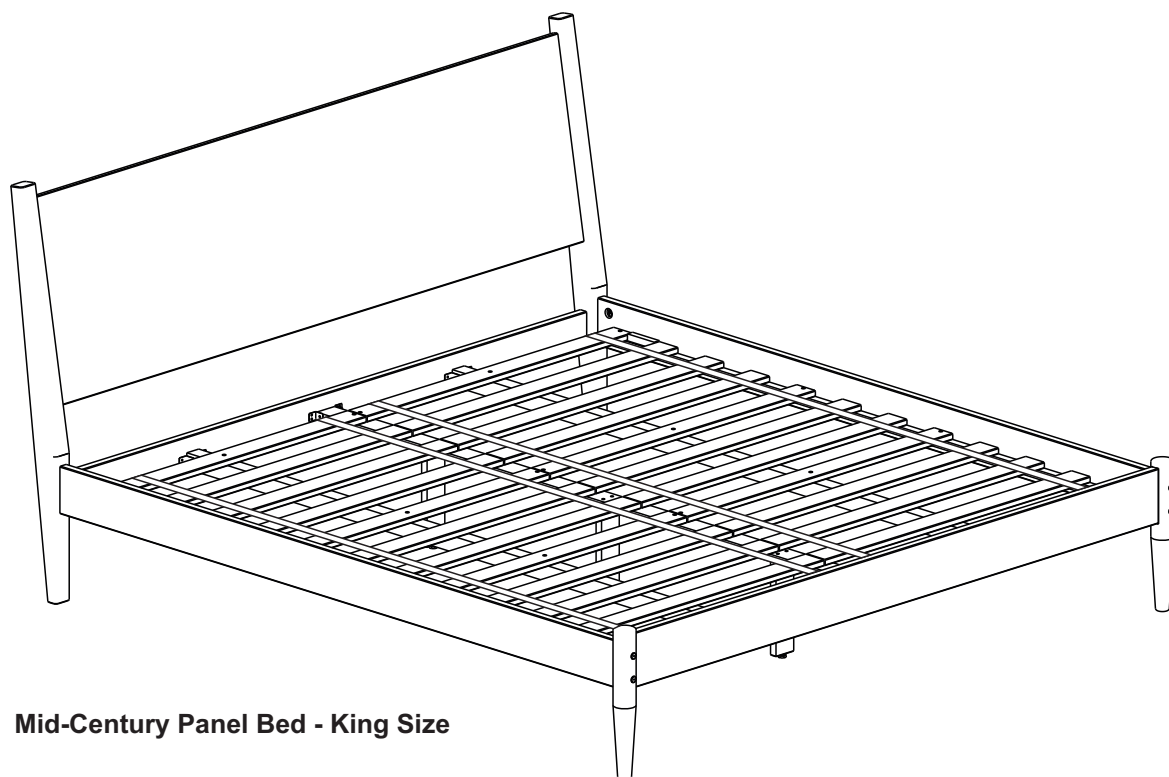
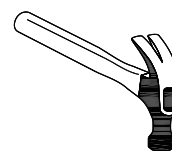



ASSEMBLY INSTRUCTIONS

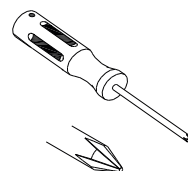

01:00 Hs

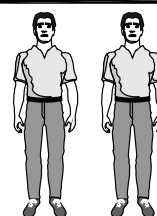

HARDWARE INCLUDED



A - 10,0x50 Wood Dowel
Qty. 20



B - 4,0x40 Screw
Qty. 16




C - 3,5x16 Screw
Qty. 40




D - 3,5x30 Screw
Qty. 24



E -Screw Nut
Qty. 08




F - Allen Key
Qty. 01

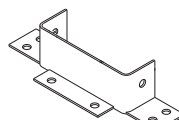


G - Support Bar
Qty. 02



H - 1/4x100 Screw
Qty. 08



I - 7,0x50 Screw
Qty. 06

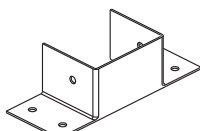


K -Support Bar
Qty. 04




**L - Wood Hole
Cover - Qty. 04**


PARTS INCLUDED

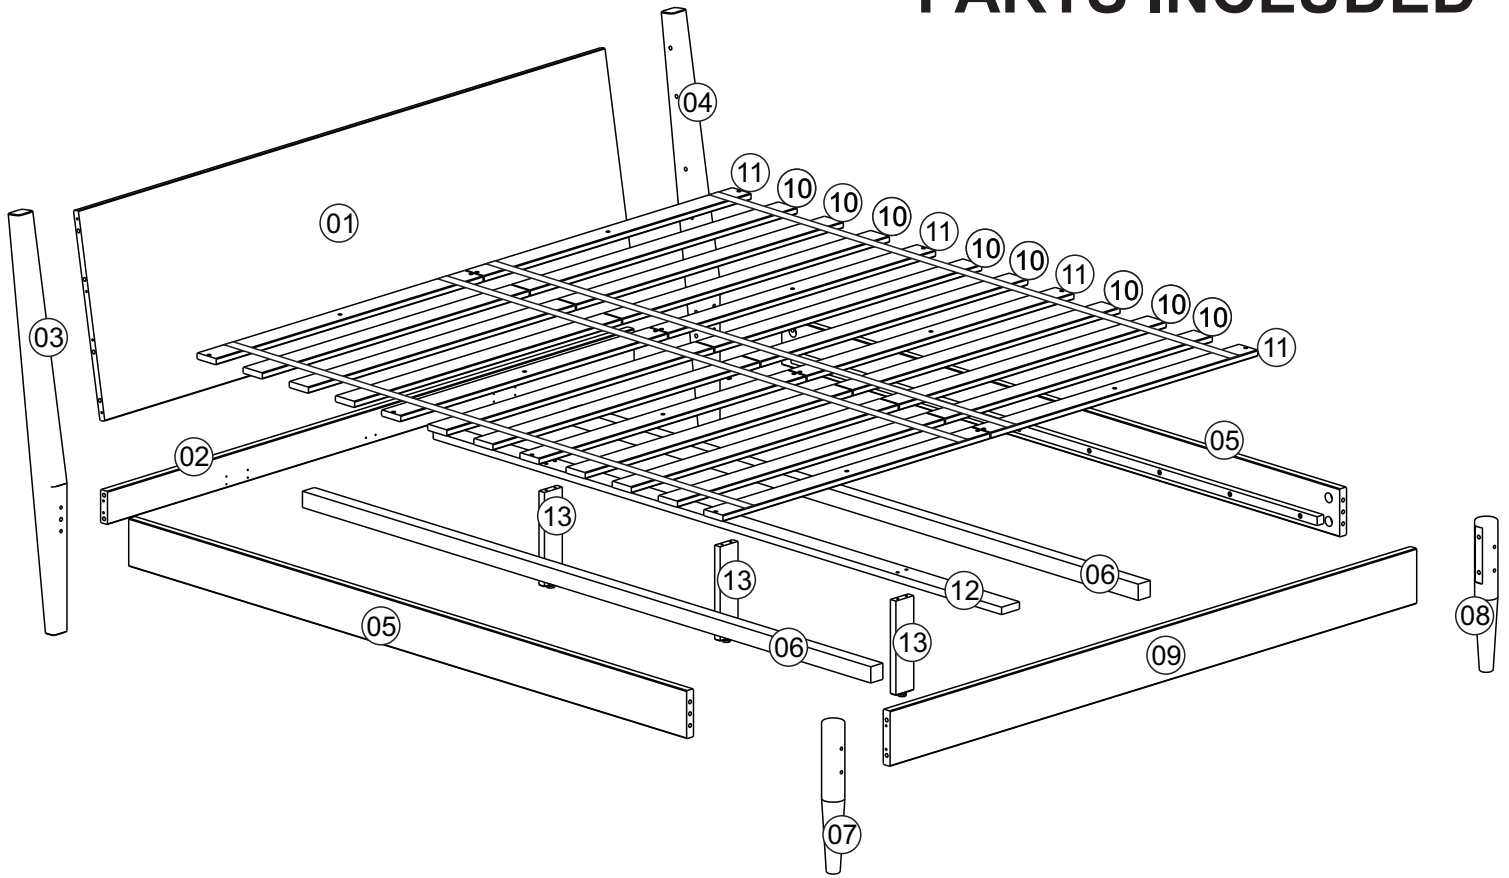


STEP 1

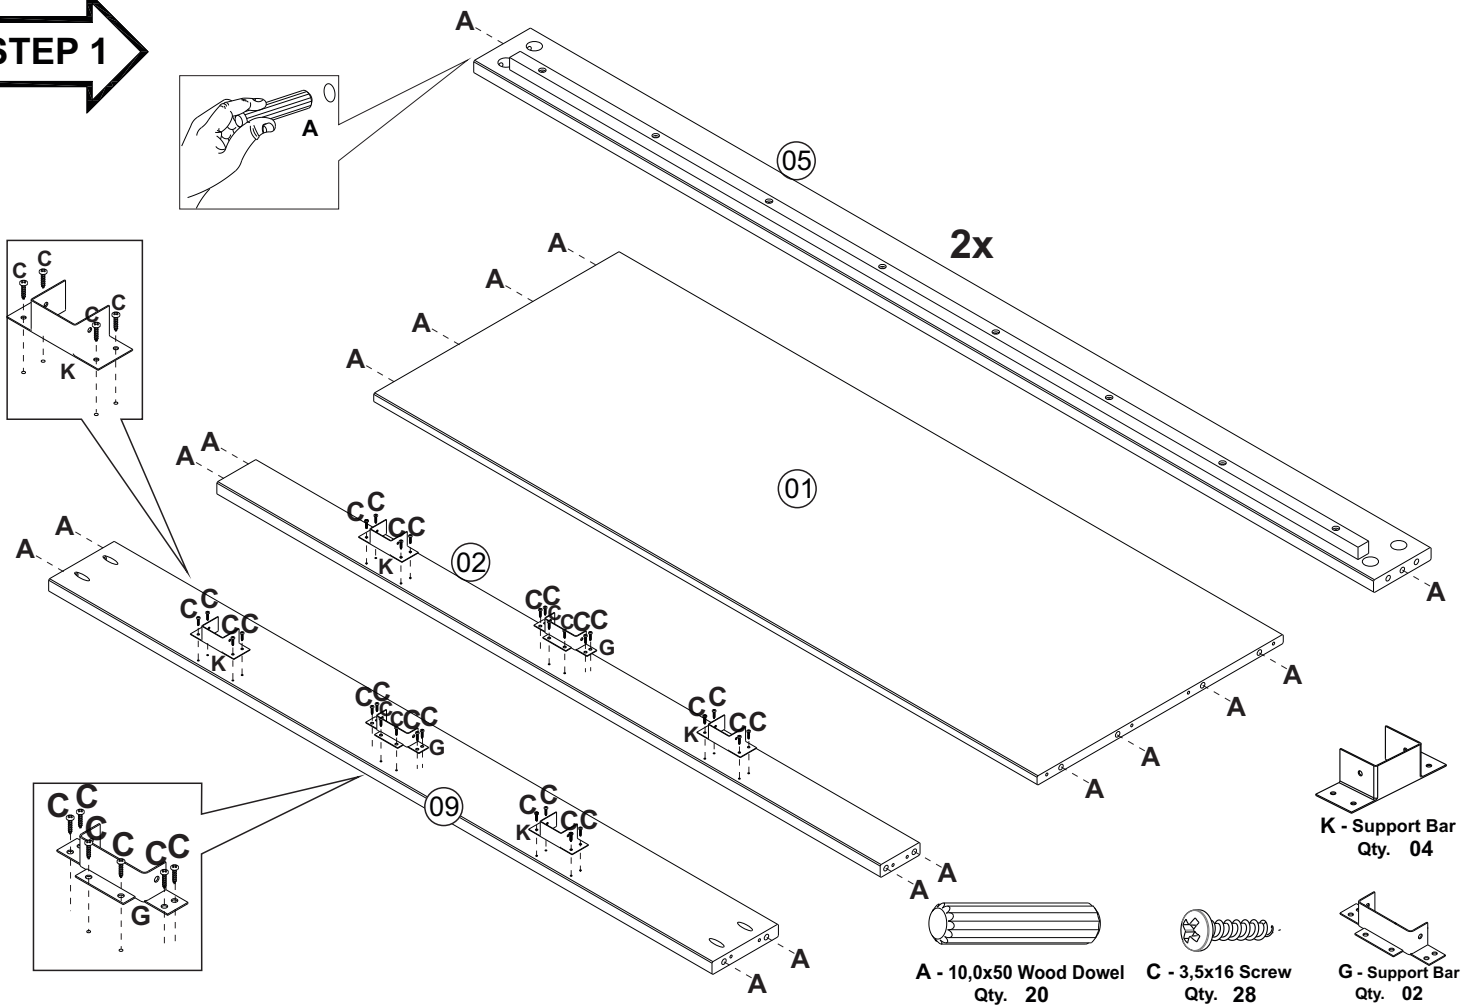


STEP 2

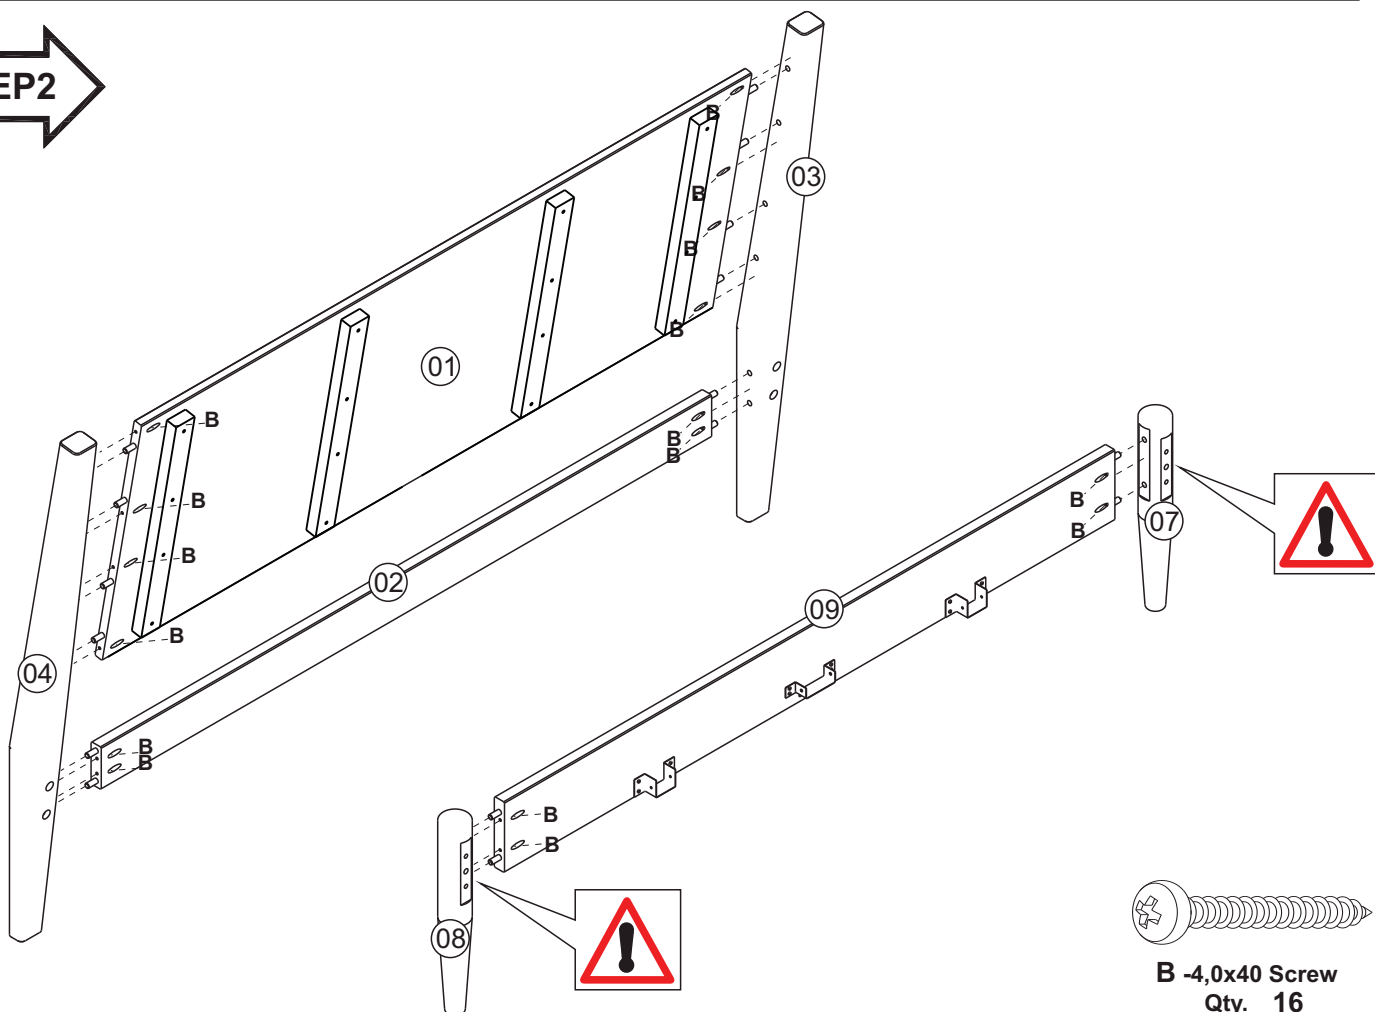


STEP 3

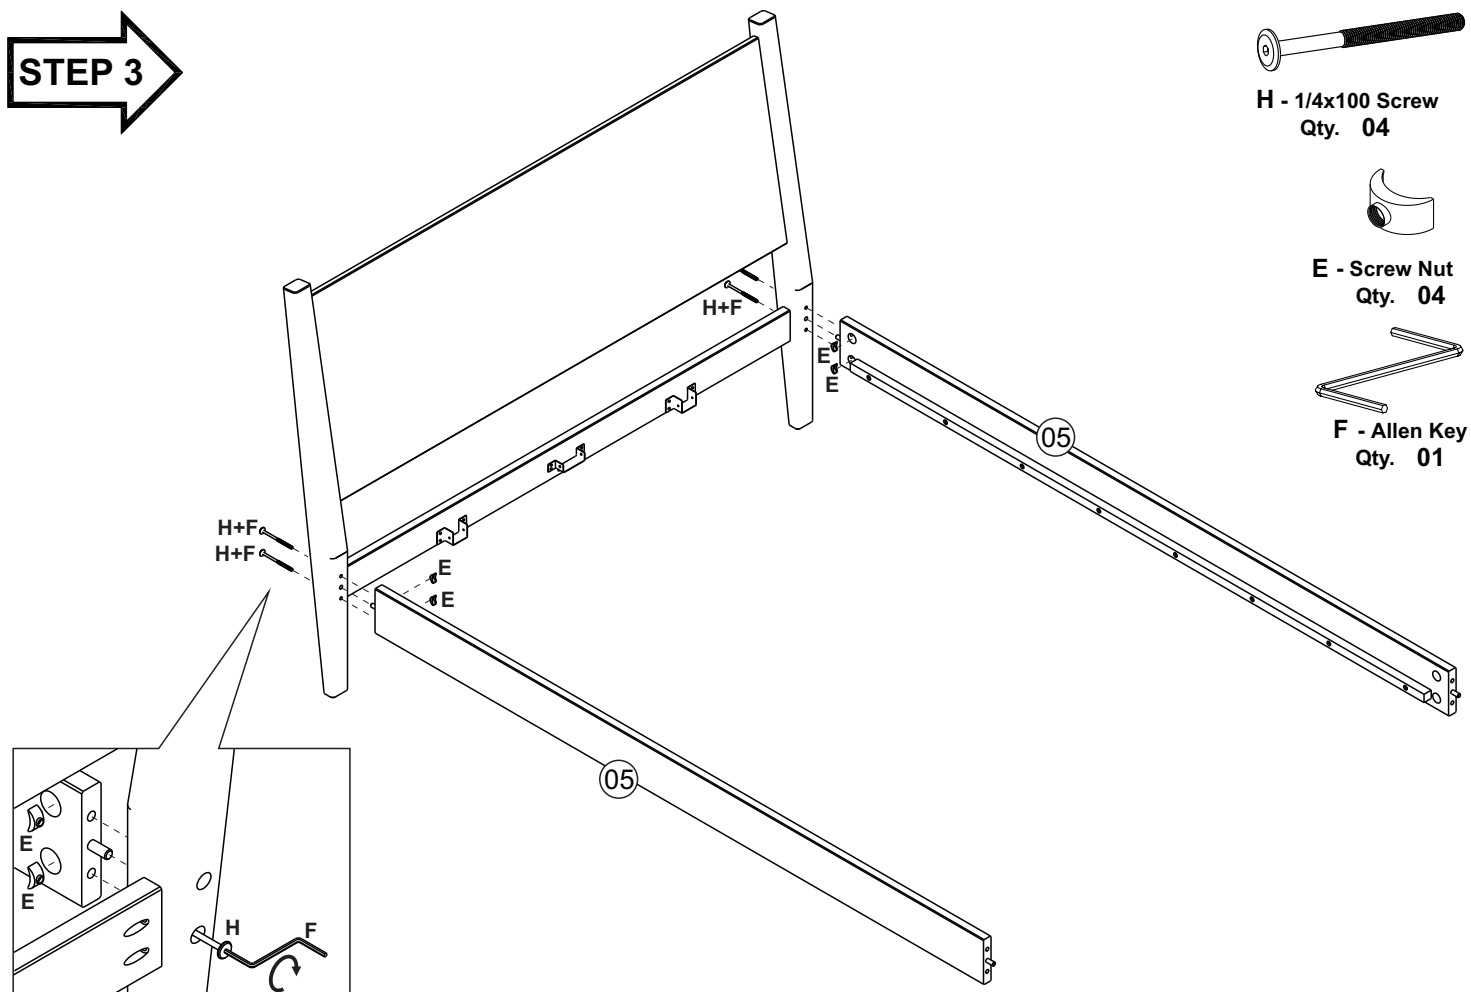



STEP 4

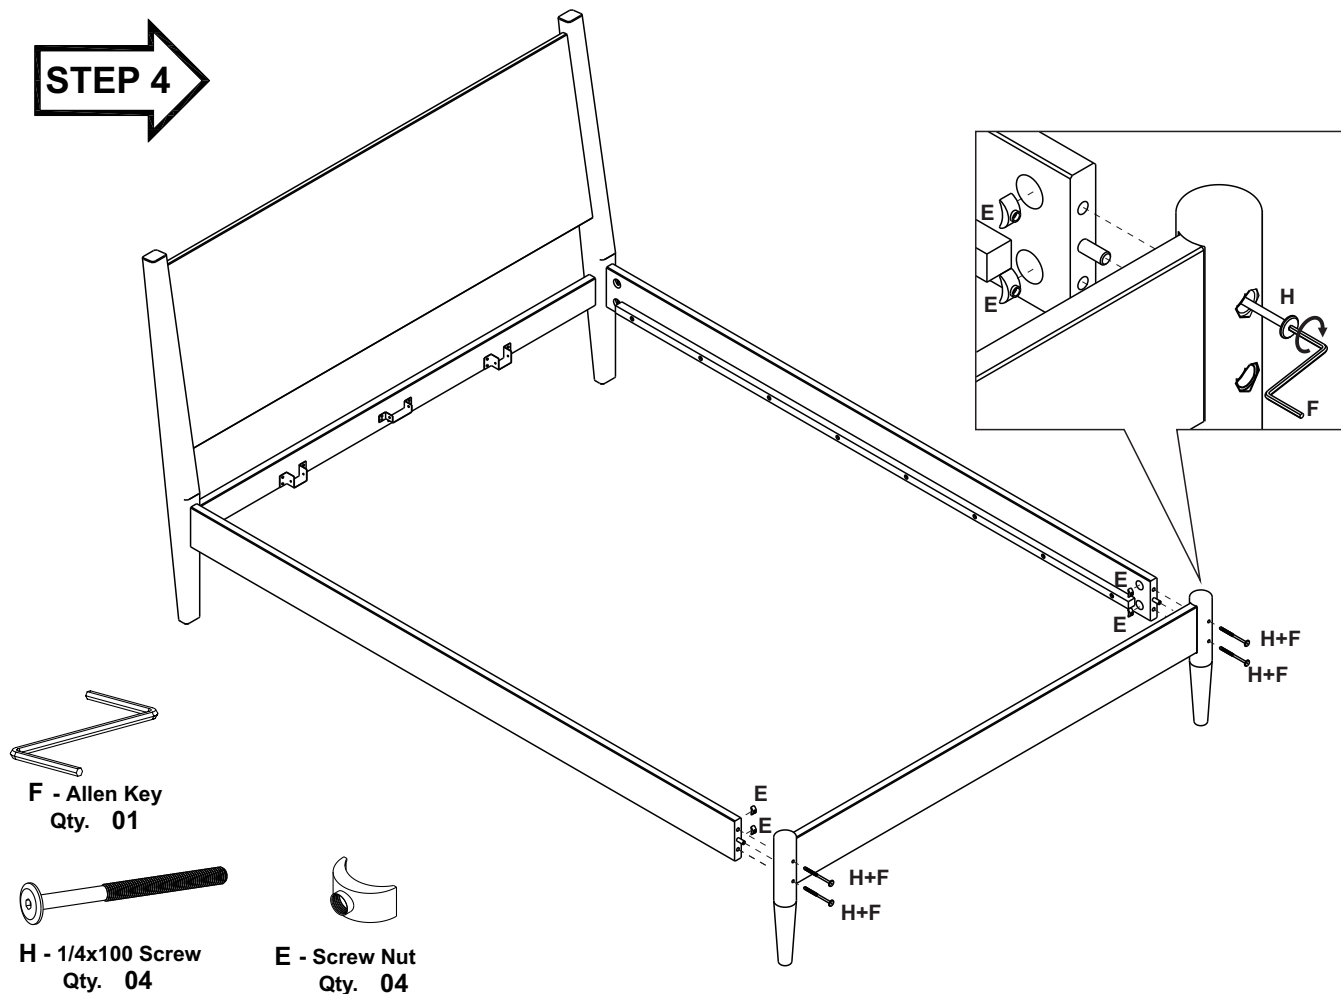

STEP 5

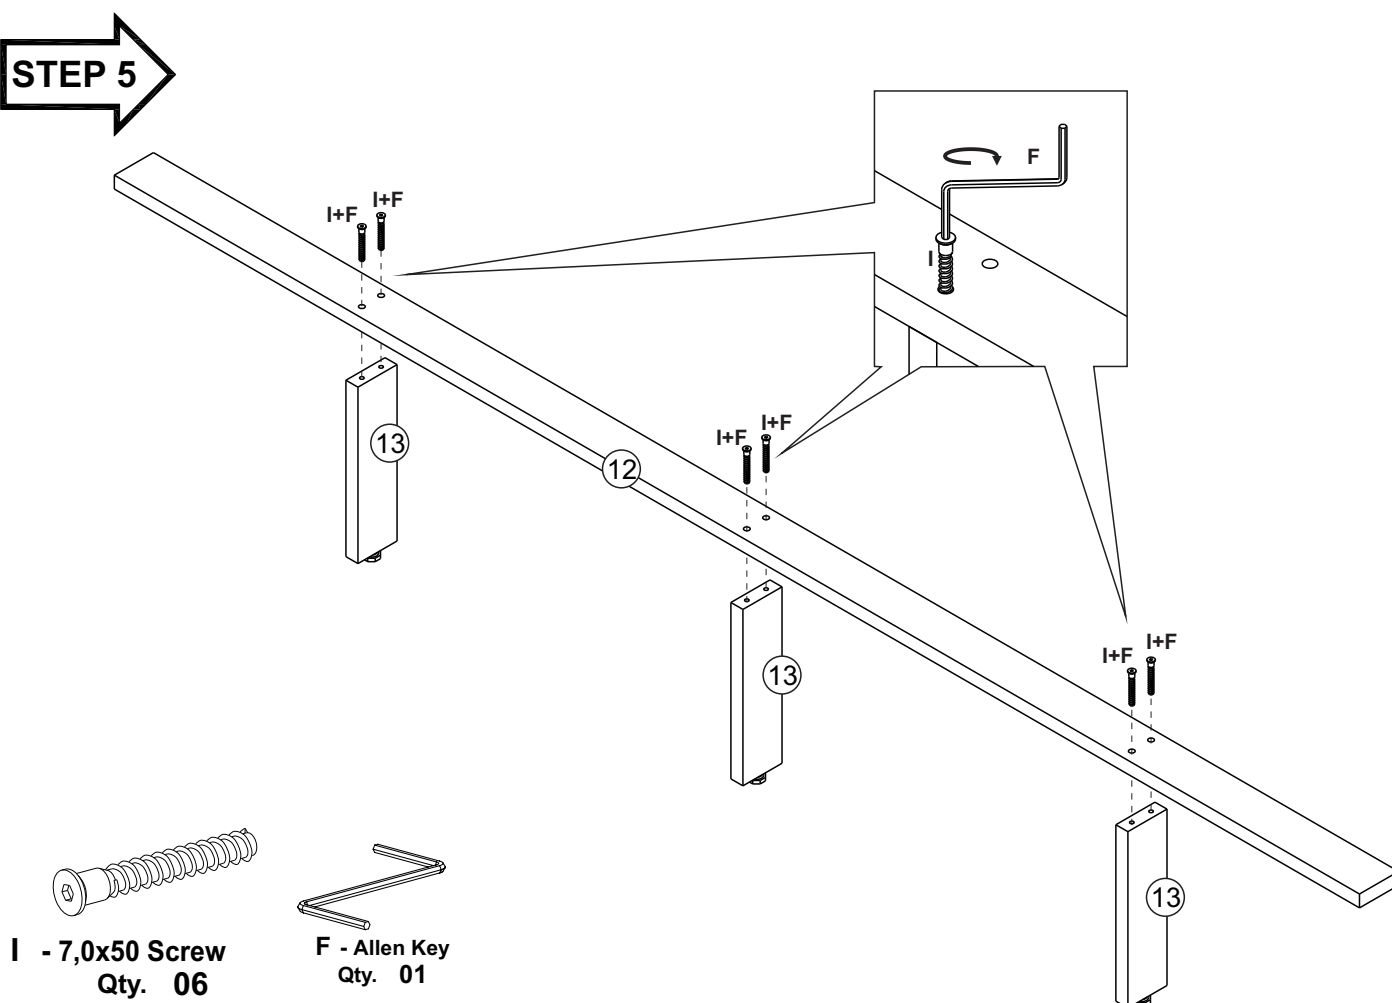


STEP 6

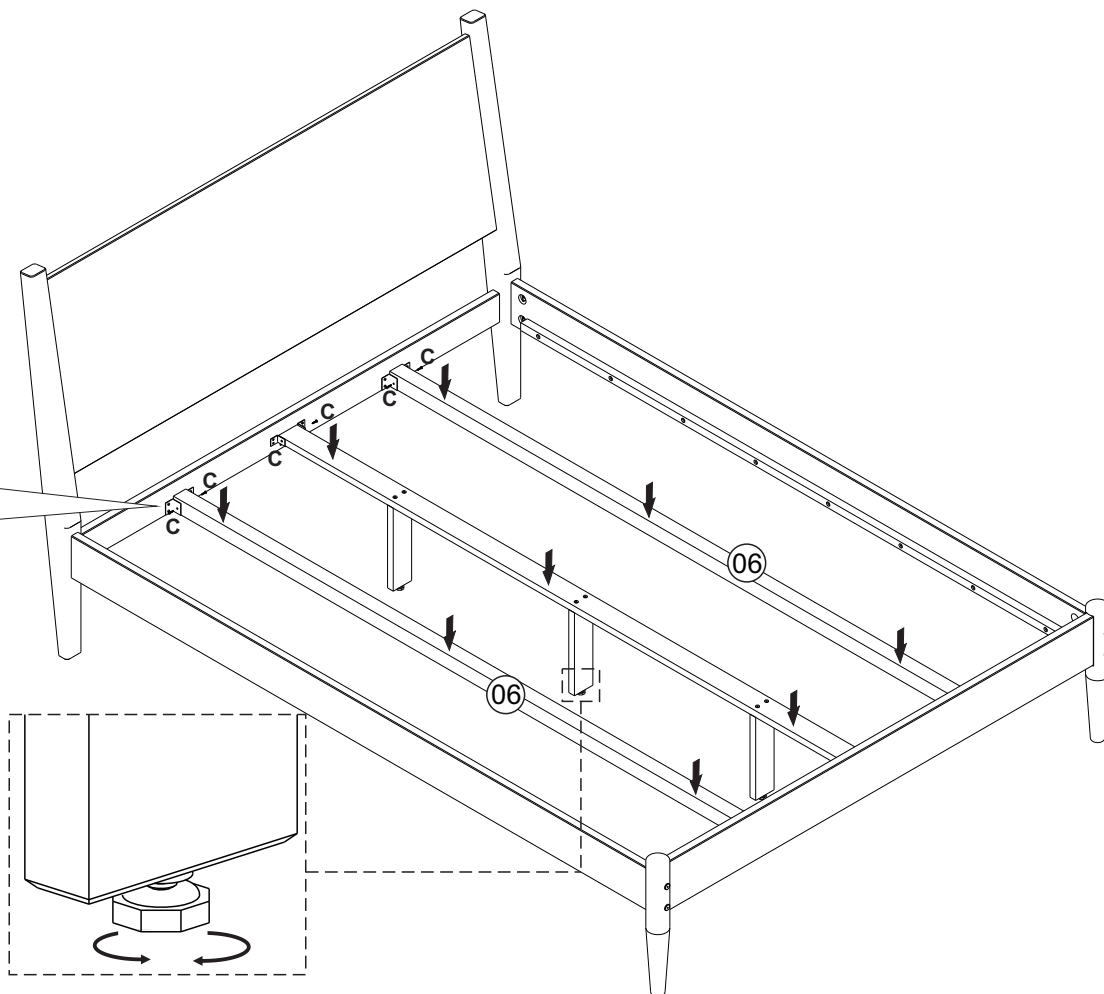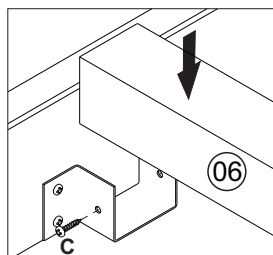


C - 3,5x16 Screw
Qty. 12

STEP 7

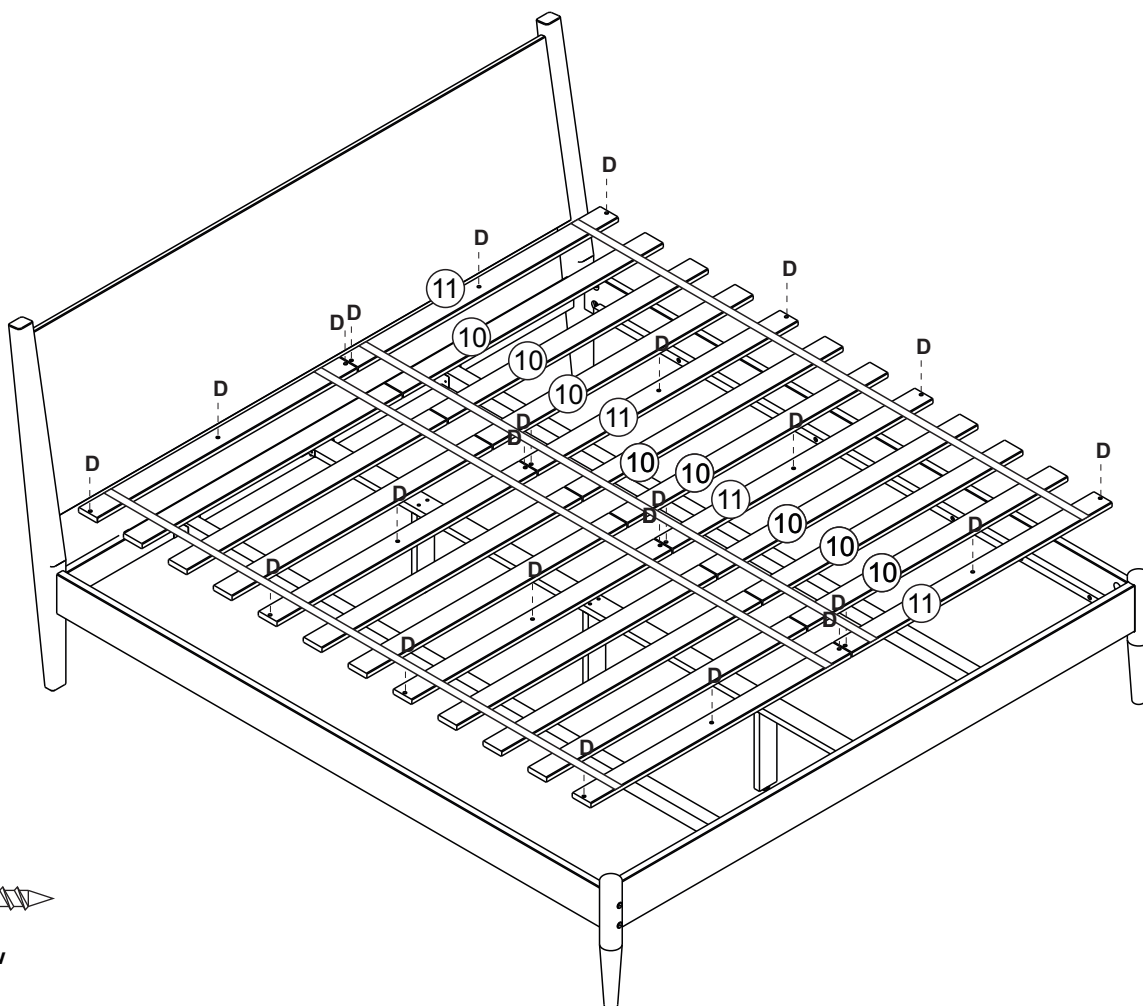

D - 3,5x30 Screw
Qty. 24

STEP 8

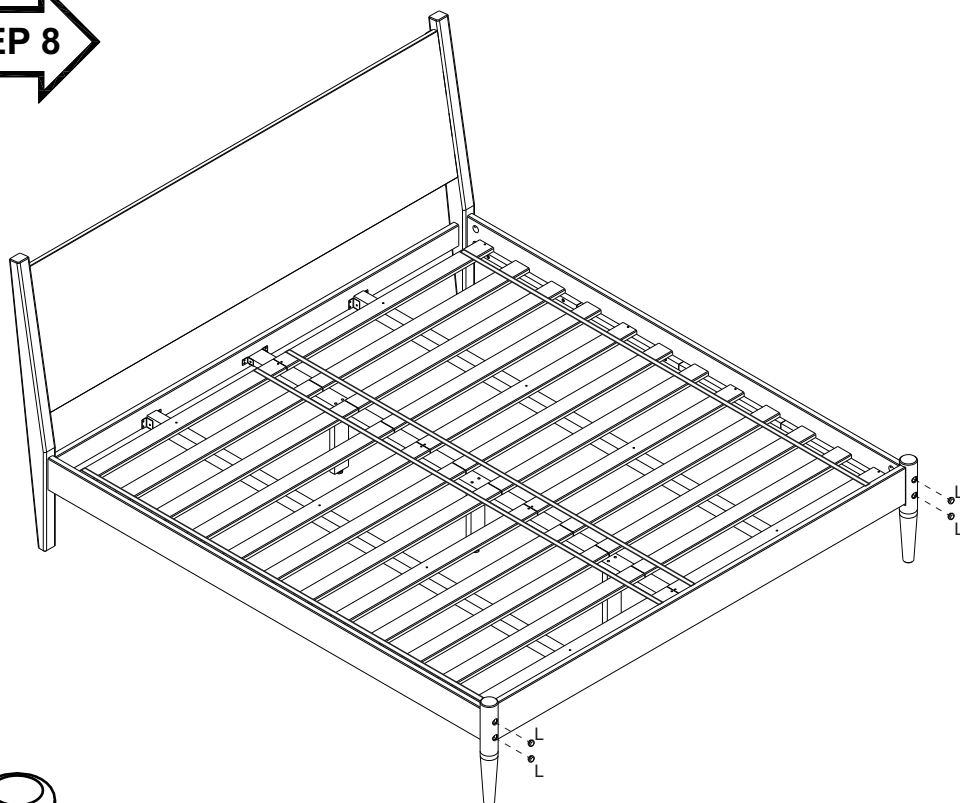

**L - Wood Hole
Cover - Qty. 04**

