





Affix Hooks | Posez les crochets | Fije los ganchos

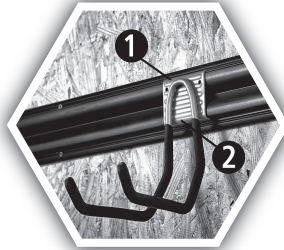

1. Snap the top lip onto the top groove.
1. Fixez la saillie supérieure à la rainure supérieure.
1. Coloque el reborde superior en la hendidura superior.
2. Snap the bottom lip onto the bottom groove.
2. Fixez la saillie inférieure à la rainure inférieure.
2. Coloque el reborde inferior en la hendidura inferior.

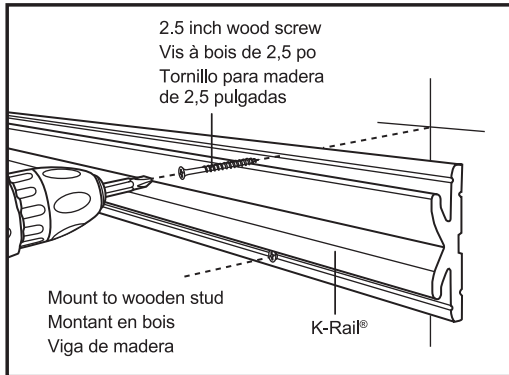

Wood Mount
Install with #12 K-Rail screws (item #0103681)

Concrete Mount
Install with flathead masonry screws

Fixation en bois
À installer à l'aide de vis K-Rail no 12 (article #0103681)

Installation sur surface de béton
À installer à l'aide de vis à tête plate de maçon

Montaje de madera
Instale con tornillos #12 para riel en forma de K (Artículo #0103681)

Montaje en concreto
Instale con tornillos de cabeza plana para mampostería

Warning:

1. DO NOT drill through electrical wiring during installation.
2. Always wear eye protection which complies with current ANSI Standards Z87.1.
3. Always disconnect power source before using tools on electrical boxes, fittings or any workpiece that may conduct electricity. Electric shock or electrocution could result.

Avertissement :

1. NE percez PAS le câblage électrique durant l'installation.
2. Portez toujours des lunettes de sécurité conformes aux normes ANSI Z87.1 en vigueur.
3. Débranchez toujours l'alimentation électrique avant d'utiliser des outils sur un coffret électrique, des raccords électriques ou toute pièce conductrice d'électricité. Vous pourriez subir un choc électrique ou être électrocuté.

Advertencia:

1. NO perforo el cableado eléctrico durante la instalación.
2. Use siempre lentes de protección que cumplan con los estándares actuales ANSI Z87.1.
3. Desconecte siempre la fuente de alimentación antes de usar herramientas para cajas o conectores eléctricos, o en piezas de trabajo que puedan conducir electricidad. Podría ocurrir una descarga eléctrica o electrocución.