

YMX-02



Armrest seat frame
with cushion(1)



Backrest(1)



Back cushion(1)



Sofa foot (4)

A

B



8*85 Screw(4)

C




M5*100*40 Wrench

D





16mm Gasket (4)


STEP 1: Insert the backrest into the
seat frame

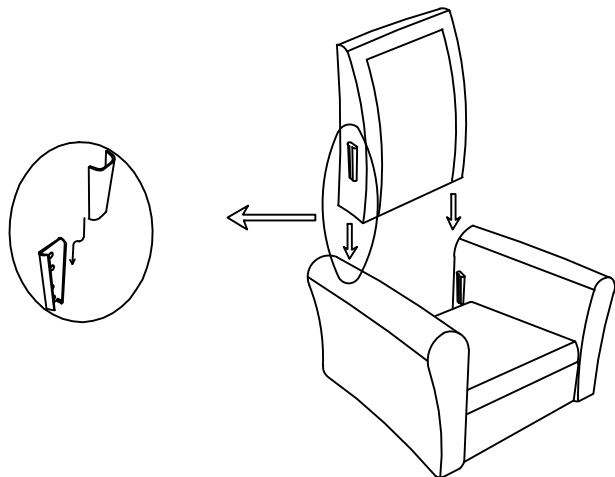


STEP 2: Turn over the sofa base and
install the sofa feet

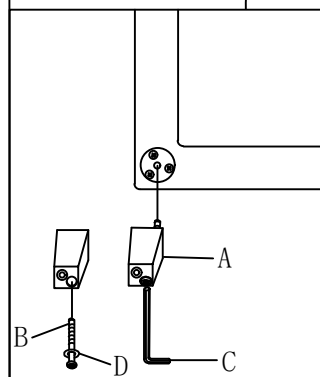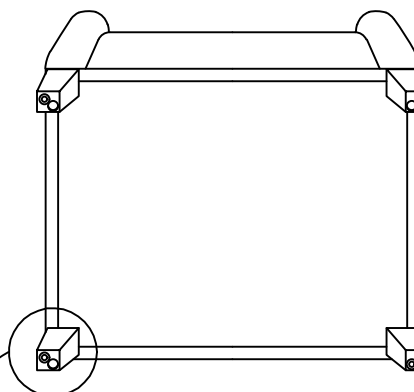

STEP 3: Put the back cushion on the sofa

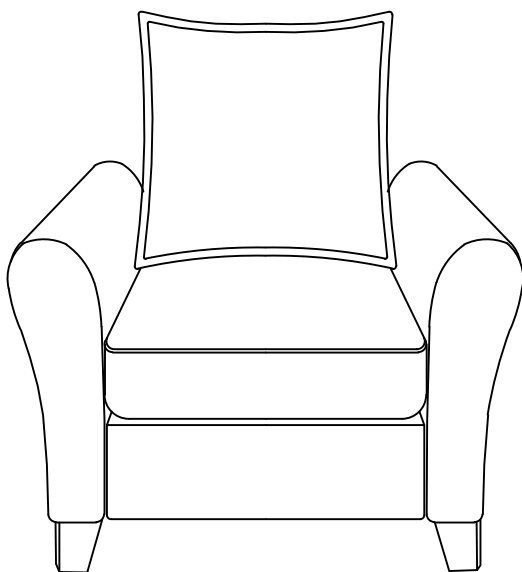

STEP 4: Assembly completed

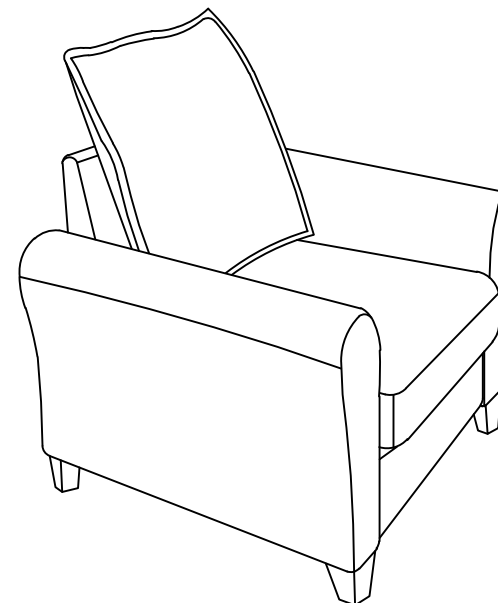

Customer Support E-mail Address: service-jarenie@hotmail.com