


# ASSEMBLY INSTRUCTION



## PATIO DAYBED

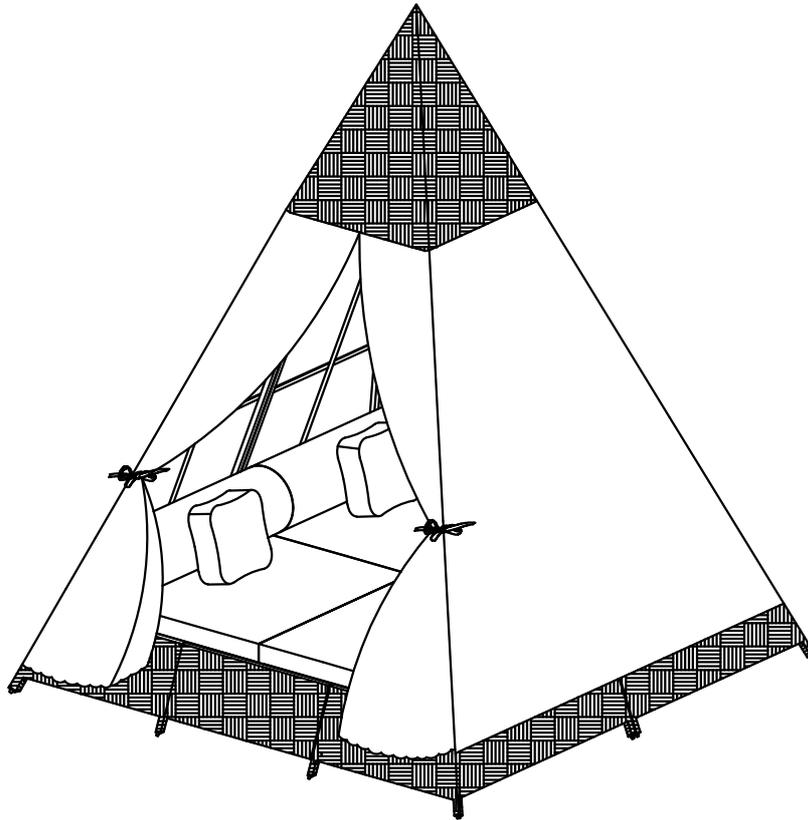
















**WF300793; WF300794**  
**WF300795; WF300796**

**Notice:**

1. 50% Tighten before fixing all screws, Allen wrench is recommended instead of an electric drill.
2. Place the item on a flat ground to adjust and make sure it remains stable.
3. Tighten up all screws with tools gradually.
4. If the screws are not aligned with holes during assembly, please loosen all the other screws to 50% and continue the assembly process.
5. If the item is not stable, please loosen all the screws, adjust it on a flat ground and tighten up all screws again.
6. Note : If one or some screws are fully tightened during assembly, chances are the others will not be aligned with holes. In addition, all the holes are designed to be relatively larger to provide more space for the adjustment of the screws.

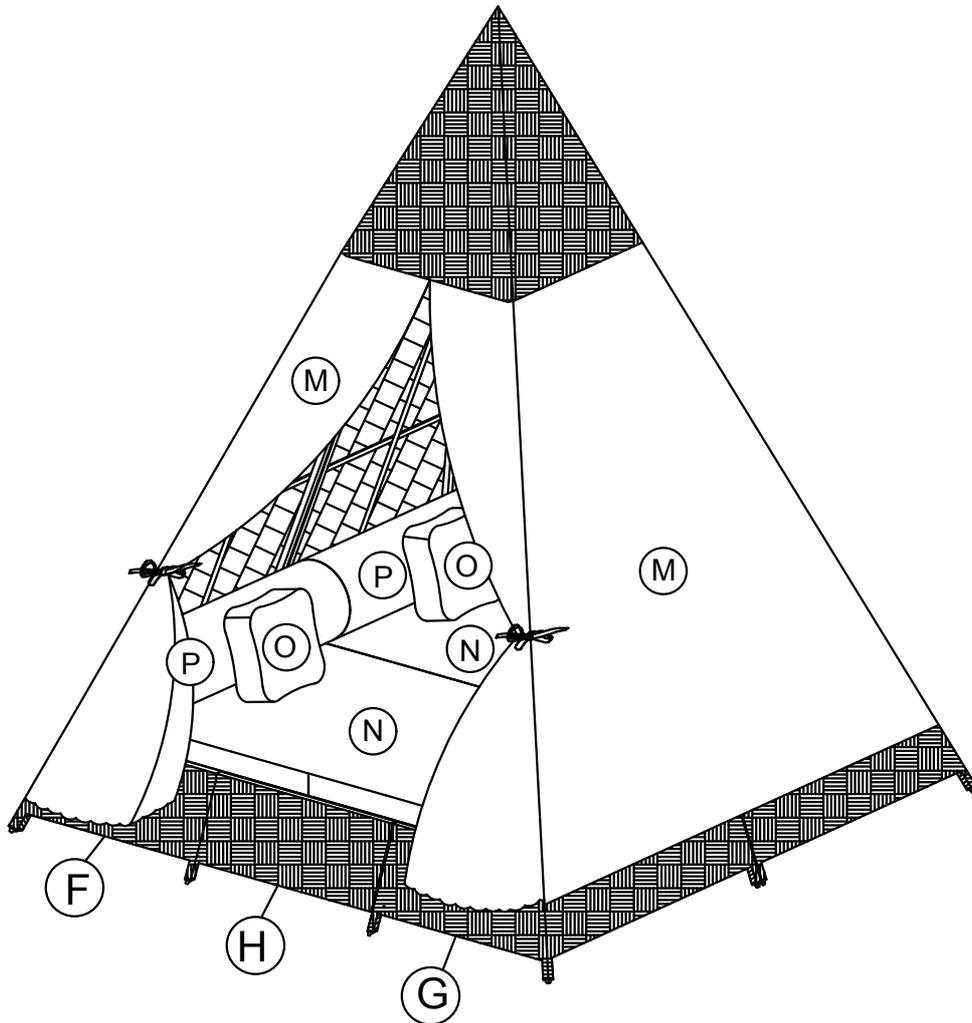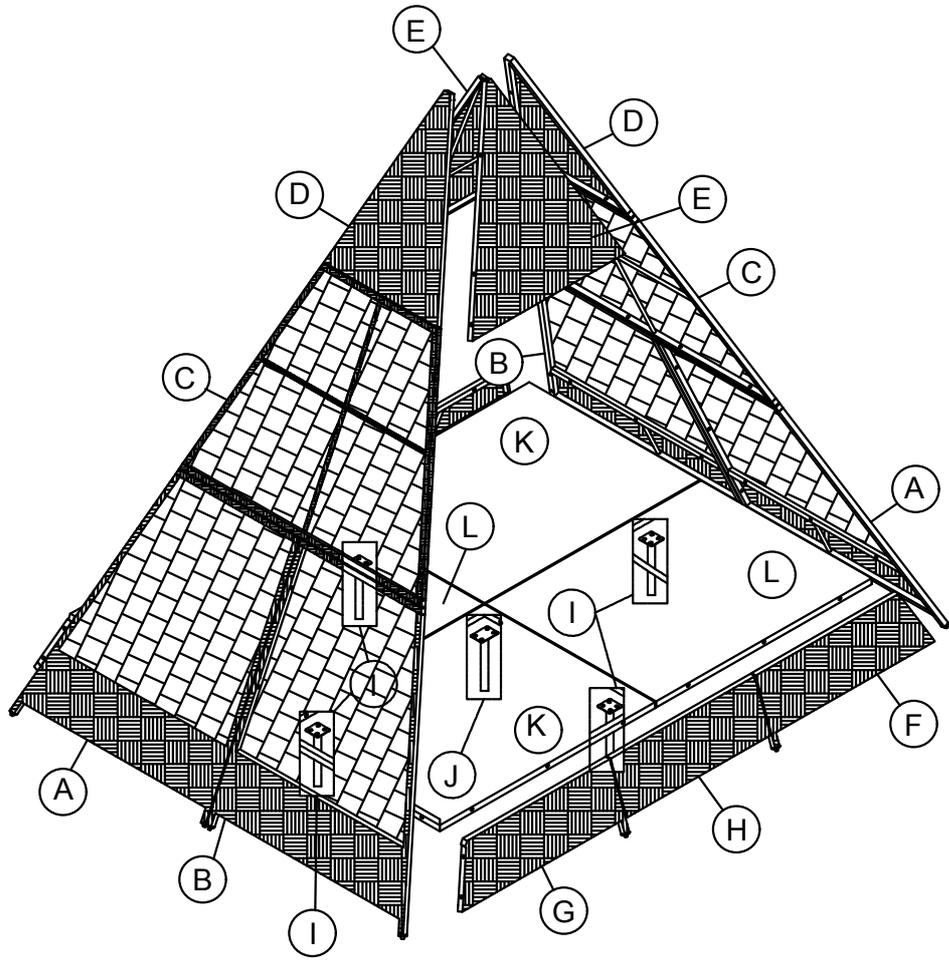

# Part List

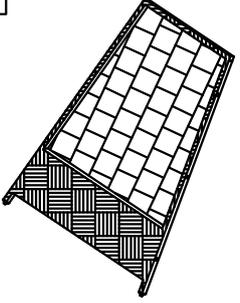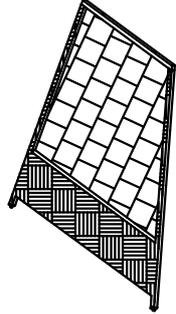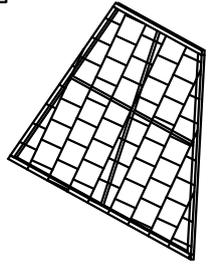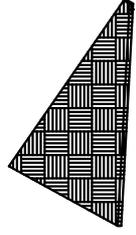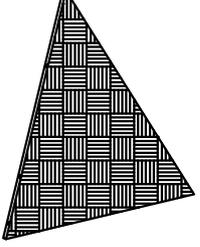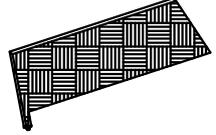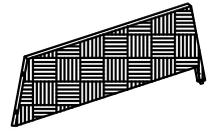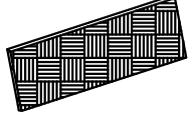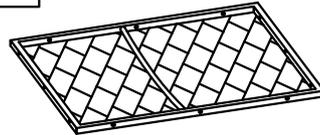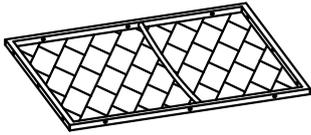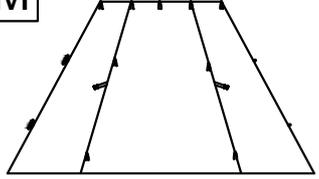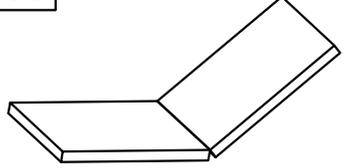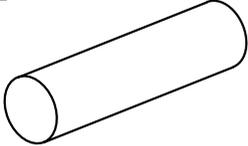
<p><b>A</b></p>  <p>Under Frame 1 (2 pcs)</p>	<p><b>B</b></p>  <p>Under Frame 2 (2 pcs)</p>	<p><b>C</b></p>  <p>Middle Frame (2 pcs)</p>	<p><b>D</b></p>  <p>Top Frame (2 pcs)</p>
<p><b>E</b></p>  <p>Support Frame (2 pcs)</p>	<p><b>F</b></p>  <p>Side Frame 1 (2 pcs)</p>	<p><b>G</b></p>  <p>Side Frame 2 (2 pcs)</p>	<p><b>H</b></p>  <p>Middle Side Frame (2 pcs)</p>
<p><b>I</b></p>  <p>Leg 1 (4 pcs)</p>	<p><b>J</b></p>  <p>Leg 2 (1 pc)</p>	<p><b>K</b></p>  <p>Seat Daybed Frame 1 (2 pcs)</p>	<p><b>L</b></p>  <p>Seat Daybed Frame 2 (2 pcs)</p>
<p><b>M</b></p>  <p>Daybed Curtain (2 pcs)</p>	<p><b>N</b></p>  <p>Seat Cushion (2 pcs)</p>	<p><b>O</b></p>  <p>Pillow Cushion 1 (2 pcs)</p>	<p><b>P</b></p>  <p>Pillow Cushion 2 (2 pcs)</p>

# Hardware

<p><b>1</b></p>  <p>Extra (01 pc) Bolt M6x70 (12 pcs)</p>	<p><b>2</b></p>  <p>Extra (01 pc) Bolt M6x60 (6 pcs)</p>	<p><b>3</b></p>  <p>Extra (02 pcs) Bolt M6x40 (36 pcs)</p>	<p><b>4</b></p>  <p>Extra (02 pcs) Bolt M6x30 (28 pcs)</p>
<p><b>5</b></p>  <p>Extra (02 pcs) Bolt M6x20 (20 pcs)</p>	<p><b>6</b></p>  <p>Extra (06 pcs) Washer M6 (120 pcs)</p> <p><b>7</b></p>  <p>Extra (01 pc) Nut (18 pcs)</p>	<p><b>8</b></p>  <p>Key (01 pc)</p>	<p><b>9</b></p>  <p>Allen Key (02 pcs)</p>

WF300793

CARTON CONTENT:

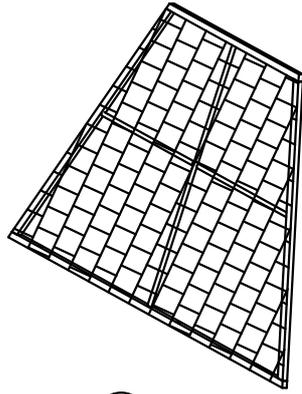


(C) x2




Hardware


WF300794

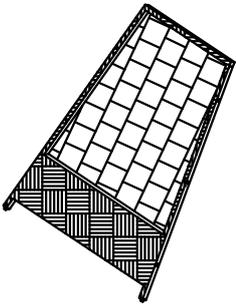


(A) x2

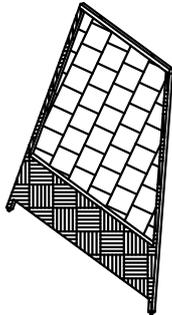

(B) x2

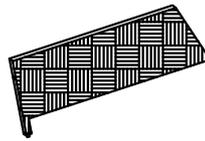


(F) x2

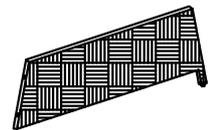


(G) x2

WF300795

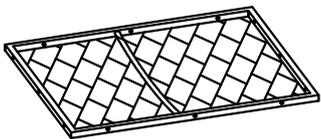


(K) x2

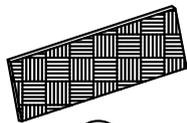


(H) x2




(O) x2




(I) x4




(J) x1

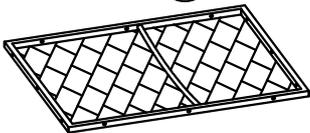


(L) x2

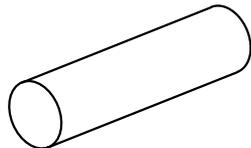

(P) x2

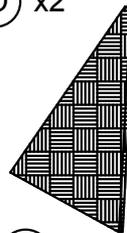


(D) x2

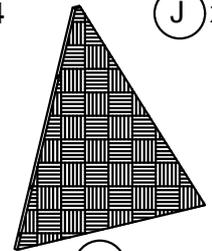


(E) x2

WF300796

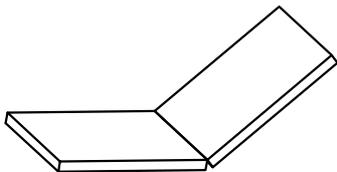

(N) x2

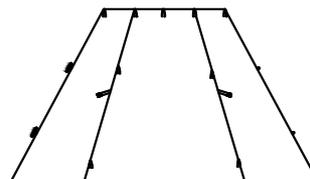

(M) x2

# STEP 1


K x2

L x2

① x12

⑥ x24

⑦ x12

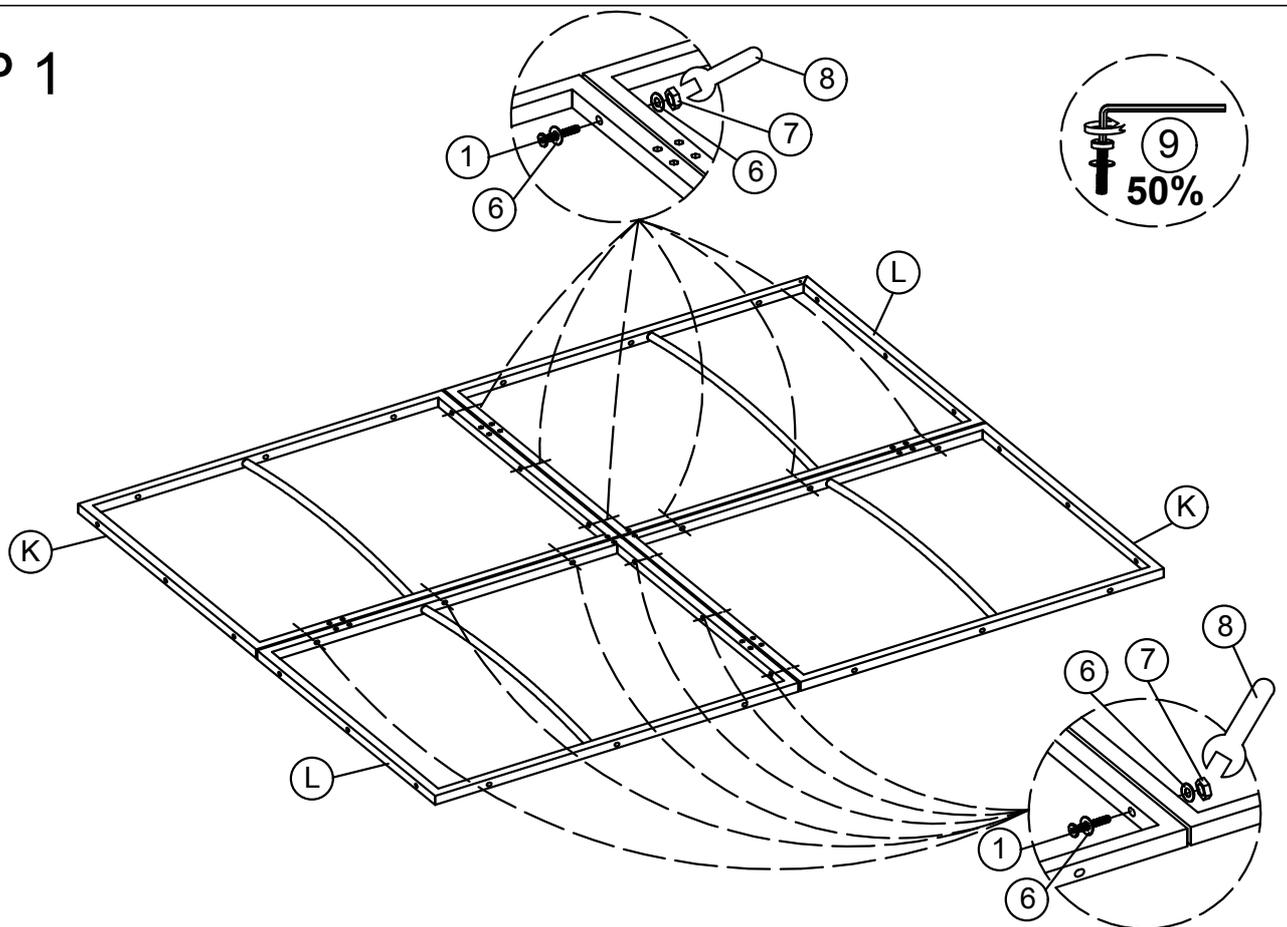

Connect Seat Daybed Frame 1 (K) & Seat Daybed Frame 2 (L) with Bolt (1), washer (6), Nut (7), Key (8), Allen Key (9).


# STEP 2

I x4

J x1

⑤ x20

⑥ x20

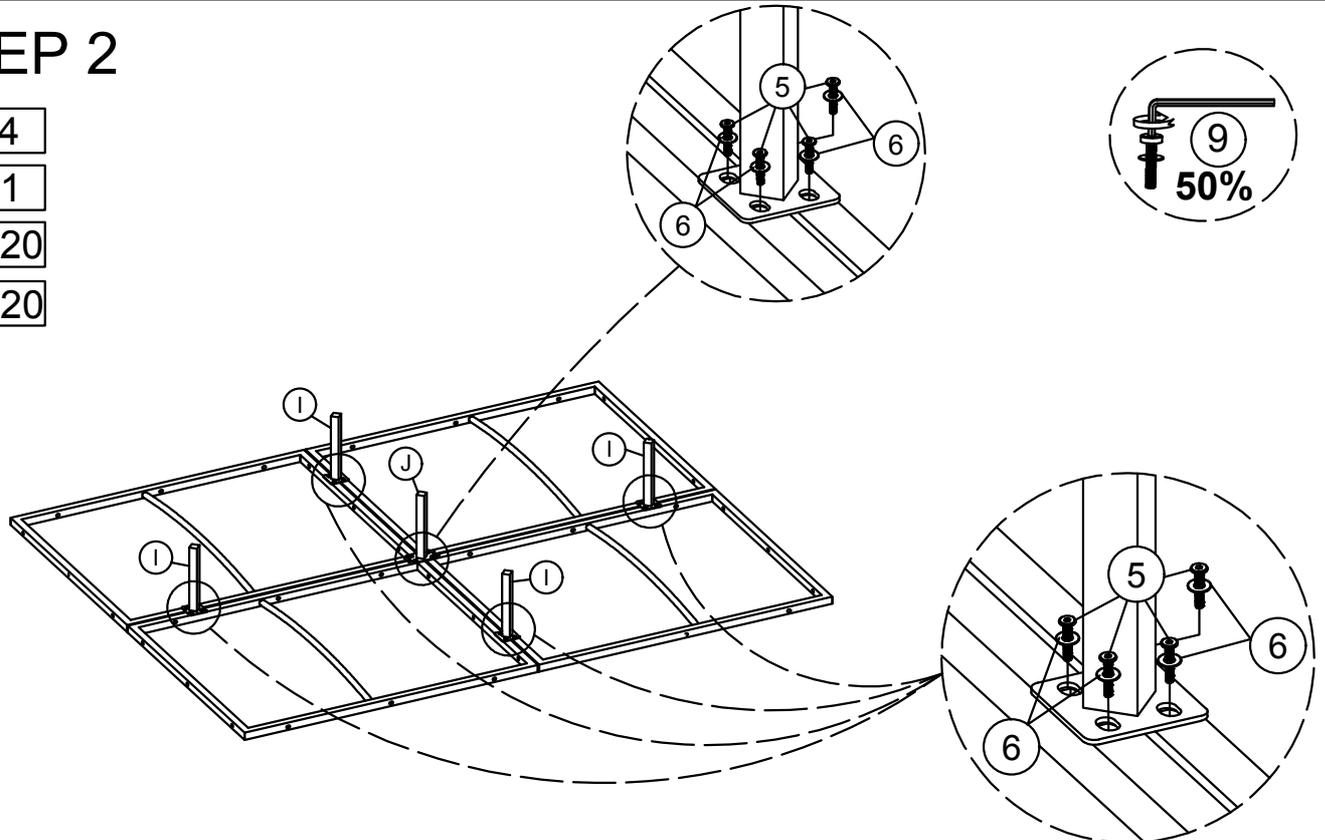

Connect the Part from Step 1 & Leg 1 (I), Leg 2 (J) with Bolt (5), washer (6), Allen Key (9).

## STEP 3

A x1

B x1


C x1

② x3

③ x4

⑥ x10

⑦ x3

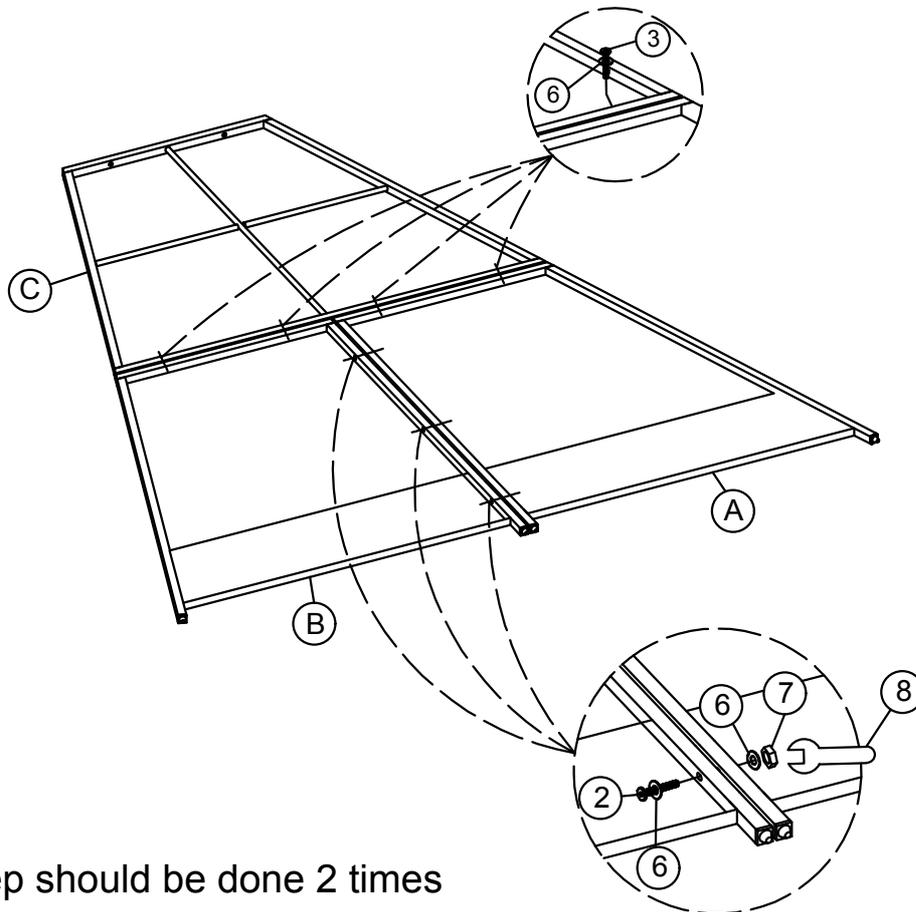

Notice :This step should be done 2 times

x2

Connect Under Frame 1 (A) & Under Frame 2 (B), Middle Frame (C) with Bolt (2), (3) washer (6), Nut (7), Key (8), Allen Key (9).


## STEP 4

D x2

E x2

④ x8


⑥ x8

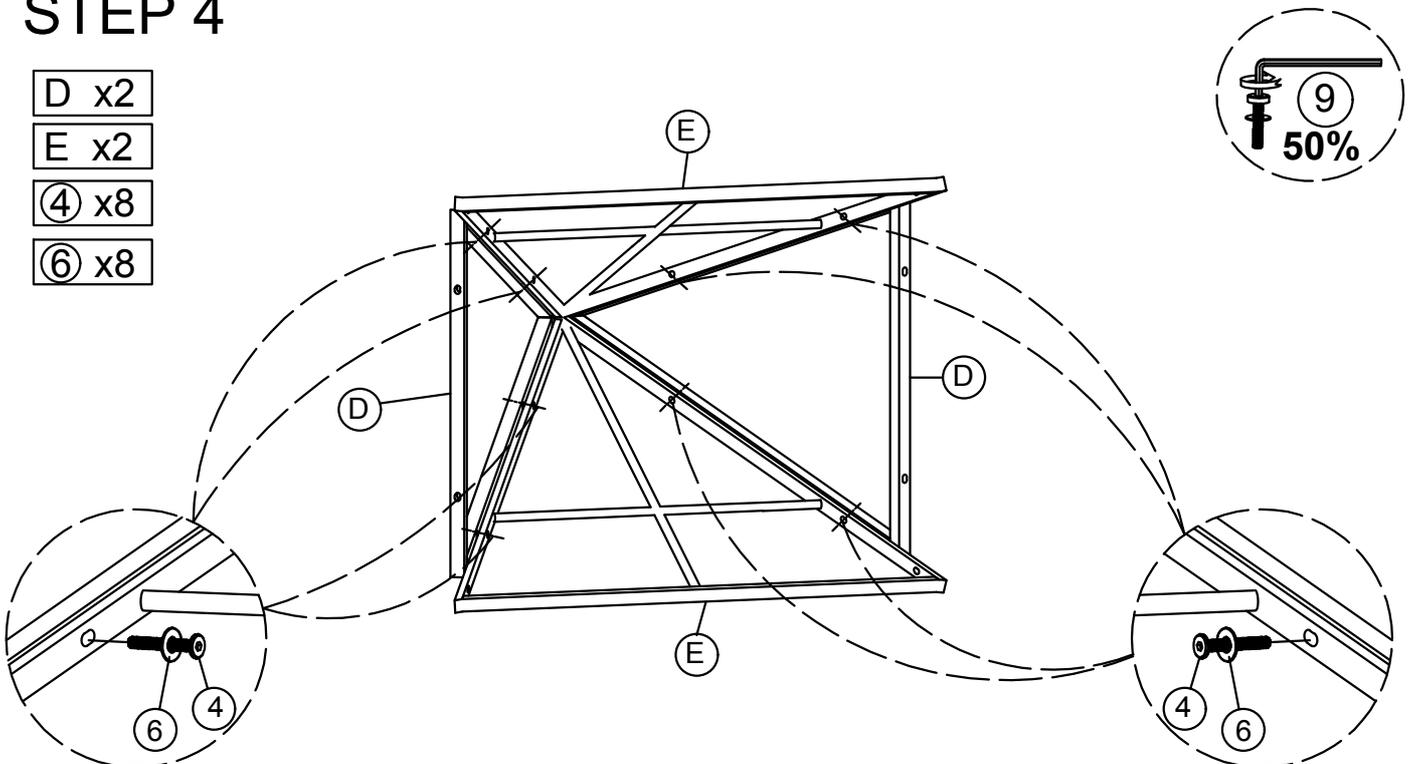

Connect Top Frame (D) & Support Frame 2 (E), with Bolt (4), washer (6), Allen Key (9).

## STEP 5


- F x1
- G x1
- H x1
- ③ x6
- ④ x4
- ⑥ x10

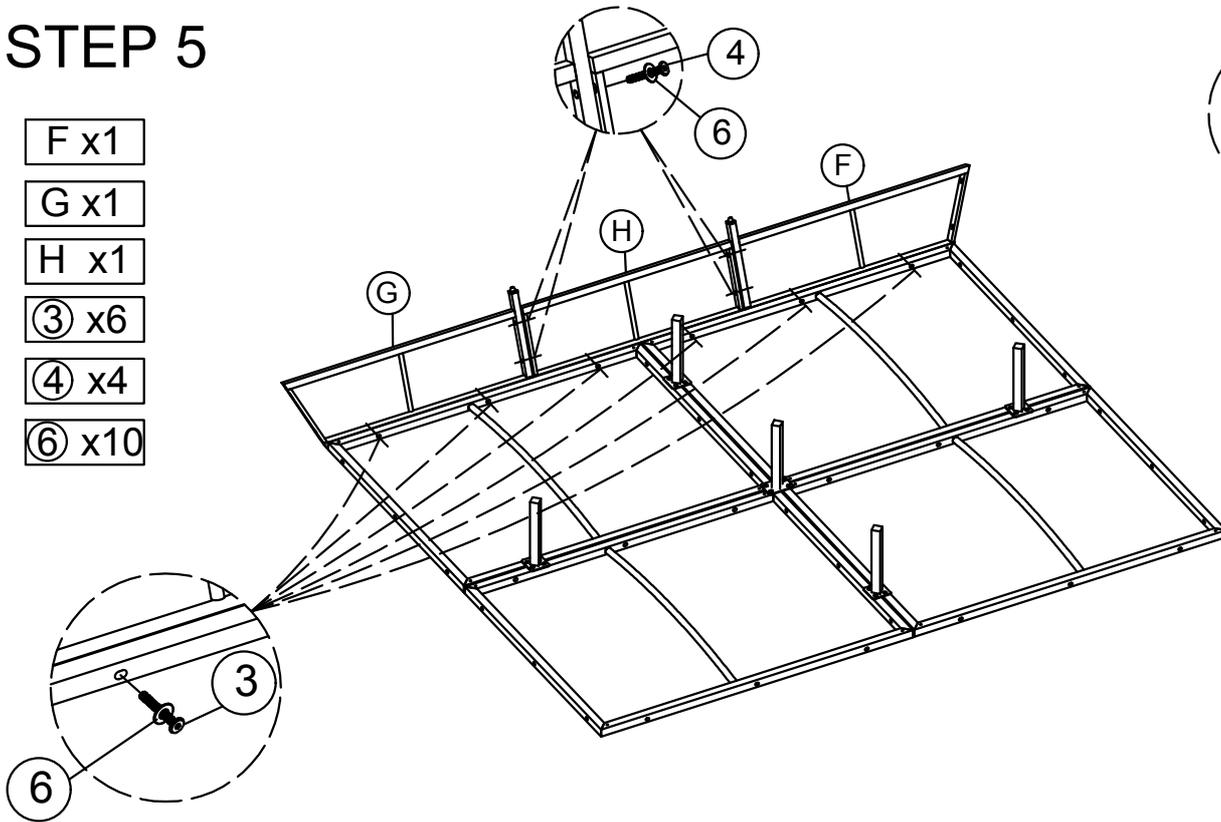

Connect the Part from Step 2 & Side Frame 1 (F), Side Frame 2 (G), Middle Side Frame (H), with Bolt (3),(4), washer (6), Allen Key (9).

## STEP 6

- F x1
- G x1
- H x1
- ③ x6
- ④ x4
- ⑥ x10

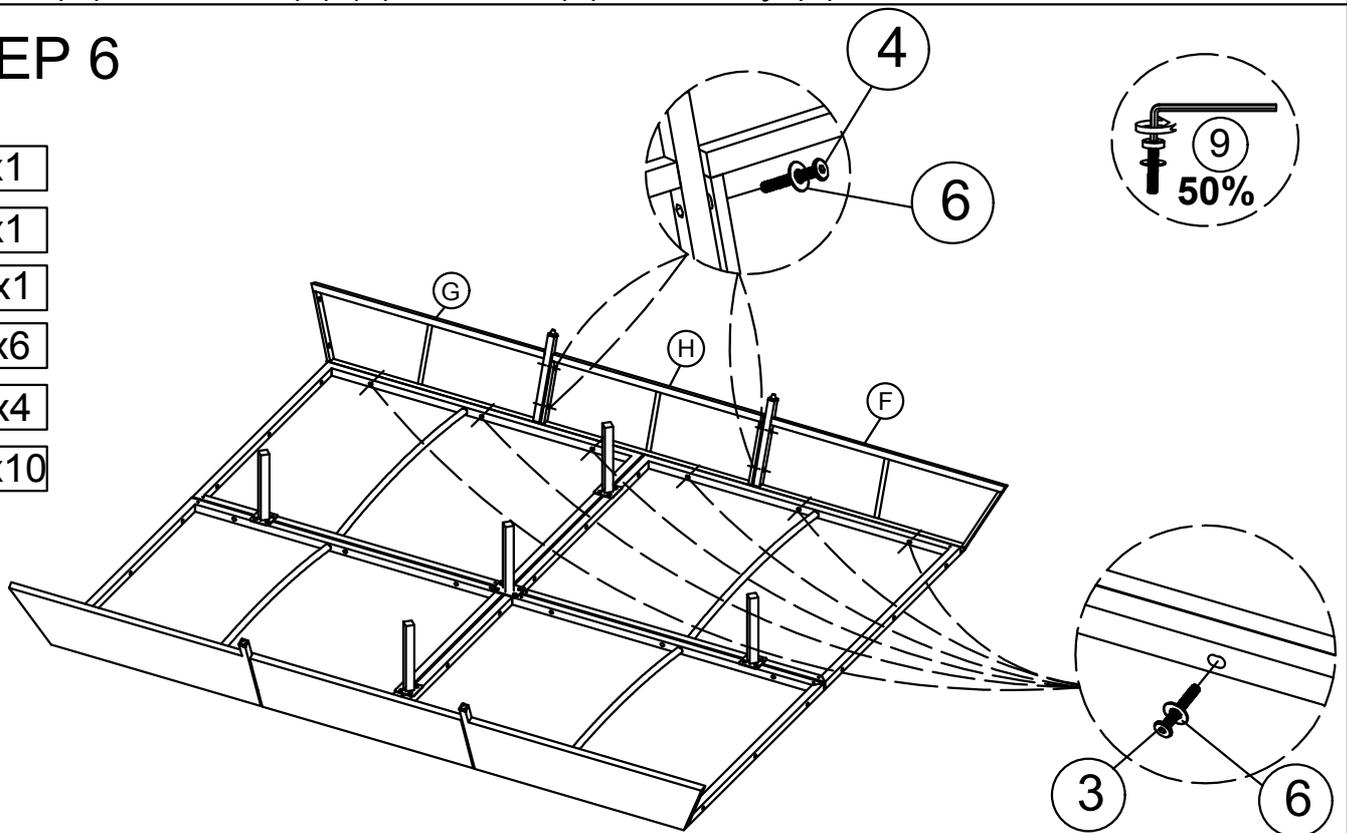


Connect the Part from Step 5 & Side Frame 1 (F), Side Frame 2 (G), Middle Side Frame (H), with Bolt (3),(4), washer (6), Allen Key (9).

# STEP 7

③ x6

④ x4

⑥ x10

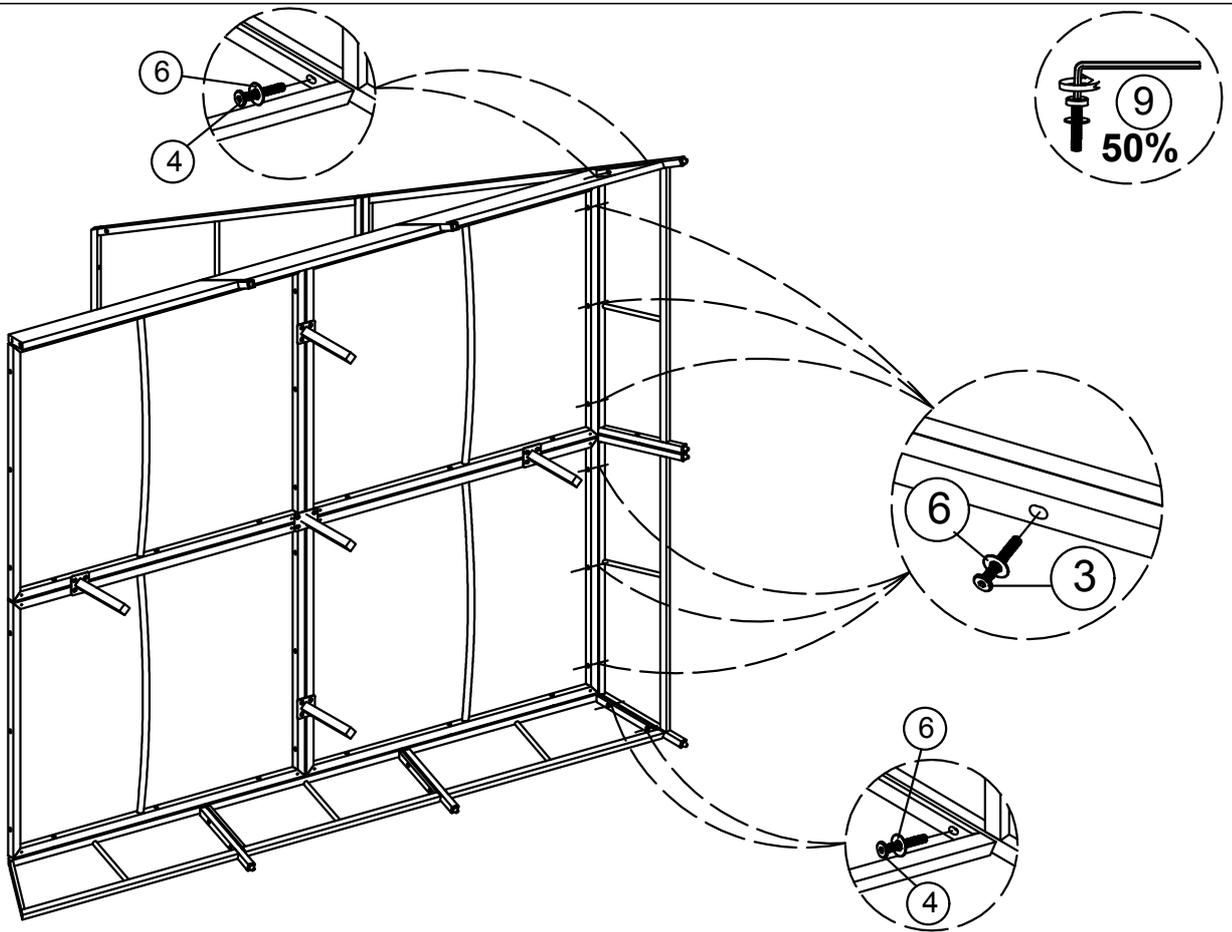


Connect the Part from Step 6 & Step 3, with Bolt (3),(4), washer (6), Allen Key (9).

# STEP 8

③ x6

④ x4

⑥ x10

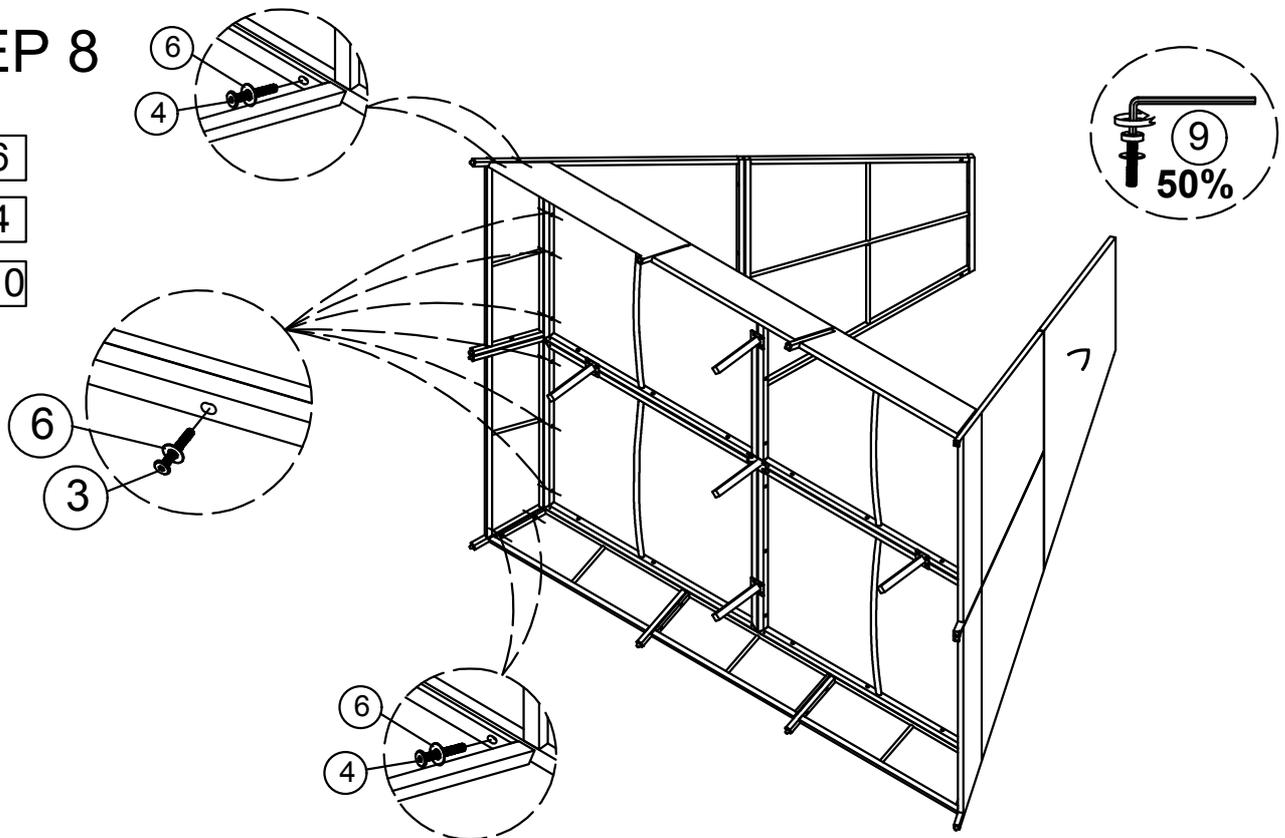


Connect the Part from Step 7 & Step 3, with Bolt (3),(4), washer (6), Allen Key (9).

## STEP 9

③ x4

④ x4

⑥ x8

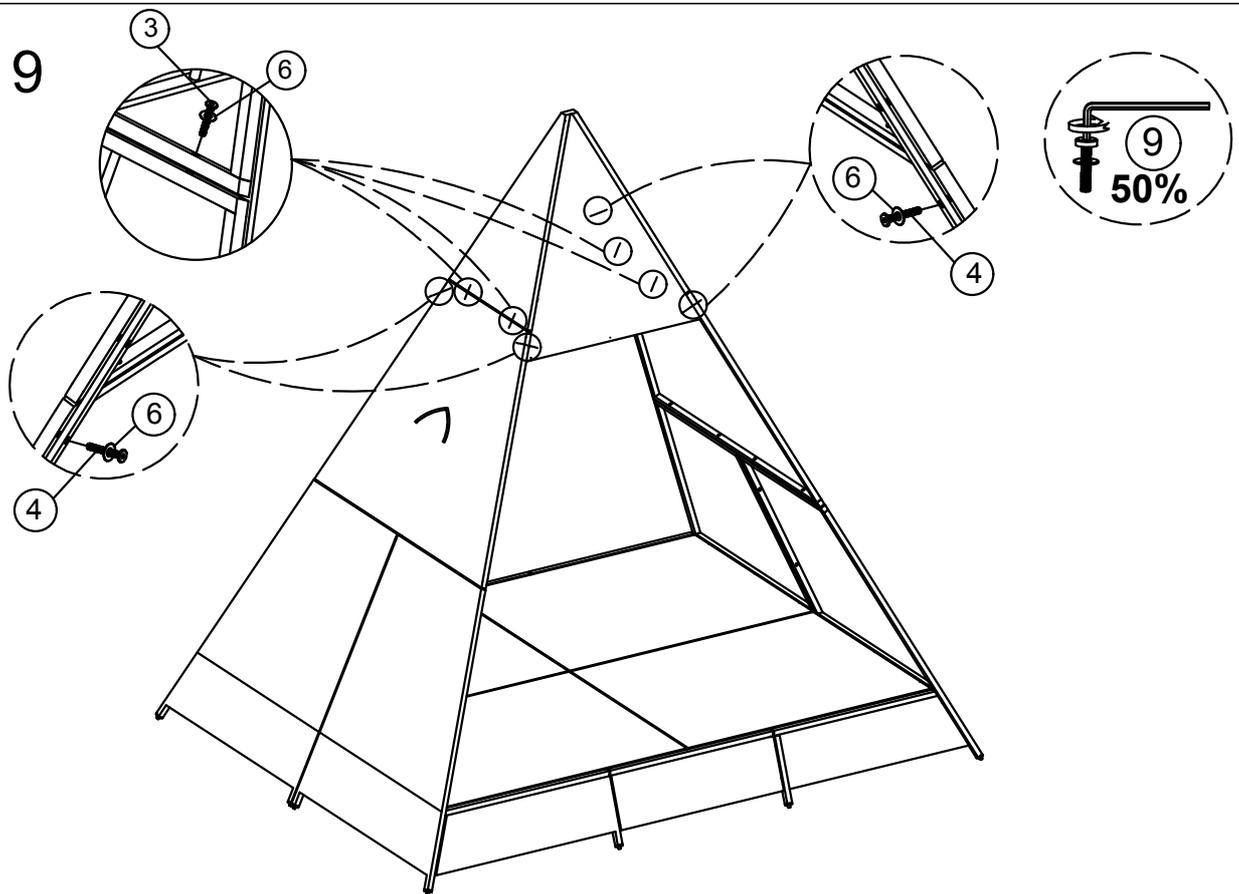


Connect the Part from Step 8 & Step 4, with Bolt (3),(4), washer (6),Allen Key (9).

## STEP 10

N x2

O x2



P x2

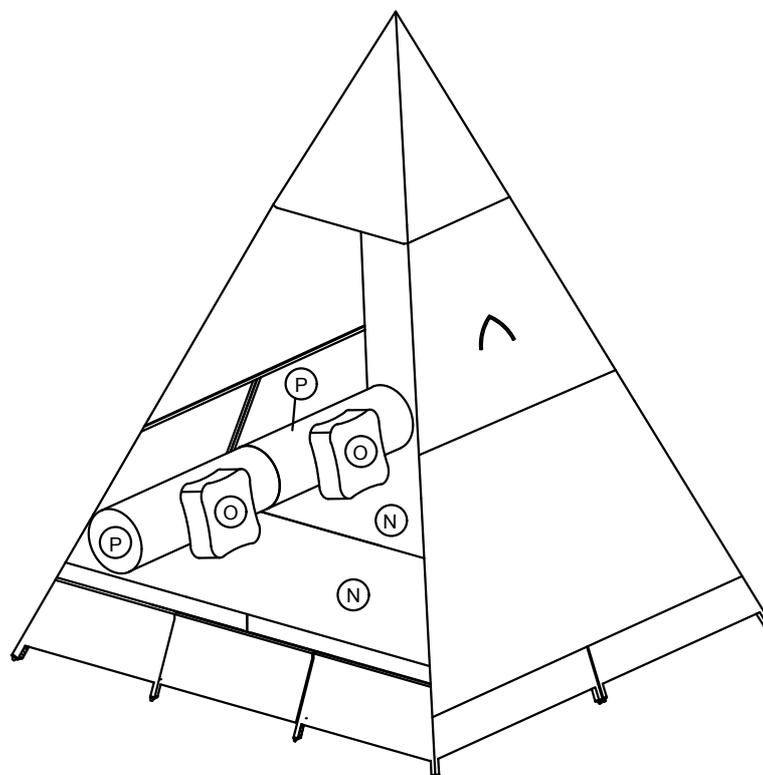



Put the Seat Cushion (N), Pillow Cushion 1 (O), Pillow Cushion 1 (P) on the Seat Daybed.

# STEP 11

M x2

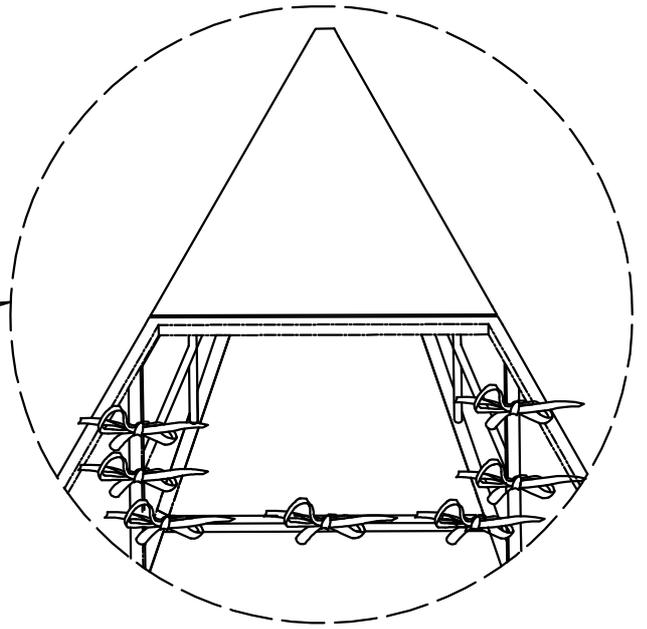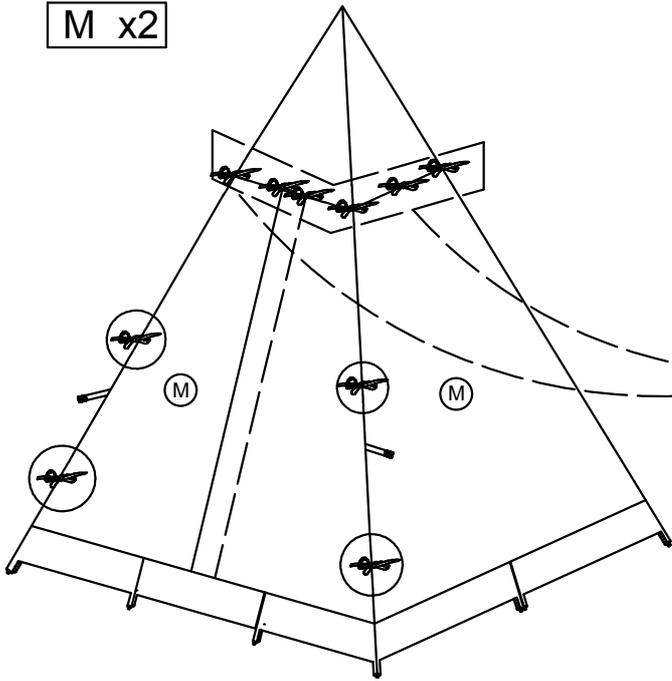


FRONT

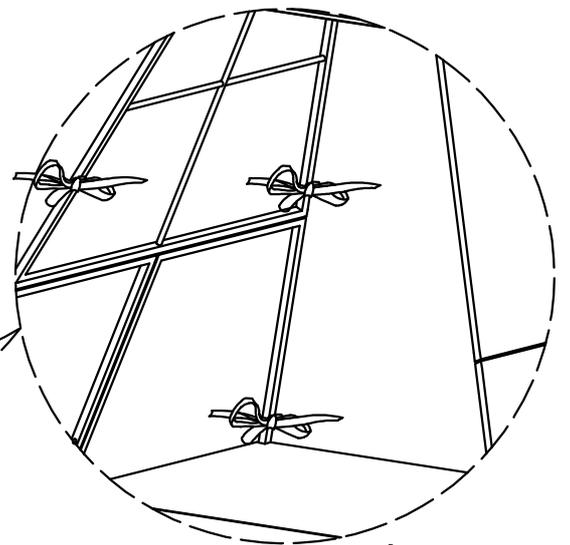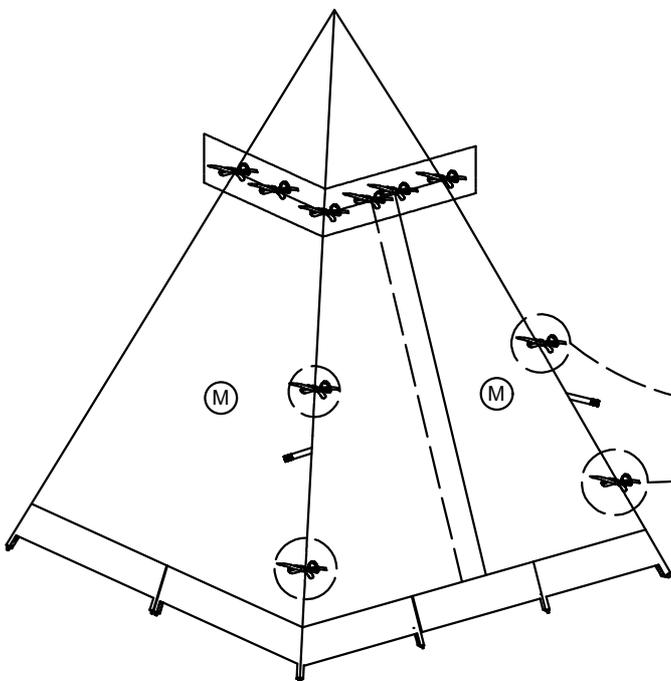


BEHIND

Connect the Part from Step 10 & Daybed Curtain (M) to Finish .

# OPTION 1

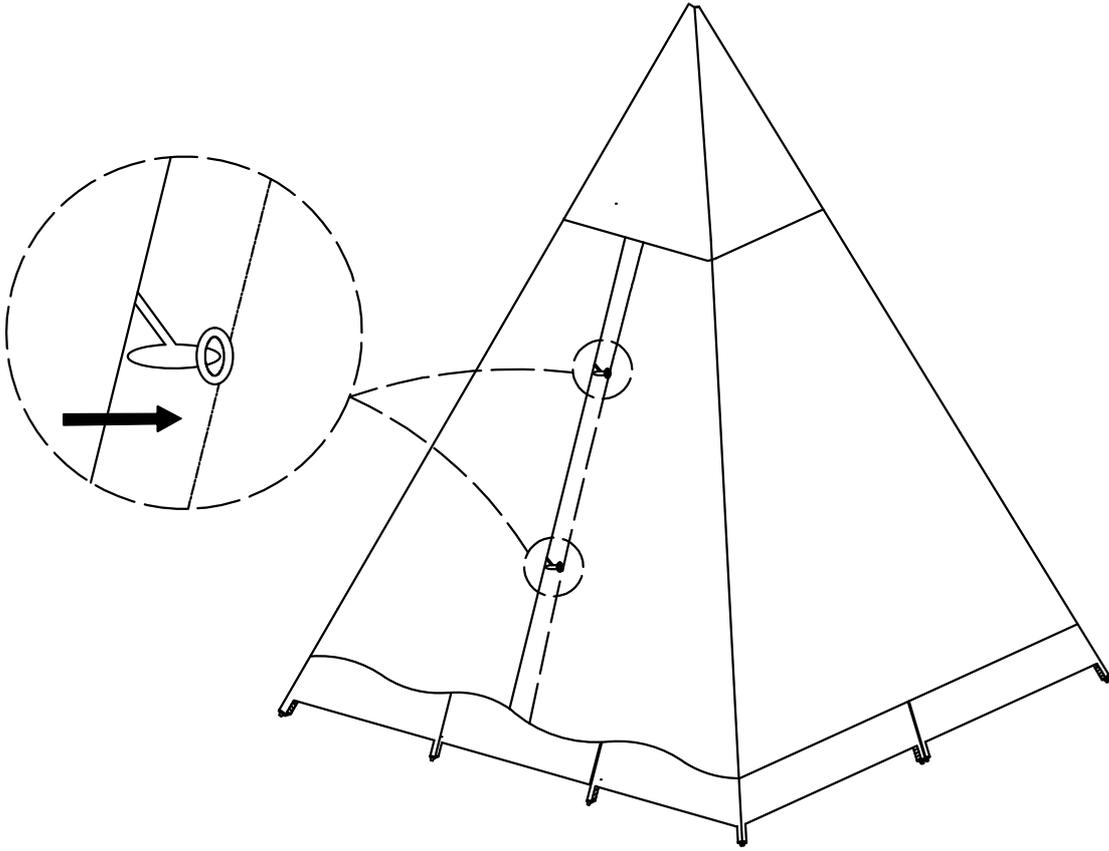

# OPTION 2

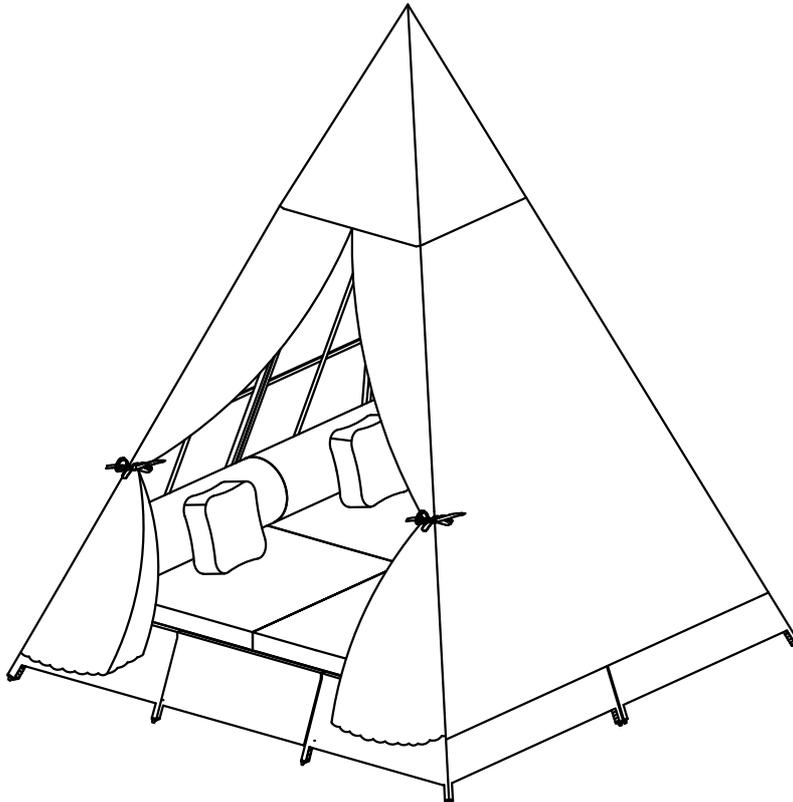

# OPTION 3

