


ASSEMBLY INSTRUCTION


PATIO CHAISE LOUNGE

If you have any questions, please feel free to contact us.
Email: lowesteam@aminalife.com

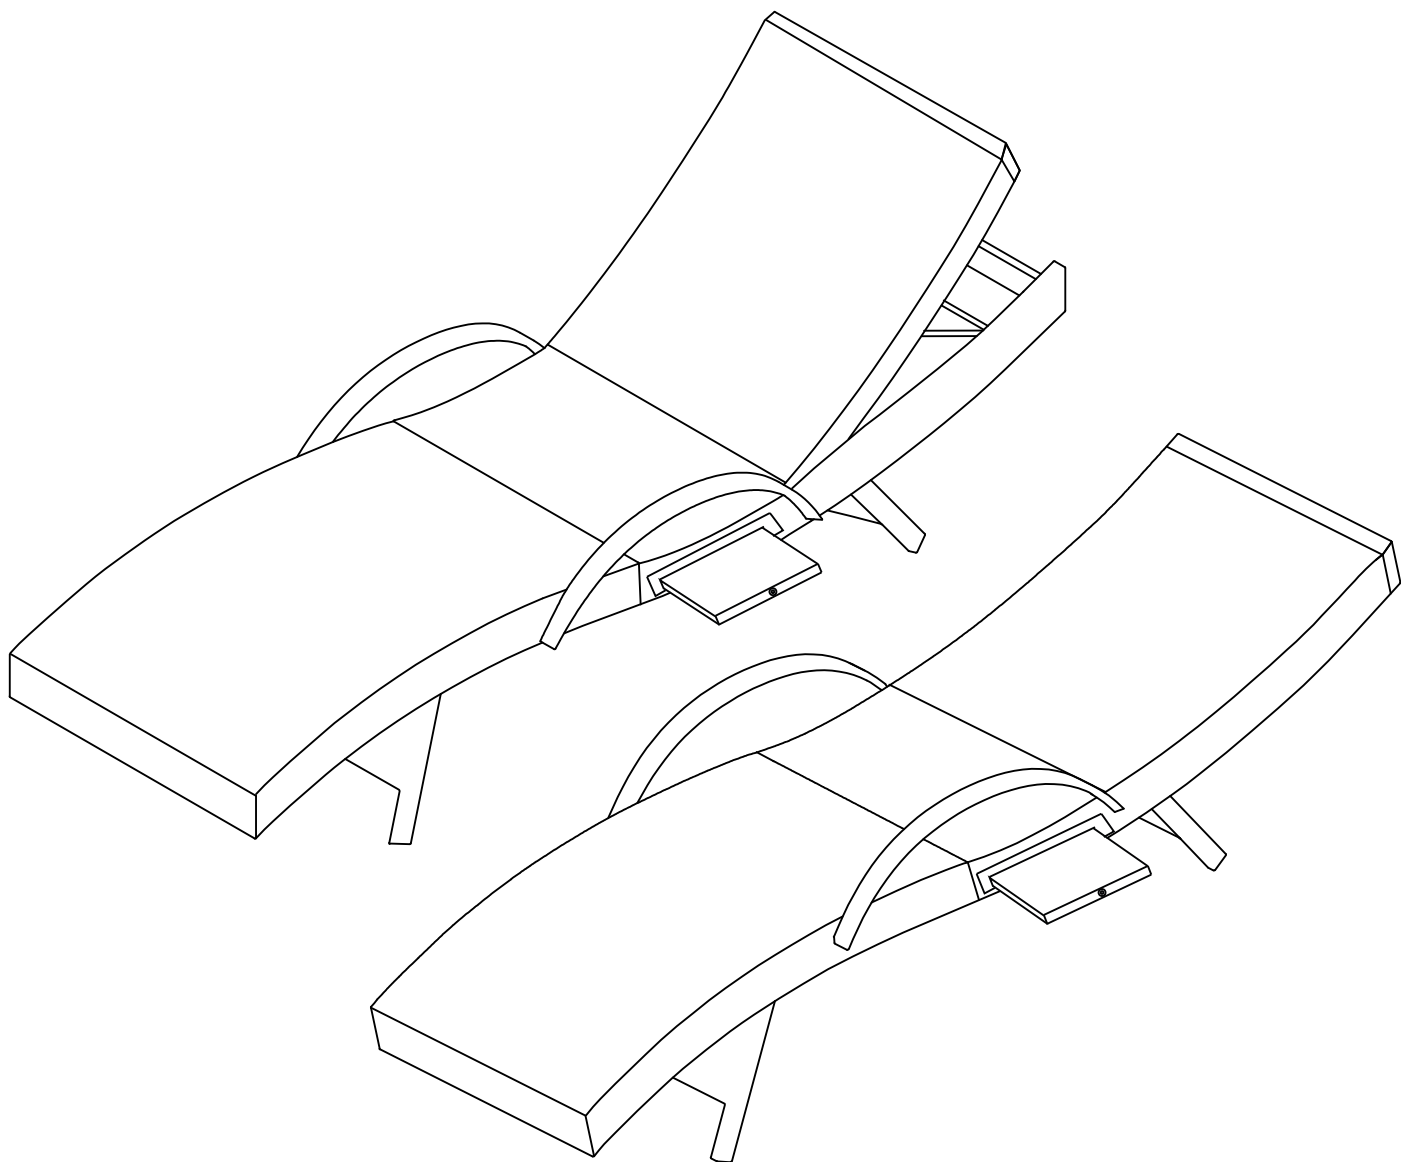

WF321204


x2

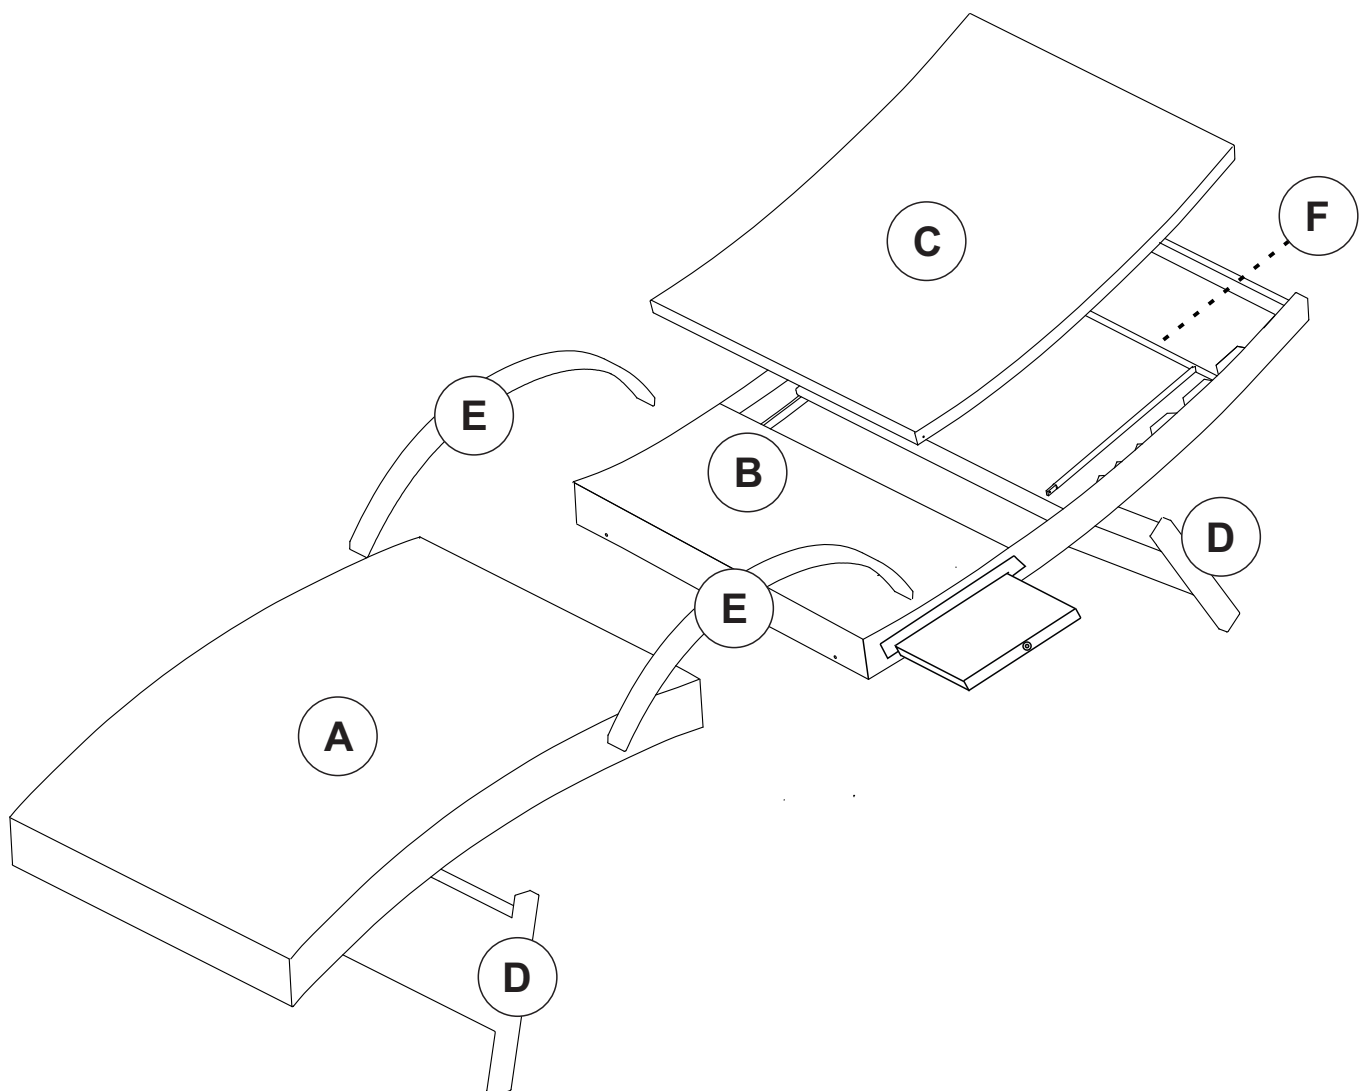


Note:

1. 50% Tighten before fixing all screws, Allen wrench is recommended instead of an electric drill.
2. Place the item on a flat ground to adjust and make sure it remains stable.
3. Tighten up all screw with tools gradually.
4. If screw are not aligned with holes during assembly, please loosen all the other screws to 50% and continue the assembly process.
5. If the item is not stable, please loosen all screws, adjust it on a flat ground and tighten up all screws again.
6. Note: If one or some screws are fully tighten during assembly, chances are the others will not be aligned with holes. In addition, all the holes are designed to be relativey larger to provide more space for the adjustment of the screws.


CARTON CONTENT:

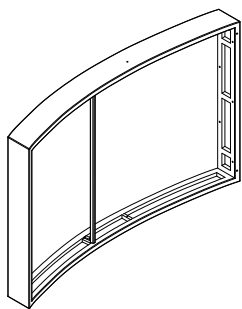


A x2

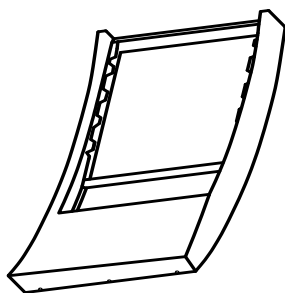


B x2

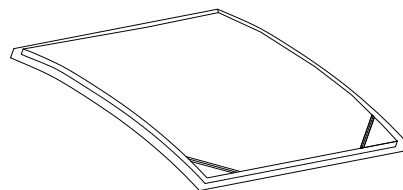


C x2

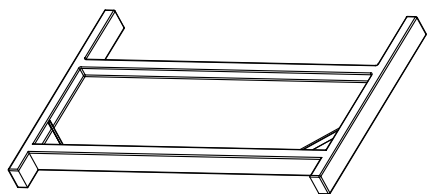


D x4

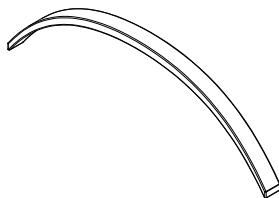

E x4



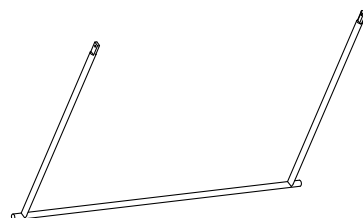


F x2

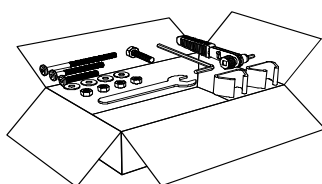

Hardware

Hardware List:


1 x6  BOLT M8 x 65MM	2 x4  BOLT M8 x 45MM	3 x12  BOLT M8 x 40MM
4 x8  BOLT M6 x 60MM	5 x20  BOLT M6 x 20MM	6 x4  PLASTIC WASHER 5MM
7 x28  WASHER M8	8 x32  WASHER M6	9 x6  NUTS M8
10 x4  NUTS M6	11 x4  PART I SHORT	12 x2  ALLENKEY
13 x1  WRENCH M8	14 x1  WRENCH M6	

STEP 1

x2



- ① x6
- ② x4
- ⑦ x16
- ⑨ x6

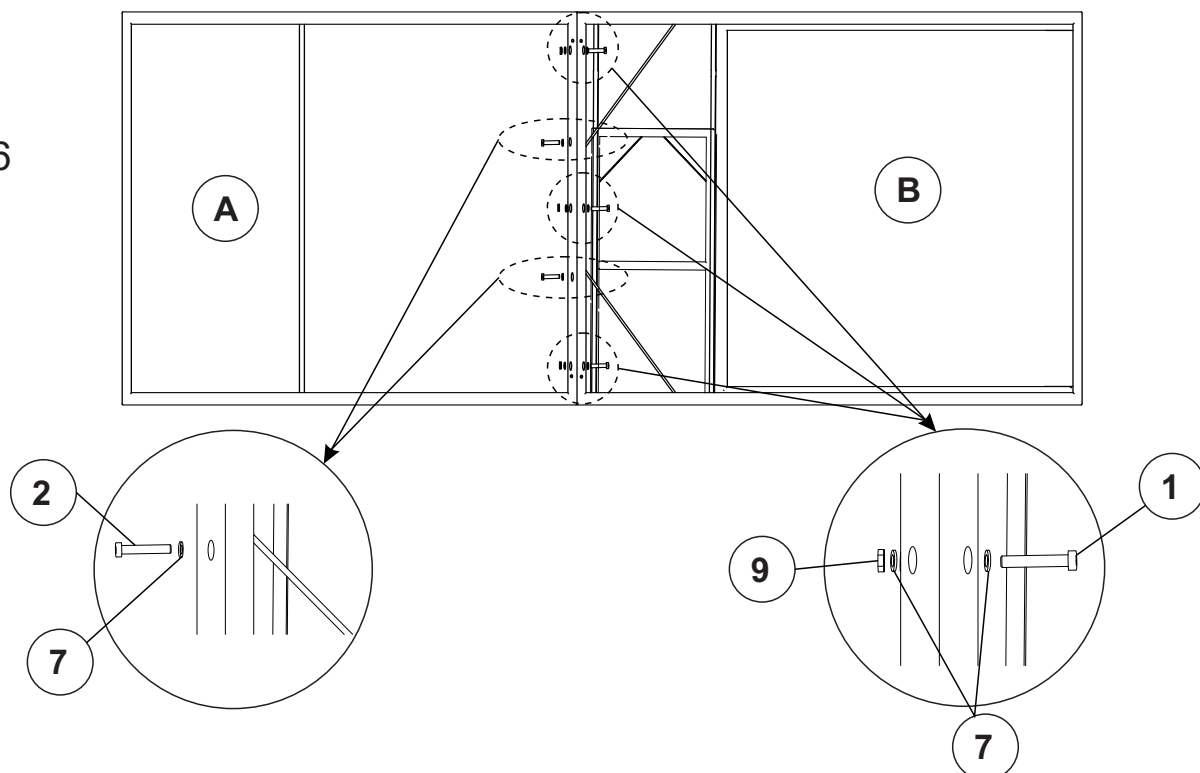


Connect The Rear Seat Body (A) & Front Seat Body (B) With AllenKey (12), Wrench (13)

STEP 2

x2




- ⑤ $\times 8$
 ⑧ $\times 8$
 ⑪ $\times 4$

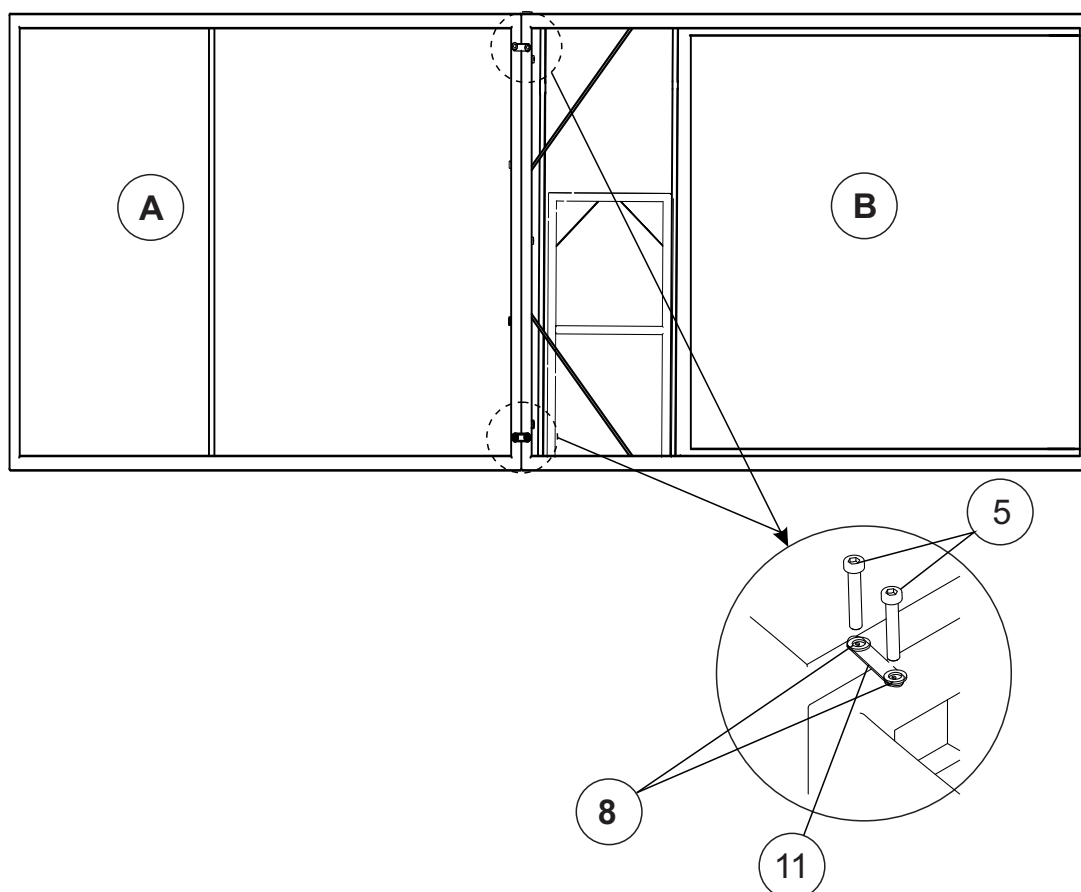

Connect The Part From Step 1 & Part I Short (12) With AllenKey (12)

STEP 3


③ x4
⑦ x4

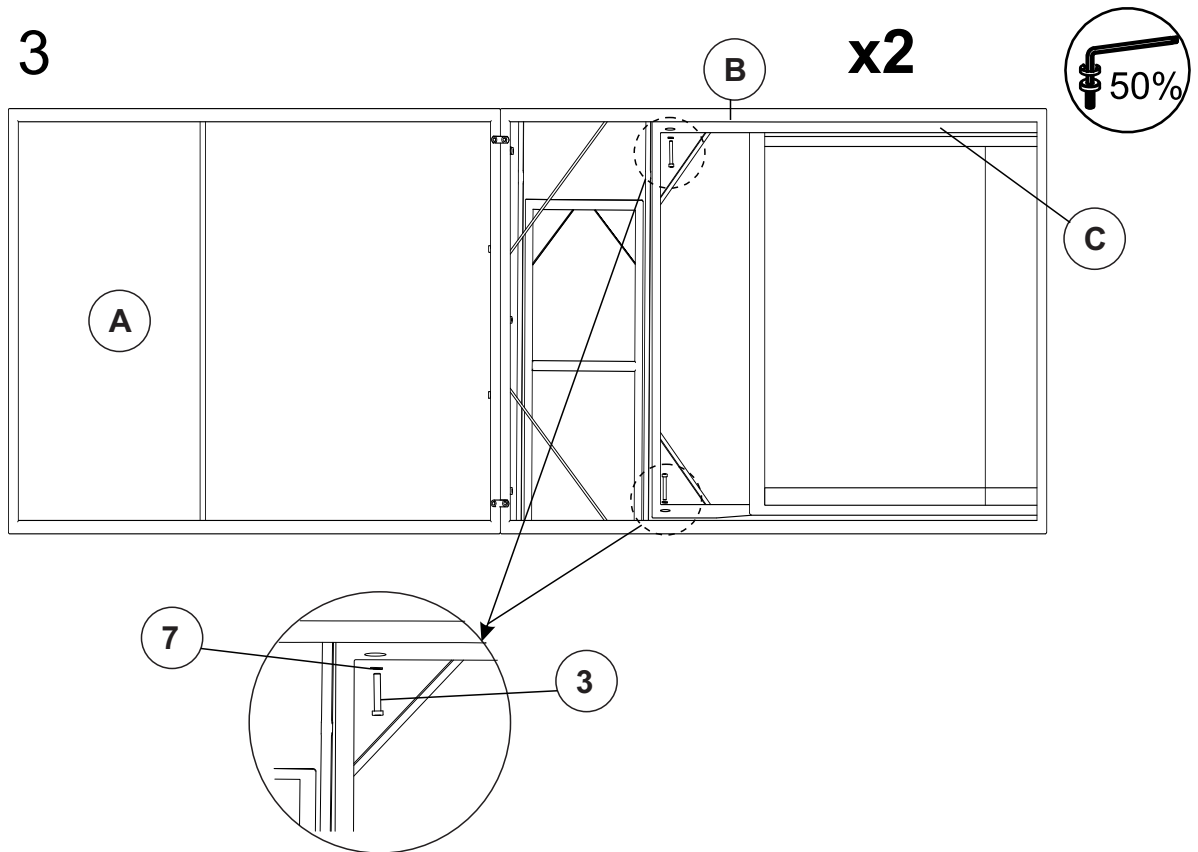

Connect The Front Seat Body (B) & Front Seat Frame (C) With AllenKey (12)

STEP 4




⑤ x4
⑧ x8
⑥ x4
⑩ x4

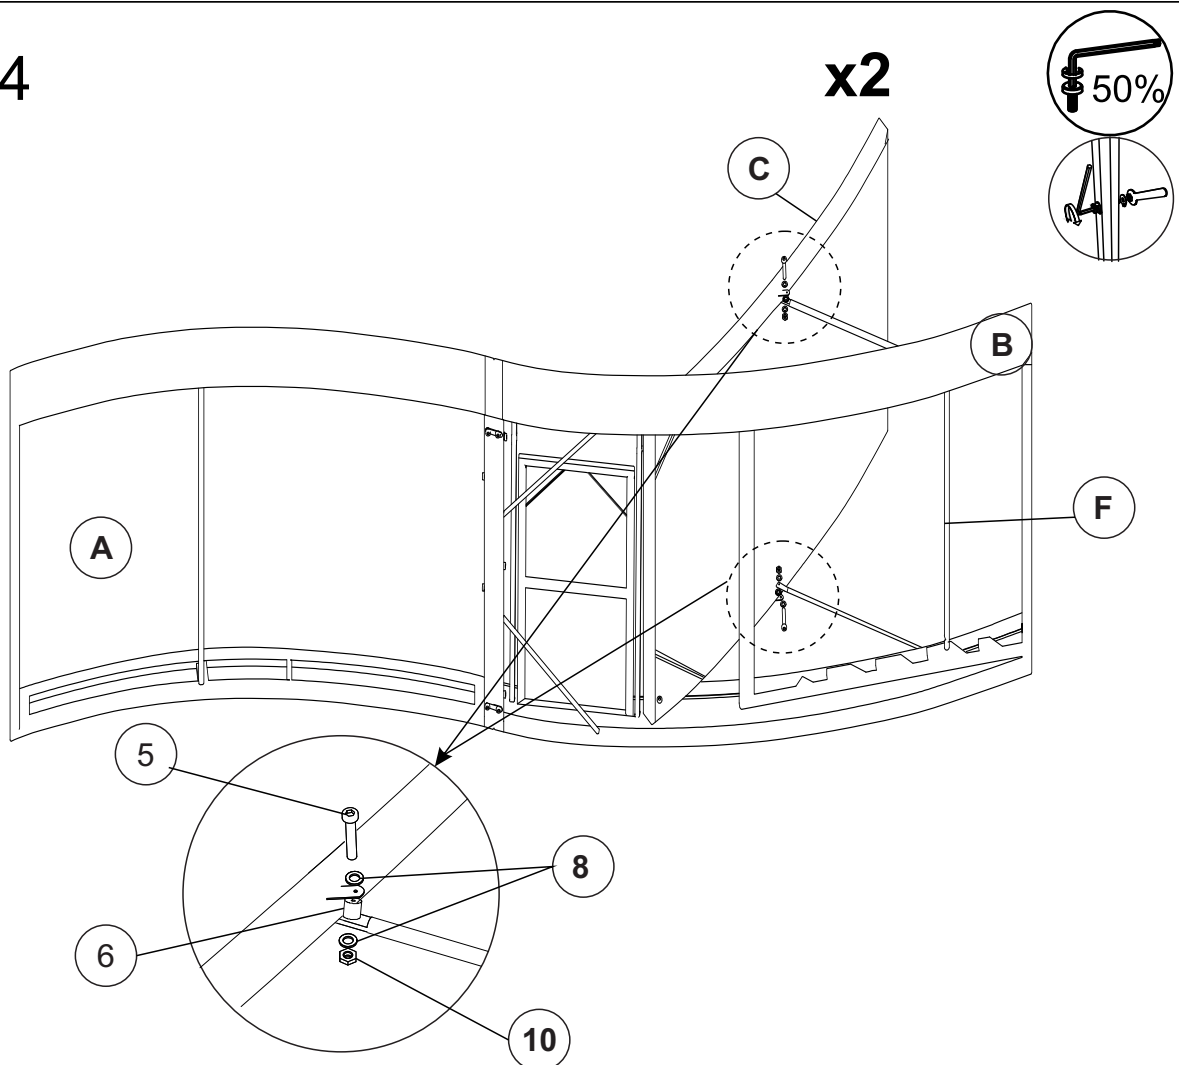

Connect The Front Seat Frame (C) & Shape-u Frame (F) With Allenkey (12), Wrench (14)

STEP 5


x2

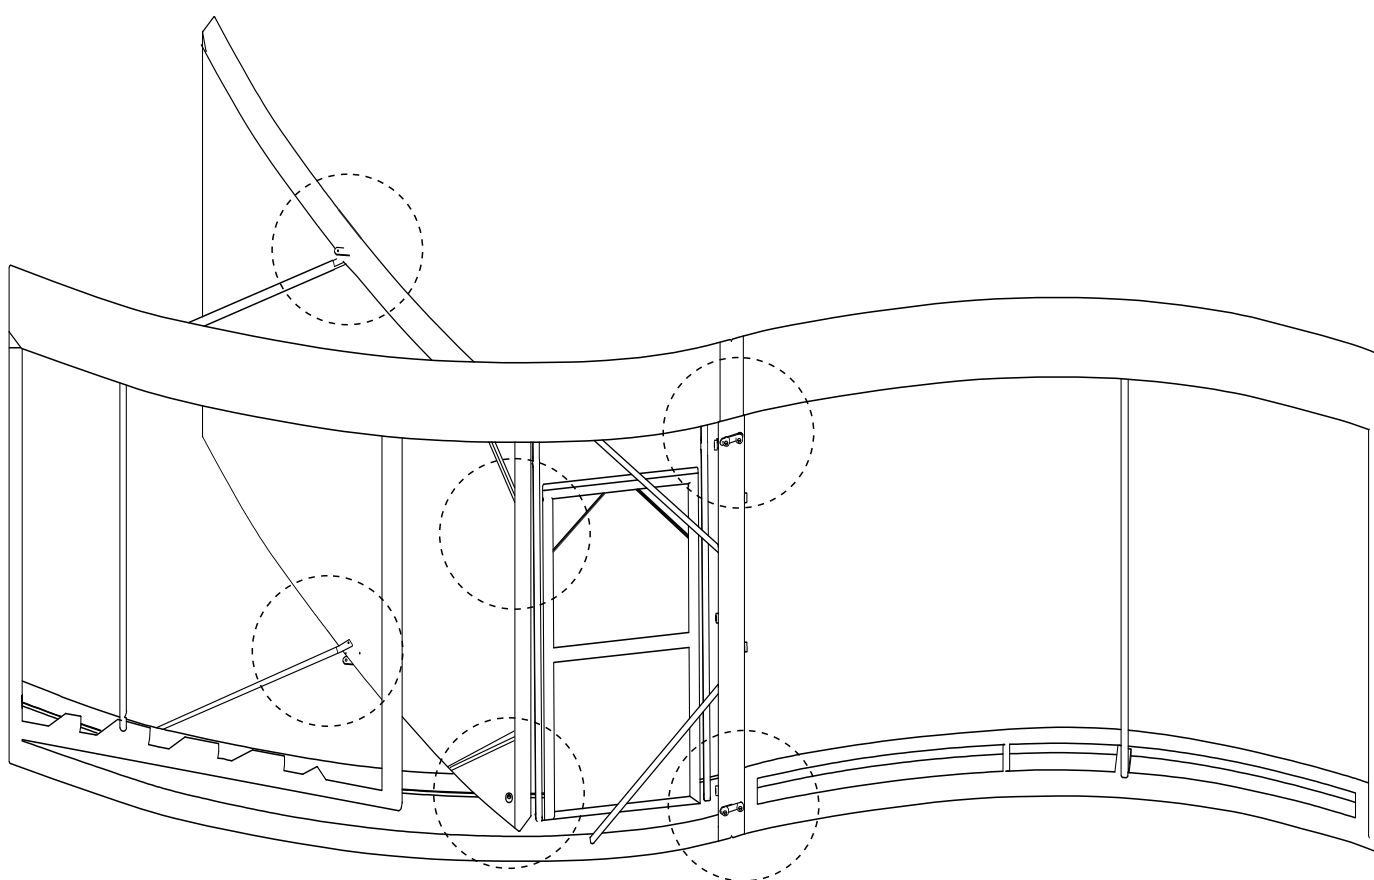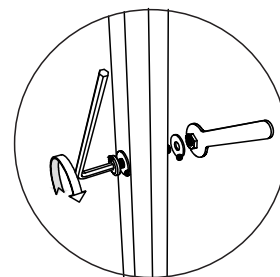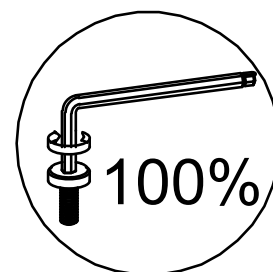


TIGHTEN ALL BOLTS AND NUTS 100%

STEP 6

x2

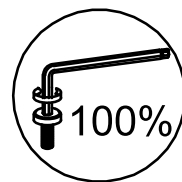


- ③ x4
- ⑤ x4
- ⑦ x4
- ⑧ x4

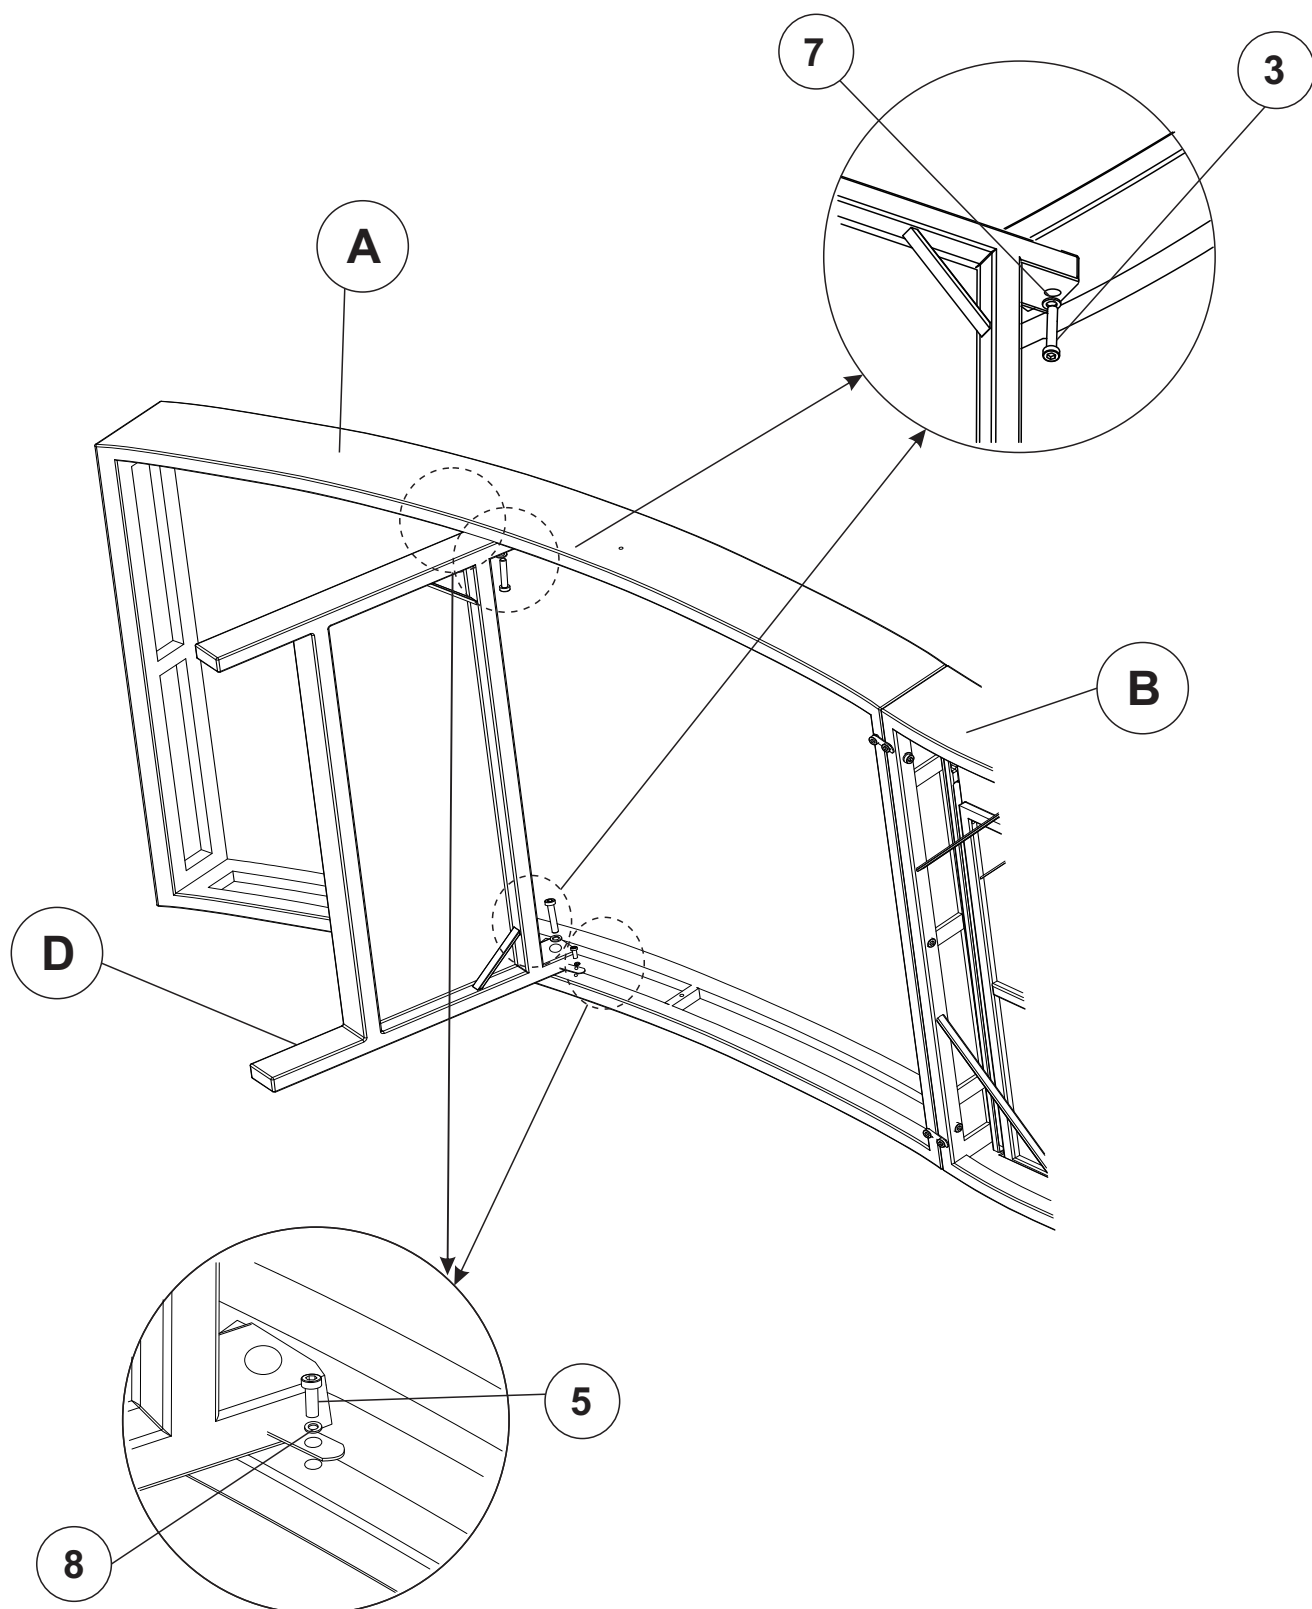


Connect The Rear Seat Body (A) & Rear Chair Legs (D) With Allenkey (12).

STEP 7

x2

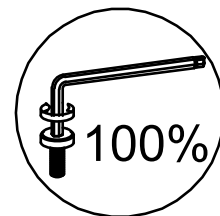

- ③ x4
- ⑤ x4
- ⑦ x4
- ⑧ x4

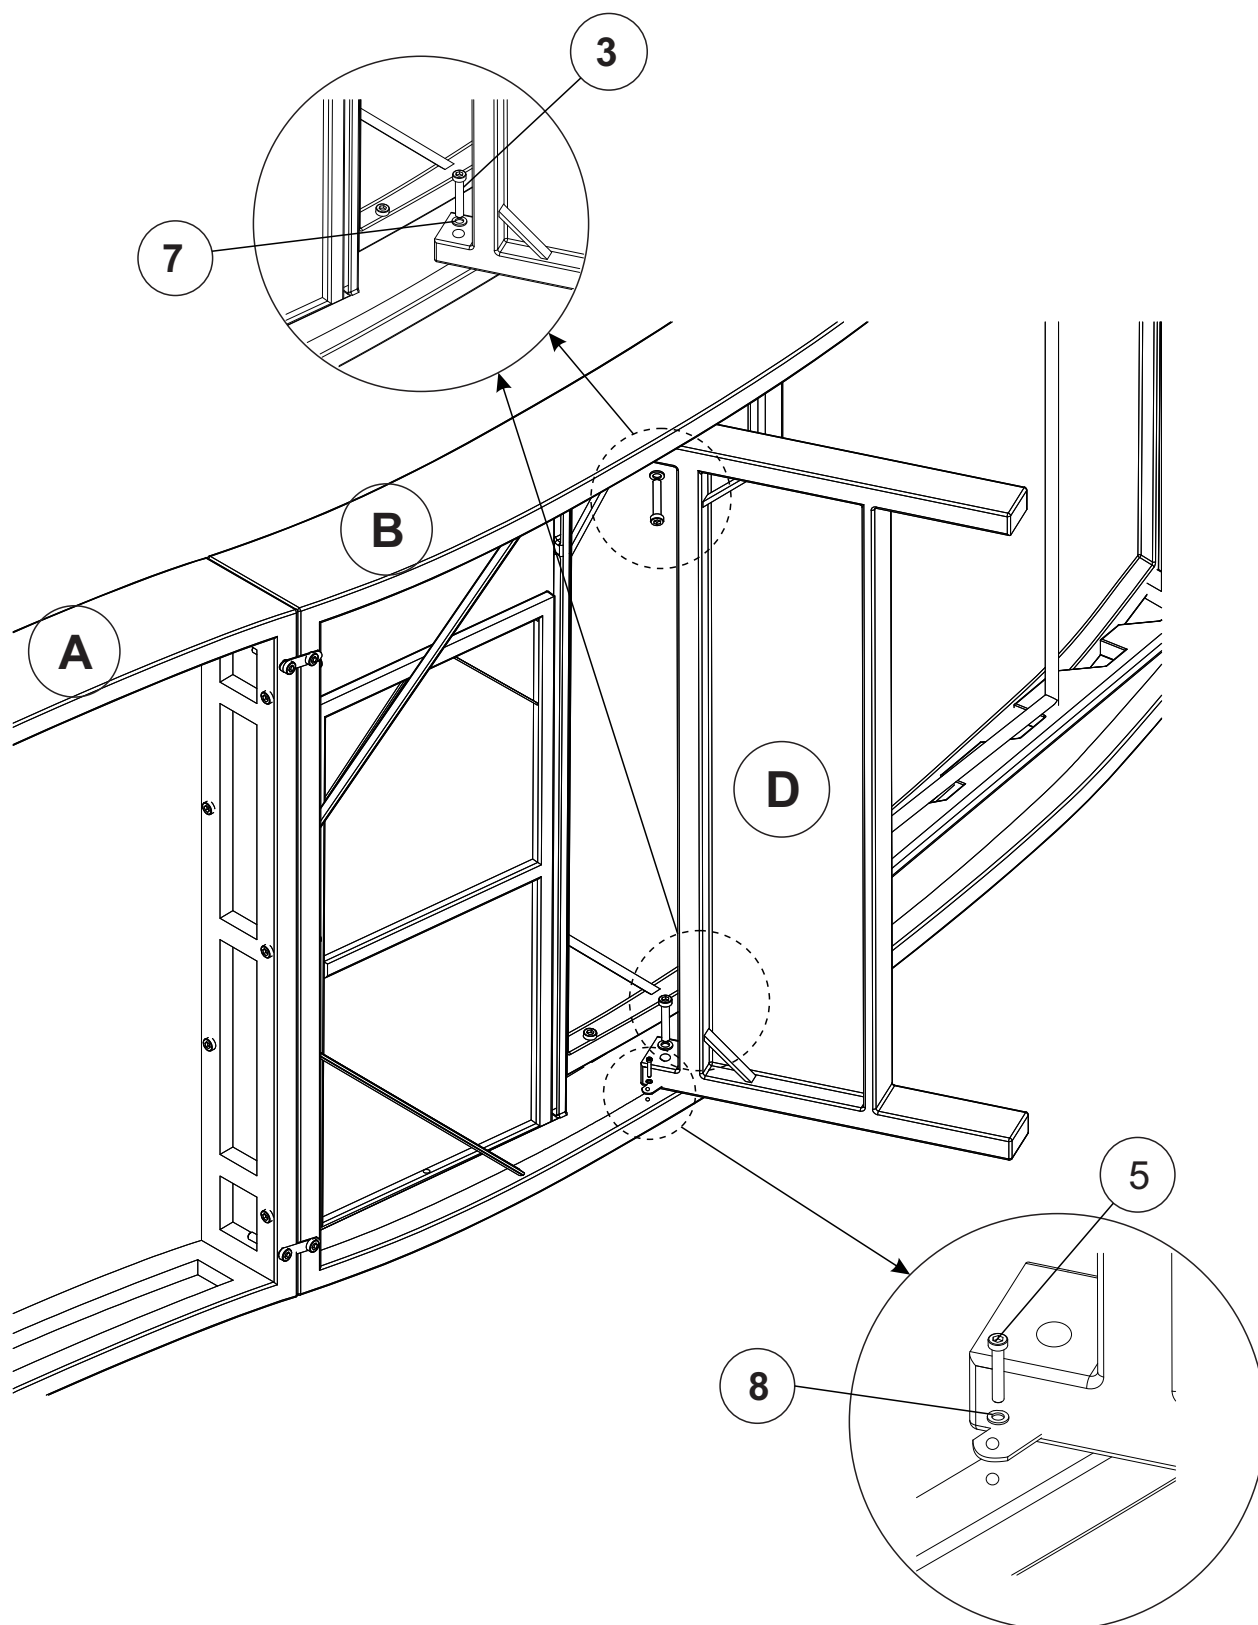



Connect The Front Seat Body (B) & Front Chair Legs (D) With Allenkey (12).

STEP 8

④ x4

⑧ x4

x2

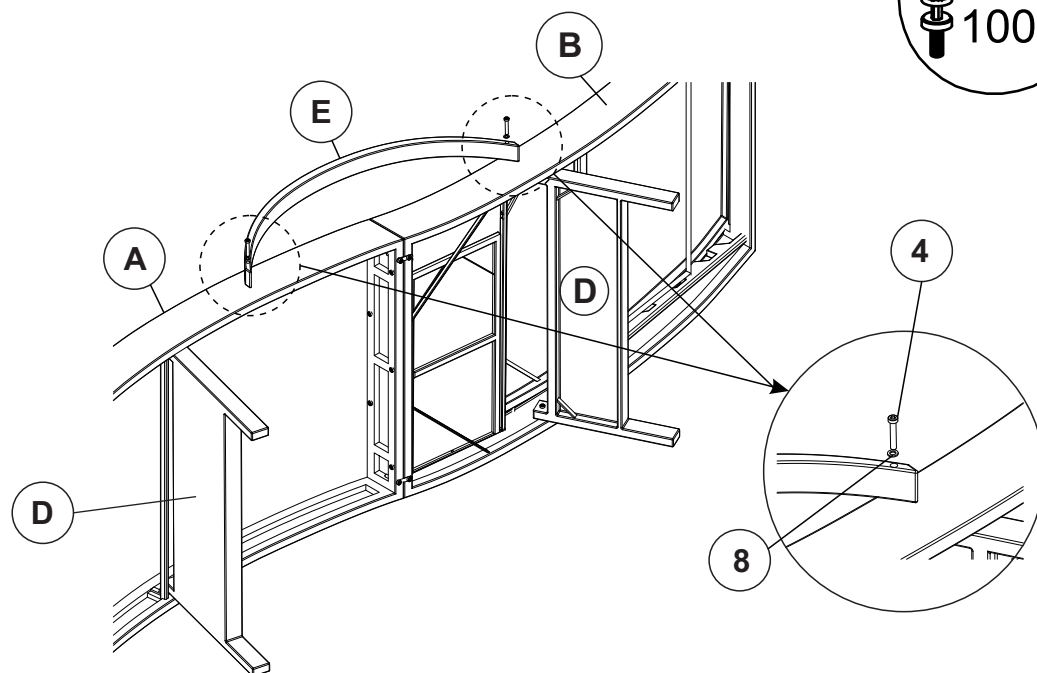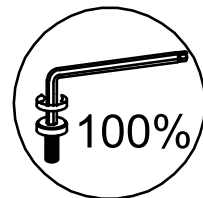



Connect The Arm Chair (E) & Rear Seat Body (A), Front Seat Body (B) With Allenkey (12)

STEP 9

④ x4


⑧ x4

x2

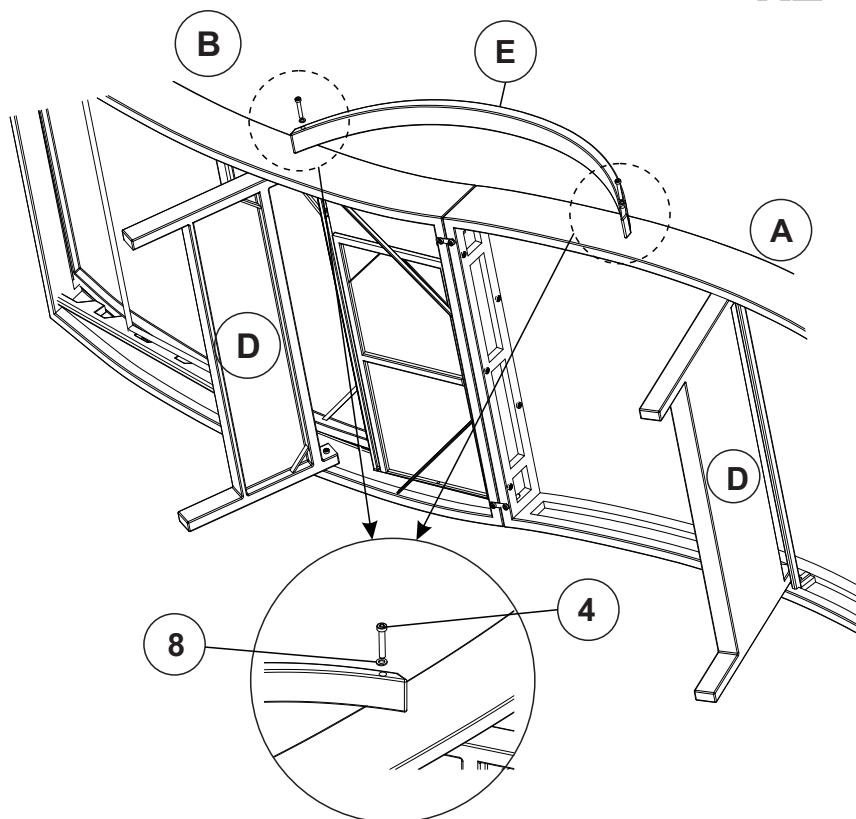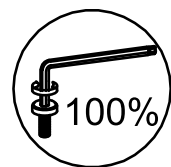

Connect The Arm Chair (E) & Rear Seat Body (A), Front Seat Body (B) With Allenkey (12)

x2

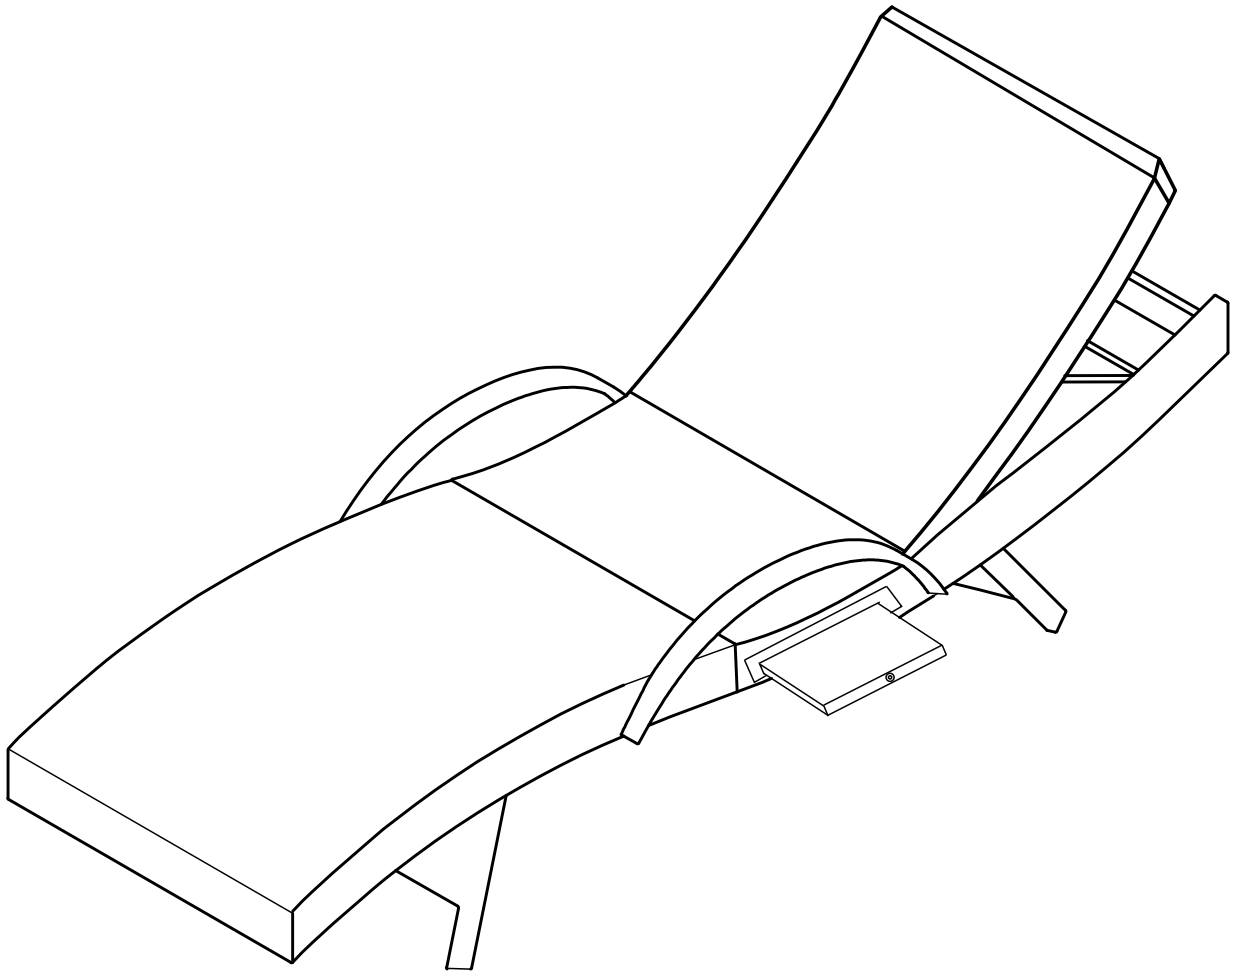

Finish