



Instruction Manual

Please save this manual for future reference.

Product Name:	Farmhouse White MDF Bathroom Cabinet
SKU #:	WHIF960


Thank you for purchasing this Winsome House product. This product has been manufactured with the highest standards of safety and quality.

PLEASE READ ALL INSTRUCTIONS BEFORE ASSEMBLY.

Unpack all parts from Styrofoam and bubble wrap inside the carton to ensure there are no missing or damaged parts. If any parts are missing or damaged, do not attempt to assemble or use the product.

Hardware:


①×12	②×12	③×12	④×2	⑤×2	⑥×1
⑦×4	⑧×3	⑨×8	⑩×2	⑪×2	⑫×2
⑬×2	⑭×1	⑮×1	⑯×2	⑰×1	

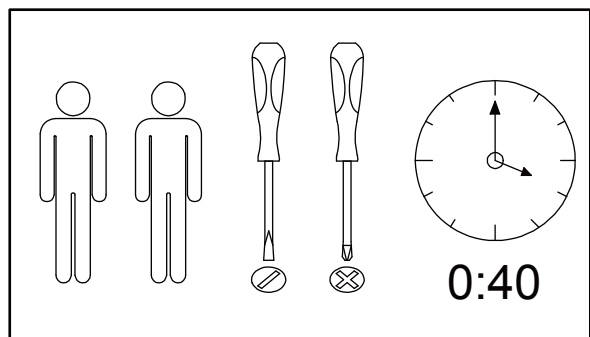

Tools required for assembly: Philips screwdriver and Flathead Screwdriver (if using power tools, use with care)

Product Name:	Farmhouse White MDF Bathroom Cabinet
SKU #:	WHIF960


Panels:

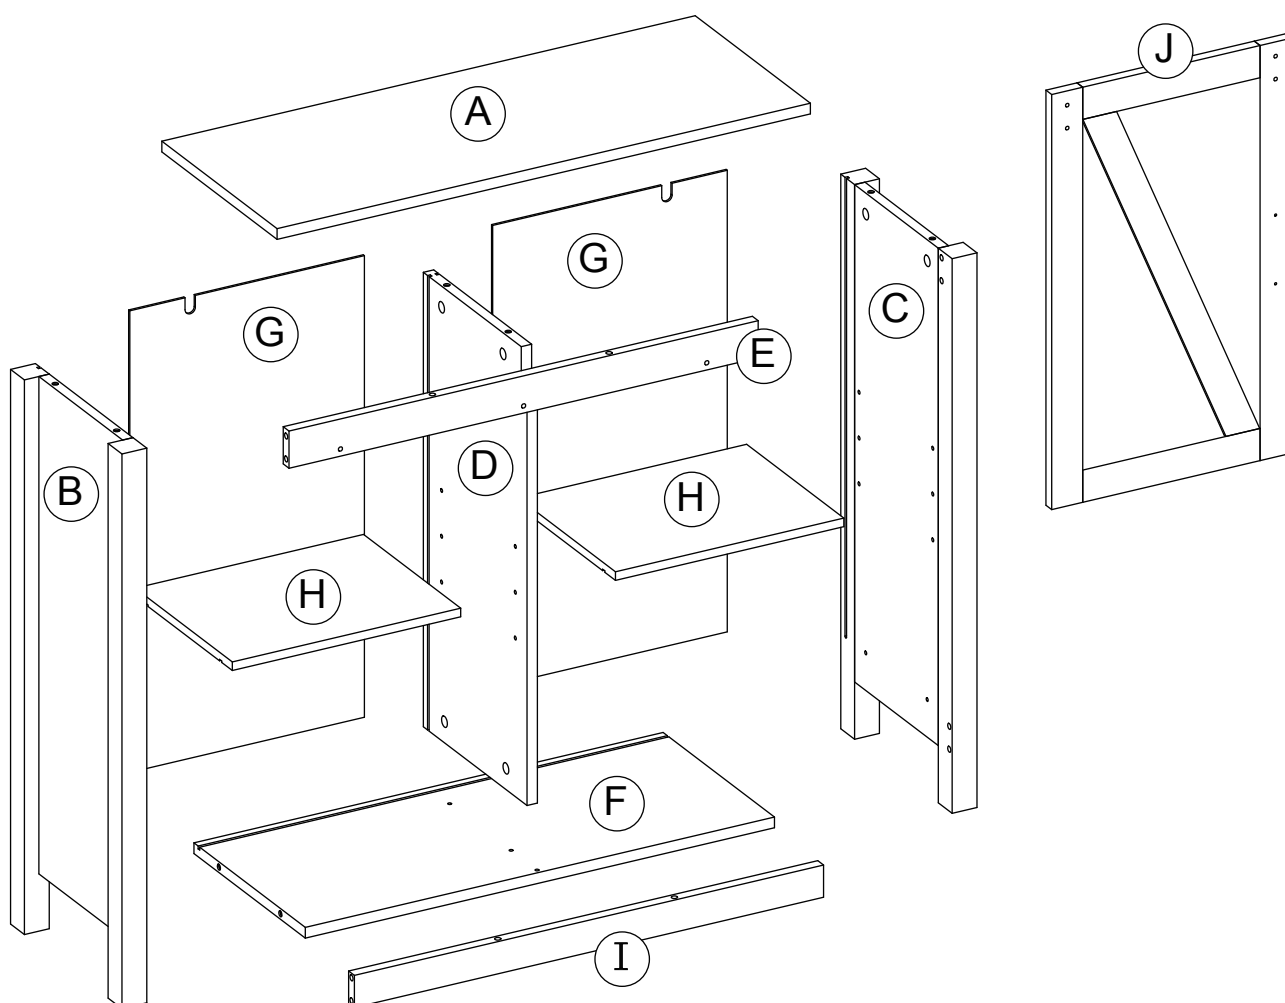


Product Name:	Farmhouse White MDF Bathroom Cabinet
SKU #:	WHIF960

Step 1




Make sure the pins are installed correctly as shown with the “check mark” below:

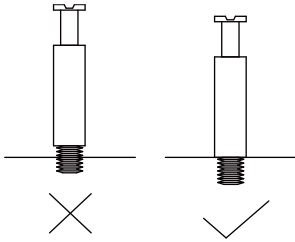

Below shows how the pins are used to assemble the panels together.

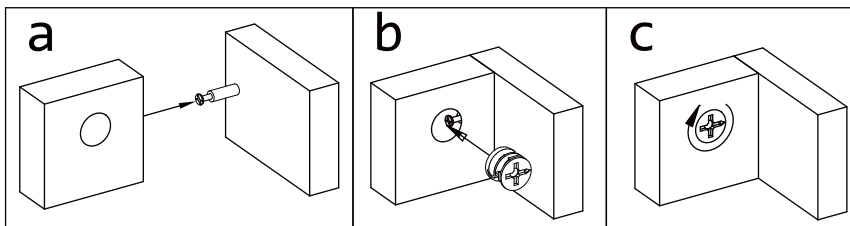





Screw cam bolts (1) onto (F), attach panel (I) as shown, tighten the cam lock (2) clockwise to secure.

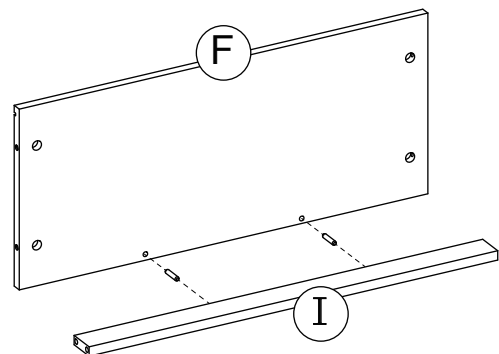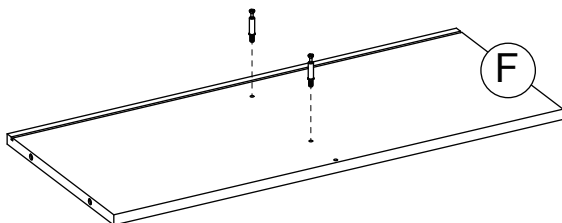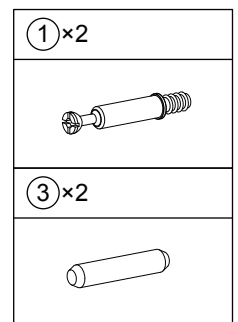

Product Name:	Farmhouse White MDF Bathroom Cabinet
SKU #:	WHIF960

Step 2




Attach (D) to (F) as shown, tighten the cam lock (2) clockwise to secure.
Screw cam bolts (1) onto (B)&(C)

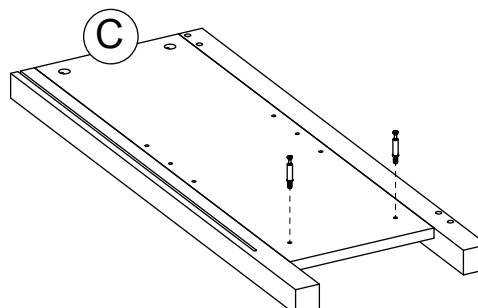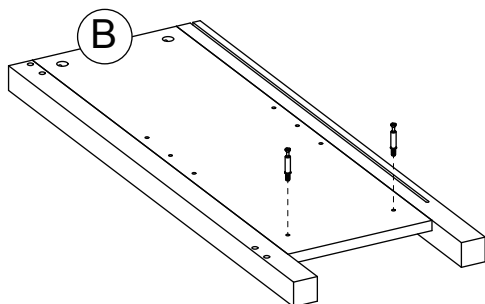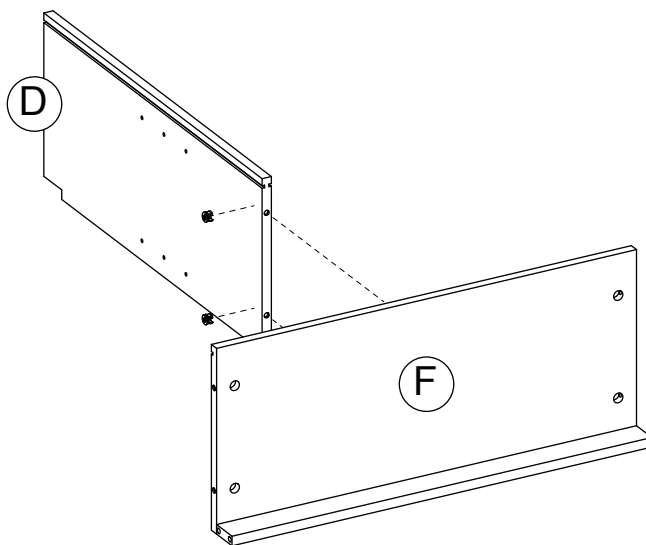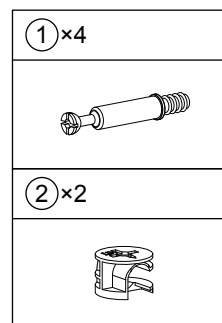

Product Name:	Farmhouse White MDF Bathroom Cabinet
SKU #:	WHIF960

Step 3




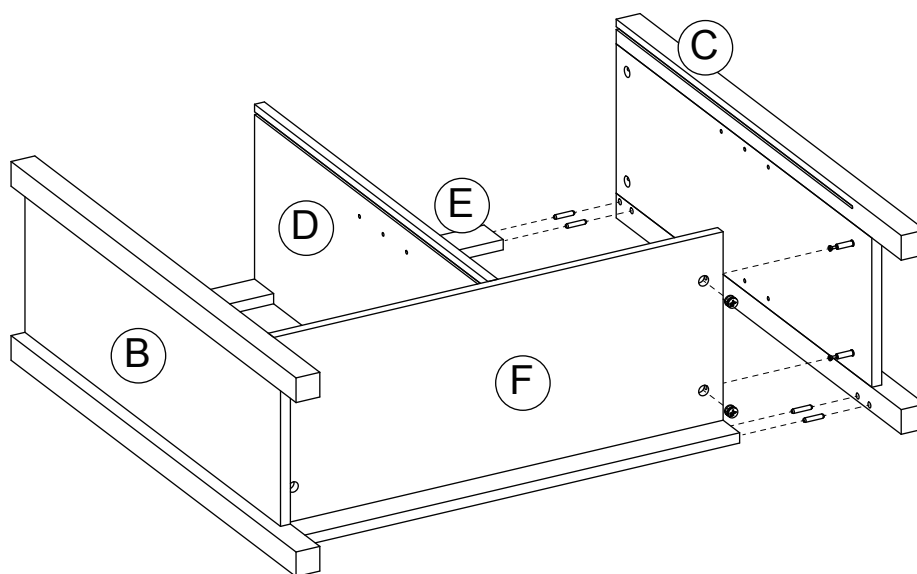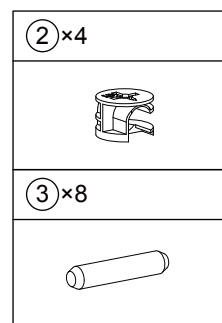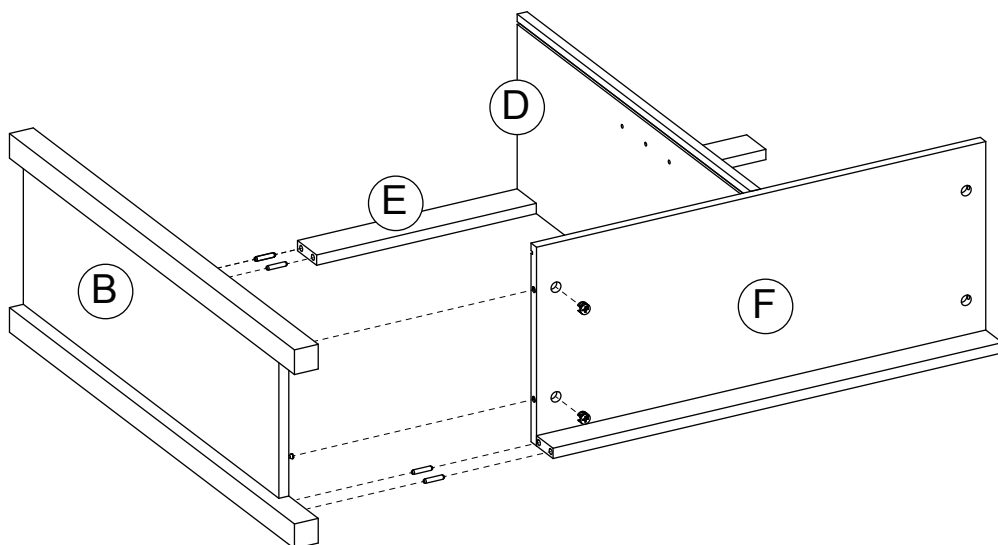

Insert wooden dowel (3) onto (E), attach it to (B)&(C) .
tighten the cam lock (2) clockwise to secure






Product Name:	Farmhouse White MDF Bathroom Cabinet
SKU #:	WHIF960

Step 4

Screw cam bolts (1) onto (A) ,
attach metal bracket (12) onto (A) with screws (13).
Insert back panels (G) onto unit, Insert wooden dowel (3) onto (E),
tighten the cam lock (2) clockwise to secure.

①×6	②×6
	
③×2	⑫×2
	
	⑬×2
	

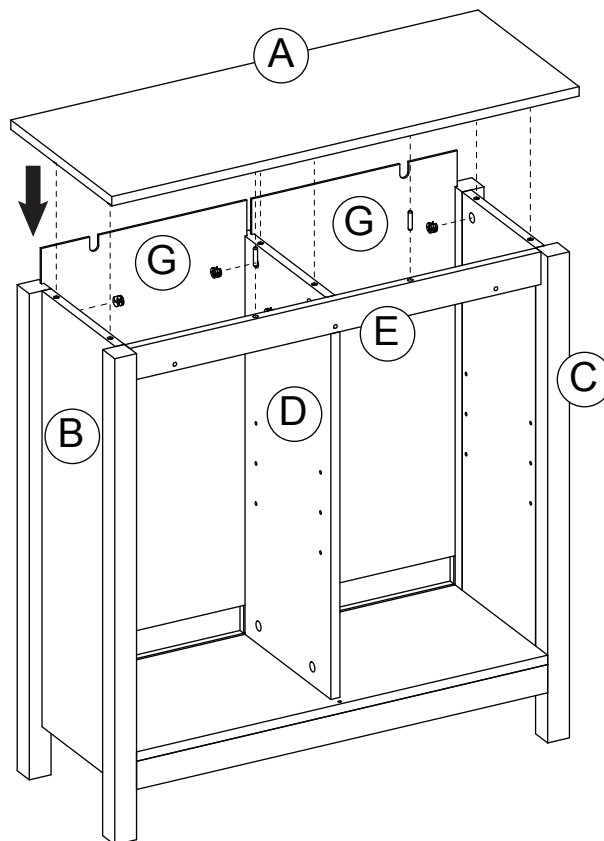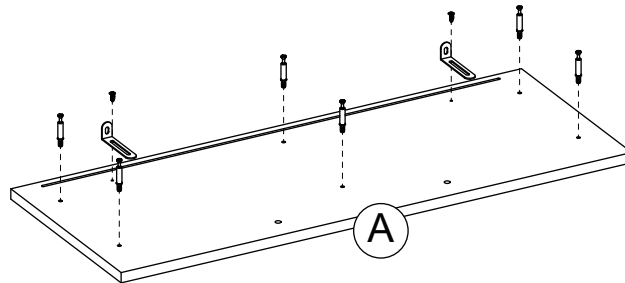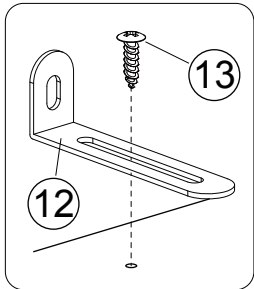






Product Name:	Farmhouse White MDF Bathroom Cabinet
SKU #:	WHIF960





Step 5

Attach metal runner(15) onto unit with bolt (8) as shown with tool (17).

Insert layer supports (9) into unit, then put on the adjustable shelves.

Insert bolt(14) onto panel (F) as shown.


⑧×3	⑨×8
	
⑭×1	⑮×1
	
	⑰×1
	

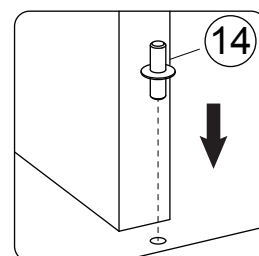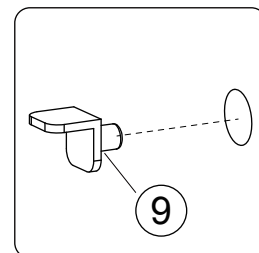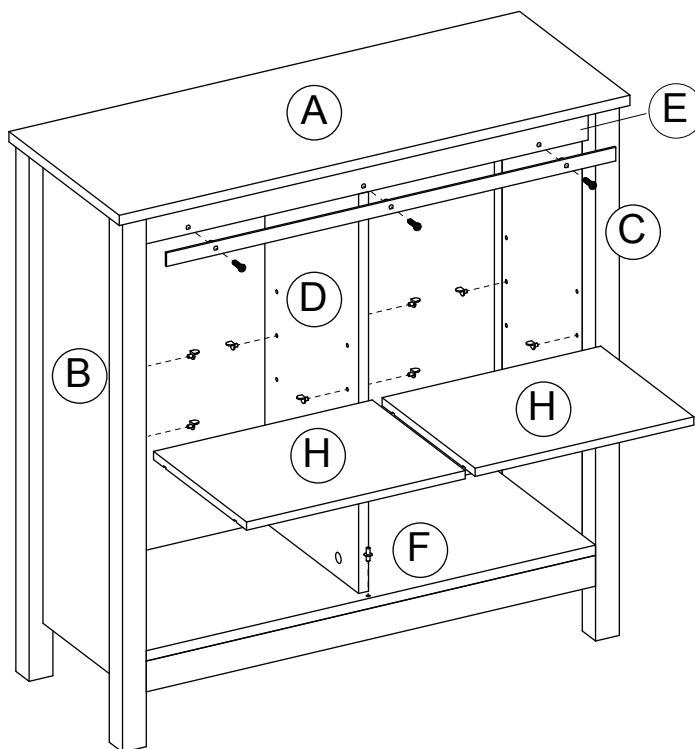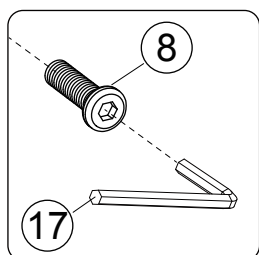






Product Name:	Farmhouse White MDF Bathroom Cabinet
SKU #:	WHIF960

Step 6

Drill holes on the wall to input Wall plug (11).
 Fix the unit to the wall with Screw (10)
 and through (12) as shown.
 Fix the handle (6) on the door (J) with bolts (4).
 Attach wheels (16) onto door (J) with screws (7) as shown.

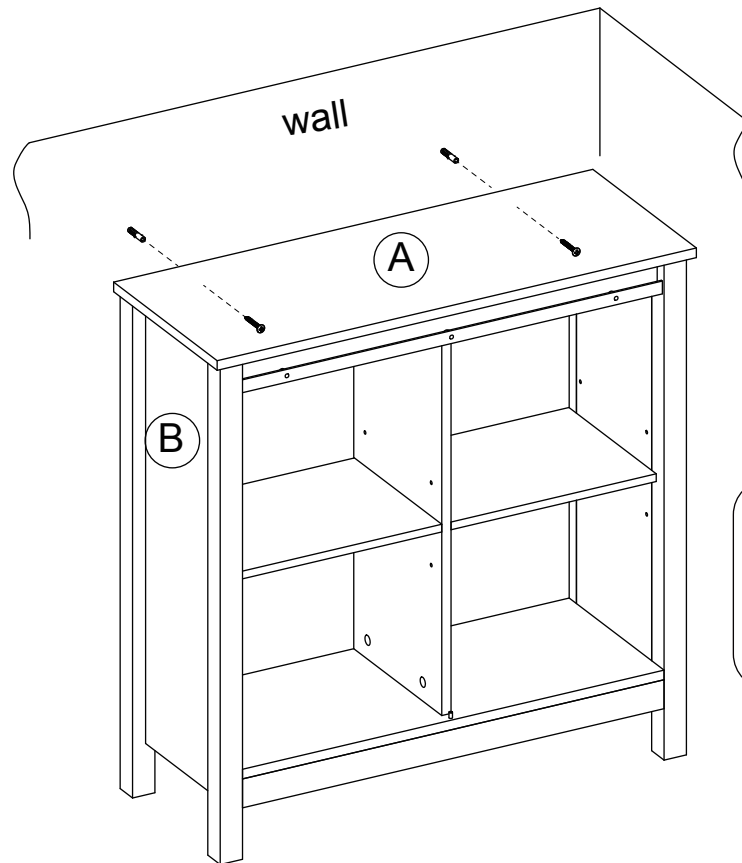

④×2	⑥×1
⑦×4	⑩×2
⑪×2	⑯×2

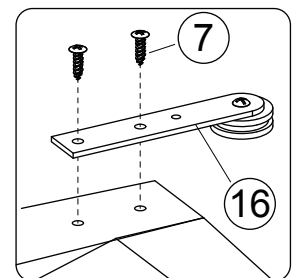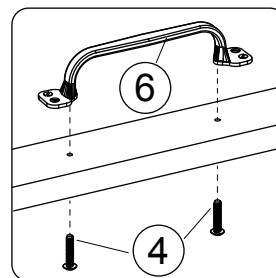
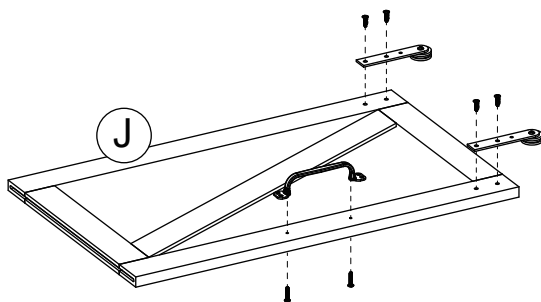
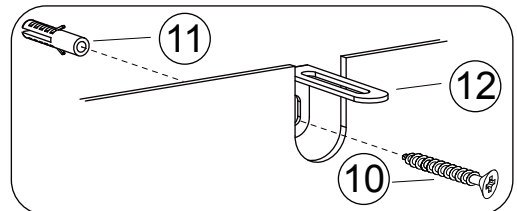
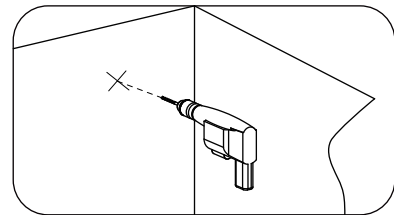


Product Name:	Farmhouse White MDF Bathroom Cabinet
SKU #:	WHIF960

Step 7

Insert the door (J) into the bolt (14), pull up the door a little to hang the wheels (16) onto the metal runner (15).

Screw bolts (5) into the hole as shown.

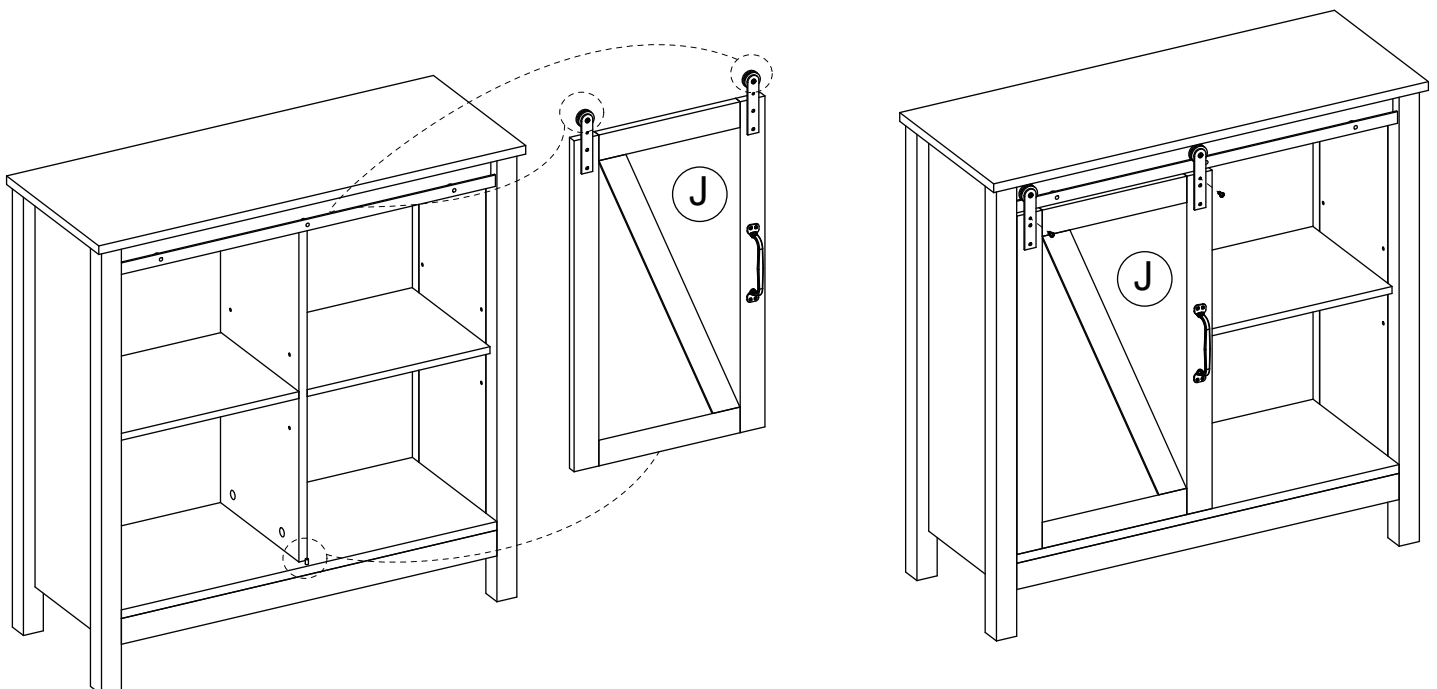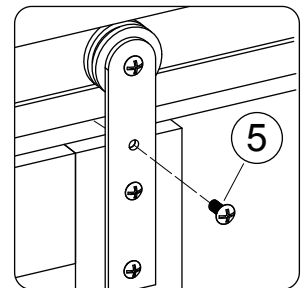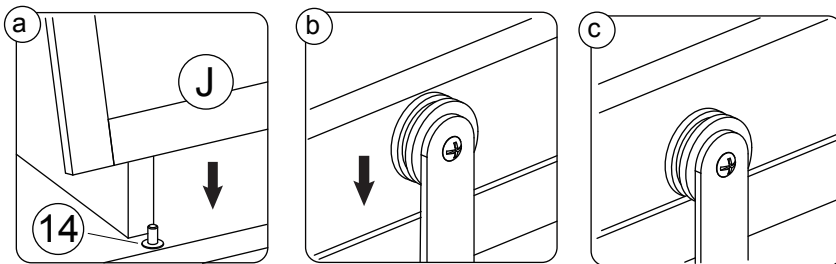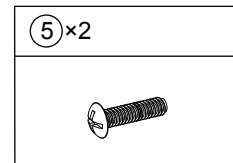

Product Name:	Farmhouse White MDF Bathroom Cabinet
SKU #:	WHIF960

Step 8

