

ASSEMBLY AND INSTALLATION


1. Place the MOUNTING PLATE on the wall in the desired location, and mark the center of the top and bottom MOUNTING PLATE holes with a pencil. Remove the MOUNTING PLATE from the wall.
2. Determine if there is a stud behind the marked hole locations.
 - 2a. If there is a stud behind the marked hole locations, skip to step 5.
 - 2b. If there is NOT a stud behind the marked hole locations, proceed to step 3.
3. Using a 5/16" DRILL BIT, drill holes at the marked hole locations.
4. Insert the screw ANCHORS into the holes. The ANCHORS should sit fully within the hole, flush with the wall.
5. Line up the holes in the MOUNTING PLATE with the hole locations, and attach the MOUNTING PLATE to the wall with the SCREWS provided.
6. Attach the ROBE HOOK to the MOUNTING PLATE by hooking the SLOT onto the top edge of the MOUNTING PLATE and holding it flush against the wall.
7. Finish attaching by inserting and tightening the SET SCREW as shown.

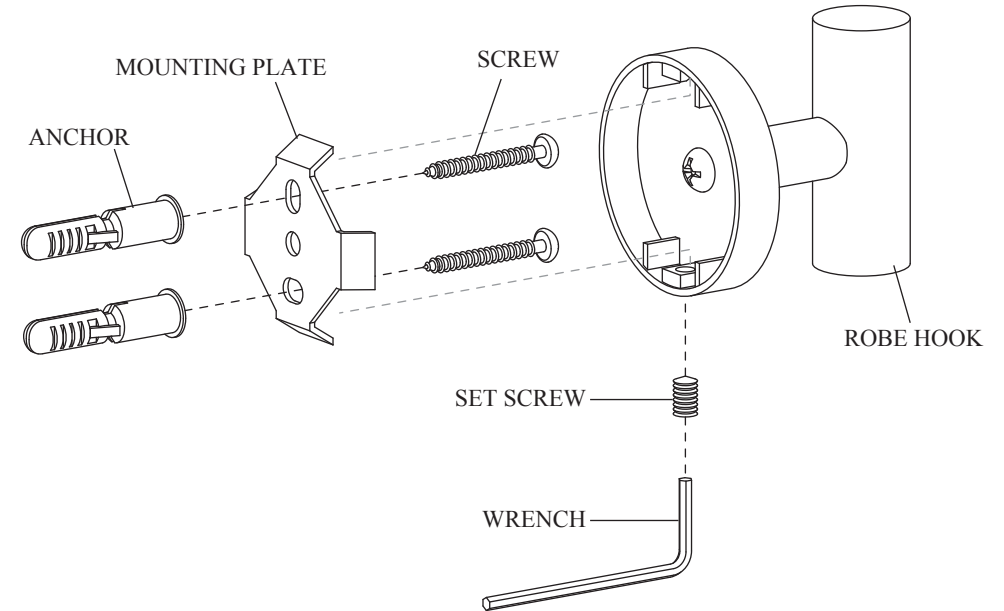

ASSEMBLY AND INSTALLATION (CONT.)


ASSEMBLY AND INSTALLATION

1. Place the MOUNTING PLATE on the wall in the desired location, and mark the center of the top and bottom MOUNTING PLATE holes with a pencil. Remove the MOUNTING PLATE from the wall.
2. Determine if there is a stud behind the marked hole locations.
 - 2a. If there is a stud behind the marked hole locations, skip to step 5.
 - 2b. If there is NOT a stud behind the marked hole locations, proceed to step 3.
3. Using a 5/16" DRILL BIT, drill holes at the marked hole locations.
4. Insert the screw ANCHORS into the holes. The ANCHORS should sit fully within the hole, flush with the wall.
5. Line up the holes in the MOUNTING PLATE with the hole locations, and attach the MOUNTING PLATE to the wall with the SCREWS provided.
6. Attach the TISSUE HOLDER to the MOUNTING PLATE by hooking the SLOT onto the top edge of the MOUNTING PLATE and holding it flush against the wall.
7. Finish attaching by inserting and tightening the SET SCREW as shown.

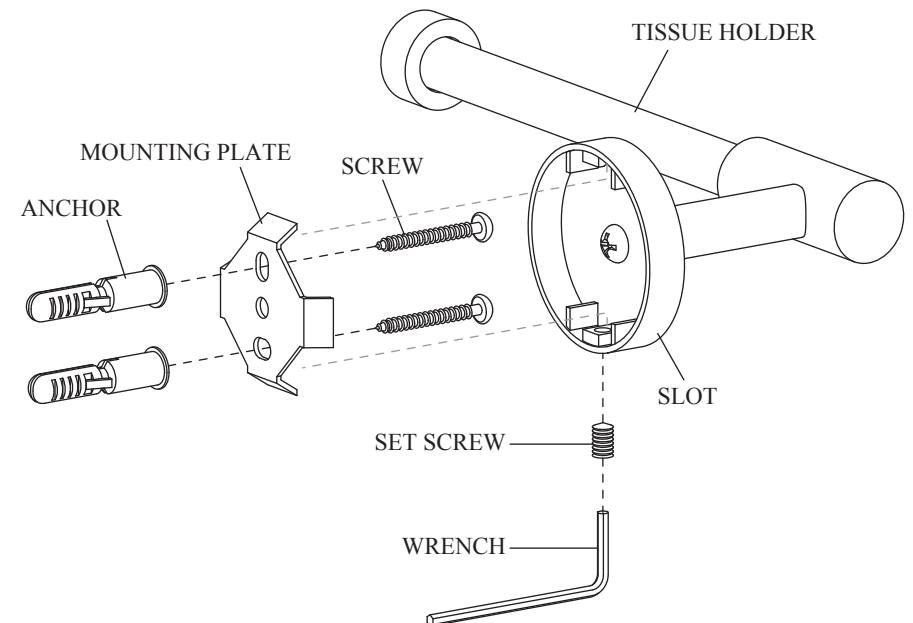

ASSEMBLY AND INSTALLATION

1. Place the MOUNTING PLATE on the wall in the desired location, and mark the center of the top and bottom MOUNTING PLATE holes with a pencil. Remove the MOUNTING PLATE from the wall.
2. Determine if there is a stud behind the marked hole locations.
 - 2a. If there is a stud behind the marked hole locations, skip to step 5.
 - 2b. If there is NOT a stud behind the marked hole locations, proceed to step 3.
3. Using a 5/16" DRILL BIT, drill holes at the marked hole locations.
4. Insert the screw ANCHORS into the holes. The ANCHORS should sit fully within the hole, flush with the wall.
5. Line up the holes in the MOUNTING PLATE with the hole locations, and attach the MOUNTING PLATE to the wall with the SCREWS provided.
6. Attach the TOWEL RING to the MOUNTING PLATE by hooking the SLOT onto the top edge of the MOUNTING PLATE and holding it flush against the wall.
7. Finish attaching by inserting and tightening the SET SCREW as shown.

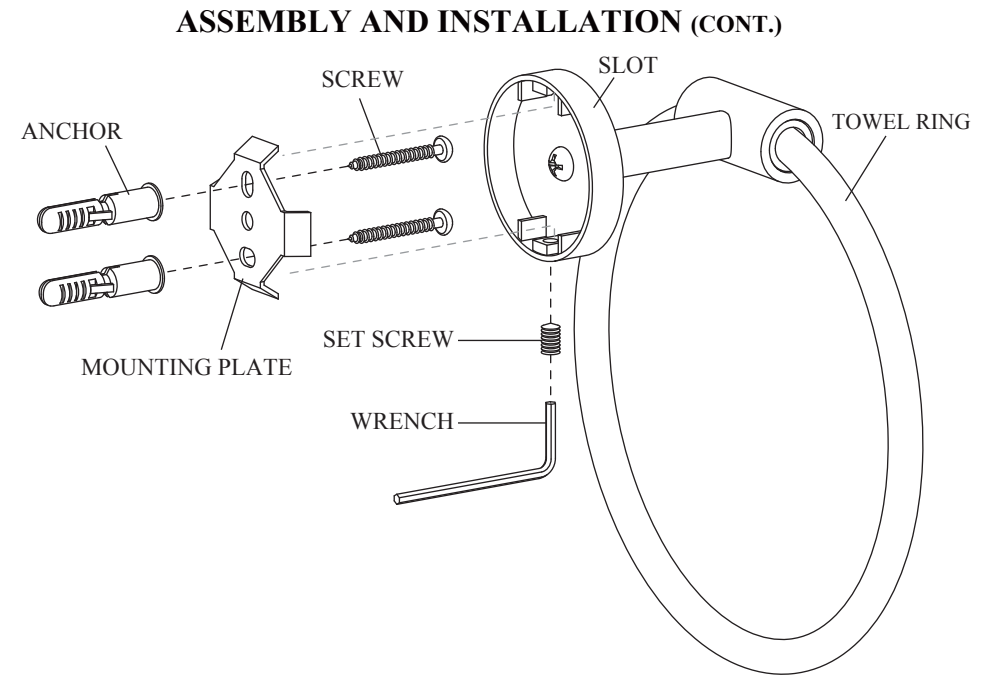

ASSEMBLY AND INSTALLATION

1. Place a MOUNTING PLATE on the wall in the desired location, and mark the center of the top and bottom MOUNTING PLATE holes with a pencil. Remove the MOUNTING PLATE from the wall.
2. Using a TAPE MEASURE and a LEVEL, measure 22.06" or 17.34" to the center of the second MOUNTING PLATE and mark. Place the MOUNTING PLATE on the wall, lining up the center mark, and mark the centers for the top and bottom holes. Repeat for the other MOUNTING PLATE.
3. Determine if there is a stud behind the marked hole locations.
 - 2a. If there is a stud behind the marked hole locations, skip to step 6.
 - 2b. If there is NOT a stud behind the marked hole locations, proceed to step 4.
4. Using a 5/16" DRILL BIT, drill holes at the top and bottom marked hole locations.
5. Insert the screw ANCHORS into the holes. The ANCHORS should sit fully within the hole, flush with the wall.
6. Line up the holes in the MOUNTING PLATE with the hole locations, and attach the MOUNTING PLATE to the wall with the SCREWS provided.
7. Attach the TOWEL BAR to the MOUNTING PLATES by hooking the SLOT onto the top edge of the MOUNTING PLATES and holding it flush against the wall.
8. Finish attaching by inserting and tightening the SET SCREWS as shown.

