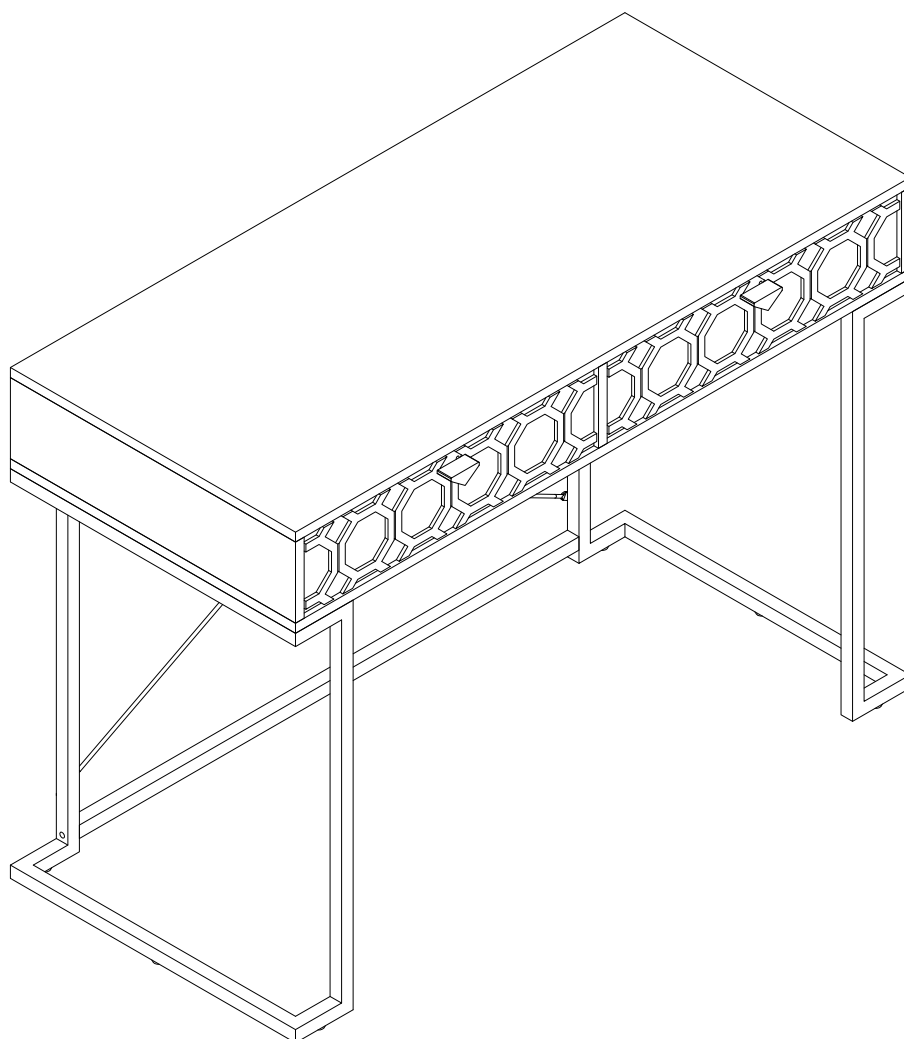


# ASSEMBLY INSTRUCTIONS

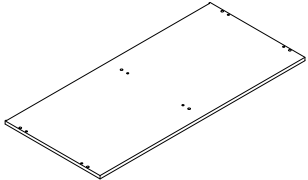
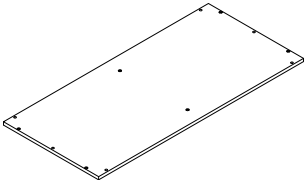



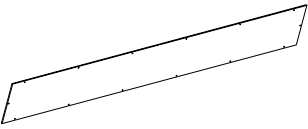
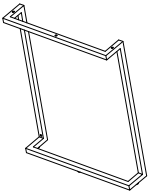
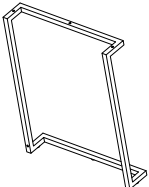


Phone number: 303-747-4421 / (951) 213-4743  
service@clihome.net  
Web: www.clihome.net

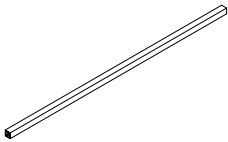





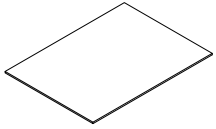
# ASSEMBLY INSTRUCTIONS

Page 2 of 10

## Part List:

ITEM	DESCRIPTION	PART	QTY
1	Top panel		1
2	Bottom panel		1
3	Left side panel		1
4	Right side panel		1
5	Divider		1
6	Back panel		1
7	Left leg		1
8	Right leg		1

## Part List:









ITEM	DESCRIPTION	PART	QTY
9	Crossbar		1
10	Connection strap		2
11	Drawer front		2
12	Drawer left side		2
13	Drawer right side		2
14	Drawer back		2
15	Drawer bottom		2

MADE IN CHINA









# ASSEMBLY INSTRUCTIONS

Page 3 of 10

## Hardware List:

ITEM	DESCRIPTION	PART	QTY
A	Camlock bolt		6
B	Camlock		6
C	Wooden dowel	 Φ8*30mm	12
D	Bolt	 Φ1/4"*1 1/4"	12
E	Allen wrench		1
F	Flat head screw	 Φ4*25mm	16
G	Handle		2
H	Machine screw	 Φ5/32"*7/8"	4

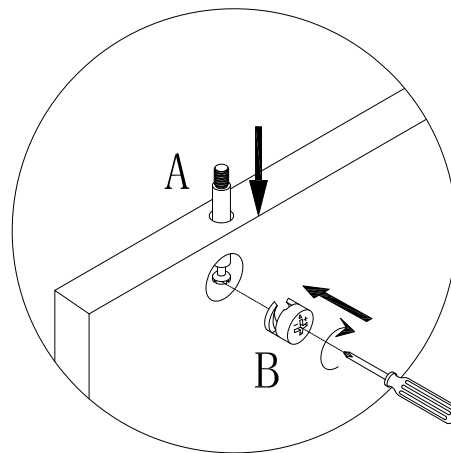
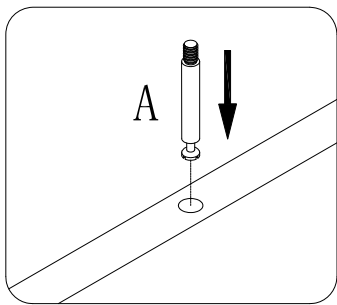
## Hardware List:

ITEM	DESCRIPTION	PART	QTY
I	Bolt	 Φ5*12mm	5
J	Nut		1
K	Back screw	 Φ3*12mm	14
L	Safety wall strap		2
M	Plastic anchor		2
N	Mounting screw	 Φ4*38mm	2
O	Washer		2
P	Bolt	 Φ1/4"*1 9/16"	2

MADE IN CHINA

- \* Required screwdriver & mallet, not included.
- \* Before discarding packing materials, please check to make sure that all parts and hardware is present.
- \* Two people needed for assembly.
- \* Please follow the instructions closely; do not over tighten screws or bolts unless instructed.
- \* After a few days from initial assembly, the product may have acclimated to the new environment. Please retighten the hardware.

## Guideline For Assembling of Cam Lock(A & B)






Screw camlock bolt (A) to wood part.

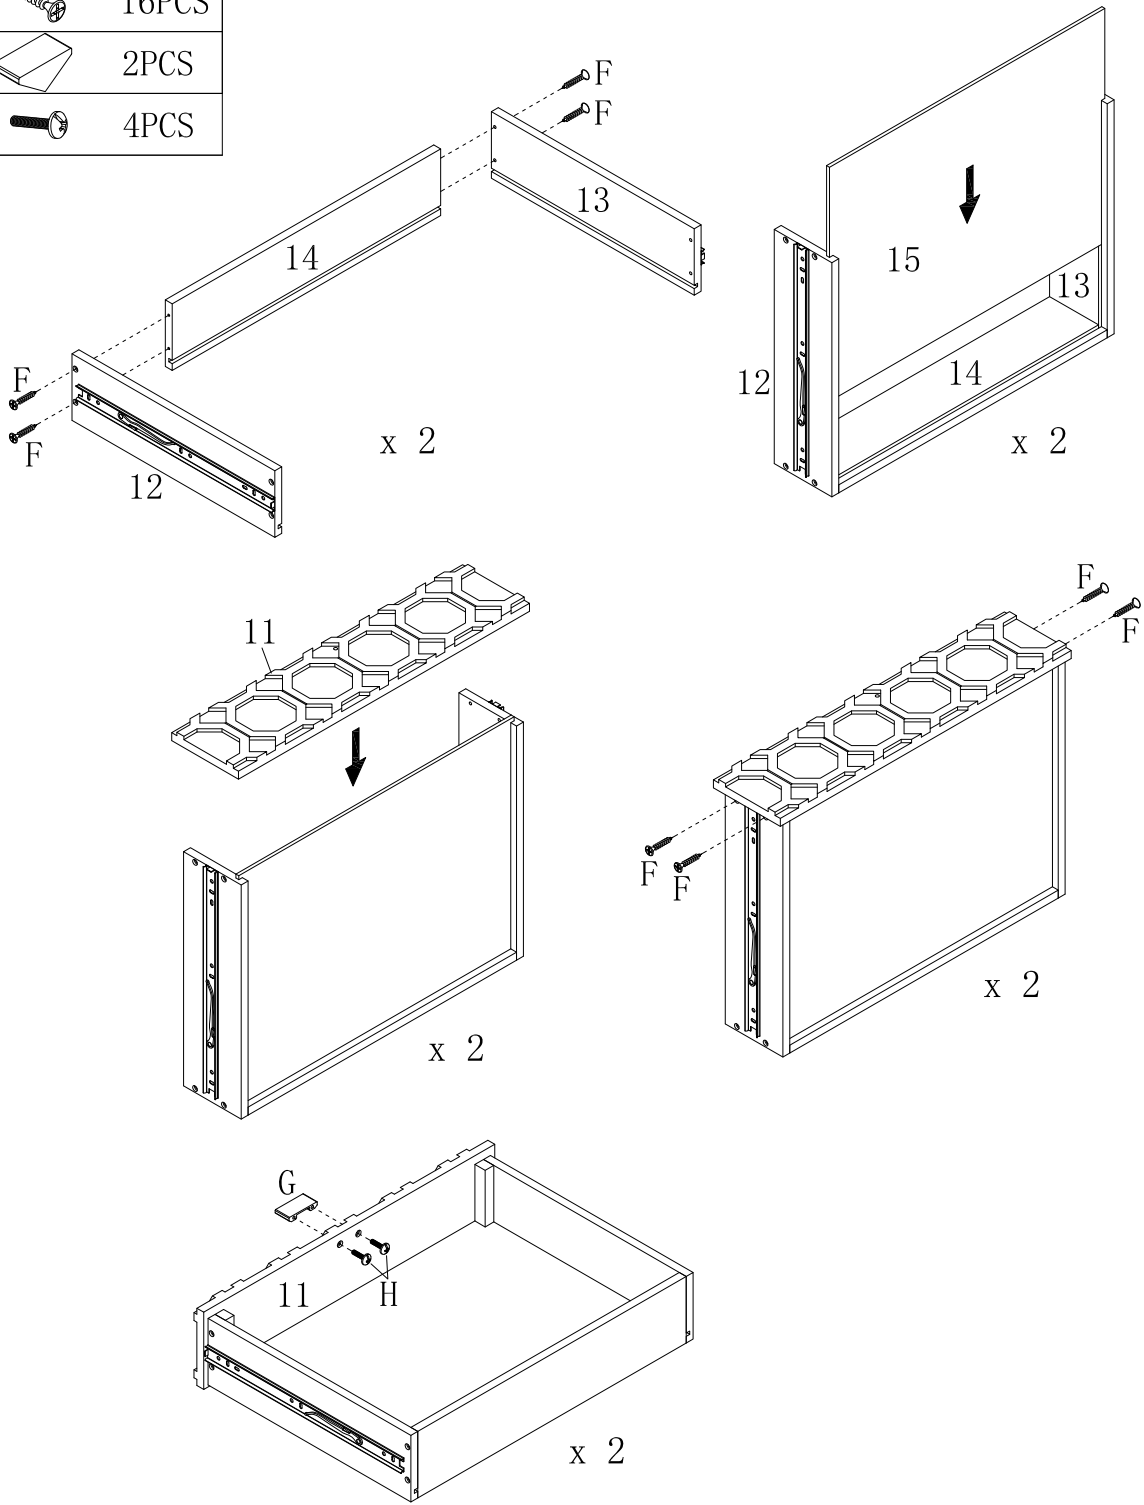
Do not assemble camlock (B) unless instructed.

To assemble camlock (B), ensure long side of the + is facing the bolt (A) before inserting into hole.

# ASSEMBLY INSTRUCTION



## STEP 1

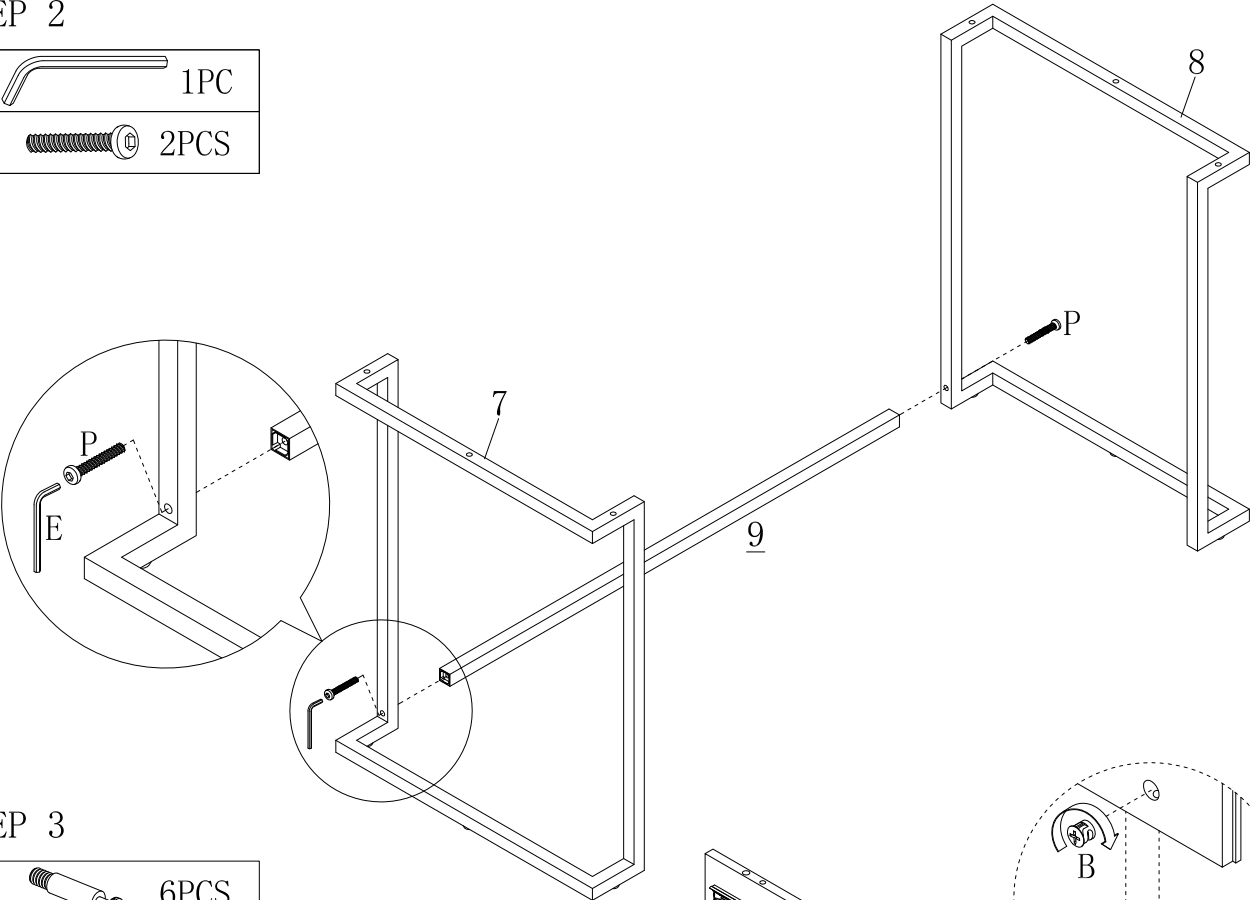
F:		16PCS
G:		2PCS
H:		4PCS






# ASSEMBLY INSTRUCTION

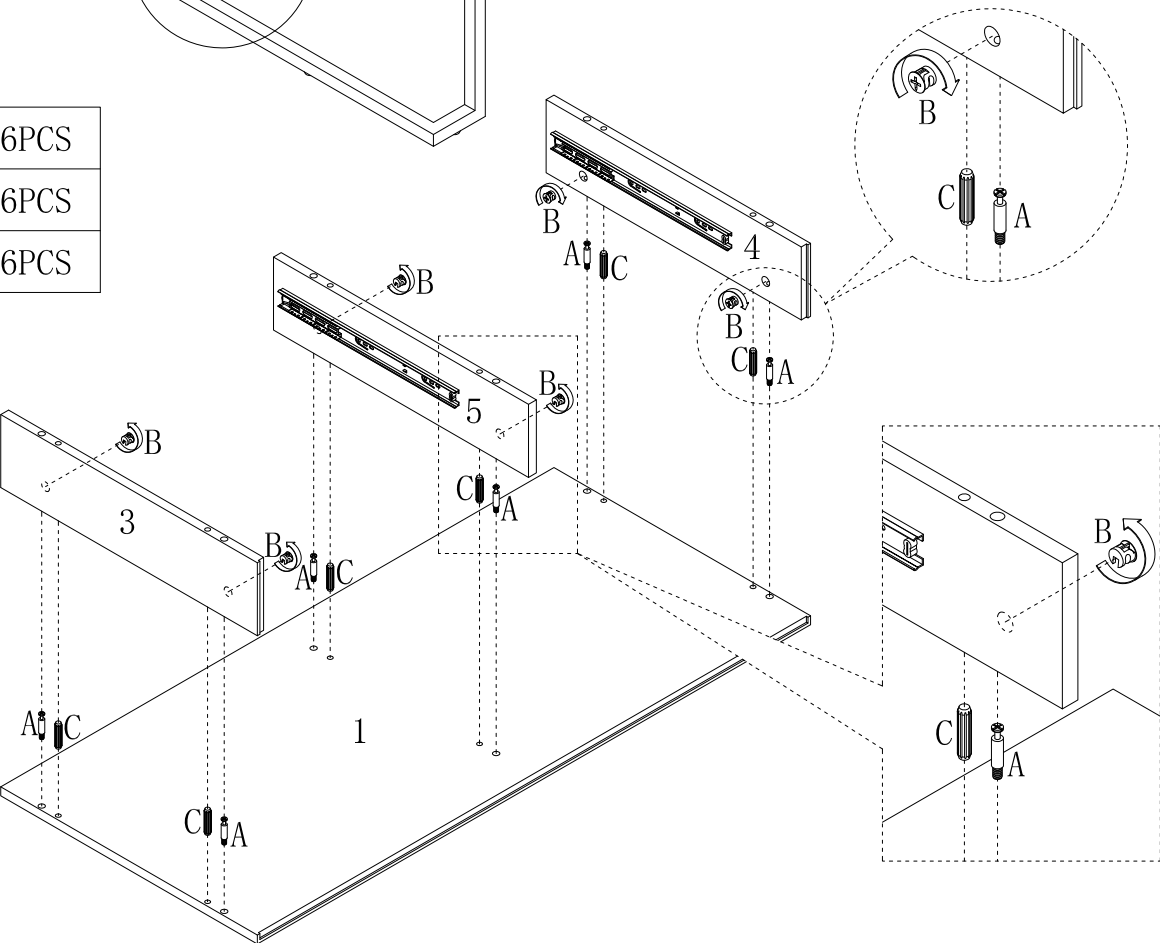
## STEP 2

E:		1PC
P:		2PCS





## STEP 3

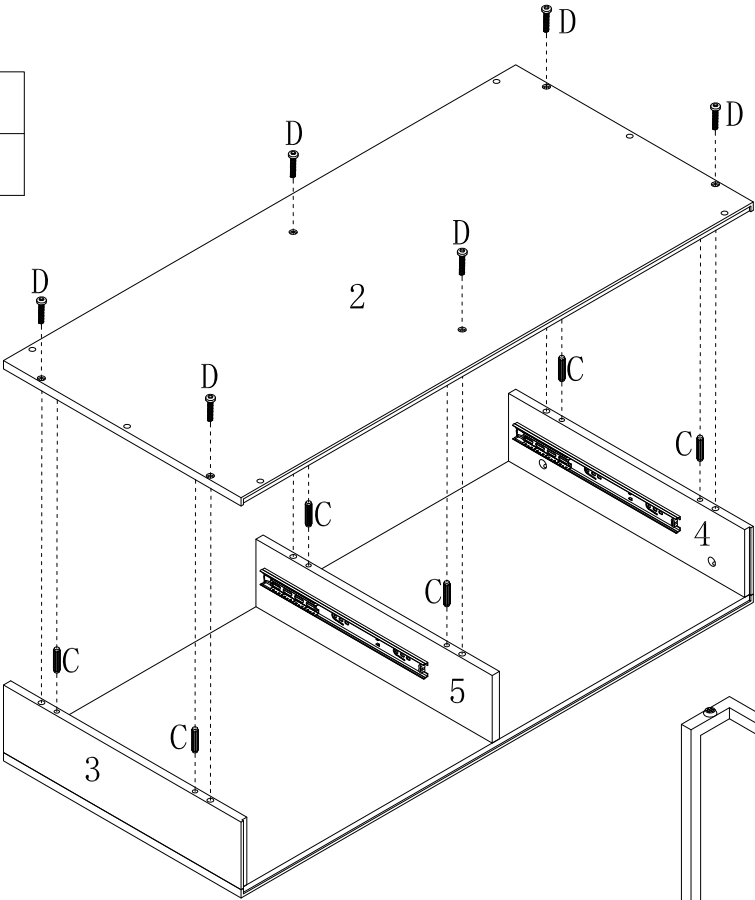
A:		6PCS
B:		6PCS
C:		6PCS




# ASSEMBLY INSTRUCTION

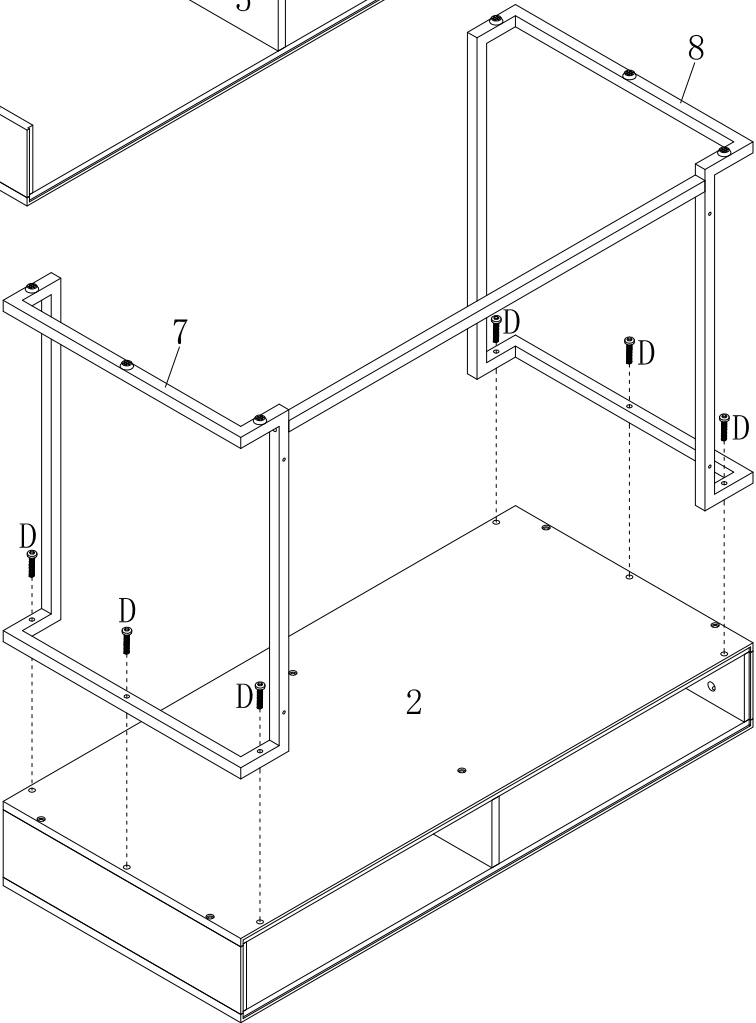
## STEP 4

C:		6PCS
D:		6PCS





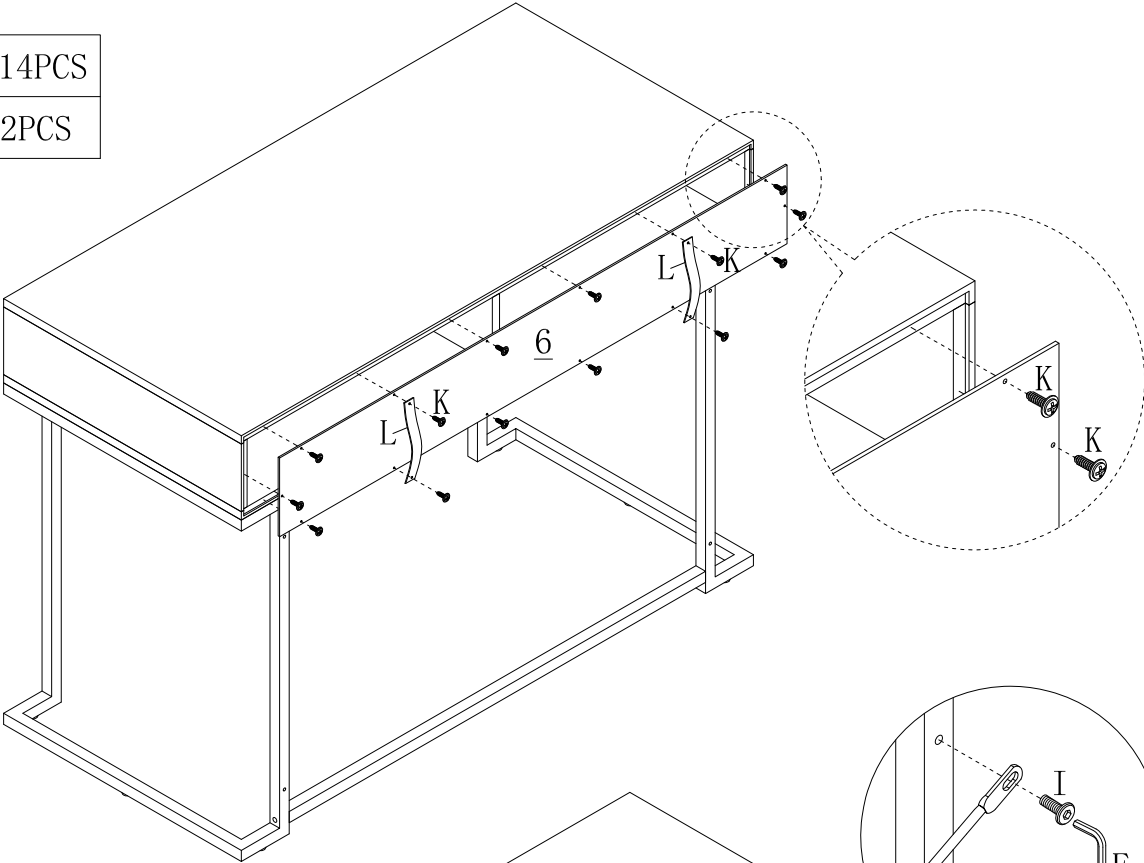
## STEP 5

D:		6PCS
----	-------------------------------------------------------------------------------------	------





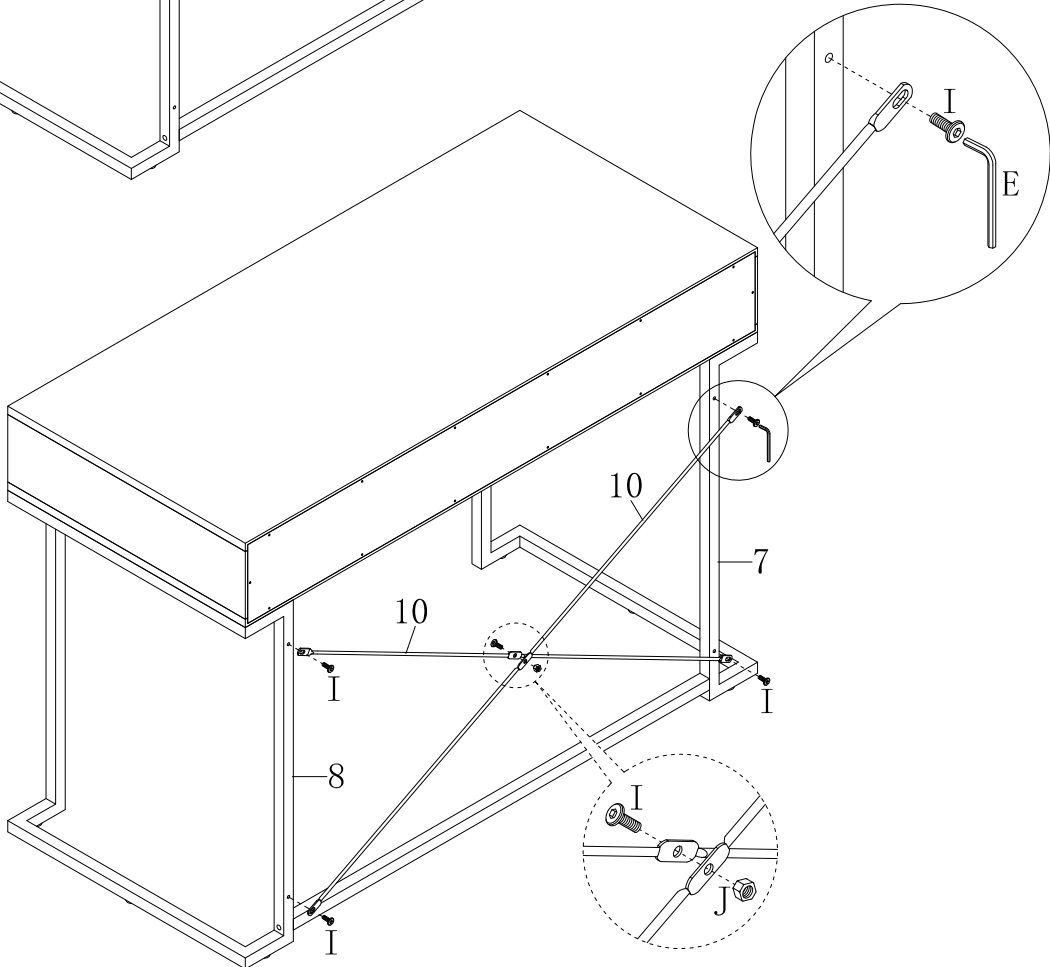
STEP 6

K:		14PCS
L:		2PCS



STEP 7

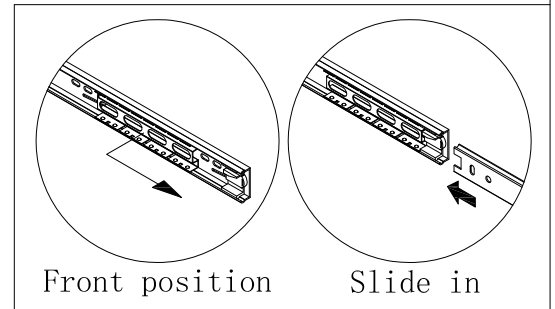
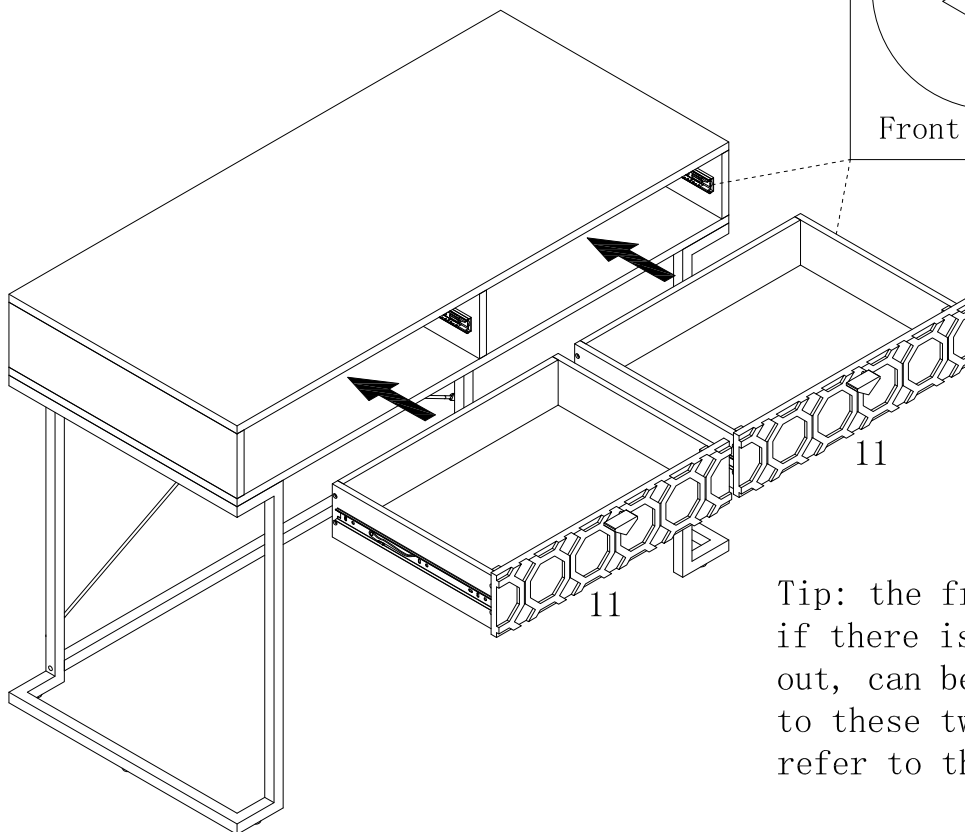
I:		5PCS
J:		1PC





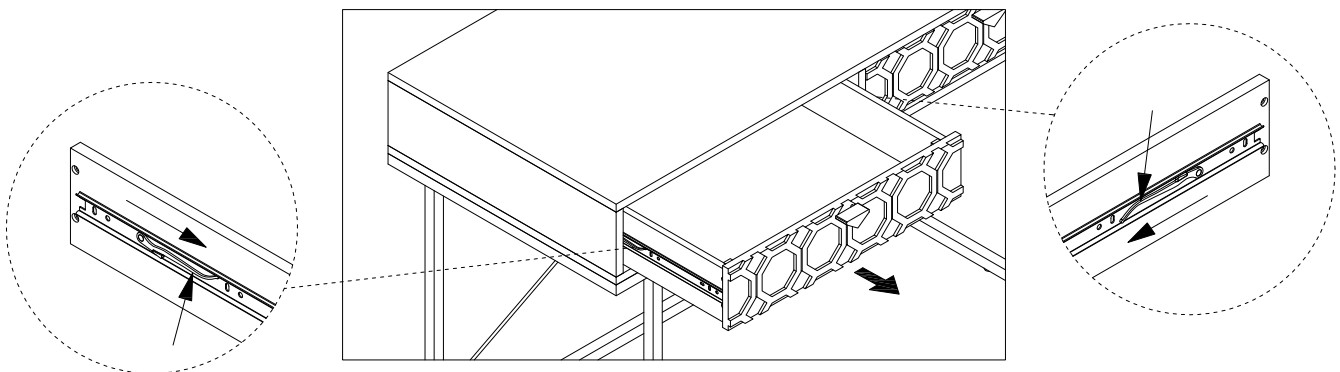
## STEP 8

Note: Place the slidable part to the front position before sliding in.






Tip: the front of the drawer, if there is tilt, do not force out, can be adjusted according to these two positions, please refer to the following steps.

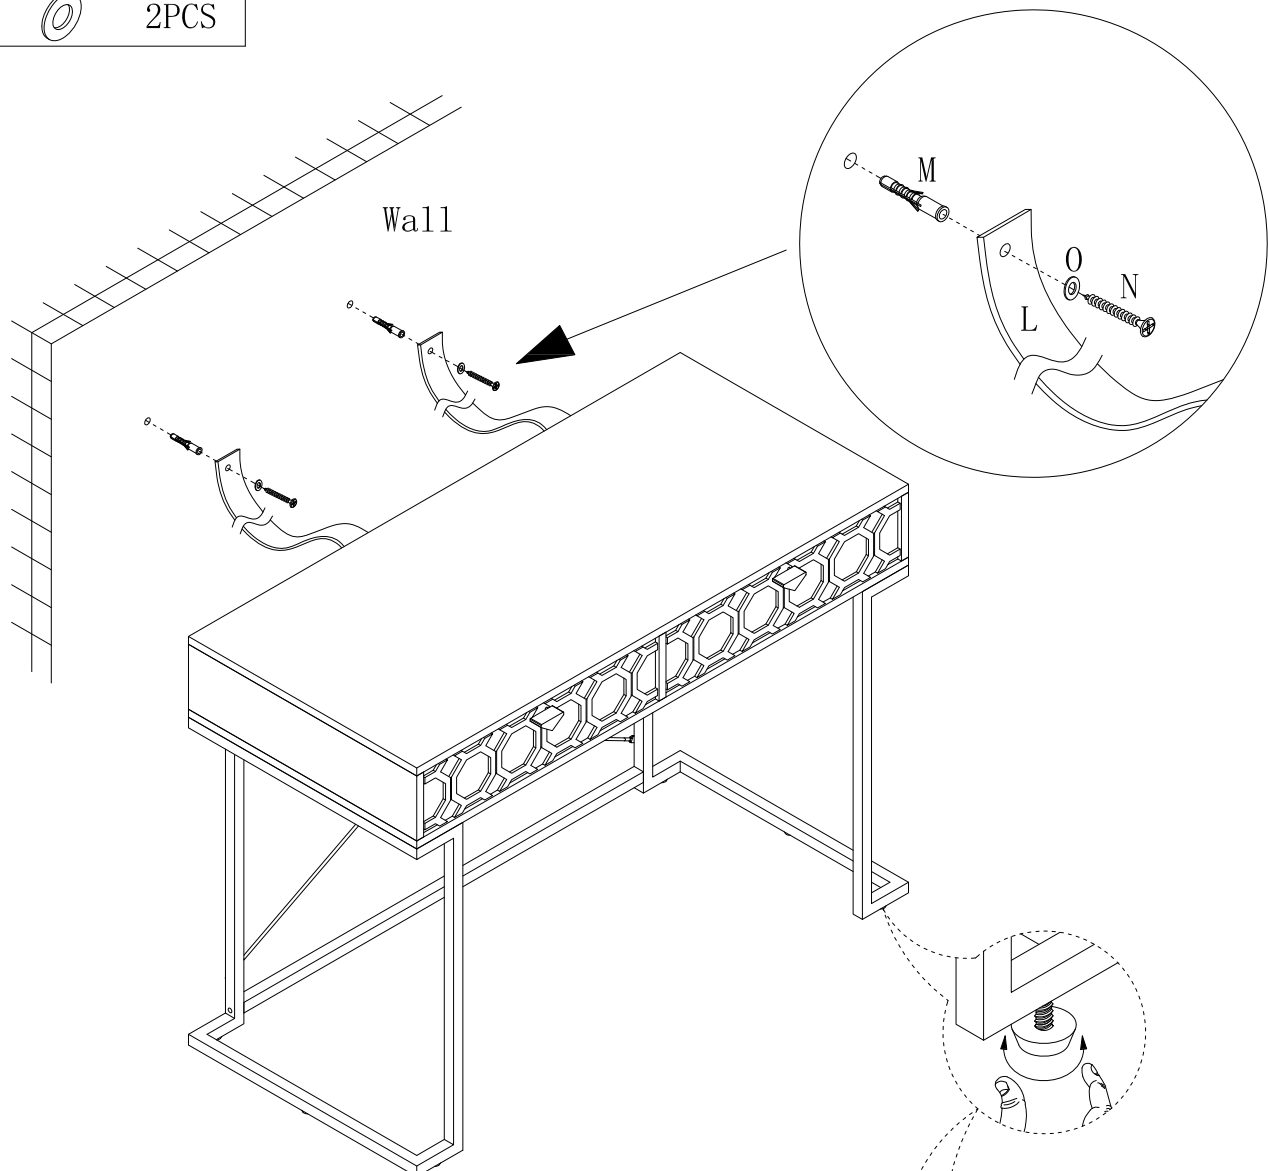
remove the drawer



## STEP 9

M:		2PCS
N:		2PCS
O:		2PCS

For safety reasons, it is recommended to install safety wall strap to fix the item.



After installation, adjust the adjustable foot to keep the table balanced.