


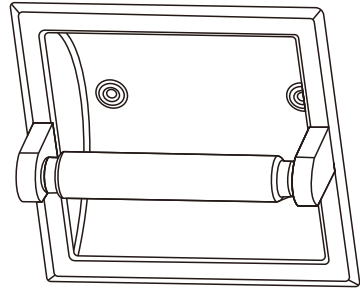

MODEL:0204

INSTALLATION INSTRUCTIONS




Included in the package:

- 1.Holder
- 2.Roller
- 3.Clamp
- 4.Spring
- 5.Screws x2


Before installation:

1. Please check the list of parts.
2. If any parts are missing or damaged, do not attempt to assemble, install, or operate the product, then contact us as soon as possible to get a new.
3. Required tools (not included): pencil, ruler, drill, safety glasses, phillips screwdriver.


Installation steps for hollow walls and wood cabinets:

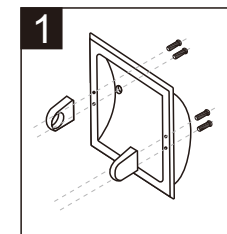


1. install two brackets of toilet paper bar on the main body.

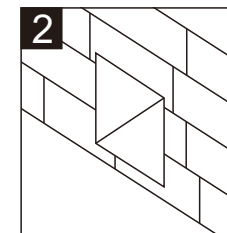


2. Using the ruler&pencil, mark a square measuring 5.3" x 5.3" in the mounting surface where you wish to place the holder.
Check to make sure there are no wall studs behind the square.
Reposition if necessary.
Cut the square.

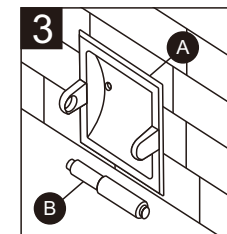


3. Remove the roller "B" from the holder. Align the paper towel dispenser with the pre-determined hole positions on the wall.

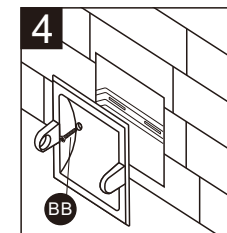

4. Pass the two screws "BB" through the holder and into the slots in the clamp.
Tighten the screws 3/4-turn each so that the clamp is loosely attached to the holder.

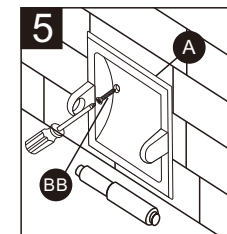

5. Carefully insert the screws "BB" into the square by turning the assembly diagonally, so that the clamp ends can be eased into the corners. First slip one end of the clamp in, then the other.

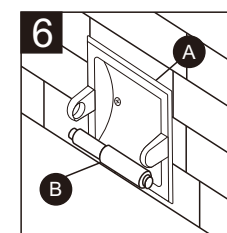


6. Return the assembly to a horizontal position.
Tighten the screws "BB" so that the holder is drawn firmly and evenly against the mounting surface. Be careful not to over-tighten. Use the level to check alignment.
Insert the roller "B" and enjoy.




MODEL:0204

INSTALLATION INSTRUCTIONS


Installation steps for drywall:

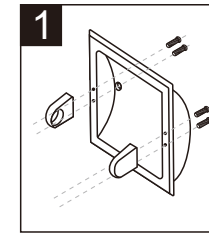


1. install two brackets of toilet paper bar on the main body.

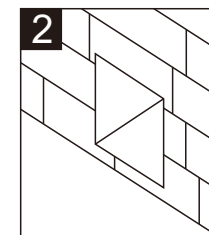


2. Using the ruler&pencil, mark a square measuring 5.3" x 5.3" in the mounting surface where you wish to place the holder.
Check to make sure there are no wall studs behind the square.
Reposition if necessary.
Cut the square.
Note that the spring requires a wall opening less than 4 inches deep.

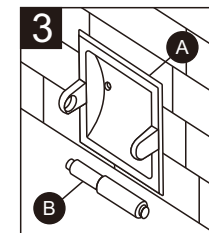


3. Remove the roller "B" from the holder. Note the FORIOUS logo on the holder and orient upright.

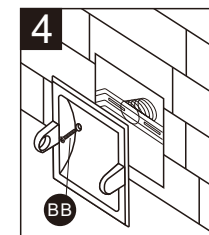

4. Insert one end of the clamp through the first loop of the spring. Position the spring so that it is perpendicular to the middle of the clamp.
Position the clamp and spring assembly inside the wall. The spring should compress against the interior (rear) wall, pushing the clamp in place against the drywall.

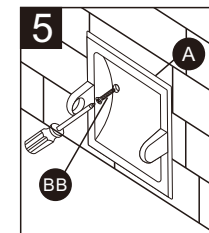

5. Pass the two screws "BB" through the holder and into the slots in the clamp.
Tighten the screws so that the holder is drawn firmly and evenly against the mounting surface. Be careful not to over-tighten. Use the level to check alignment.

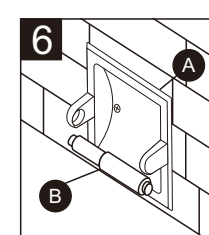

6. Insert the roller "B" and enjoy.