

FibaTape®


SELF-ADHESIVE WALL REPAIR FABRIC

TOOLS & MATERIALS

- FibaTape Super Crackstop
- Taping knife
- Joint compound
- Sanding block



Self-Adhesive

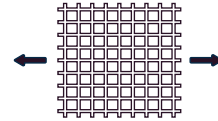

Wide Width



Professional Finish



PROJECT TIME: 30-60 min + dry time



SKILL LEVEL: Advanced DIY

INSTRUCTIONS:

1. Clean area to be repaired, removing any loose plaster, stucco & debris.
2. Apply self-adhesive side directly to the entire repair area. Be sure to avoid wrinkling fabric. Apply fabric extending 1" (2.5 cm) beyond repair.
3. Cover fabric completely with a thin coat of plaster or drywall compound.
4. When completely dry, sand lightly and apply a wider finish coat. Apply additional finish coats if necessary.
5. Prime and paint.

