

VERTICAL FILE CABINET ASSEMBLY INSTRUCTIONS

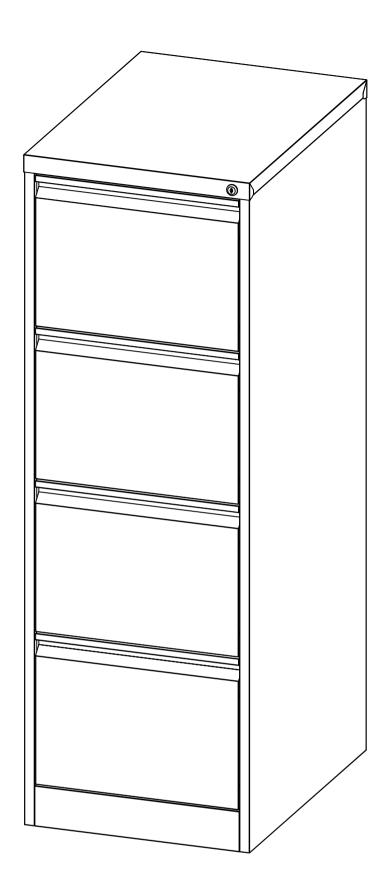


NOTE: The assembling task can be performed by one person but availability of a second person will make the task simpler.




Please scan the QR code to check the assemble video

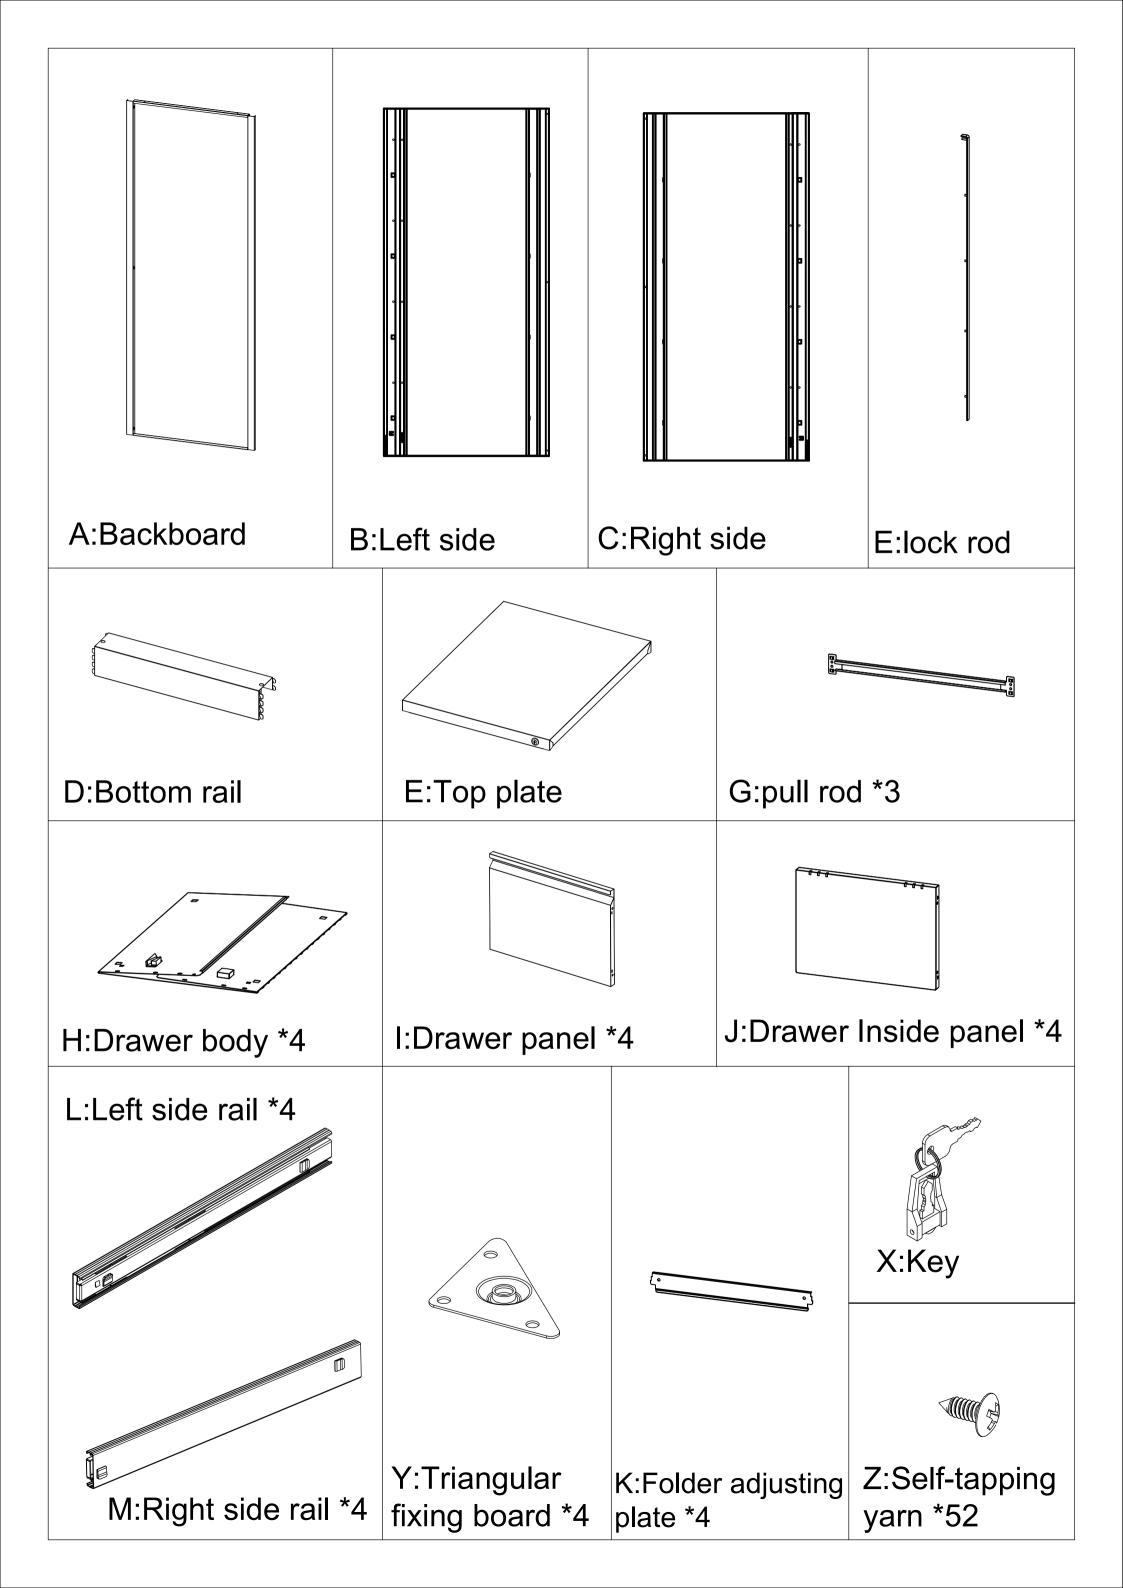


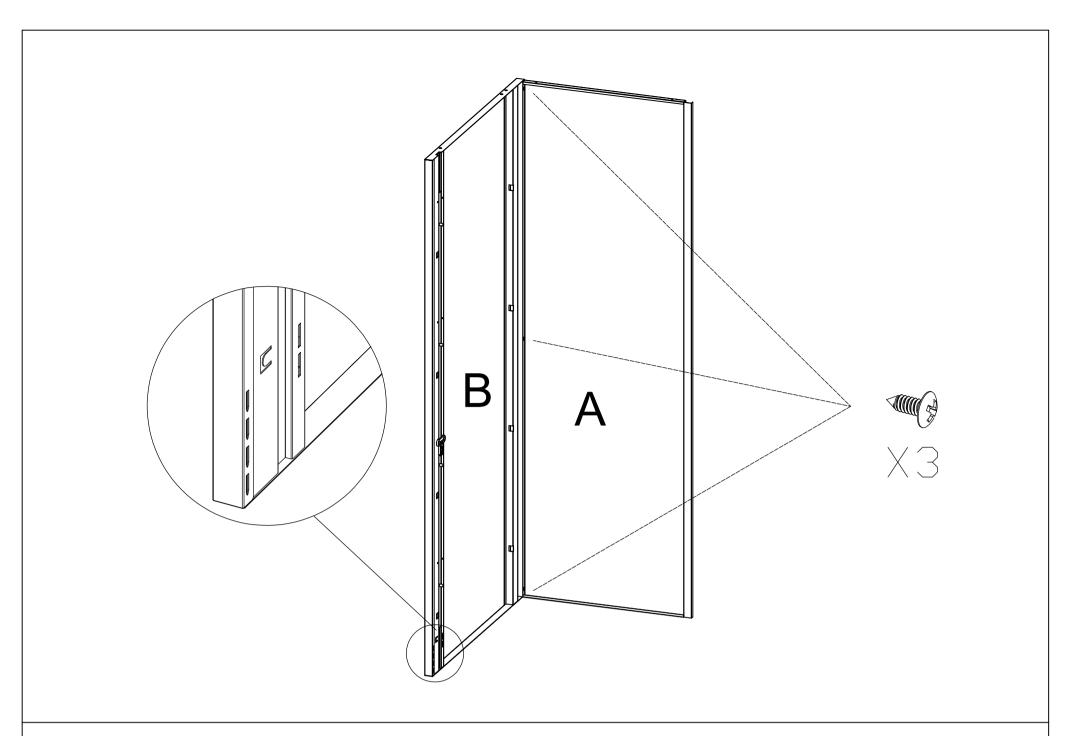


1. Assemble A and B, secure with screw Z

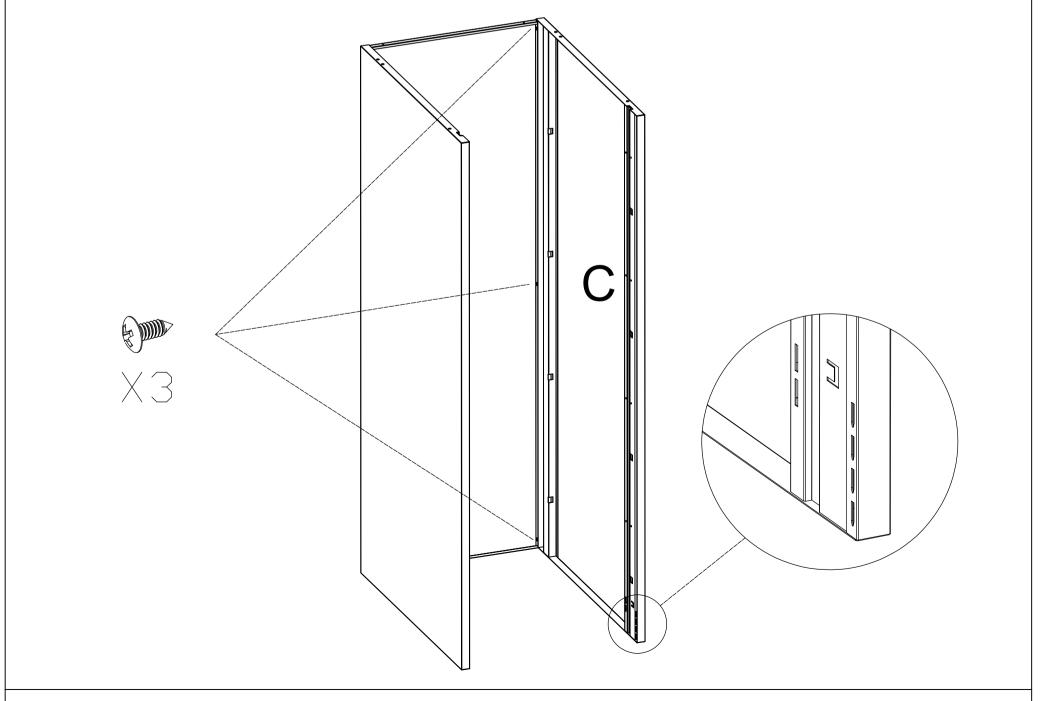


2. Assemble C and B, secure with screw Z

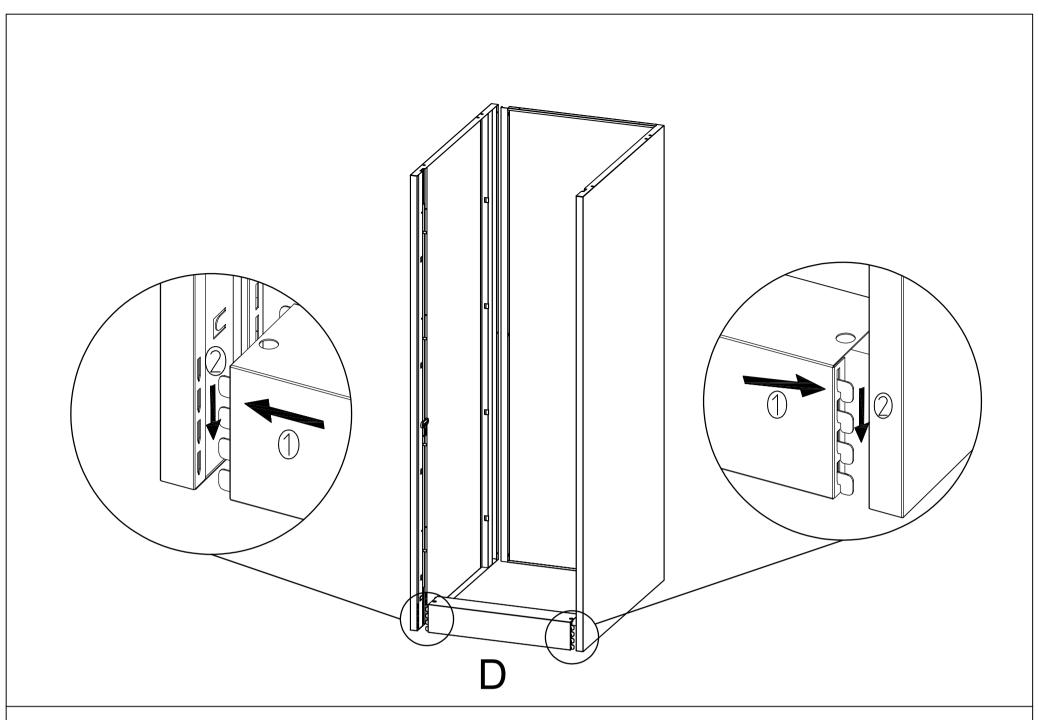


3. Install D

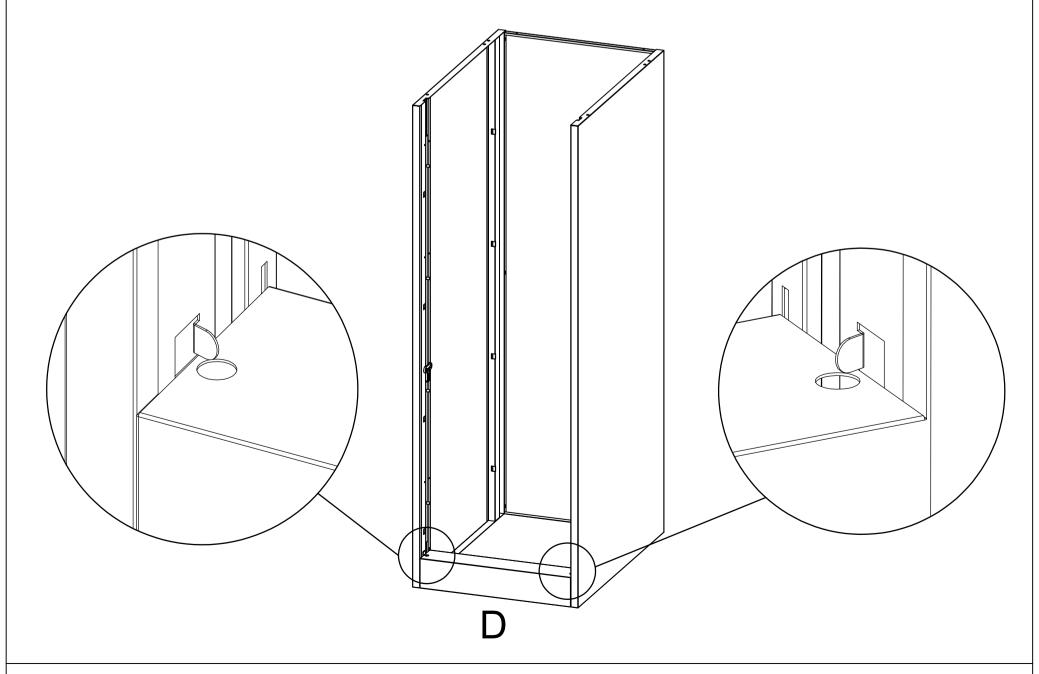


4. Open baffle

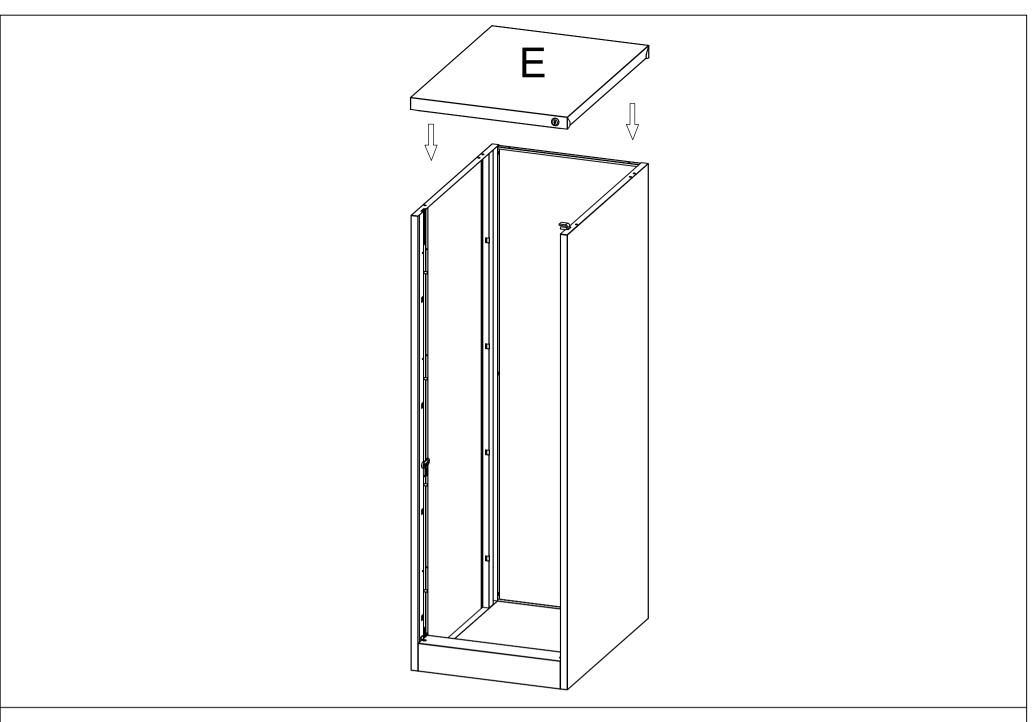


5. Install E

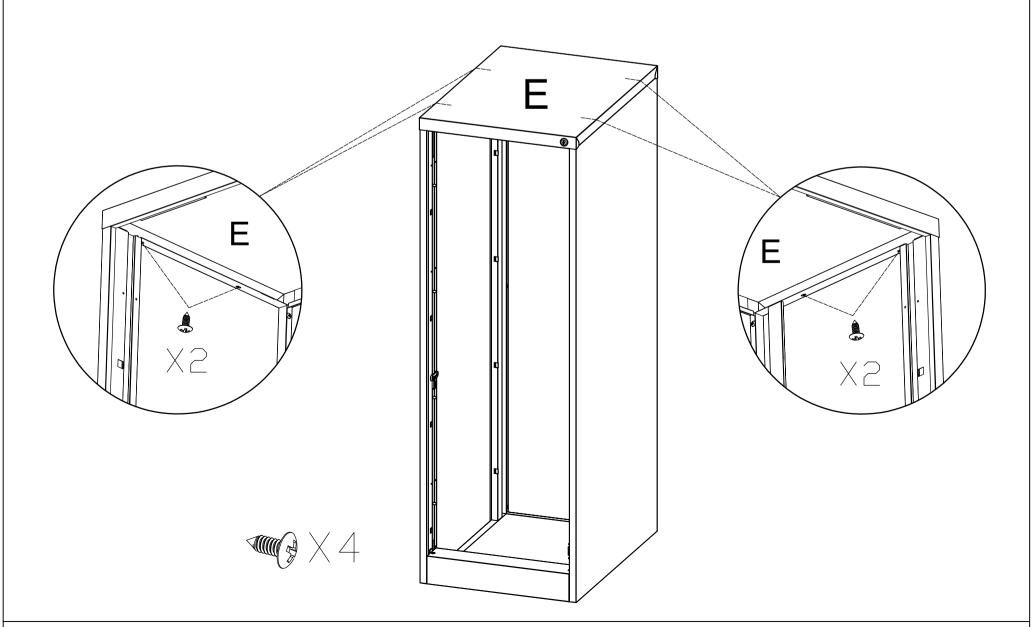


6. Secure with screw Z

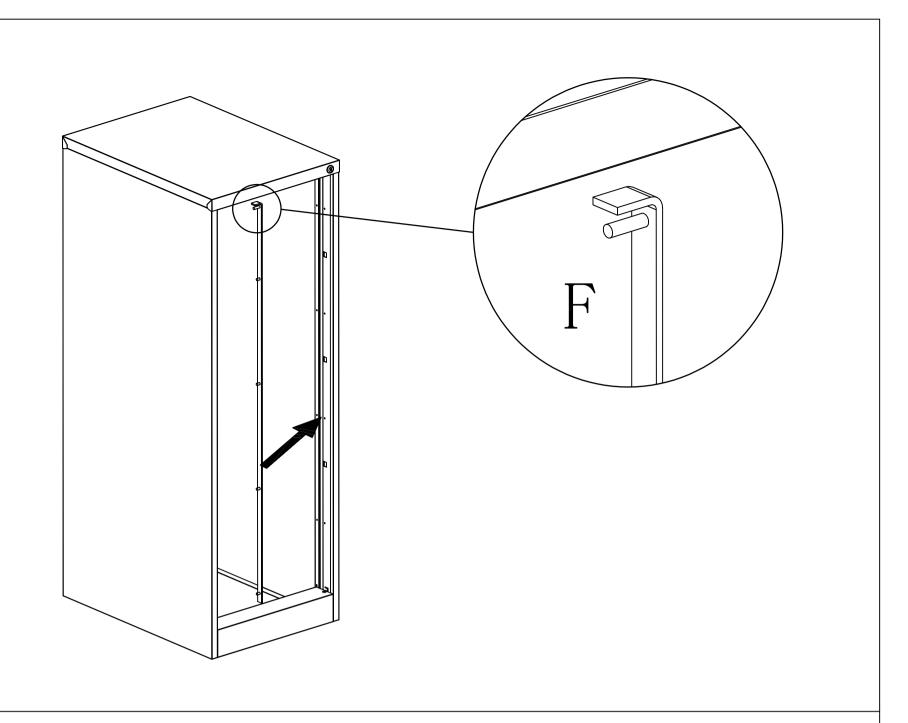


7. Install F

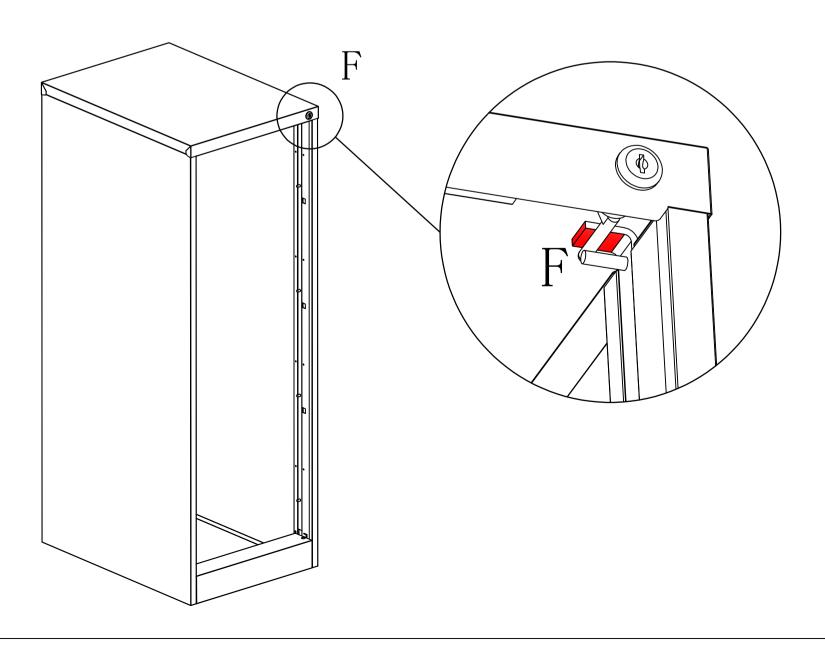


8. F Hook the lock

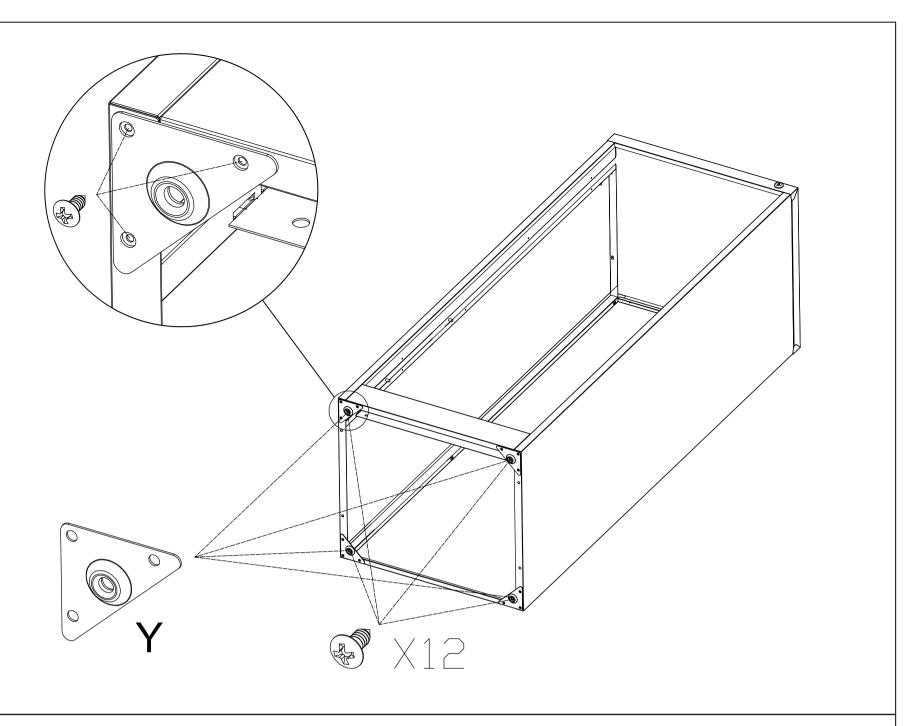


9. Install Y, secure with screw Z

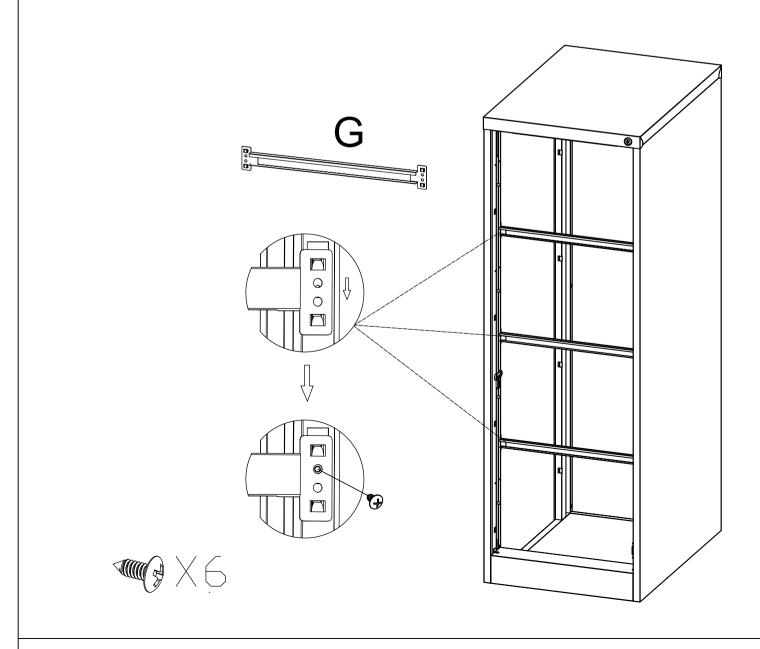


10. Install G, secure with screw Z

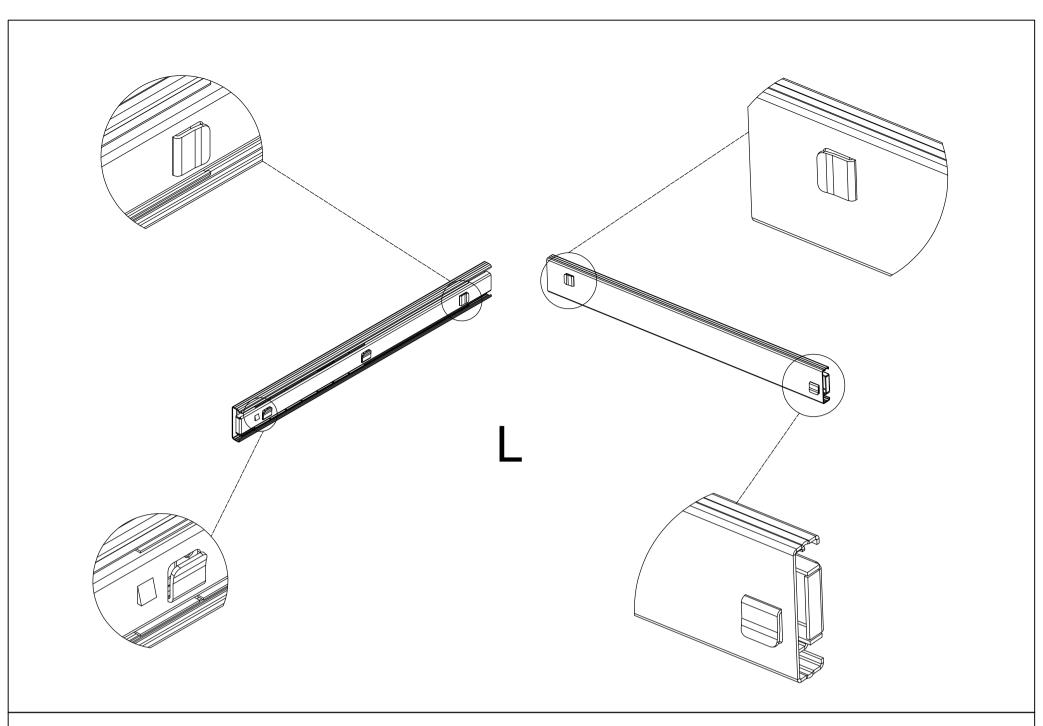


11. Left side rail L

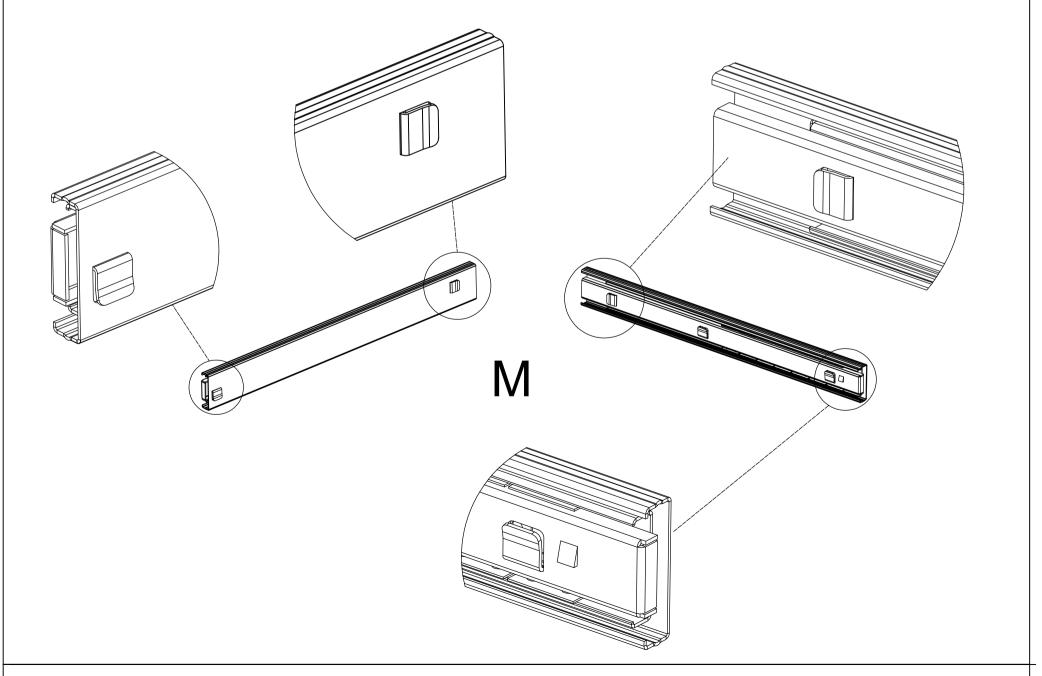


12. Right side rail M

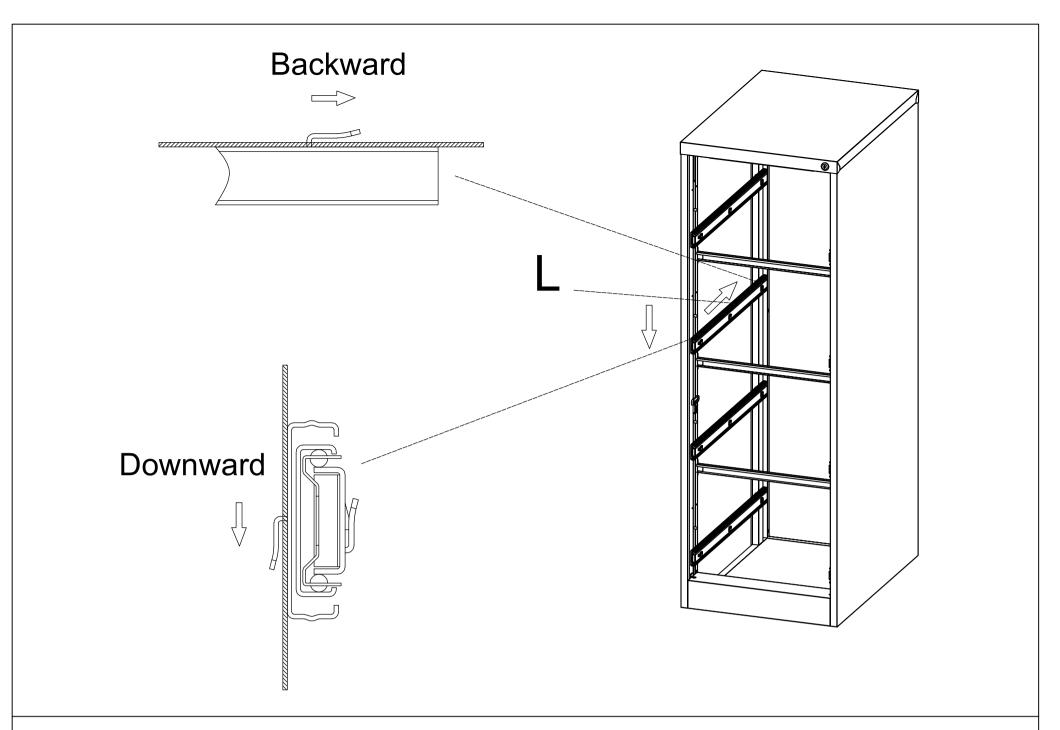


13. Install L

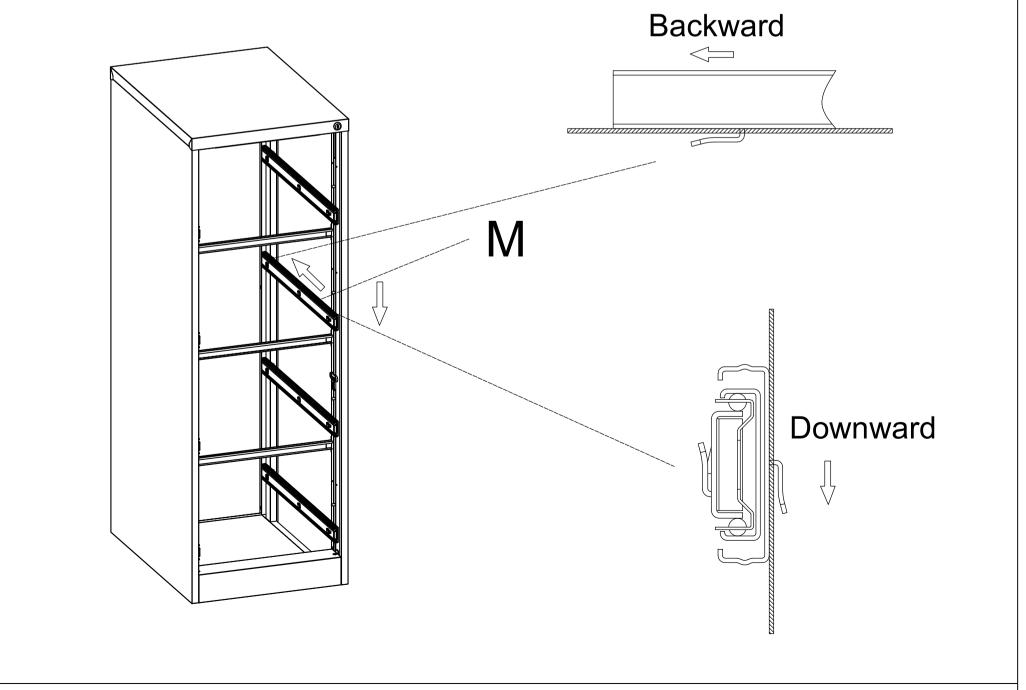


14. Install M

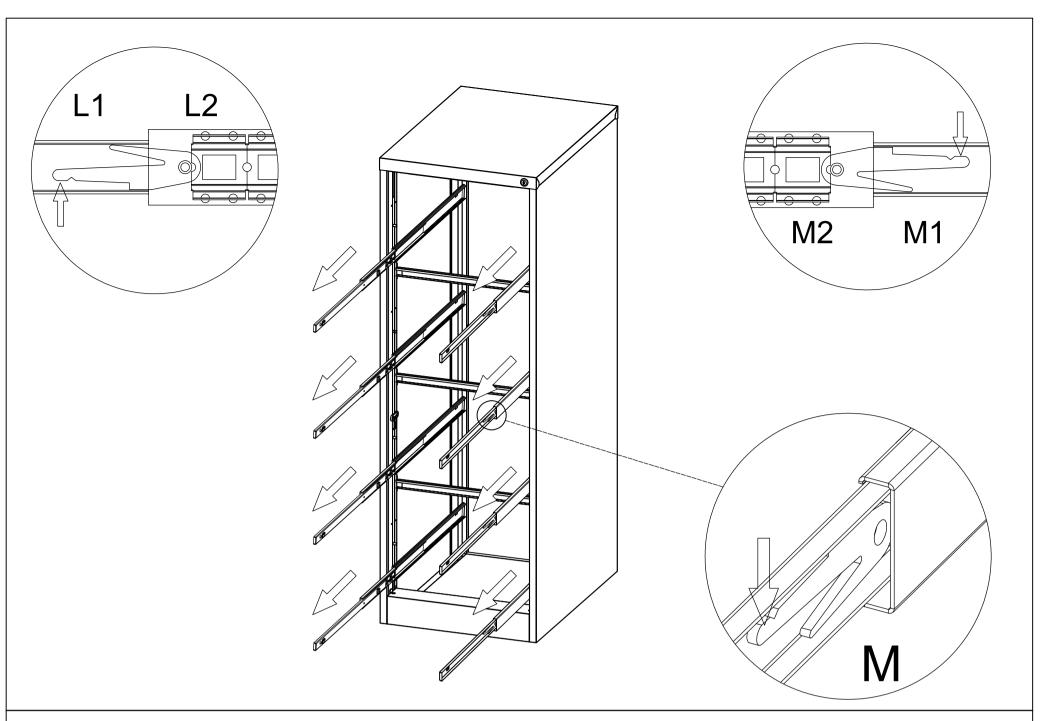


15. Divide the slide rail into L1(M1) and L2(M2)

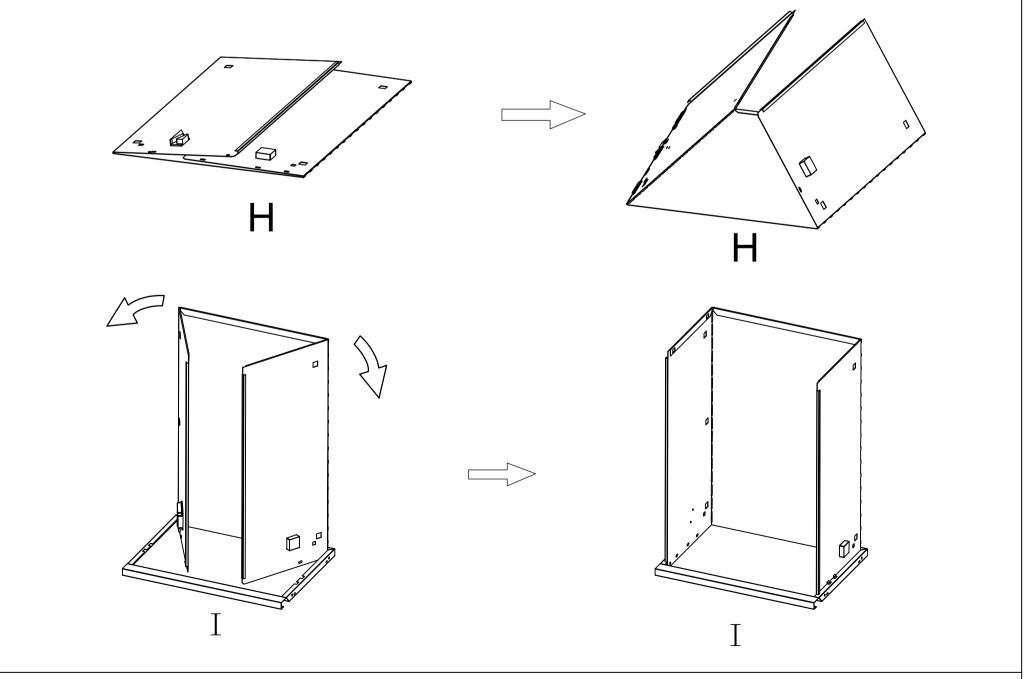


16. Assemble H and I

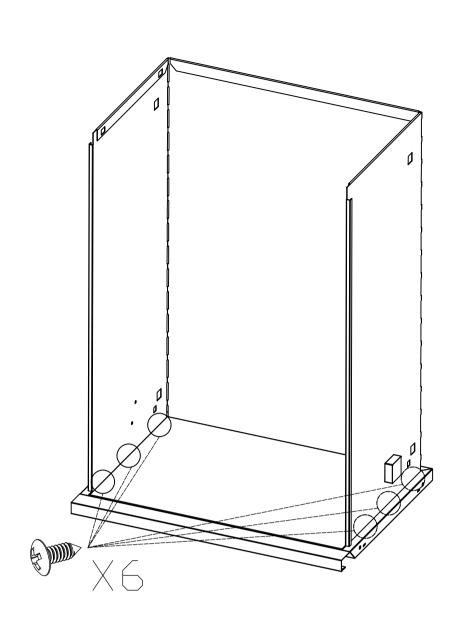


17. Secure with screw Z

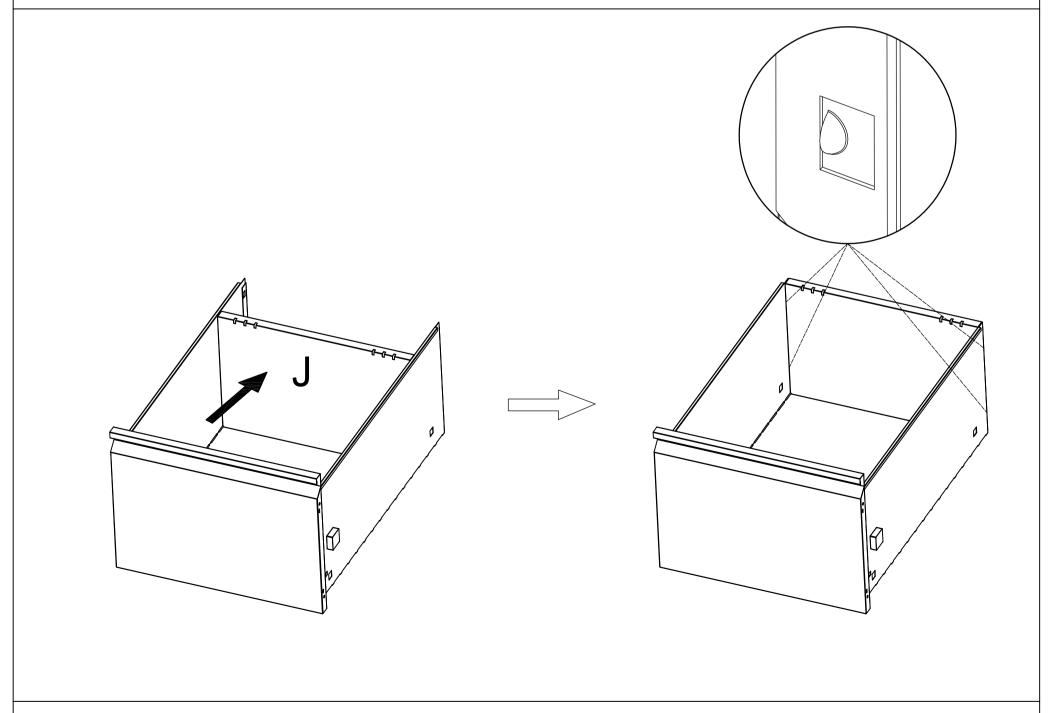


18. Install J

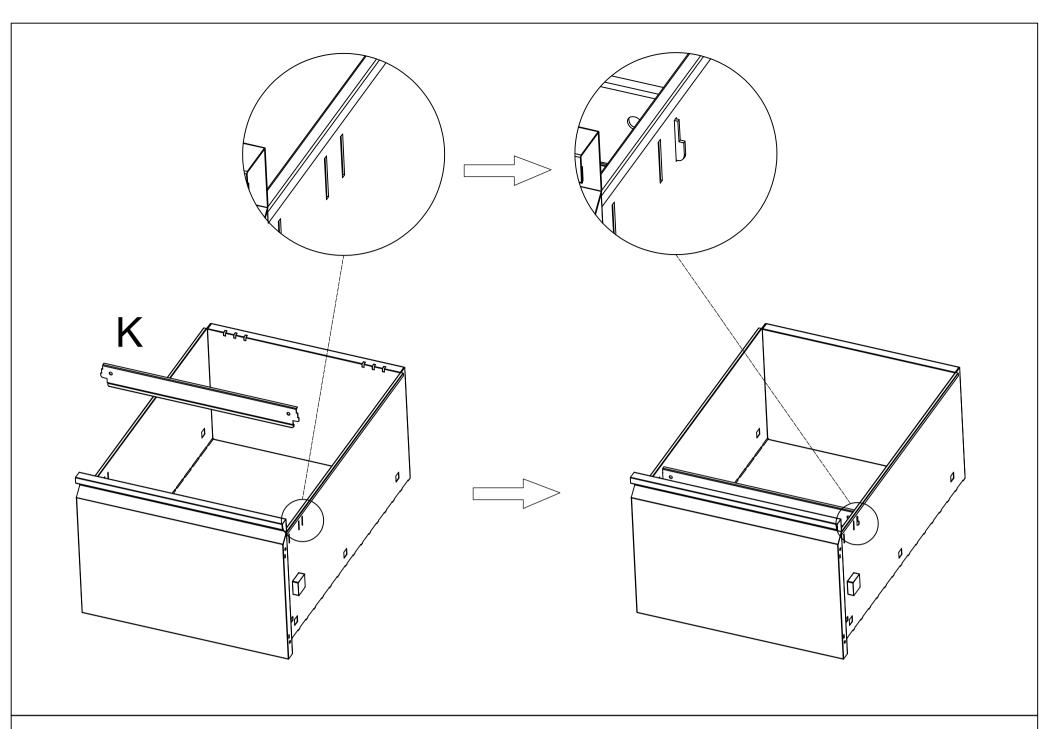


19. Install K

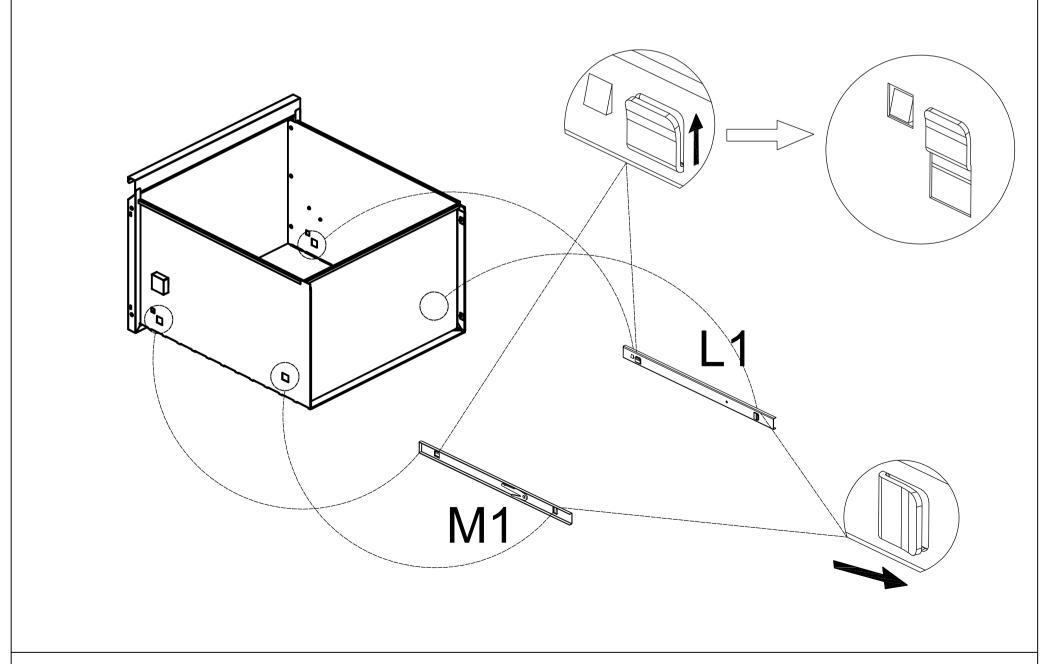

20. Install L1 and M1

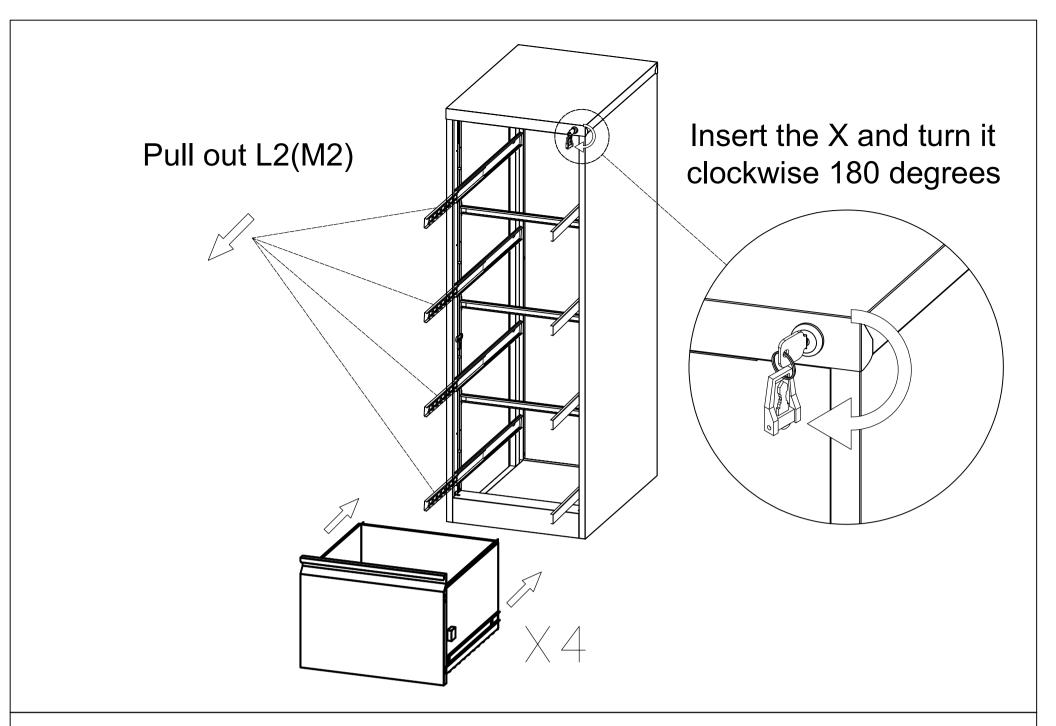

21. Install drawer

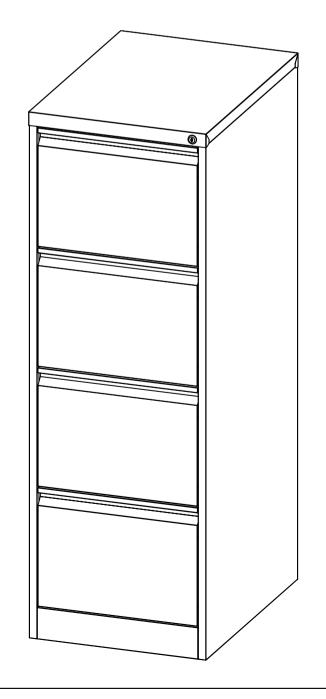

22. Assembly completed