




HIDE IT WITH STYLE

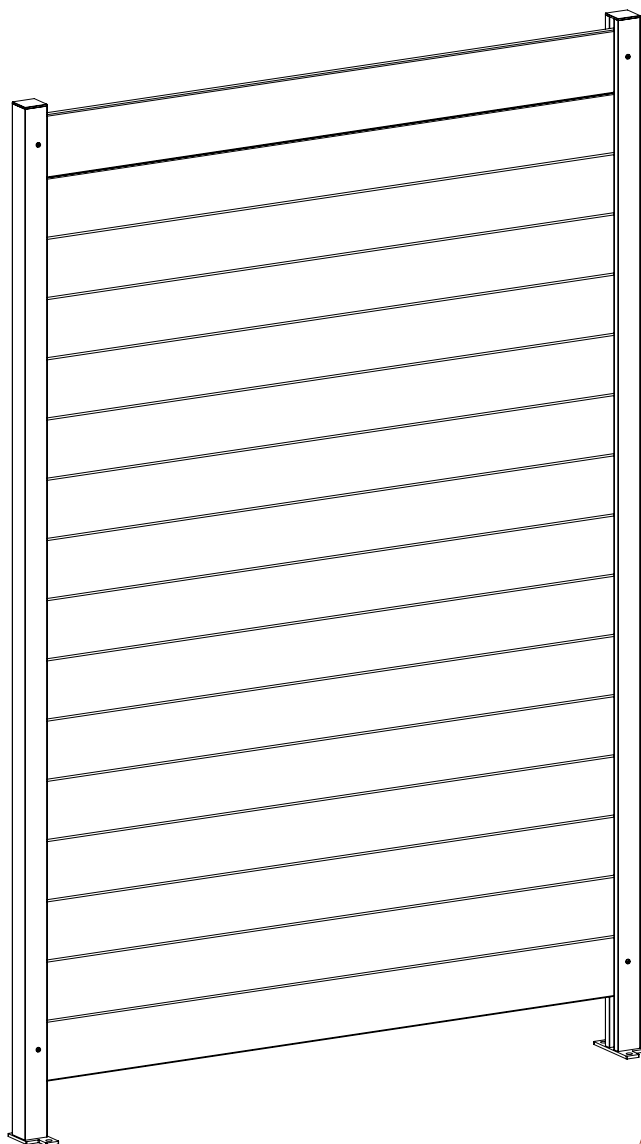

## 6ft Surface Mounted Privacy Wood Screen

48 1/2"W x 73"H

**90 min**  
**Assembly**  
*Approximate time*



**Assembly Video**  
*Scan the QR Code below*



**ASSEMBLY**  
**INSTRUCTIONS**  
EC18047

[www.encloscreens.com](http://www.encloscreens.com)

VER. 080825

## GENERAL INFORMATION

### MISSING OR DAMAGED PARTS?



➤ **Visit Our Website**  
so we can help you right away!  
**parts.nychbrands.com**

\* You can also reach us via phone or email.

Hours of Operation - **Weekdays 9am-5pm EST**

To better help you, **please have the following**

- Your product number (**EC18047**)
- Your affected part letters (**pages 4**)
- Your original product box

### NEED ASSEMBLY HELP?


If you are having problems with assembly or installation of this product,  
**please contact at:**

📞 **704-892-5222 / 877-234-6196**    ✉ **support@encloscreens.com**

### NEED TO RETURN?

If for some reason you need to return this product, please allow us to help resolve your issues first. If you still decide to return the product, **you will need to initiate the return from the company you originally purchased from.**

DETAILED **PRODUCT DIMENSIONS & SPECIFICATIONS**

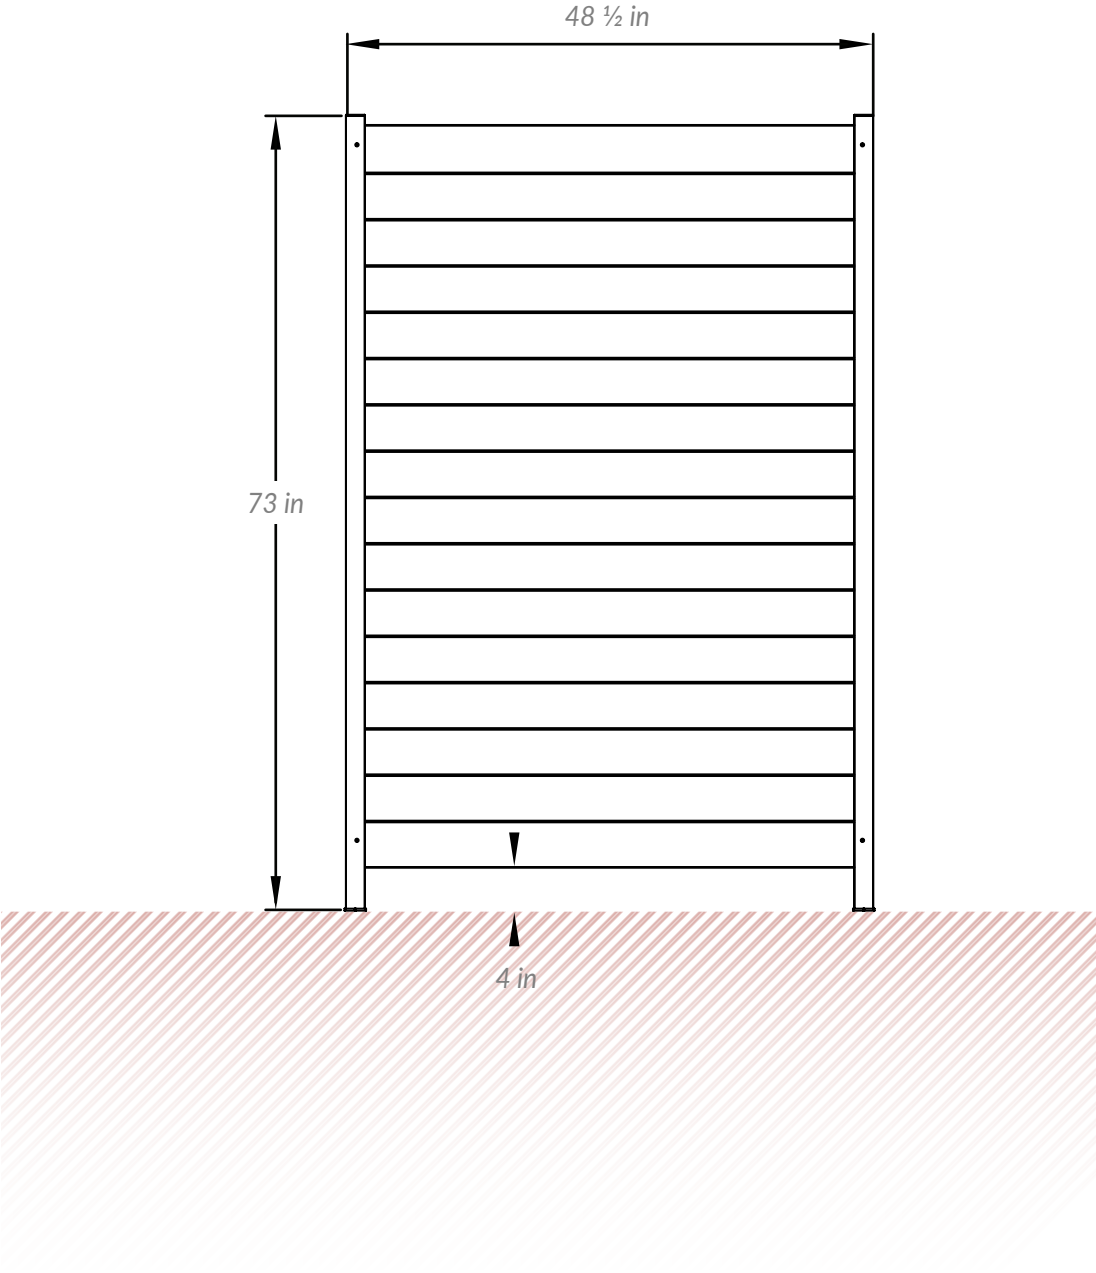


## LAY OUT MATERIALS

### LARGE PARTS


A

**Left Post (1)**  
 $1\frac{3}{4}" \times 1\frac{3}{4}" \times 72\frac{7}{8}"$

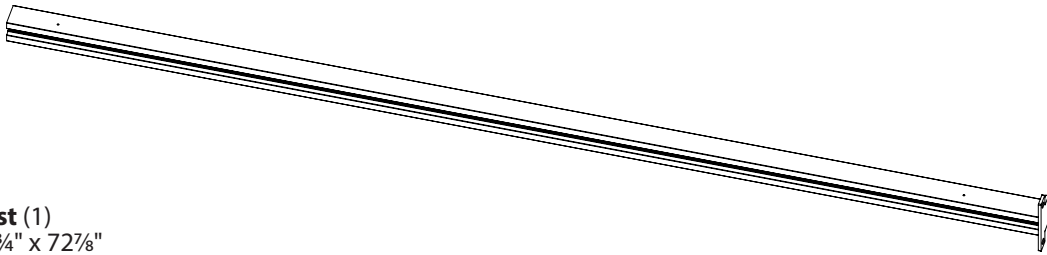


B

**Right Post (1)**  
 $1\frac{3}{4}" \times 1\frac{3}{4}" \times 72\frac{7}{8}"$

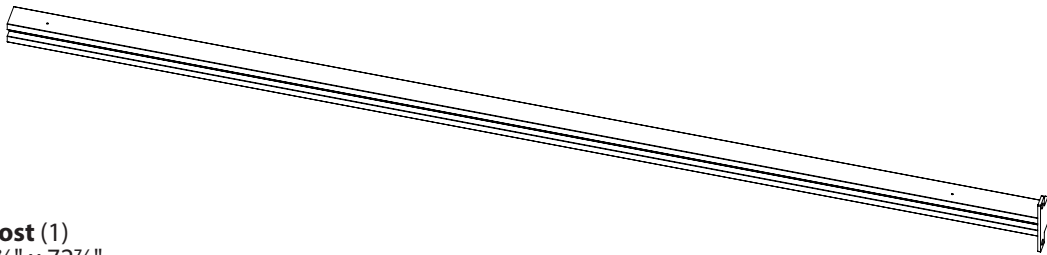

C

**Wooden Slats (15)**  
 $\frac{5}{8}" \times 4\frac{1}{2}" \times 47\frac{1}{4}"$



D

**Top Board (1)**  
 $\frac{5}{8}" \times 4\frac{1}{2}" \times 47\frac{1}{4}"$



### SMALL PARTS


E

**Wooden Spacer (2)**




F

**Post Cap (2)**

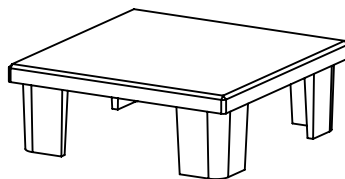

G


**1" Self-Drilling Stainless Steel Screw (8)**




## TOOLS AND OPTIONAL HARDWARE

**NOT INCLUDED**


► We recommend 2 people for a smoother assembly.

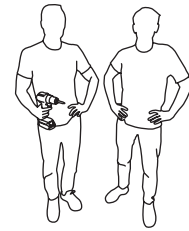

### DECK MOUNT

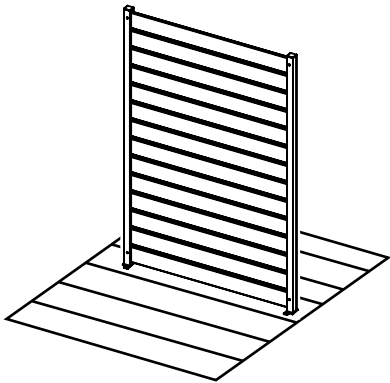

**Power Drill**

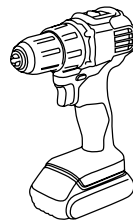


**1/4" Wood Drill Bit**




**1/4" Lag Screws 3" Length (4)**




**Matching Driver Bit**



### PATIO MOUNT

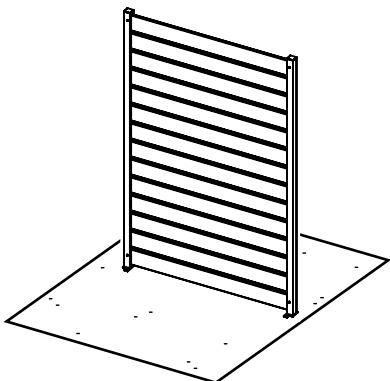


**Hammer Drill**

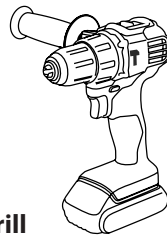


**1/4" Concrete Drill Bit**




**Hammer**



**1/4" Concrete Wedge Anchor 2 1/4" Length (4)**



**Matching Wrench**

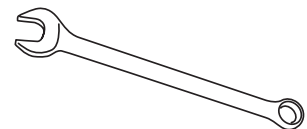


# ASSEMBLING



1

**A** x1


**B** x1

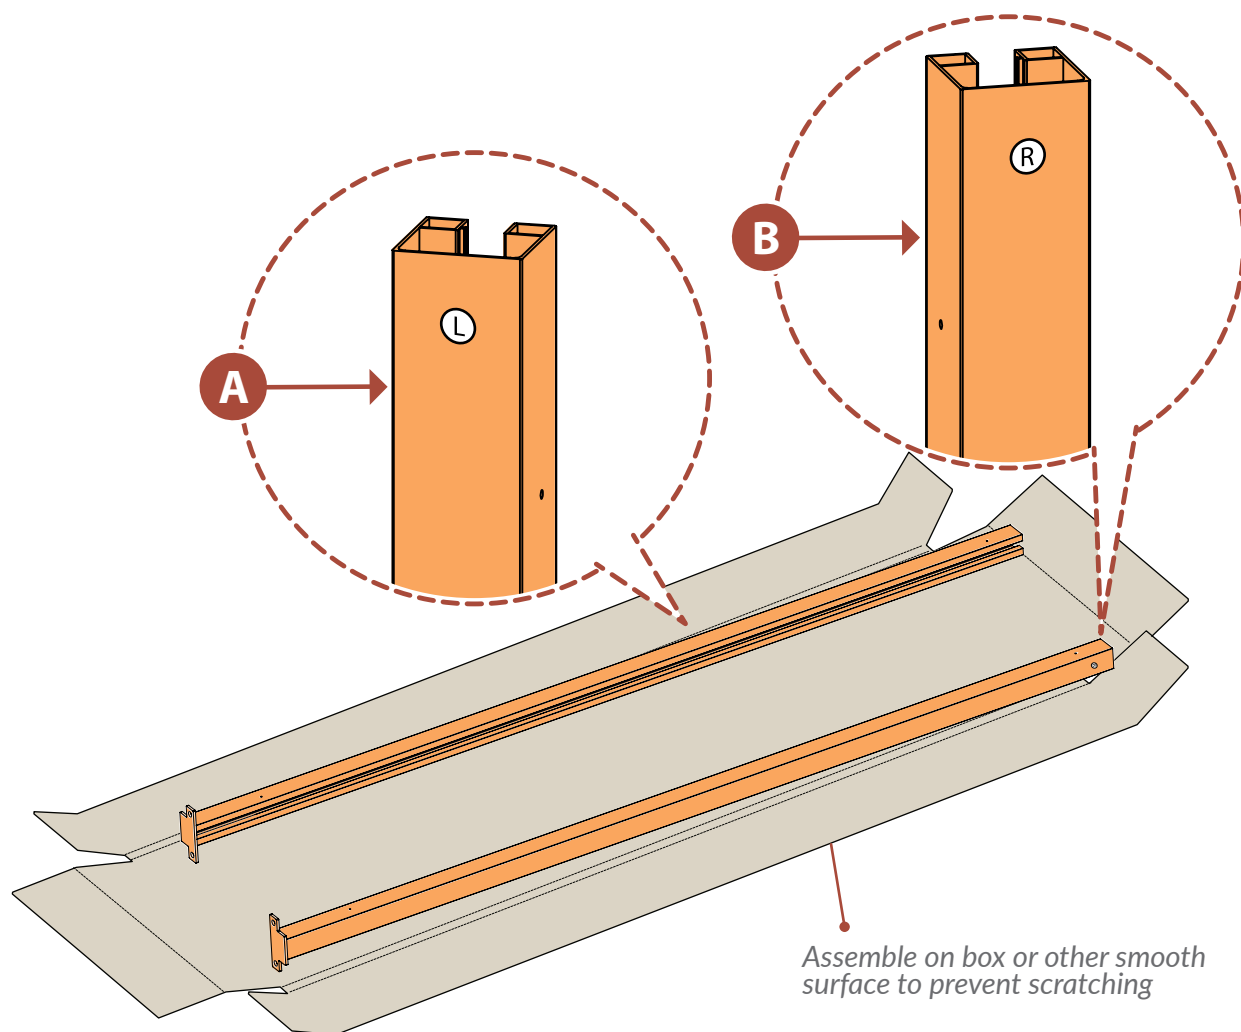


2

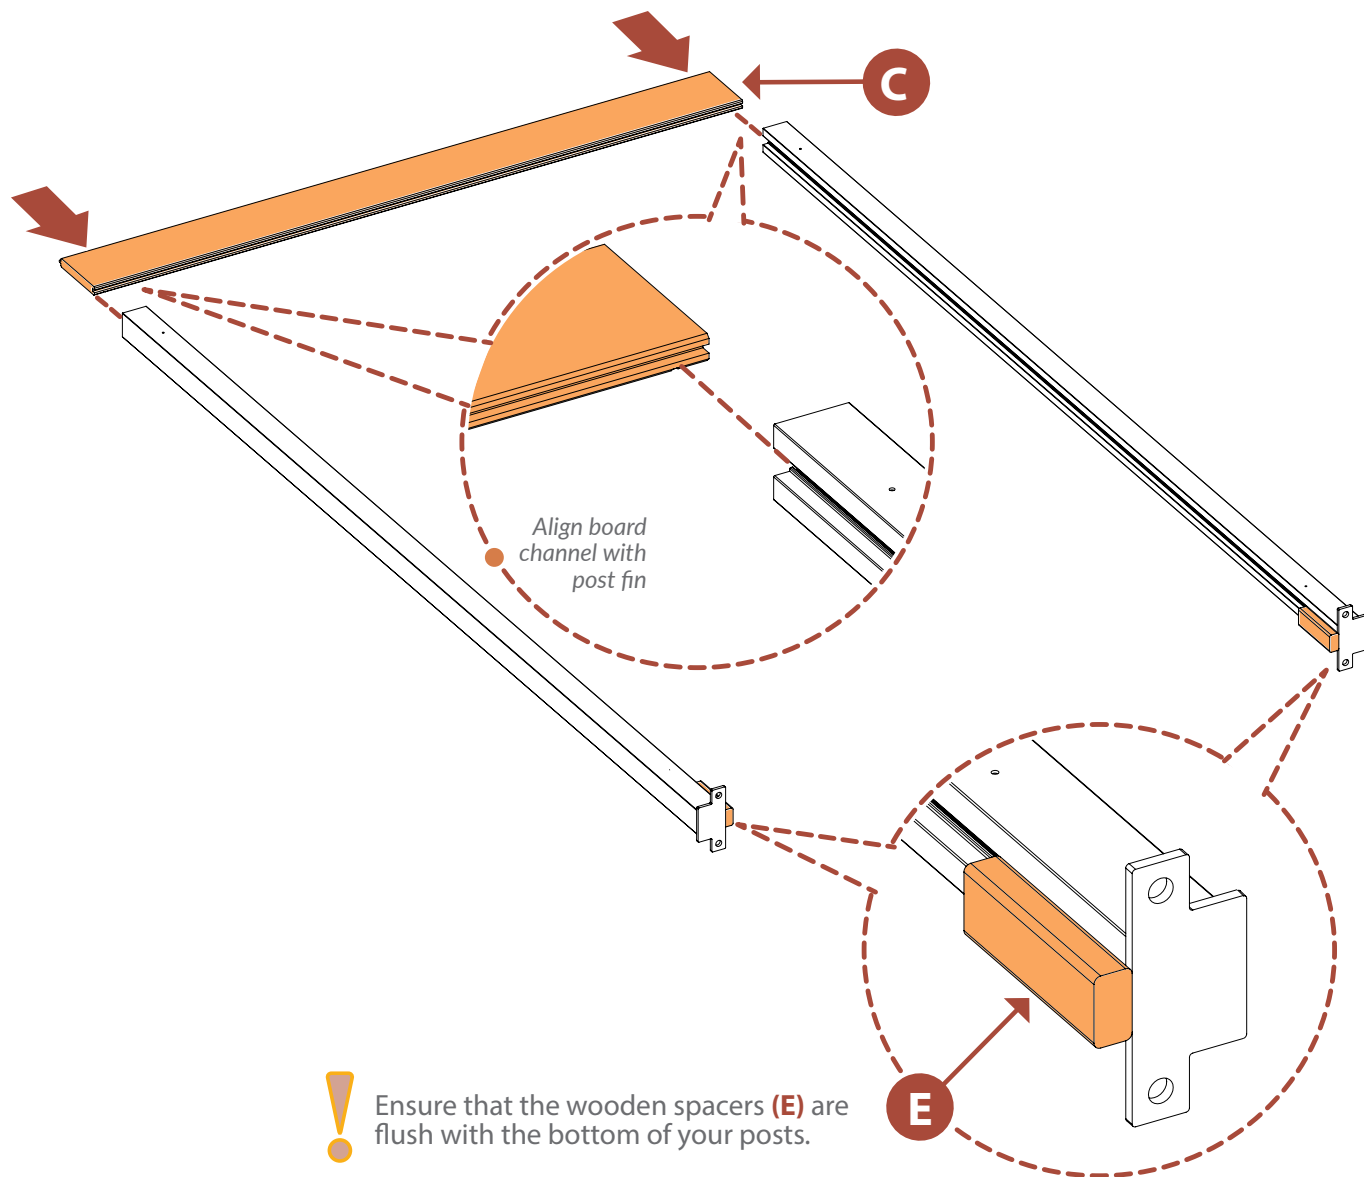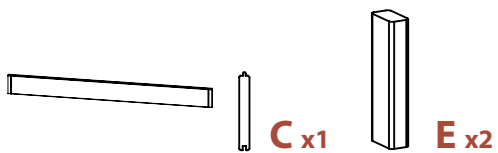

3




Place slat **(C)** at the top of your screen to make square.

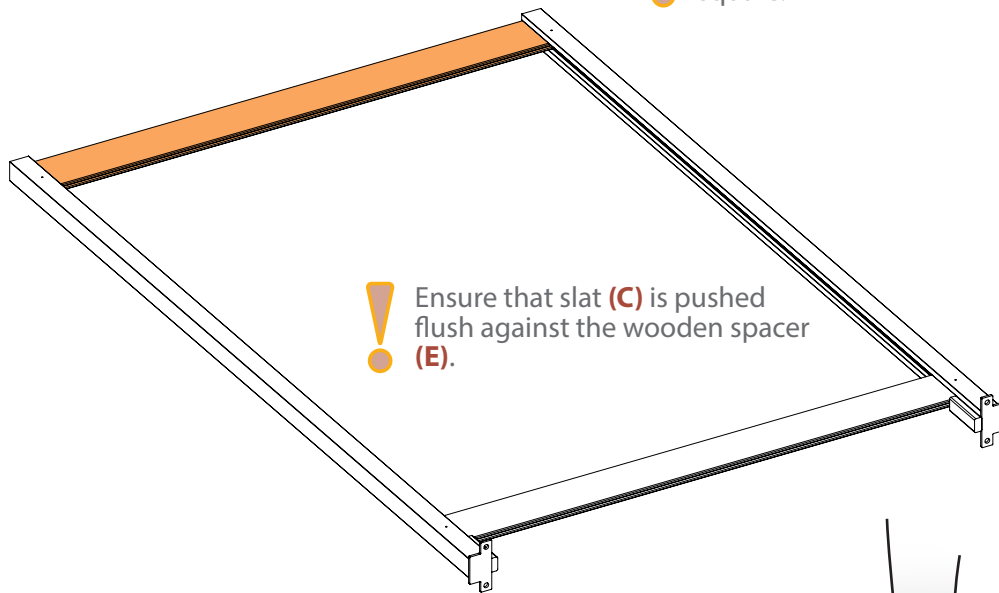

4



Push on the sides of your posts **(A & B)** to make square.

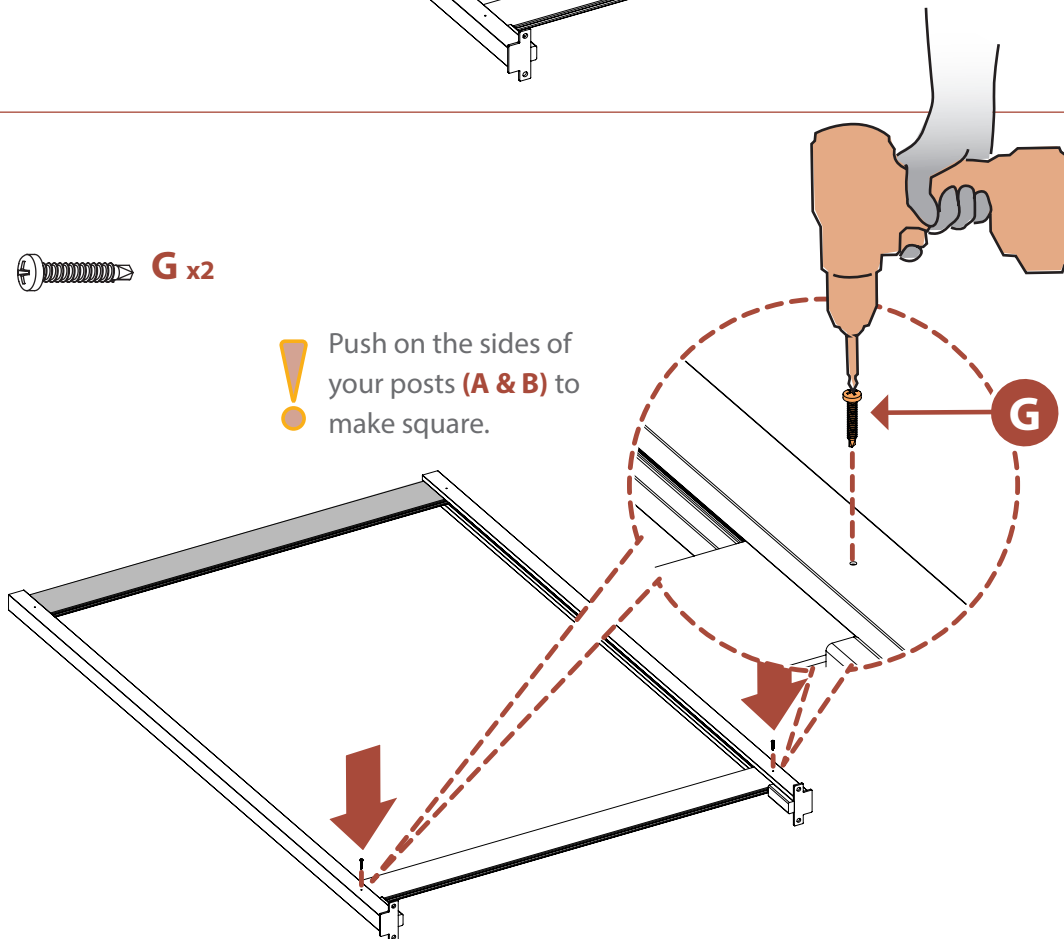





5





Slide slat (C) down.

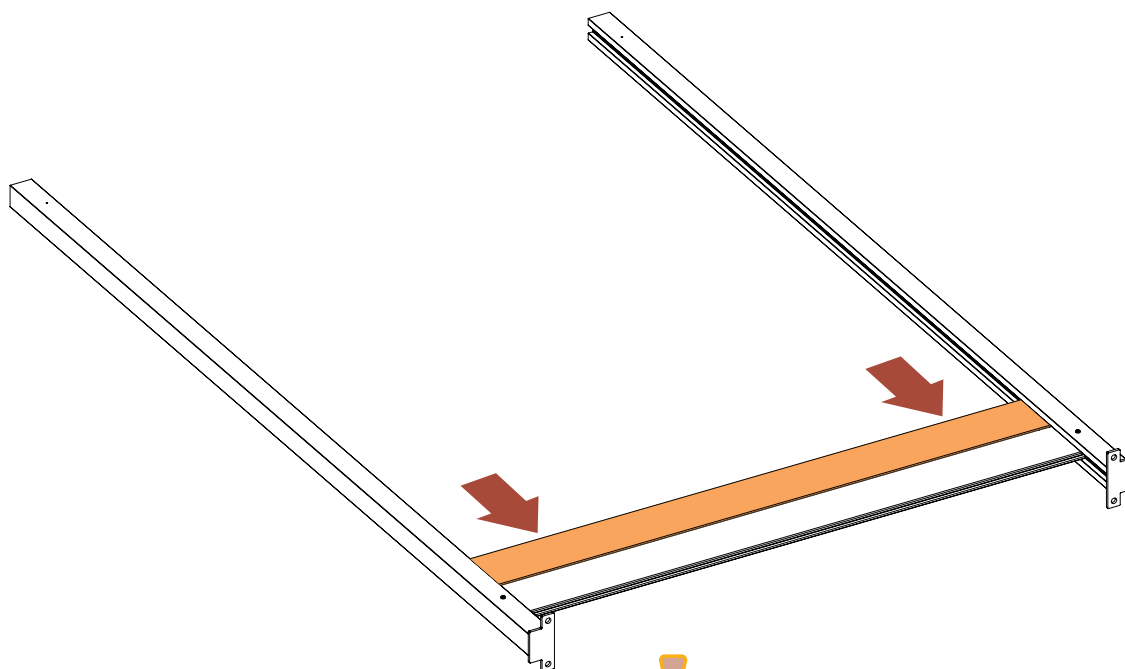


Remove temporary Wooden Spacer (E) .

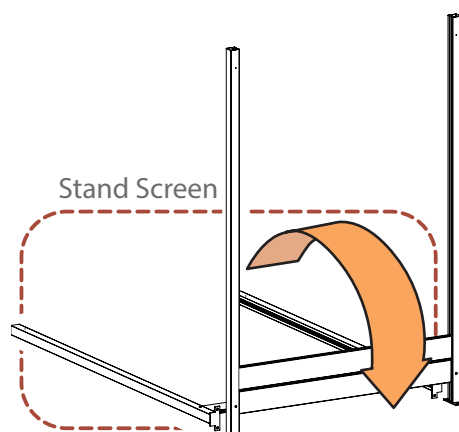


6

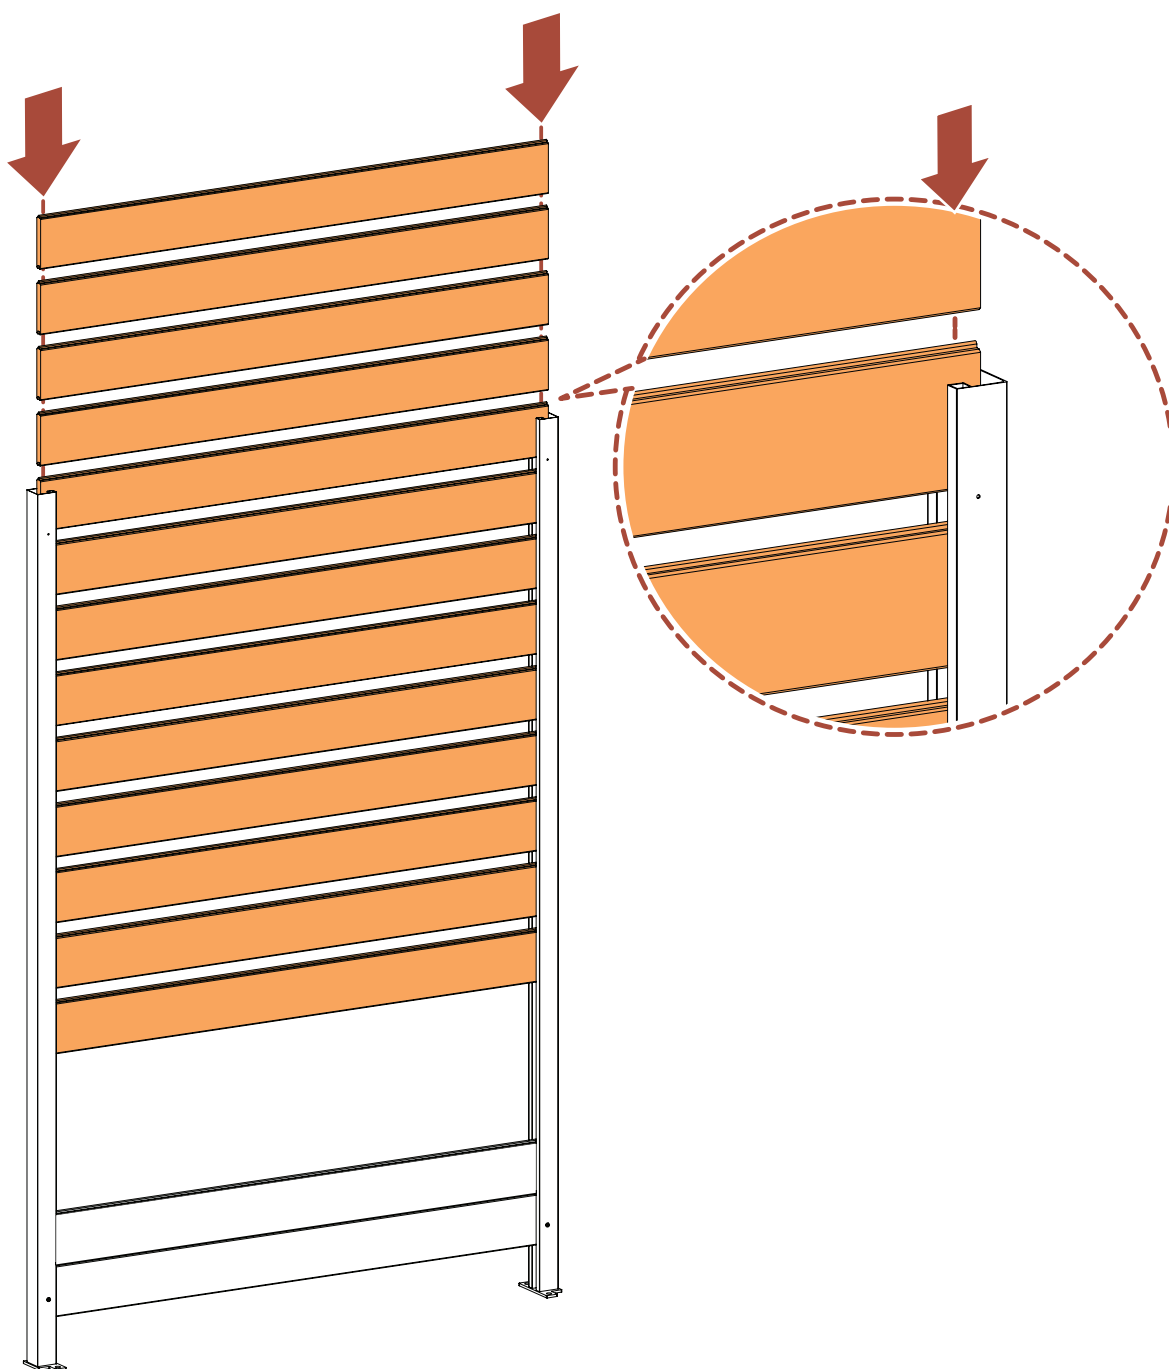


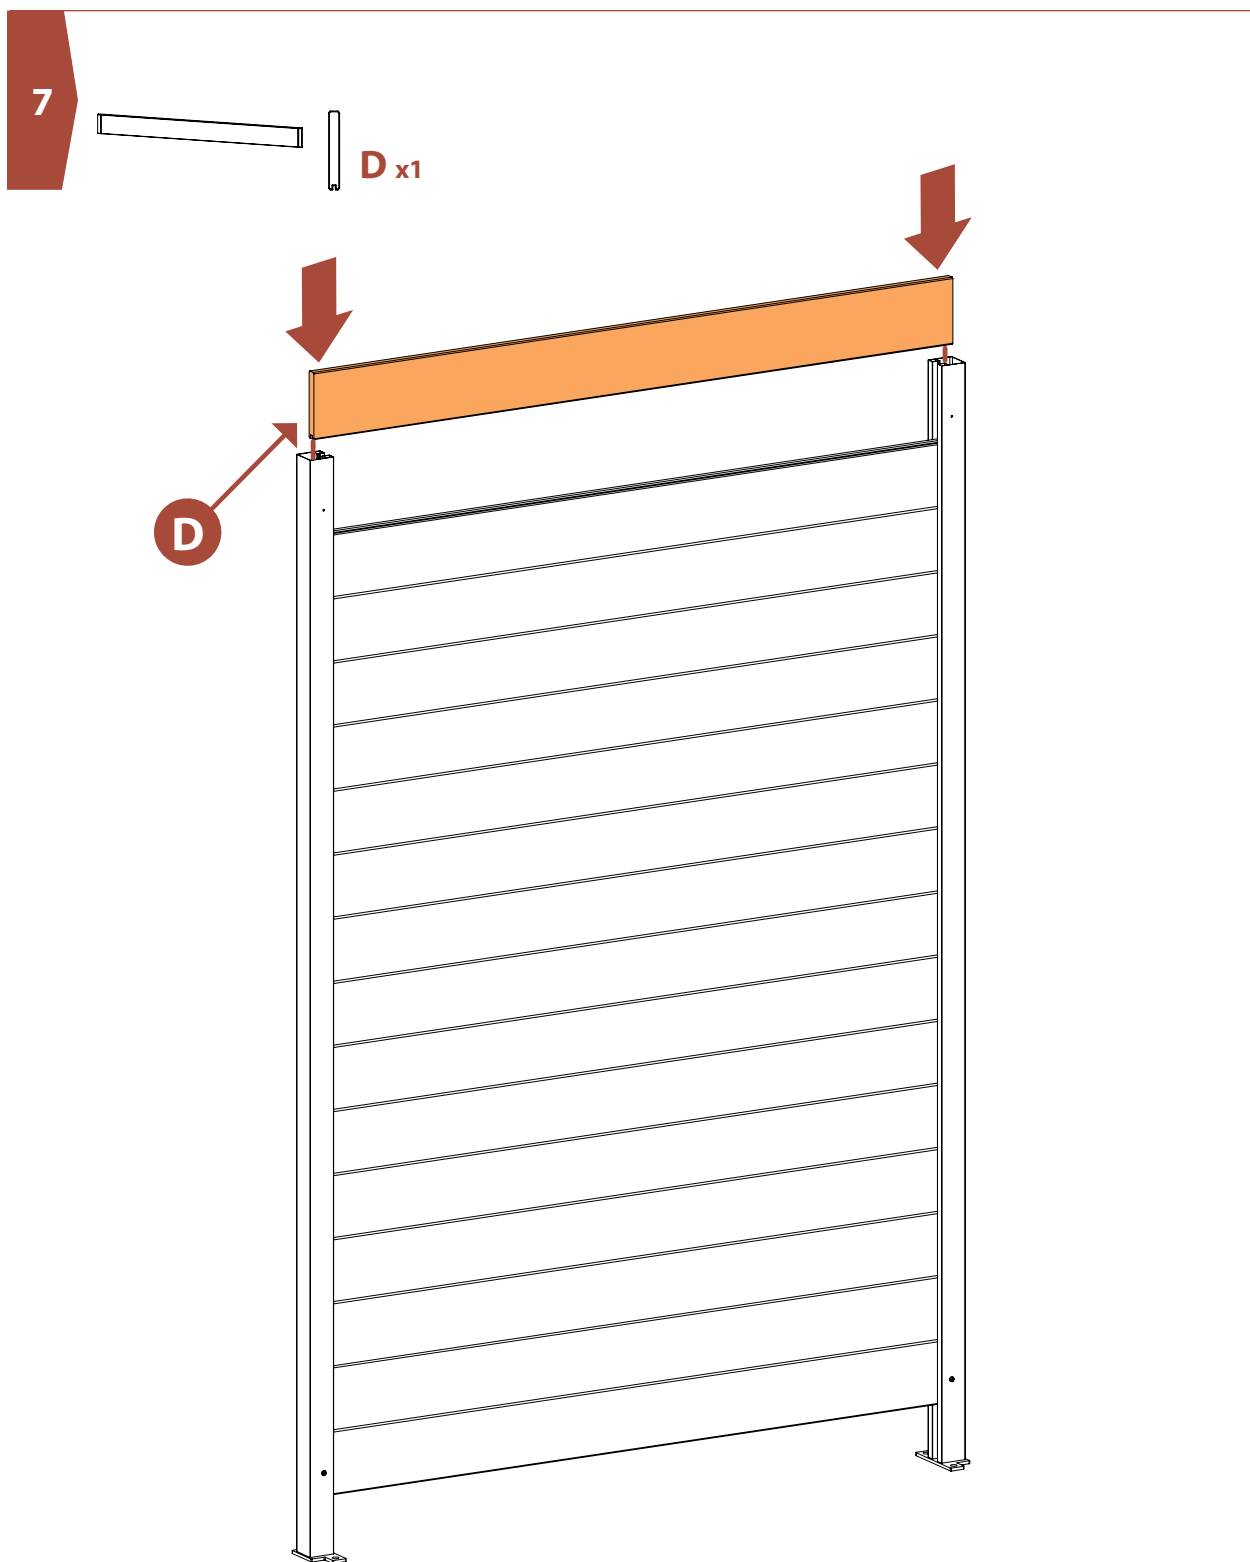


8

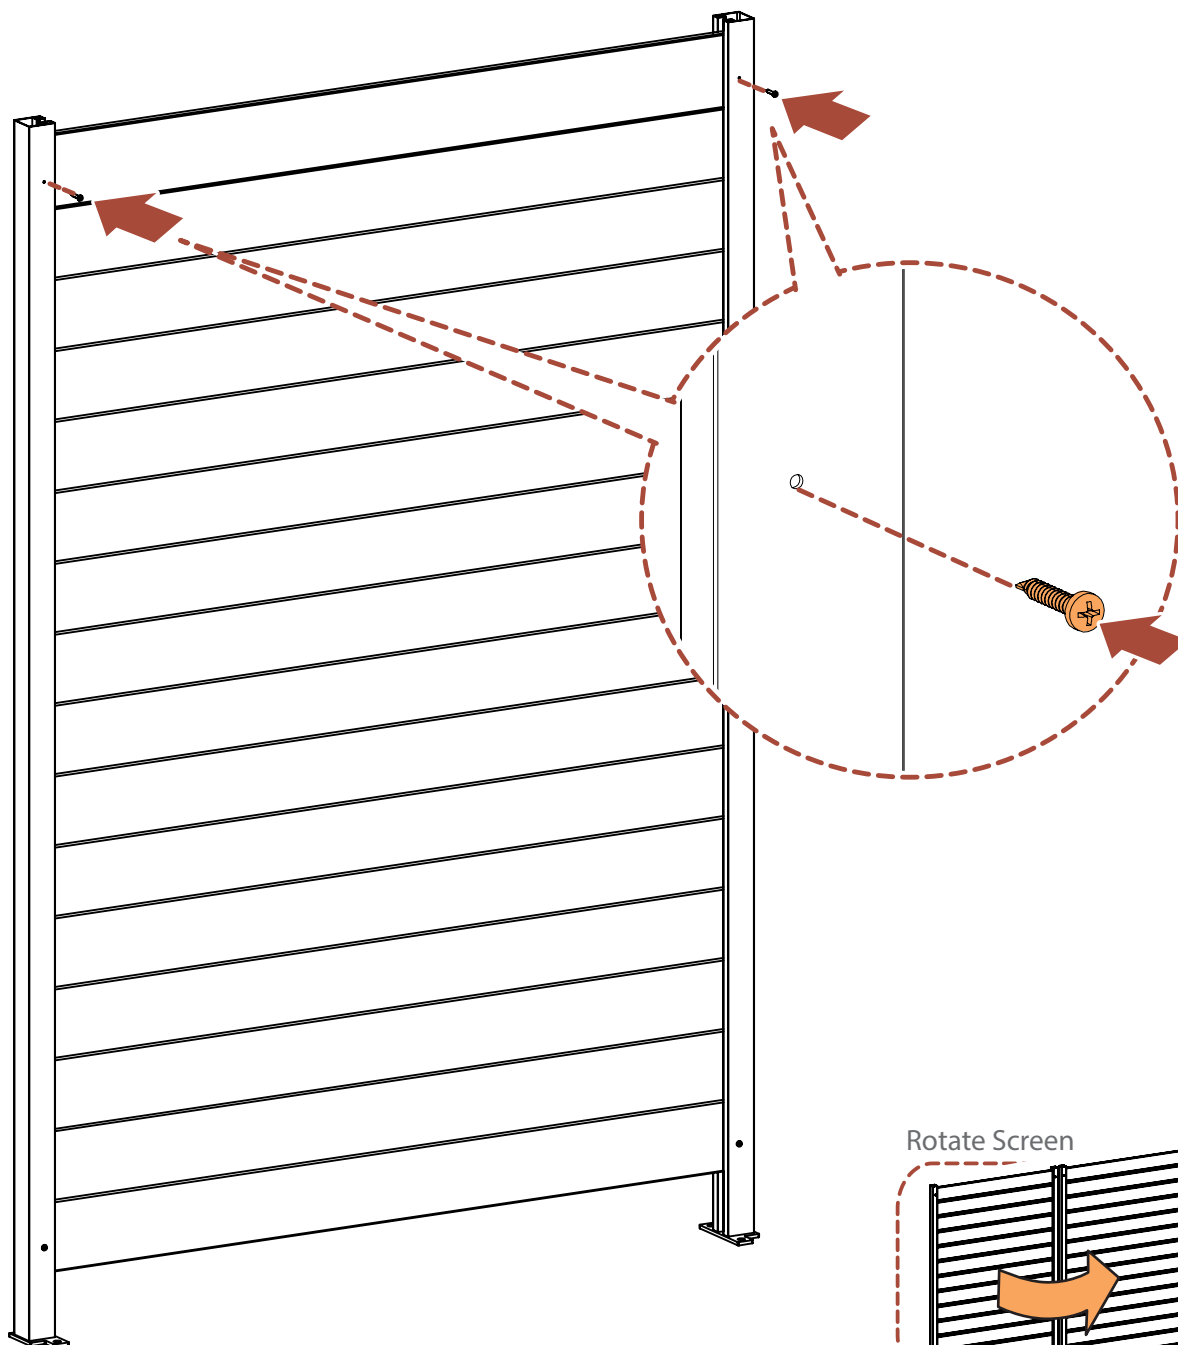

Rotate Screen

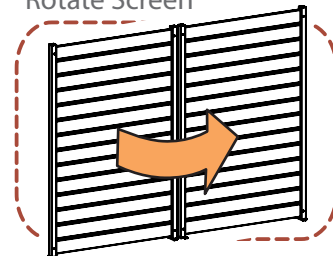

9

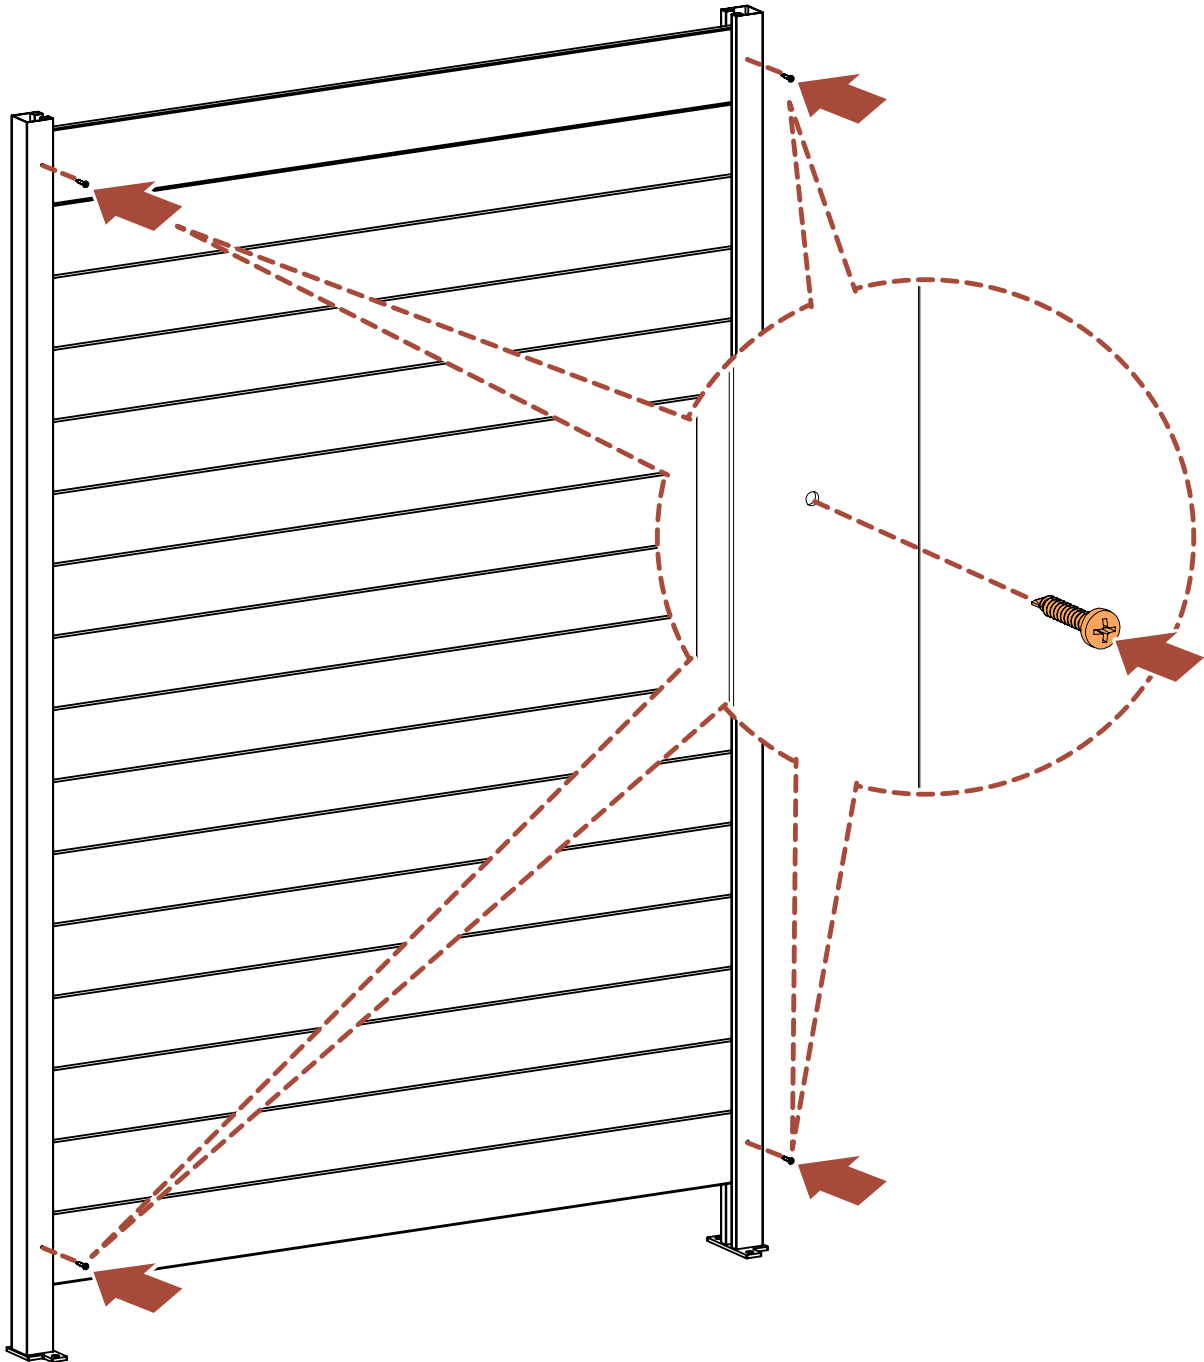


10



## SURFACE MOUNTED (DECK)

MOUNTED


1

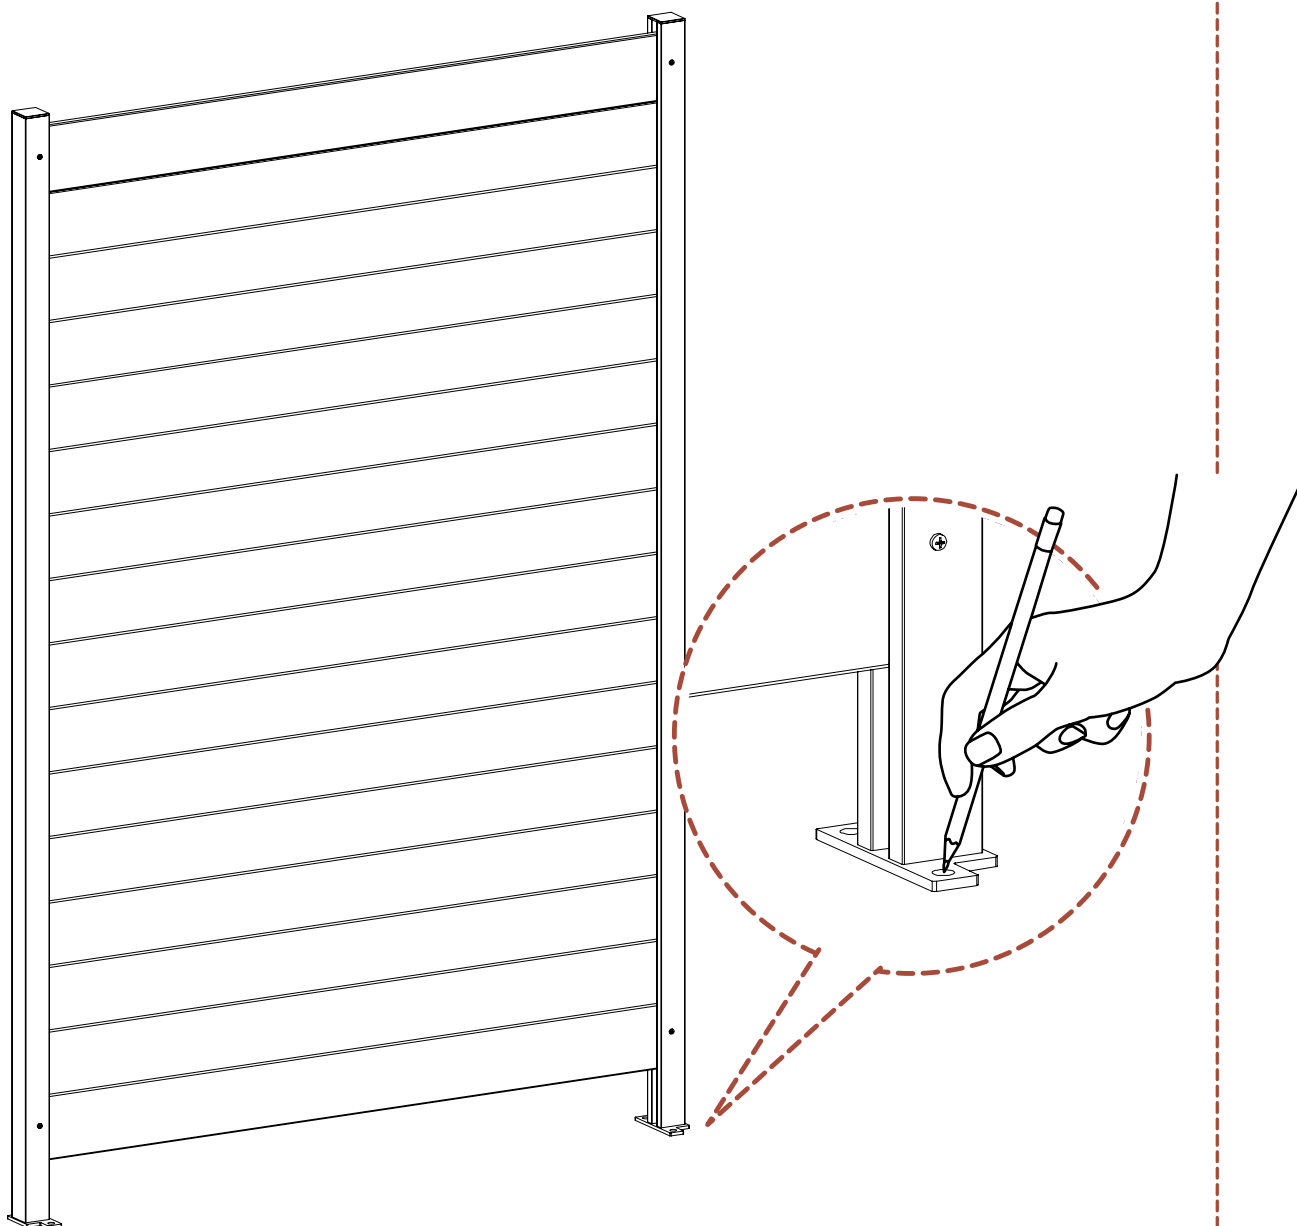




Refer to mounting hardware instructions  
to ensure proper installation.

(Surface mounting hardware not included)

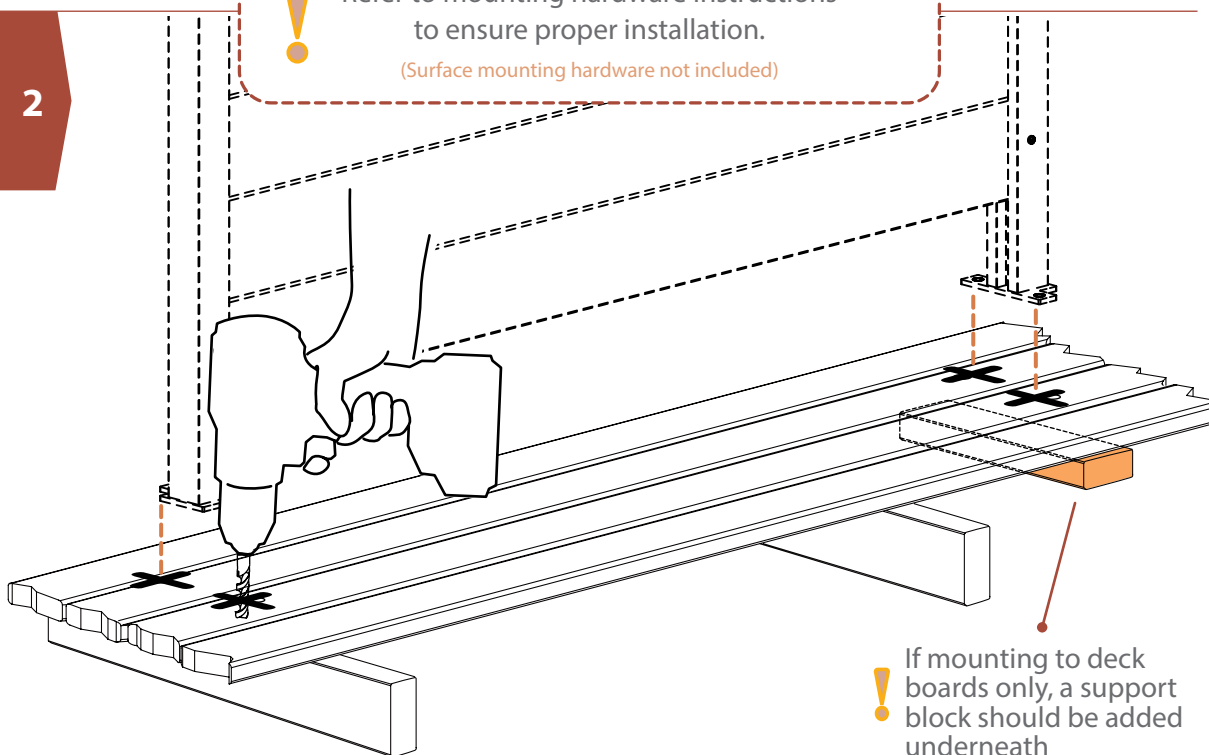

If mounting to deck  
boards only, a support  
block should be added  
underneath


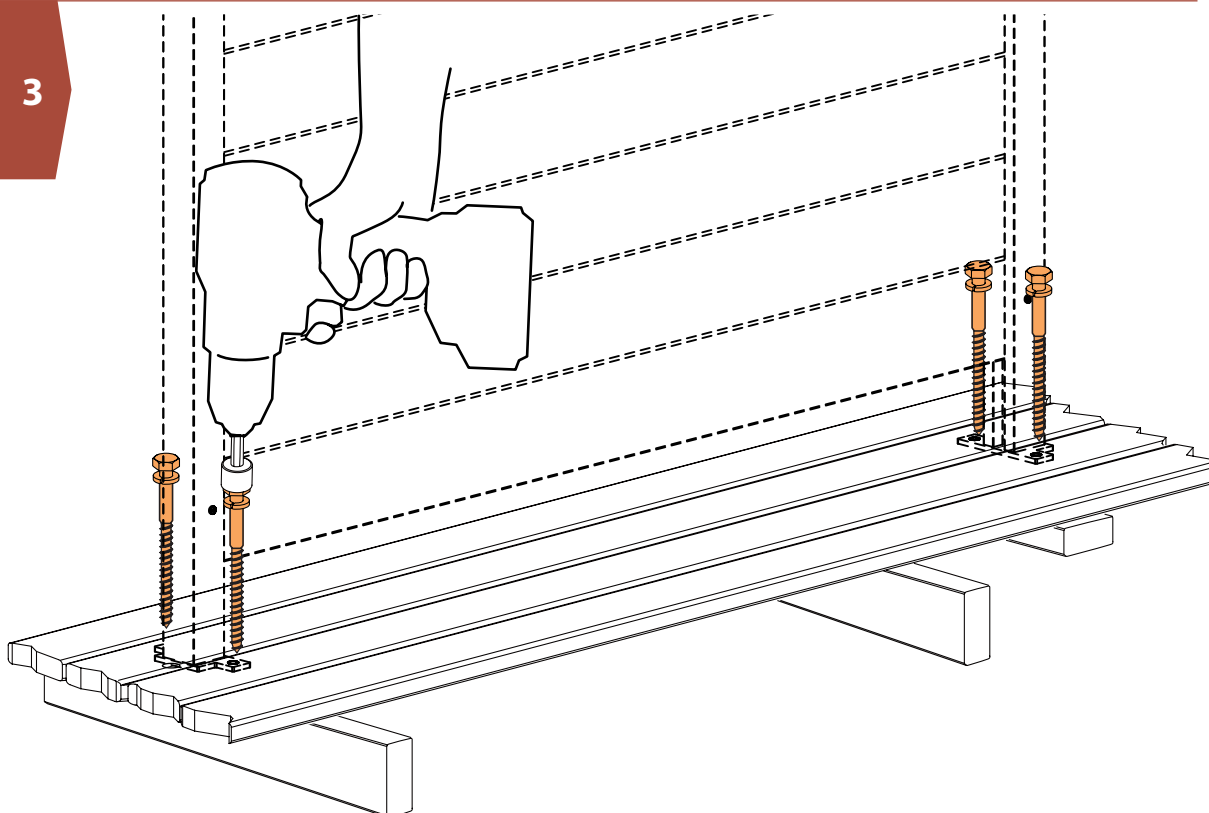





## SURFACE MOUNTED (PATIO)

MOUNTED

1

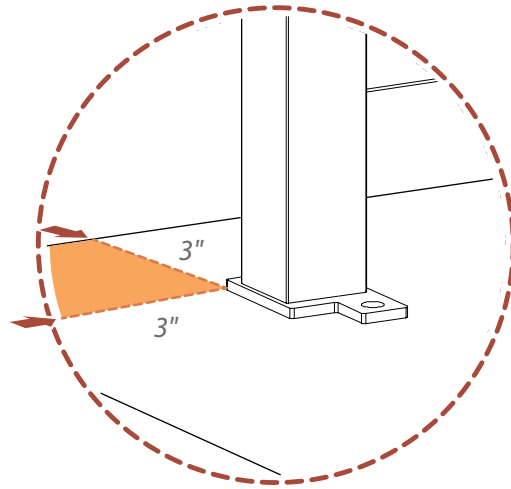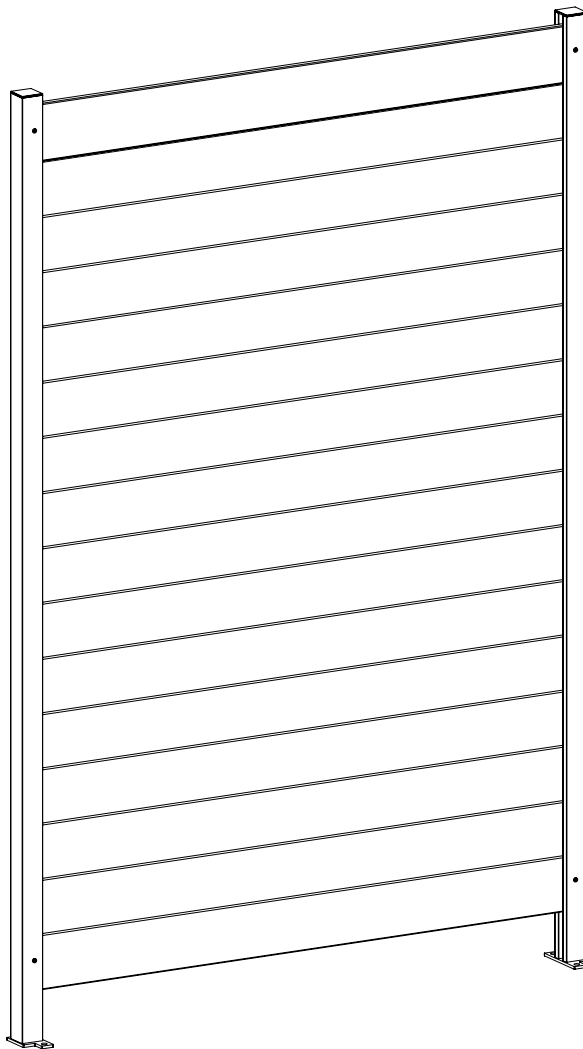

Ensure there is at least **3"** between the edge of the concrete and the surface mount.

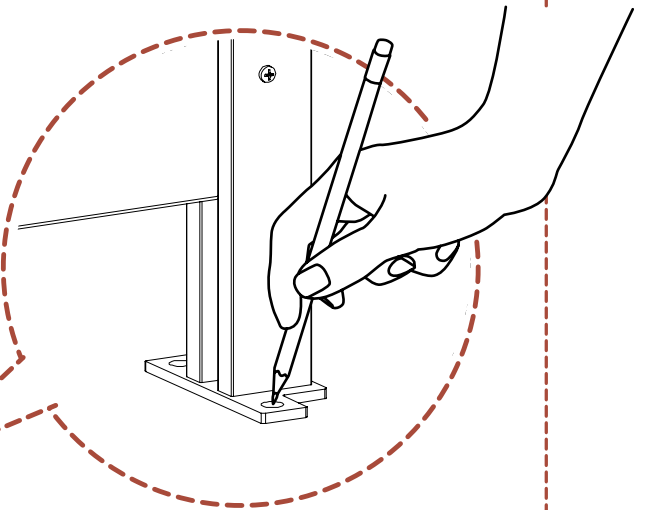


MOUNTED

2




Refer to mounting hardware instructions  
to ensure proper installation.  
(Surface mounting hardware not included)

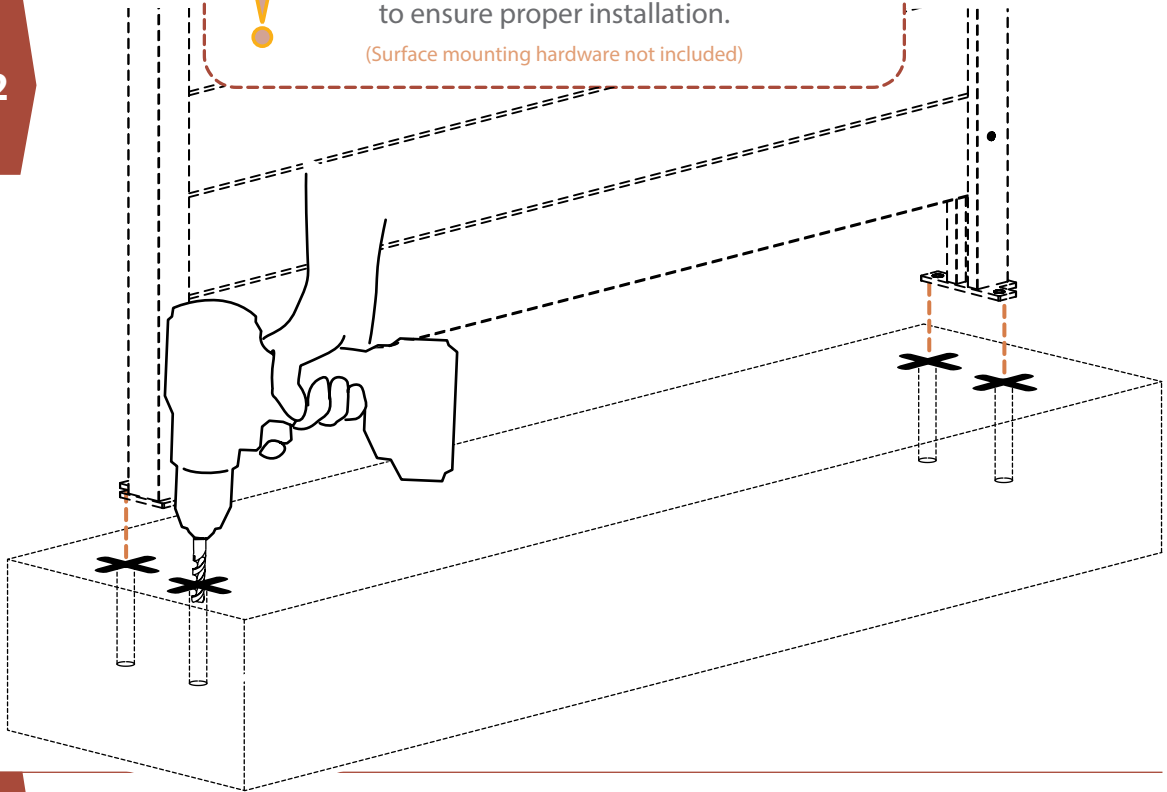

MOUNTED

3

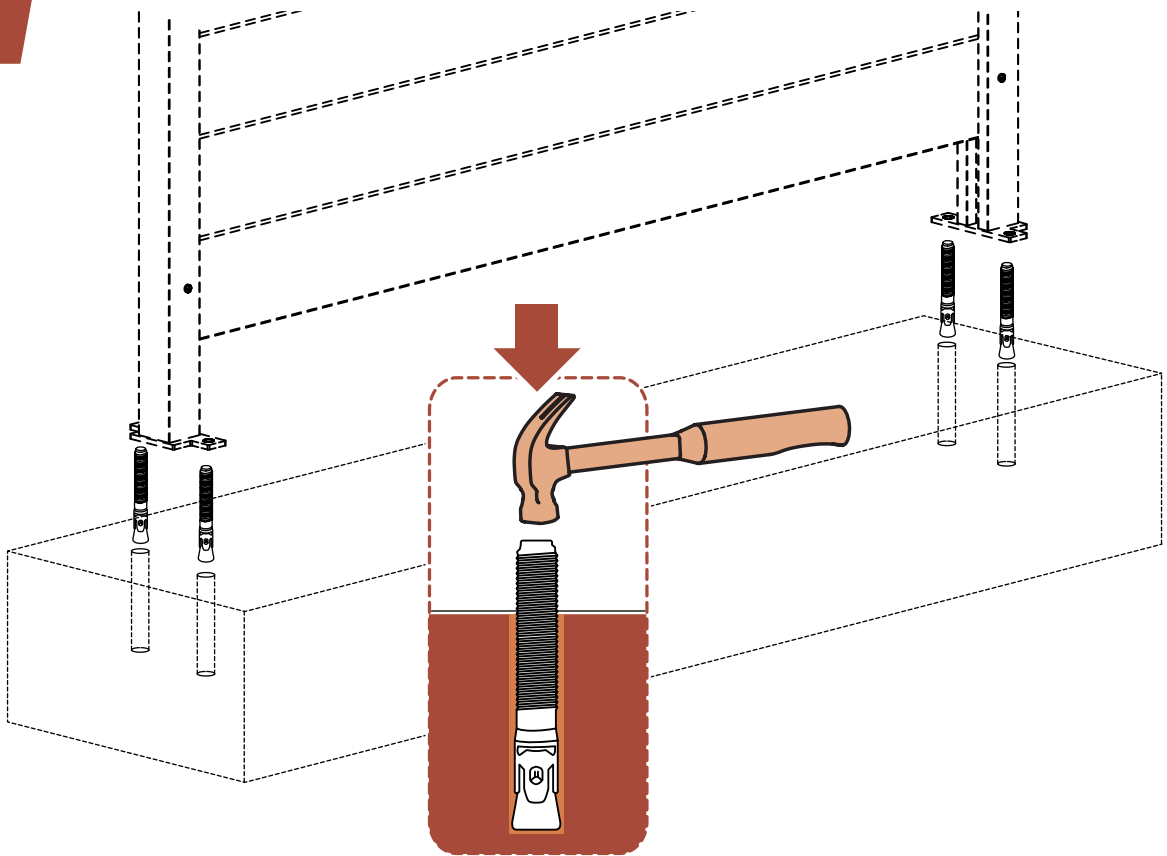


MOUNTED

4




Refer to mounting hardware instructions  
to ensure proper installation.

(Surface mounting hardware not included)

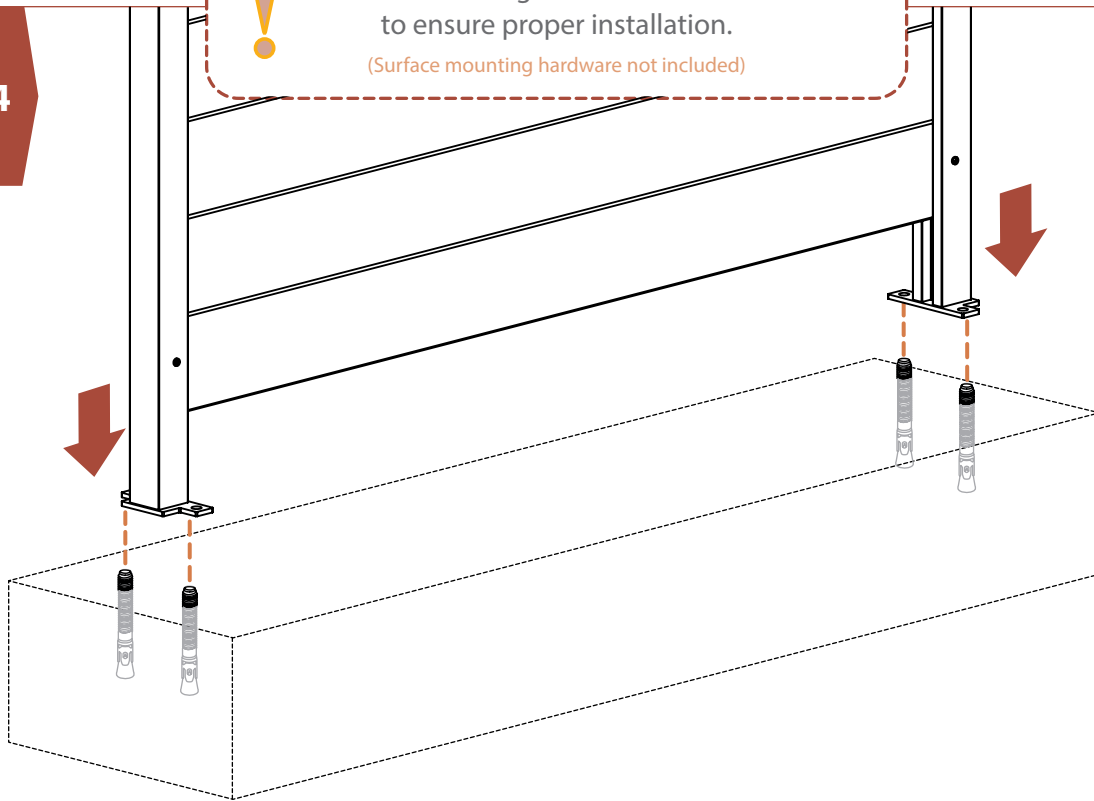

MOUNTED

5

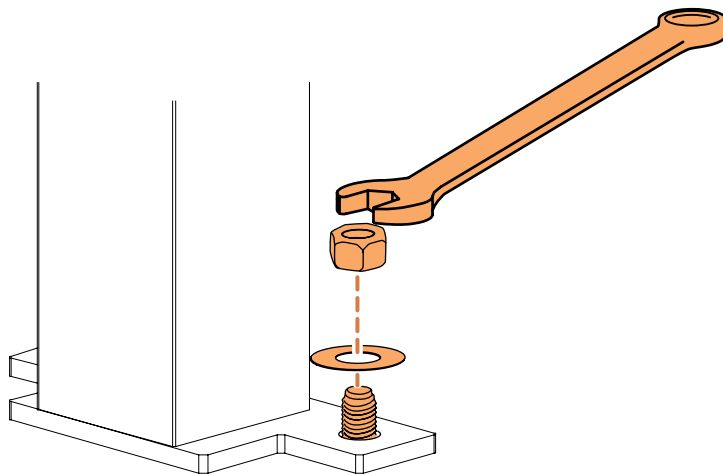



HIDE IT WITH STYLE

[www.encloscreens.com](http://www.encloscreens.com)

[support@encloscreens.com](mailto:support@encloscreens.com)



**704-892-5222**  
**877-234-6196**



*6935 Reames Rd. Ste. K.*  
*Charlotte, NC 28216*



**ASSEMBLY**  
**INSTRUCTIONS**  
EC18047